 


 


**SAVE THIS USE AND CARE BOOK**

# **SlimGrip<sup>®</sup>** **Electric Knife**



(Model EK100-Long Blade Only)



(Model EK200-Includes 2 Blades)



**1-800-231-9786**

QUESTIONS? Please call us TOLL FREE

**MODELS EK100/EK200**

---

## **POLARIZED PLUG**

This appliance has a polarized plug—one blade is wider than the other. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

---

## **ELECTRICAL CORD**

The cord length of this knife was selected to reduce safety hazards that may occur with a longer cord. If more cord length is needed, an extension cord with a polarized plug may be used. It should be rated not less than 10 amperes, 120 Volts, and have Underwriters Laboratories listing. A properly rated extension cord may be purchased from a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. When using a longer cord, be sure it does not drape over a working area or dangle where it could be pulled on or tripped over. Handle cord carefully for longer life; avoid jerking or straining it at outlet and appliance connections.

---

## **SUGGESTED USES:**

Use the SlimGrip® Electric Knife for foods such as:

- roasts
  - hard cheese
  - turkey/chicken
  - salami
  - pineapple
  - homemade bread
- 

## **BEFORE USING**

**CAUTION:** Be sure the Safety Lock Button is in the “Lock” position before inserting or removing Blades. Insert Blades so that the serrated edge is facing down AWAY from you (see Figure A, Page 4). NEVER place your hand over the blade to support it while operating this knife. The Blades are designed to slide back and forth to provide cutting action.

---

---

## REMOVING BLADES

To remove the Blades, press the Blade Release Buttons on both sides of the Handle. Grasp the Blades on the flat area in front of the Grease Guards and pull away from the Handle.

---

## PAIRING /TRIMMING (Model EK200 only)

The SlimGrip® Deluxe Electric Knife (Model EK200) includes 6-3/4" Pairing/Trimming Blades which provide greater flexibility for hard-to-reach areas and smaller foods.

---

Use the Pairing/Trimming Blades to trim or slice foods such as:

- apples
- potatoes
- onions
- pepperoni

---

**NOTE:** Before inserting the Pairing/Trimming Blades, be sure the Lock Button is in the "Lock" position and the cord is unplugged.

---

# Care Guide

---

## CLEANING

Other than the care mentioned in this manual, no additional maintenance or servicing of this appliance is required. Repairs, if necessary, must be performed by a Black & Decker (U.S.) Inc. Household Appliance Company-Owned or Authorized Service Center.

Before cleaning any part of the Electric Knife, move the Lock Button to the "Locked" position, unplug the cord, and remove the Blades. Be sure to dry all parts thoroughly before next use.

Knife Blades may be washed in hot, sudsy water or in the dishwasher.

The Knife Handle and cord may be cleaned with a damp cloth. To remove stubborn spots, wipe surfaces with a cloth slightly dampened in sudsy water or a mild non-abrasive cleanser and follow with a clean, damp cloth. **DO NOT** use any abrasive cleanser or material to clean any part of the Knife as it may harm the finish.

---

## Need Help?

### SERVICE OR REPAIR

Service, if necessary, must be performed by a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. The Service Center nearest you can be found in the yellow pages of your phone book under "Appliances-Small-Repairing" or you may call the toll-free "800" number on the cover of this manual to ask for the nearest location.

If mailing or shipping your SlimGrip® Electric Knife, pack it carefully in a sturdy carton with enough packing material to prevent damage. Include a note describing the problem to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

---

### REPLACEMENT BLADES

Consumer-replaceable parts and accessories are available at Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Centers. You may order additional or replacement blades by phone. **To place an order, call toll free, 1-800-258-6003.** We accept VISA, MasterCard, Discover or American Express.

---

## **FULL ONE-YEAR WARRANTY**

---

Black & Decker warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. We will return your product, transportation charges prepaid, provided it is delivered prepaid to any Black & Decker Household Appliance Company-Owned or Authorized Service Center.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

Answers to any questions regarding warranty or service locations may be obtained by calling Consumer Assistance and Information toll free, in the U.S.: 1-800-231-9786; in Canada: 1-800-465-6070.

---

Listed by Underwriters Laboratories, Inc.  
Copyright © 1991 - 1998 Black & Decker  
Pub No. 168633-13-RV02  
Printed in People's Republic of China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>