 


 **BLACK & DECKER®**

**SAVE THIS USE AND CARE BOOK**

# **Spatula Smart® Mixer**

## **With Power Boost**

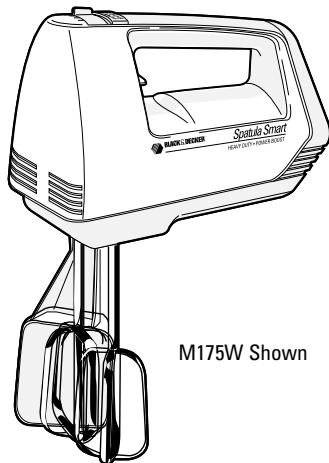

M175W Shown



**1-800-231-9786**  
QUESTIONS? Please call us TOLL FREE

**MODELS M175/M175W**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against a risk of electric shock, do not immerse mixer, cord, plug, or base unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts. Keep hands, hair, clothing, and handheld spatulas and other utensils away from beaters/whisks during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to an authorized service center for examination, repair, or adjustment.
- The use of attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over the edge of table or counter or touch hot surfaces.
- Remove beaters/whisks and spatula attachment from mixer before washing.
- Do not use appliance for other than intended use.
- Mixing flammable non-food substances may be hazardous.

- Do not operate in the presence of explosive and/or flammable fumes.
- This product is intended for household use only and not for commercial or industrial use.
- Do not abuse the cord. Never carry the mixer by the cord or yank the cord to disconnect it from an outlet; instead, grasp the plug and pull to disconnect.
- Do not attempt to repair the mixer yourself; instead take it to a Black & Decker (U.S.) Inc. Household Appliance Company-Owned or Authorized Service Center for repair. Call the toll-free “800” number listed on the cover of this book for the location of the Service Center nearest you.

 
## SAVE THESE INSTRUCTIONS

### **POLARIZED PLUG**


---

This appliance has a polarized plug—one blade is wider than the other. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

---

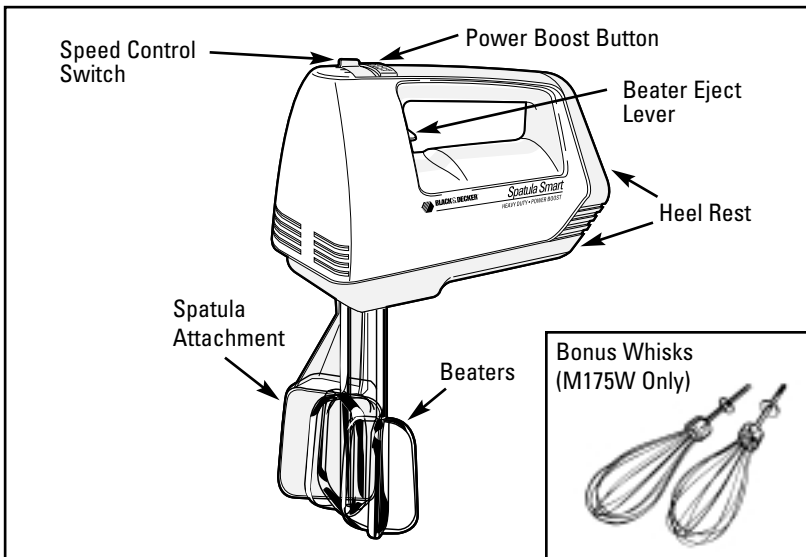

## Convenience Features

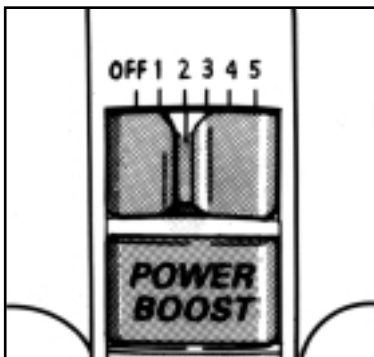 


**Figure A**

### **POWER BOOST**

The Power Boost feature works great on tough mixing tasks and has easy-access thumb control. (Figure A)

The Power Boost feature lets you increase the mixing speed to the maximum power level from any speed setting by depressing the Power Boost Button. When you feel the Mixer slowing down or straining in tough mixing tasks

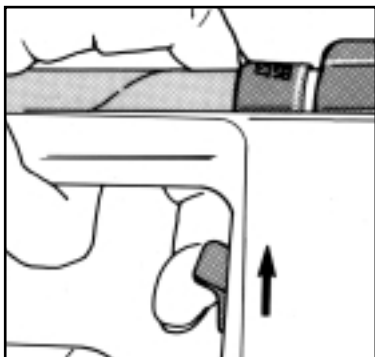 

**Figure B**

(such as mixing cookie dough), just press the Power Boost Button to get the maximum mixing performance. As soon as the Power Boost Button is released, the Mixer will return to the speed setting you were previously using.

### **BEATER EJECT LEVER**

The Spatula Smart® Mixer features a convenient Beater Eject Lever which is located below the handle. It allows for easy release of the Beaters/Whisks using the index finger. (Figure B)

### **LARGE BEATERS**

The large Beaters help you get fast, thorough mixing results. The Beaters are dishwasher-safe for easy cleanup.

### **BONUS WHISKS (MODEL M175W ONLY)**


The Whisks are perfect for whipping cream or eggs. They are especially useful when making meringue, omelets, fluffy angel food cake, or mousse. Like the Beaters, the Whisks are dishwasher-safe.

### **SPATULA ATTACHMENT**

The Spatula Attachment is used with the Beaters and allows you to scrape dry ingredients and batter from the bowl sides continuously while mixing. It snaps off for easy dishwasher or soap and water cleaning.

# How To Use

1. Before using the Beaters, be sure the Mixer is unplugged and the Speed Control Switch is in the OFF position. To insert a Beater, grasp the Mixer with one hand and the Beater stem with the other. Insert the Beater into the opening; you may have to rotate it slightly until it locks into place. Use the same method when inserting the Whisks (Model M175W only). Repeat for the other Beater/Whisk.
2. Plug the Cord into an outlet.
3. Place the ingredients into a bowl, grip the Mixer handle, and position the Beaters/Whisks in the center of the food to be mixed.
4. Select the appropriate speed setting for the task. See the "Mixing Guide" on page 9.
5. Guide the Beaters/Whisks continuously through the mixture for uniform mixing. Whenever you wish to scrape the sides and bottom of the bowl using a handheld utensil, be sure to turn the Speed

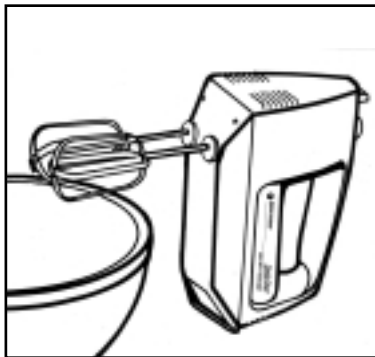 

**Figure C**

## **USING THE SPATULA ATTACHMENT**

Control Switch OFF. Place the Mixer on the Heel Rest so that batter can drain into the bowl. (Figure C)

6. To remove the Beaters/Whisk, push the Beater Eject Lever up with your index finger of one hand, then pull the Beater/Whisk out of the Mixer with the other hand.

---

Use the Spatula Attachment during mixing to scrape dry ingredients or batter from the bowl as you mix. It is designed for use when mixing thin (pudding, pancake batter) to medium batters (cake mixes, muffins, frosting) and for whipping mashed potatoes. It is not recommended when beating egg whites, whipping cream, or when mixing thick cookie dough. Do NOT use the Spatula Attachment with the Whisks (Model M175W only).

1. Insert the Beaters into the Mixer. Be sure the Mixer is unplugged and the speed control Switch is in the OFF position.



**Figure D**

2. Hold the Mixer by the handle with the Beaters facing forward. The Spatula attachment should be positioned so that the Spatula is to the right of the Beaters.

3. Weave the top of the Spatula Attachment under the left Beater shaft and over the right Beater shaft. The word "Front" on the Attachment should face out from the front of the Mixer. Snap the Attachment onto the Beater shafts. (Figure D)

4. As you mix, place the front edge of the Spatula Attachment against the side of the bowl and move it forward slowly along the side of bowl to scrape away buildup and blend ingredients or batter back into the Beaters. (Figure E)



**Figure E**

---

**NOTE:** If the Spatula Attachment detaches during use, be sure to turn OFF the Mixer before attempting to reattach the Spatula to the Beaters.

---



# Mixing Guide

SPEED	FUNCTION	USE
1	Blend	To combine liquids, fold in dry ingredients, egg whites, and whipped cream.
2	Stir	To prepare sauces, puddings, muffins, and quick breads.
3	Mix	To prepare batters and mixes.
4	Beat	To cream butter or sugar, make cookie dough, cake mixes, and frostings.
5	Whip	To whip fluffy mixtures, whipped cream, eggs, and mashed potatoes.
Power Boost	Use at any speed setting	Maximum power for tough tasks.

## Care and Cleaning

No other maintenance is required other than the care mentioned here. Repairs, if necessary, must be performed by a Black & Decker (U.S.) Inc. Household Appliance Company-Owned or Authorized Service Center. For the Service Center nearest you, call the toll-free "800" number on the cover of this book.

## CLEANING

1. Be sure the Speed Control Switch is in the OFF position before cleaning any part of the Mixer. Unplug the cord and eject the Beaters/Whisks. Remove the Spatula Attachment, if used.
2. The Beaters, Whisks (Model M175W only), and Spatula Attachment may be washed in hot, sudsy water or in a dishwasher. Be sure to dry all parts thoroughly before storing.
3. Clean the Mixer or cord with a damp cloth. To remove stubborn spots, wipe surfaces with a cloth dampened in sudsy water or a mild, non-abrasive cleaner. Follow with a clean, damp cloth. Do not use abrasive cleaners on any part of the Mixer as they can damage the finish.

## STORING THE MIXER

1. For longer life, avoid jerking the Power Cord or straining it at the plug connection. To store, coil the Cord in loops and secure it with a twist tie. **Do not wrap the cord around the Mixer.**
2. Store the Beaters, Whisks (Model M175W only), and Spatula Attachment in a drawer or in the original packaging.

# Mixing Tips

## HOW TO BEAT EGG WHITES

- Beaters/Whisks and bowl must be clean.
- Be sure there is no egg yolk in the egg whites.
- For maximum volume, egg whites should be at room temperature.

- Beat at the highest speed (Whip #5) until egg whites are the desired consistency.
  - Beating time varies with the freshness of eggs.
- 

**NOTE:** For best results when beating egg whites, do not use an aluminum or plastic bowl. Use a stainless steel, copper, or glass bowl.

---

### **HOW TO WHIP CREAM**

- Chill the cream, Beaters, and bowl.
  - Start with the lowest setting (to minimize splatter) as the cream begins to thicken, gradually increase to WHIP (Setting #5).
  - Whipping time varies with fat content, age, and temperature of cream.
- 

**NOTE:** The Spatula Attachment is NOT recommended for use when whipping cream as volume may be reduced.

---

## SERVICE OR REPAIR

Service, if necessary, must be performed by a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. The Service Center nearest you can be found in the yellow pages of your phone book under "Appliances-Small-Repairing." For your convenience a listing of our Company-Owned Service Centers can be found on pages 12-15.

If shipping or mailing your Mixer, pack the unit carefully in a sturdy carton with enough packing material to prevent damage. The original carton is not suitable for mailing. Include a note describing the problem to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

Consumer replaceable parts and accessories are also available at Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Centers.

## BLACK AND DECKER COMPANY-OWNED SERVICE CENTERS

### ALABAMA

**BIRMINGHAM** — 2412 Green Springs, Hwy., 35209

205-942-0538

**MOBILE** — 3831 Airport Blvd., 36608 205-343-6624

### ALASKA

**ANCHORAGE** — 910 West International Airport Rd., 99518

907-563-4664

### ARIZONA

**MESA** — 535 South Dobson Rd., Suite 7, 85202

602-461-1074

**PHOENIX** — 4501 N. 7th Ave., 85013 602-279-6414

**TUCSON** — 4845 E. Speedway Blvd., 85712

602-323-3388

### ARKANSAS

**LITTLE ROCK** — 519 W. Seventh St., 72201

501-372-3040

### CALIFORNIA

**ANAHEIM** — 540 South State College Blvd., 92806

714-772-4050

**CHULA VISTA** — 309 Broadway, 91911 619-420-6350

**CONCORD** — 1500 Monument Blvd., #C2, 94520

510-682-4880

**FRESNO** — 5412 North Blackstone Ave., 93710

209-435-0810

**LONG BEACH** — 2011 South St., 90805 **310-422-5825**  
**LOS ANGELES** — 4820 South Eastern Ave., Suite "L" 90040  
**213-720-1834**  
**RIVERSIDE** — 6215 Magnolia Ave., Suite B, 92506  
**714-787-9700**  
**SACRAMENTO** — 2033 Fulton Ave., 95825 **916-972-9090**  
**SAN DIEGO** — 9270 Clairmont Mesa Blvd., 92123  
**619-279-2011**  
**SAN JOSE** — 1185 South Bascom Ave., 95128  
**408-293-7350**  
**SAN LEANDRO** — 15206 East 14th St., 94578  
**510-276-1610**  
**VAN NUYS** — 14920 Victory Blvd., 91411 **818-787-5531**

## COLORADO

**DENVER** — 1171 South Federal Blvd., Box 19220, 80219  
**303-922-8325**

## CONNECTICUT

**HARTFORD** — 662 Silas Deane Hwy., 06109  
**203-563-5800**  
**ORANGE** — 481 Boston Post Rd., 06477 **203-795-3583**

## DISTRICT OF COLUMBIA

**COLMAR MANOR, MD** — 4153 Bladensburg Rd., 20710  
**301-779-3808**  
**FALLS CHURCH, VA** — 344 W. Broad St., 22046  
**703-533-7313**

## FLORIDA

**FT. LAUDERDALE** — 799 East Oakland Pk. Blvd., 33334  
**305-566-5102**  
**FT. MYERS** — 5224 Bank St., 33907 **813-278-1188**  
**JACKSONVILLE** — 920 Cassat Ave., 32205  
**904-781-2253**  
**MIAMI** — 13345 North West Seventh Ave., 33168  
**305-681-6658**  
**MIAMI** — 12233 South Dixie Hwy., 33156 **305-232-9497**  
**ORLANDO** — 3807 East Colonial Dr., 32803  
**407-894-7011**  
**ST. PETERSBURG** — 5635 49th St. North, 33709  
**813-525-0273**  
**TAMPA** — 3432 West Kennedy Blvd., 33609  
**813-872-8317**  
**WEST PALM BEACH** — 310 South Military Trail, 33415  
**407-689-3247**

## GEORGIA

**ATLANTA (South)** — 5330 Old National Hwy., 30349 **404-762-8844**

**SMYRNA** — 2550 Cobb Parkway South, 30080  
**404-956-0869**  
**STONE MOUNTAIN** — 5723 Memorial Dr., 30083  
**404-292-4714**

## HAWAII

**HONOLULU** — Unit No. 106, Sand Island Access Rd., 96819  
**808-847-7447**

## ILLINOIS

**CHICAGO (Lincolnwood)** — 6710 North Crawford Ave.,  
60646 **708-673-0923**  
**DES PLAINES** — 1277 South Elmhurst Rd., 60018  
**708-364-5220**  
**LISLE** — 2950 Ogden Ave., Unit H, 60532 **708-717-1075**  
**MOLINE** — 4433 23rd Ave., 61265 **309-762-3000**  
**OAK LAWN** — 6343 W. 95th St., 60453 **708-423-7212**  
**WAUKEGAN** — 31 S. Greenbay Rd., 60085  
**703-249-4390**

## INDIANA

**EVANSVILLE** — 307 First Ave., Crescent Ctr., 47710  
**812-425-4269**  
**HAMMOND** — 7103 Kennedy Ave., 46323 **219-845-5100**  
**INDIANAPOLIS (Speedway)** — 5999 Crawfordsville Rd.,  
46224 **317-243-8308**

## IOWA

**DES MOINES** — 3427 Merle Hay Rd., 50310  
**515-270-1340**

## KANSAS

**WICHITA** — 155 South West St., 67213 **316-943-1271**

## KENTUCKY

**LOUISVILLE** — 5211 Preston Hwy., 40213 **502-968-7100**

## LOUISIANA

**BATON ROUGE** — 11859 Florida Blvd., 70815  
**504-272-8111**  
**HARVEY** — 2500 Lapalco Blvd., 70058 **504-366-8676**  
**METAIRIE (New Orleans)** — 3504 North Causeway Blvd.,  
70002 **504-837-2550**  
**SHREVEPORT** — 7710-7714 Jewella Rd., 71108  
**318-688-1553**

## MARYLAND

**BALTIMORE** — 4712 Erdman Ave., 21205 **410-485-5550**  
**BALTIMORE** — 29-31 Cranbrook Rd., Cockeysville, 21030  
**410-666-5966**  
**COLMAR MANOR (Wash. D.C.)** — 4153 Bladensburg Rd.,  
20722, **301-779-3808**  
**PASADENA** — 8220 Ritchie Hwy., 21122 **410-647-8456**

## MASSACHUSETTS

**BRIGHTON (Boston)** — 12 Market St., 02135  
**617-782-6264**  
**SEEKONK** — 120 Highland Ave., 02771 **508-336-6510**

## MICHIGAN

**GRAND RAPIDS** — 3040 28th St., SE, 49512  
**616-949-8331**  
**LANSING** — 3205 W. Saginaw Hwy., 48917  
**517-323-4181**  
**WARREN** — 27035 Van Dyke Blvd., 48093 **313-756-6711**  
**WESTLAND** — 8067 N. Wayne Rd., 48185 **313-427-1520**

## MINNESOTA

**BLOOMINGTON** — 9517 Lyndale Ave., South, 55420 **612-884-9191**

## MISSOURI

**KANSAS CITY** — 4324 Main St., 64111 **816-531-0629**  
**ST. ANN** — 3637 North Lindbergh Blvd., 63074  
**314-739-4661**  
**ST. LOUIS** — 12852 Manchester Rd., 63131  
**314-821-8740**

## NEBRASKA

**OMAHA** — 4225 South 84th St., 68127 **402-592-5666**

## NEVADA

**LAS VEGAS** — 3411 East Charleston Blvd., 89104  
**702-641-6555**

## NEW JERSEY

**CHERRY HILL** — 1444 East Marlton Pike (Rt. 70), 08034  
**609-429-2822**  
**LITTLE FALLS** — 1189 U.S. Hwy. 46, 07424  
**201-256-9373**  
**SCOTCH PLAINS** — 2520 Route #22 East, 07076  
**908-233-5665**

## NEW MEXICO

**ALBUQUERQUE** — 5617 Menaul Blvd., N.E., 87110  
**505-884-1002**

## NEW YORK

**ALBANY (Latham)** — 836 Troy-Schenectady Rd., 12110  
**518-785-1867**  
**BUFFALO** — 881 West Delavan Ave., 14209  
**716-884-6220**  
**CENTEREACH I.I.** — 2061-63 Middle Country Rd., 11720  
**516-737-4706**  
**NEW YORK (Elmhurst)** — 77-20 Queens Blvd., 11373  
**718-335-1042**  
**NEW YORK (Manhattan)** — 50 West 23rd St., 10010  
**212-929-6450**  
**NEW YORK (Westbury, L.I.)** — 1061 Old Country Rd., 11590  
**516-997-6140**  
**ROCHESTER** — 2969 W. Henrietta Rd., 14623  
**716-424-1310**  
**SYRACUSE** — 3485 Erie Blvd., East, 13214 **315-446-3086**

## NORTH CAROLINA

**CHARLOTTE** — 3007 East Independence Blvd., 28205  
**704-374-1779**  
**GREENSBORO** — 3716 High Point Rd., 27407  
**919-852-1300**  
**RALEIGH** — 2930 Capital Blvd., 27604 **919-878-0357**

## OHIO

**CINCINNATI** — 2310 East Sharon Rd., 45241  
**513-772-3111**  
**COLUMBUS** — 3975 East Livingston Ave., 43227  
**614-237-0461**  
**DAYTON** — 2898 South Dixie Drive, 45409 **513-298-1951**  
**MAYFIELD HEIGHTS** — 5881 Mayfield Rd., 44124  
**216-449-2770**  
**PARMA HEIGHTS (Cleveland)** — 6483 Pearl Rd., 44130  
**216-842-9100**  
**TOLEDO** — 3231 Dorr St., 43607 **419-531-8921**

## OKLAHOMA

**OKLAHOMA CITY** — 1318 Linwood Blvd., 73106  
**405-232-7515**  
**TULSA** — 3120 S. Sheridan Rd, 74145 **918-622-5666**

## OREGON

**PORTLAND** — 1640 NW Johnson St., 97209  
**503-228-8631**

## PENNSYLVANIA

**ALLENTOWN (Whitehall)** — 2242 MacArthur Rd., 18052  
215-435-9544

**EVANS CITY** — Cranberry Town Center Plaza, 20808 Rt. 19  
N., 16033 412-779-9600

**HARRISBURG** — 6080 Allentown Blvd., 17112  
717-545-0651

**LANCASTER** — 118 Keller Ave., 17601 717-393-5251

**PHILADELPHIA** — 9977-81 Bustleton Ave., 19115  
215-464-7771

**PHILADELPHIA** — 333 North 20th St., 19103  
215-564-5520

**PITTSBURGH** — 5437 Baum Blvd., 15232 412-362-2700

**WILKES-BARRE** — 759 Kidder St., 18702 717-824-5704

## PUERTO RICO

**GUAYNABO** — "C" Street # 14, Rexco Industrial Park,  
00922-1924 809-783-3535

## RHODE ISLAND

**SEEKONK, MA** — 120 Highland Ave., 02771  
508-336-6510

## SOUTH CAROLINA

**GREENVILLE** — 1557 Laurens Rd., 29607 803-232-3038

## TENNESSEE

**CHATTANOOGA** — Perimeter Place Shopping Ctr., Sp. E,  
6231 Perimeter Dr., 37421 615-894-5957

**KNOXVILLE** — 4118 North Broadway, 37917  
615-688-0921

**MEMPHIS** — 1085 East Brooks Rd., 38116 901-332-3444

**NASHVILLE** — 4811 Nolensville Rd., 37211 615-833-8277

## TEXAS

**AMARILLO** — 3008 West 6th Ave., 79106 806-373-1531

**AUSTIN** — 6549 Burnet Rd., 78757 512-459-1133

**DALLAS** — 2257 Royal Lane, 75229 214-620-8655

**EL PASO** — 6822 Gateway East, 79915 915-778-9769

**FORT WORTH** — 721 North Beach St., 76111  
817-831-3828

**GARLAND** — 78 West Centerville Rd., 75043  
214-686-9302

**HOUSTON** — 536 East Tidwell Rd., 77022 713-692-7111

**SAN ANTONIO** — 500 Culebra Ave., 78201 210-732-1221

**WEBSTER** — 100 East Nasa Road One, Ste. 75, 77598 713-  
338-4556

## UTAH

**SALT LAKE CITY** — 1541 S. Third West St., 84115  
801-486-5828

## VIRGINIA

**FALLS CHURCH** — 344 W. Broad St., 22046 703-533-7313

**HAMPTON** — 3416 W. Mercury Blvd., 23666  
804-826-9382

**NORFOLK** — 7631 Sewells Point Rd., 23513  
804-480-3333

**RICHMOND** — 1424 Chamberlayne Ave., 23222  
804-649-9245

## WASHINGTON

**SEATTLE** — 421 S. Michigan, 98108 206-763-2010

**SPOKANE** — N. 7011 Division St., 99208 509-467-8190

**TACOMA** — 2602 S. 38th St., 98409 206-473-6040

## WEST VIRGINIA

**CHARLESTON** — 1638 Sixth Ave., 25312 304-343-0289

## WISCONSIN

**MILWAUKEE (Wauwatosa)** — 10424 W. Bluemound Rd.,  
53226, 414-453-4240

REV: 9/94

**FULL  
TWO-YEAR  
WARRANTY**

---

Black & Decker (U.S.) Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. We will return your product, transportation charges prepaid, provided it is delivered prepaid to any Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Answers to any questions regarding warranty or service locations may be obtained by calling toll free, 1-800-231-9786, or by writing:

Consumer Assistance and Information  
Black & Decker (U.S.) Inc.  
626 Hanover Pike  
Hampstead, MD 21074-0618



---

Listed by Underwriters Laboratories Inc.  
Copyright © 1991 - 1995 Black & Decker  
Pub. No. 168633-06-RV01  
Printed in Hong Kong



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>