


**BLACK&DECKER**

SKU #BD-150

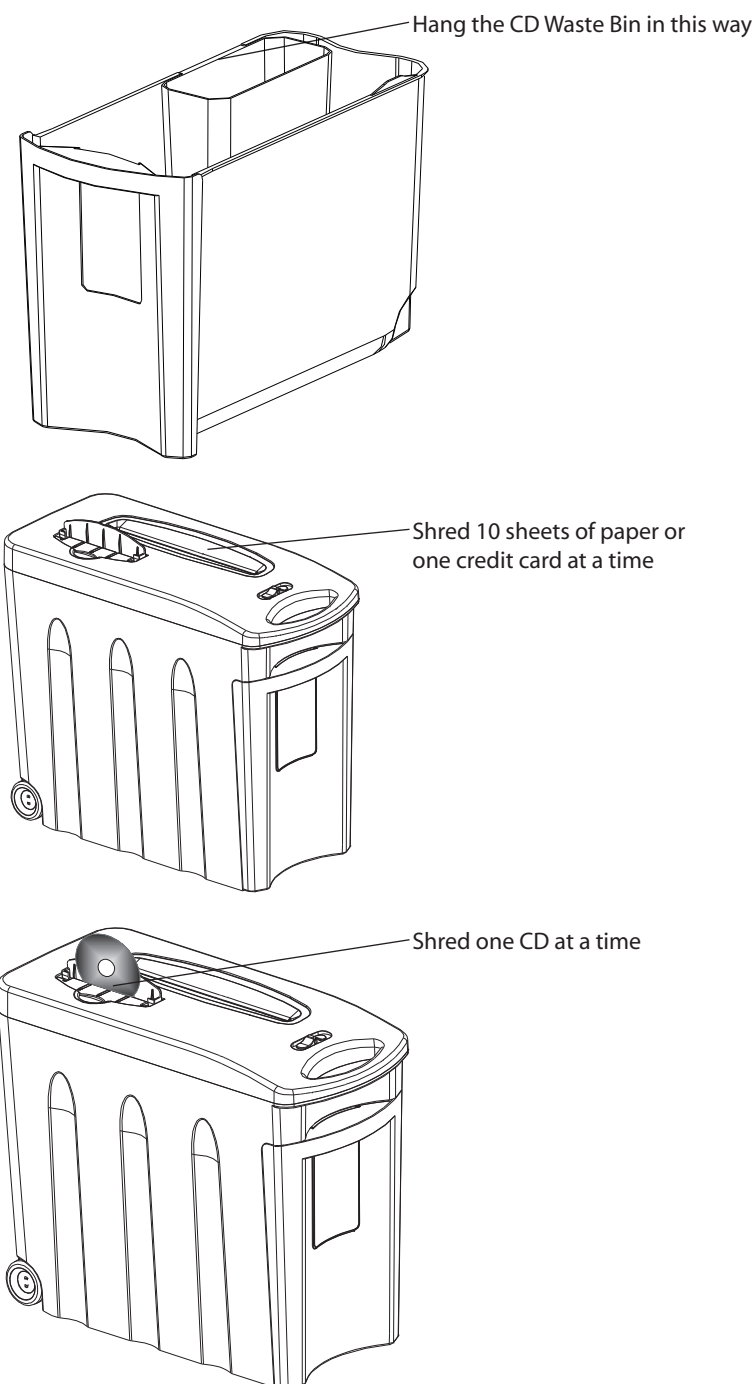

**BLACK&DECKER**

SKU #BD-150



**Limited Lifetime Warranty**

**WHO IS COVERED:**

HoMedics warrants that the product will be free of defects in material and workmanship under normal use and service for the period of 1 year from the date of original purchase; the cutter blades specifically are warranted against defects in manufacture and workmanship for the life of the original purchaser from the date of original purchase, except as noted below.

**HOW LONG DOES COVERAGE LAST:**

HoMedics warrants that the product will be free of defects in material and workmanship under normal use and service for the period of 1 year from the date of original purchase; the cutter blades specifically are warranted against defects in manufacture and workmanship for the life of the original purchaser from the date of original purchase, except as noted below.

**WHAT IS NOT COVERED:**

This warranty does not cover damage caused by: misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair or any other conditions whatsoever that are beyond the control of HoMedics. Please consult the manual for shredder maintenance instructions.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of HoMedics.

**HOW TO GET SERVICE:**

To obtain warranty service on your product, visit [www.blackanddeckershredders.com](http://www.blackanddeckershredders.com) or call the toll-free customer service line at 1-800-297-5028.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adaptation to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. HOMEDICS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY. NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, HOMEDICS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual state regulations, some of the above limitations and exclusions may not apply to you.

Distributed by  
**HOMEDICS**  
HoMedics, Inc.  
3000 Pontiac Trail  
Commerce Township, MI 48390

Black & Decker and the Black & Decker logo are trademarks of The Black & Decker Corporation and are used under license. All rights reserved.

**BLACK&DECKER**

PROTECT YOUR IDENTITY WITH THE BRAND YOU TRUST™



SKU #BD-150

Please read these instructions before use

**BLACK&DECKER**

SKU #BD-150

Thank you for buying a Black & Decker paper shredder. Black & Decker paper shredders have become the benchmark for innovation, performance and quality to protect against identity theft. We have taken great care in designing and engineering a product to meet and exceed your needs.

To ensure years of safe, efficient performance, please read these important product usage and safety instructions.

If you have any questions regarding the product, please feel free to call toll-free 1-800-297-5028.

**The Following are Important Safety Instructions. Read All Instructions Before Using.**

**WARNING**

**WARNING:** Hazardous moving parts. Keep fingers and other body parts away.  
**WARNING:** To reduce risk of fire, electrical shock or injury:  
**NEVER** allow children to operate a paper shredder, even under adult supervision. A paper shredder is **NOT** a toy.  
**DO NOT** use flammable synthetic oil, petroleum-based products or aerosols of any kind on or near product at any time.  
**DO NOT** operate any electrical product with a damaged cord.  
**ALWAYS** keep the power cord clear of the shredder opening.  
**AVOID** getting jewelry, hair or loose clothing too close to feed slot as serious injury can occur.  
**DO NOT** handle plug or product with wet hands.  
**ALWAYS** keep children and pets away from the shredder.  
**ALWAYS** unplug shredder when not in use.  
**DO NOT** attempt to feed more sheets of paper than specified on the feeder.  
**DO NOT** attempt to shred materials other than paper, credit cards and CD's.  
**DO NOT** hold CD or DVD with finger through the center ring while feeding into shredder.  
**ALWAYS** empty the waste bin prior to becoming full.  
**DO NOT** place shredder near heat or water source.  
**DO NOT** open shredder head to attempt repair. It could expose you to electric shock and will void your warranty.  
**ALWAYS** unplug your unit before cleaning. Strong cleaning chemicals should not be used. The socket-outlet shall be installed near the equipment and shall be easily accessible.

**WARNING**

ALWAYS KEEP OUT OF REACH OF CHILDREN

**WARNING ICONS:**

The icons on top of the shredder warn the user of the potential dangers if the shredder is used improperly.



**BLACK&DECKER**

SKU #BD-150

**Setup**

- Check shredder for damage or defects; some particles of paper are normal due to product testing.
- Plug the power cord into any easily reached standard outlet.
- To use, slide power switch on top to "Auto" position.
- Close the main bin.
- Place paper for shredding into the designated slot.

**NOTE:** Maximum sheet capacity for insertion is 10 sheets of 20 lb. paper in a single pass.

**To Shred Credit Cards, CDs and DVDs**

- To shred CDs and DVDs open protective cover over separate opening and insert item using convenient guides.

**ALWAYS unplug before emptying bin.**

**Customer Service**

Black & Decker has a toll-free help line for customers living in the United States and Canada. Our customer service phone number is 1-800-297-5028 or visit our website at [www.blackanddeckershredders.com](http://www.blackanddeckershredders.com).

**Maintenance**

It is important to empty the waste bin regularly to ensure the smooth operation of the cutting cylinders. The shredder will not operate when the bin is full. Regular oiling is also necessary for proper performance. It is recommended to use the shredder oil every few weeks.

**Product Information**

This product is designed to shred paper, staples, small paper clips, credit cards, CDs and DVDs. It is not intended to shred large paper clips, continuous forms, adhesive labels, transparencies, newspaper, cardboard or any other plastic other than credit cards. Using it for these purposes is likely to cause irreparable damage. Please do not attempt to shred more than 10 sheets/1 CD or DVD at a time. Shredder should not run more than 200 sheets/50 disks continuously. Items should be centered and unit will begin and end shredding automatically. All disks should use specific entry as noted on your shredder.

**BLACK&DECKER**

SKU #BD-150

**Troubleshooting**

If you have a problem with your shredder, check the symptoms and remedies below. If you cannot solve the problem this way, contact Black & Decker paper shredders Customer Service.

**WARNING** Do not open shredder head to attempt repair. It could expose you to electric shock and will void your warranty.

Symptom	Remedy
Shredder does not start or stops while shredding.	- Make sure shredder is plugged in. - Make sure power switch is in "Auto" position. - Make sure bin is fully closed. - Check to see if bin is full. If bin is full, empty bin and replace. Follow instructions under maintenance.
Paper jams.	- Check to see if either bin is overfull which could result in a jam. If so, empty. - If you are unable to clear the jam, turn off and unplug the shredder. Slowly and carefully pull the remaining paper out. Forcefully removing the paper is likely to cause irreparable damage to the shredder.
Shredder squeaks, grinds or runs below capacity.	- Oil cutting cylinders.
Shredder continues to run for 1 or 2 seconds after shredding has been completed.	- No action required. This is a self-cleaning function.

Sheet capacity: 10 20 lb. pages in one pass

Paper shred size: .16" x 1.38"

4mm x 45mm

Maximum running time: 3 minutes

Automatic cool-down period: 30 minutes

Voltage: 120

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>