

**Limited Lifetime Warranty****WHO IS COVERED:**

This warranty covers only the original retail purchaser of the Black & Decker Paper Shredder who submits the warranty registration card within 90 days after purchase. This warranty is not transferable.

HOW LONG DOES COVERAGE LAST:

For cutter blades: Lifetime – as long as you own the product
For all other parts: One year from the date of original purchase

WHAT IS COVERED:

Any defect in material or workmanship of your Black & Decker Paper Shredder

WHAT IS NOT COVERED:

This warranty does not cover damage due to misuse, abuse or accident such as:

- failure to maintain the product as provided in the Black & Decker Paper Shredder Instruction Manual
- commercial use
- improper or unauthorized repair or service
- fire, flood, "acts of God" or other contingencies beyond the control of HoMedics, Inc.

WHAT HOMEDICS WILL DO:

Repair, and if not possible, replace your Black & Decker Paper Shredder with a new or reconditioned model of the same type. If the model has been revised, you will receive the most current model.

HOW TO GET SERVICE:

Visit our website at www.blackanddeckershredders.com or call the toll free customer service line at **1-800-297-5028**.

THE DURATION OF ANY IMPLIED WARRANTY OF MERCHANTABILITY IS LIMITED TO ONE YEAR. HOMEDICS SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE PURCHASE OR USE OF THE PAPER SHREDDER. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Distributed by
HOMEDICS®

HoMedics, Inc.
3000 Pontiac Trail
Commerce Township, MI
48390

Black & Decker and the Black & Decker logo are trademarks of The Black & Decker Corporation and are used under license. All rights reserved.



SKU #BD-10P

Please read these instructions before use

Thank you for buying a Black & Decker paper shredder. **Black & Decker paper shredders** have become the benchmark for innovation, performance and quality to protect against identity theft. We have taken great care in designing and engineering a product to meet and exceed your needs.

To ensure years of safe, efficient performance, please read these important product usage and safety instructions.

If you have any questions regarding the product, please feel free to **call toll-free 1-800-297-5028.**

The Following are Important Safety Instructions. Read All Instructions Before Using.

⚠ WARNING

- WARNING:** Hazardous moving parts. Keep fingers and other body parts away.
- WARNING:** To reduce risk of fire, electrical shock or injury:
- NEVER** allow children to operate a paper shredder, even under adult supervision. A paper shredder is **NOT** a toy.
- DO NOT** use flammable synthetic oil, petroleum-based products or aerosols of any kind on or near product at any time.
- DO NOT** operate any electrical product with a damaged cord.
- ALWAYS** keep the power cord clear of the shredder opening.
- AVOID** getting jewelry, hair or loose clothing too close to feed slot as serious injury can occur.
- DO NOT** handle plug or product with wet hands.
- ALWAYS** keep children and pets away from the shredder.
- ALWAYS** unplug shredder when not in use.
- DO NOT** attempt to feed more sheets of paper than specified on the feeder.
- DO NOT** attempt to shred materials other than paper, credit cards and CD's.
- DO NOT** hold CD or DVD with finger through the center ring while feeding into shredder.
- ALWAYS** empty the waste bin prior to becoming full.
- DO NOT** place shredder near heat or water source.
- DO NOT** open shredder head to attempt repair: It could expose you to electric shock and will void your warranty.
- ALWAYS** unplug your unit before cleaning. Strong cleaning chemicals should not be used. The socket-outlet shall be installed near the equipment and shall be easily accessible.

⚠ WARNING ALWAYS KEEP OUT OF REACH OF CHILDREN

WARNING ICONS:
The icons on top of the shredder warn the user of the potential dangers if the shredder is used improperly.



Setup

- Check shredder for damage or defects; some particles of paper are normal due to product testing.
- Plug the power cord into any easily reached standard outlet.
- To use, slide power switch on top to "Auto" position.
- Close the main bin.
- Place paper for shredding into the designated slot.

NOTE: Maximum sheet capacity for insertion is 10 sheets of 20 lb. paper in a single pass.

To Shred Credit Cards, CDs and DVDs

- To shred credit cards, CDs and DVDs open protective cover over separate opening and insert item using convenient guides.

ALWAYS unplug before emptying bin.

Customer Service

Black & Decker has a toll-free help line for customers living in the United States and Canada. Our customer service phone number is **1-800-297-5028** or visit our website at **www.blackanddeckershredders.com**.

Maintenance

It is important to empty the waste bin regularly to ensure the smooth operation of the cutting cylinders. The shredder will not operate when the bin is full. Regular oiling is also necessary for proper performance. It is recommended to use the shredder oil every few weeks.

Product Information

This product is designed to shred paper, staples, small paper clips, credit cards, CDs and DVDs. It is not intended to shred large paper clips, continuous forms, adhesive labels, transparencies, newspaper, cardboard or any other plastic other than credit cards. Using it for these purposes is likely to cause irreparable damage. Please do not attempt to shred more than 10 sheets/1 CD or DVD at a time. Shredder should not run more than 200 sheets/50 disks continuously. Items should be centered and unit will begin and end shredding automatically. All disks should use specific entry as noted on your shredder.

Troubleshooting

If you have a problem with your shredder, check the symptoms and remedies below. If you cannot solve the problem this way, contact Black & Decker paper shredders Customer Service.

⚠ WARNING Do not open shredder head to attempt repair: It could expose you to electric shock and will void your warranty.

Symptom	Remedy
Shredder does not start or stops while shredding.	- Make sure shredder is plugged in. - Make sure power switch is in "Auto" position. - Make sure bin is fully closed.
Paper jams.	- Check to see if either bin is overfull which could result in a jam. If so, empty. - If you are unable to clear the jam, turn off and unplug the shredder. Slowly and carefully pull the remaining paper out. Forcefully removing the paper is likely to cause irreparable damage to the shredder.
Shredder squeaks, grinds or runs below capacity.	- Check to see if bin is full. If bin is full, empty bin and replace. Follow instructions under maintenance. - Oil cutting cylinders.
Shredder continues to run for 1 or 2 seconds after shredding has been completed.	- No action required. This is a self-cleaning function.

Sheet capacity: **10 20 lb. pages in one pass**
Paper shred size: **.16" x 1.38"**
4mm x 45mm

Maximum running time: **3 minutes**
Automatic cool-down period: **30 minutes**
Voltage: **120**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>