


BravettiTM

PLATINUM PRO

Double Stove
With Concealed Heating Element

Use and Care Instructions
Model EP839/EP836

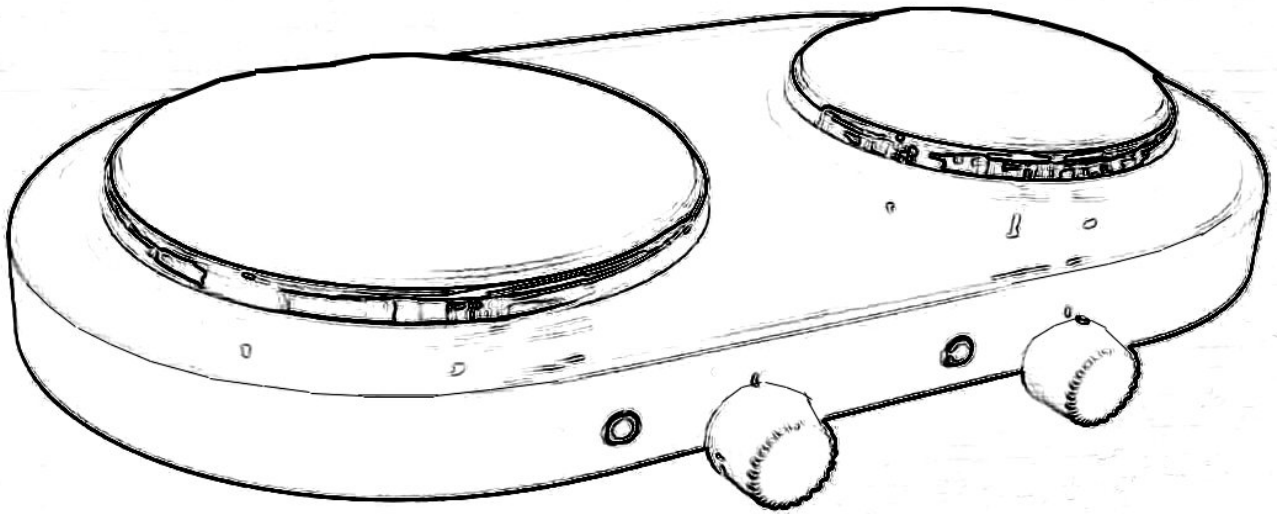

EURO-PRO Operating LLC

Boston, MA 02465

1 (800) 798-7398

www.euro-pro.com

READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using the appliance. It is suggested that you keep these instructions in a safe place for future reference.
2. Do not touch hot surfaces. Use handles or knobs.
3. To prevent from electric shock, do not immerse cord, plug or the appliance in waster or any other liquids. See instructions for cleaning.
4. Close supervision is necessary when any appliance is used near children.
5. This appliance is not for use by children.
6. Do not leave appliance unattended when in use.
7. Unplug appliance from outlet when not in use. Unplug and allow to cool before putting on or taking off parts and before cleaning.
8. Do not operate any damaged appliance. Do not operate with a damaged cord, plug or after appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to **EURO-PRO Operating LLC** for examination, repair, electrical or mechanical adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces
11. Do not use outdoors or in a damp area.
12. Do not place on or near a hot gas or electric burner or in a heated oven.
13. To disconnect, turn all controls to "O" position, then remove plug from wall outlet.
14. Extreme caution must be used when moving any pot or pan containing hot oil or liquids from this appliance.
15. When using this appliance, provide at least 4 to 6 inches air space above and on all sides for air circulation.
16. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls and the like when in operation. Do not place any items or cooking utensils not recommended by the manufacturer on the hot elements when in use.
17. Extreme caution should be exercised when using cooking or baking containers constructed of anything other than metal or heatproof glass.
18. Always wear insulated oven mitts when removing hot pots or pans from the hot plate.
19. Do not use outdoors.
20. Do not use appliance for other than intended use
21. This appliance is for household use only.

SPECIAL SAFETY INSTRUCTIONS

This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:

1. The electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

IMPORTANT NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Main Components

BravettiTM

PLATINUM PRO

Model EP839
DOUBLE STOVE
1500 Watts
120 Volt, 60 Hz

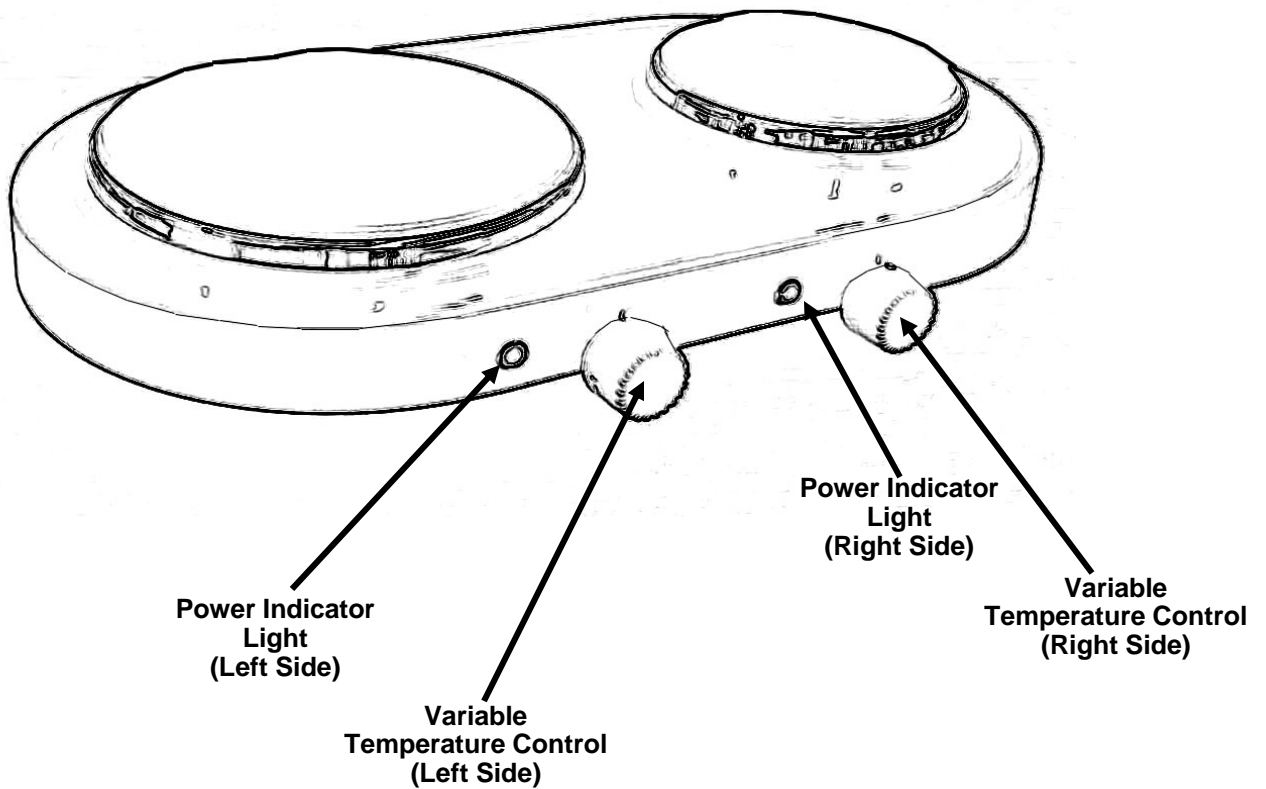

Read all the sections of this booklet and follow all the instructions carefully.

Operating Instructions

Before using the Double Stove for the first time, operate the burners once to burn off residues on the heating elements. When doing this, we suggest using the high heat setting.

- Place the Double Stove on a flat, smooth countertop surface. Be sure to place it in a safe area. Make sure that the cord is not in a position where it can be pulled off the countertop. There should be at least 4-6 inches of space above and around the unit for proper air circulation.

CAUTION: NEVER OPERATE THE UNIT IN A TILTED POSITION.

- Plug the Double Stove into an electrical wall outlet. To operate either burner, adjust the variable temperature control to the desired heat setting. The variable temperature control on the right side operates the burner on the right and the control on the left side operates the left burner.
- The power indicator light will illuminate and remain lit until the selected temperature has been reached. The light will then go on and off until the burner is turned off.

For best results: Turn on the burner for approximately 1 minute before placing a pot or pan on it.

- When finished, turn the variable temperature control to the “O” position.

WARNING: BE SURE TO TURN BURNERS OFF COMPLETELY AND UNPLUG UNIT AFTER EACH USE. NEVER LEAVE BURNER PLUGGED IN WHILE IT IS NOT IN USE.

FOR BEST RESULTS

- It is recommended to use pots or pans that are essentially the same size as the burners. A pot or pan should always be placed on the center of the burners.

NOTE: When using both burners at the same time, try not to use pots or pans that are bigger than the burners. This will ensure that both burners can distribute their heat properly.

- Burners work similarly to stovetop burners and feature a full range of heating options. Use the burner on the left (1200 watts) for quick heating tasks such as boiling water. Use the burner on the right (600 watts) for slow cooking or heating precooked foods.

ALWAYS TURN BURNERS OFF AND UNPLUG UNIT WHEN NOT IN USE

Cleaning Instructions

TO CLEAN: Turn the unit completely off, unplug and allow to cool completely before cleaning.

CAUTION: NEVER IMMERSE THIS PRODUCT IN WATER OR ANY OTHER LIQUID. NEVER USE STEEL WOOL OR ABRASIVE CLEANERS, AS THEY MAY SCRATCH THE SURFACES OR DAMAGE THE UNIT.

The base unit and heating elements may be wiped with a damp cloth or sponge.

WARNING: TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN UNIT IS IN USE. ALWAYS USE OVEN MITTS.

TO STORE: Unplug the unit and allow it to cool completely before storing. Store unit in its box or in a clean, dry place. Never wrap the cord tightly around the appliance. Do not put stress on the cord where it enters the unit, as this could cause it to fray and break.

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>