



Illustrated Parts List

Model Series

124L00

TYPE NUMBERS
0112 through 1103.

TABLE OF CONTENTS

Air Cleaner	4
Alternator	6
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	4
Fuel Supply	3
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	5
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.


124L00

1319 WARNING LABEL







REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL


1330 REPAIR MANUAL

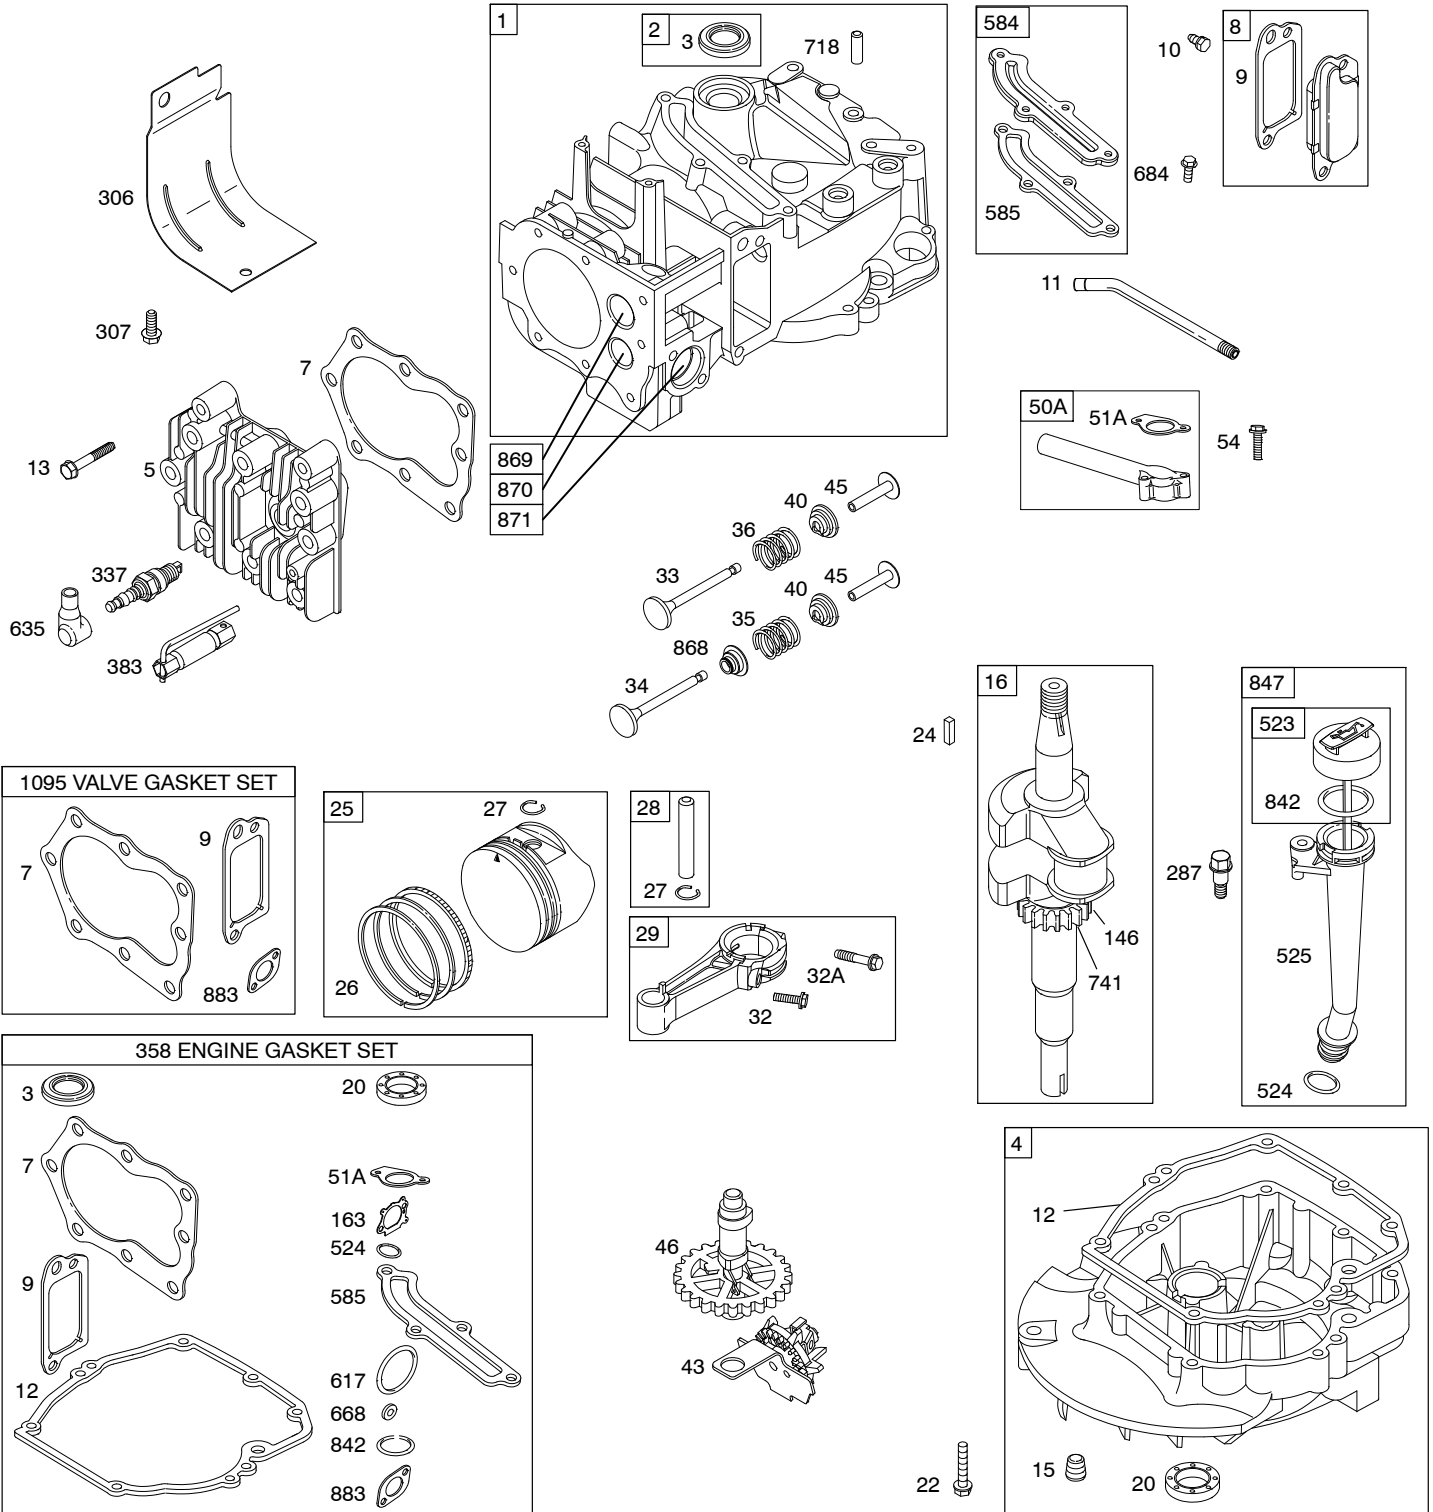



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 3976-2 Assemblies include all parts shown in frames. 05/20/2008

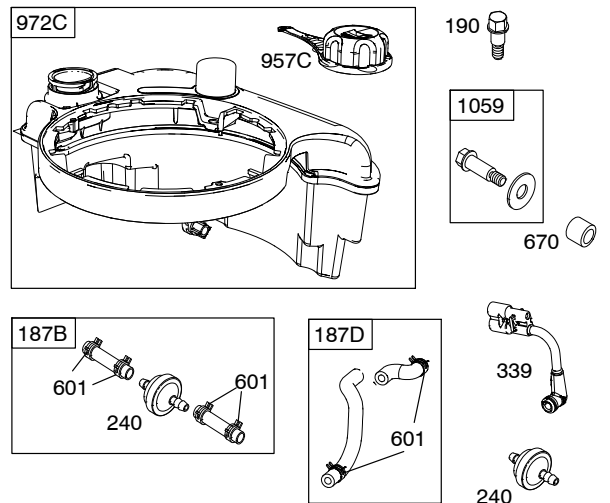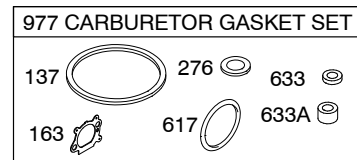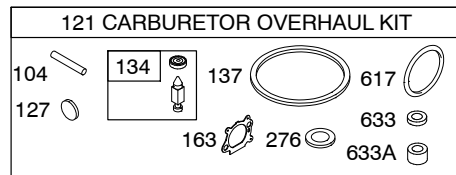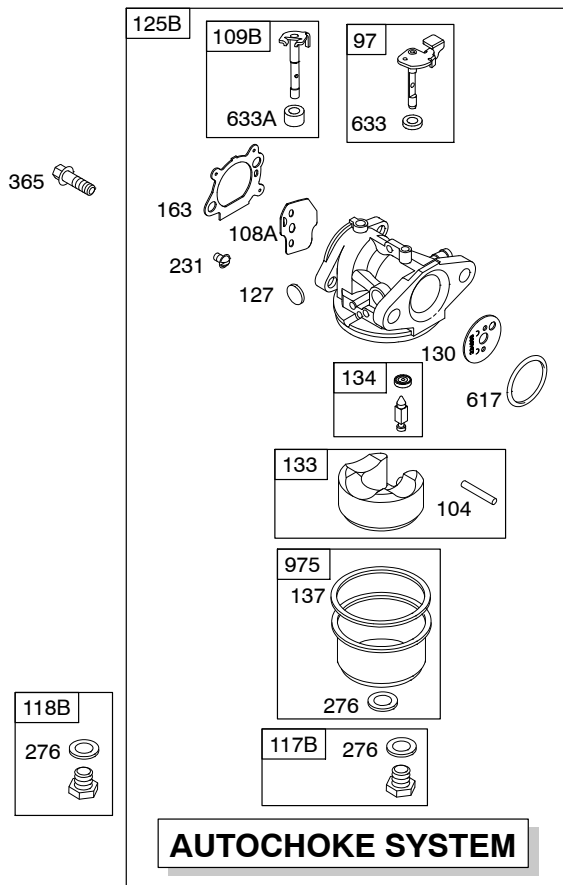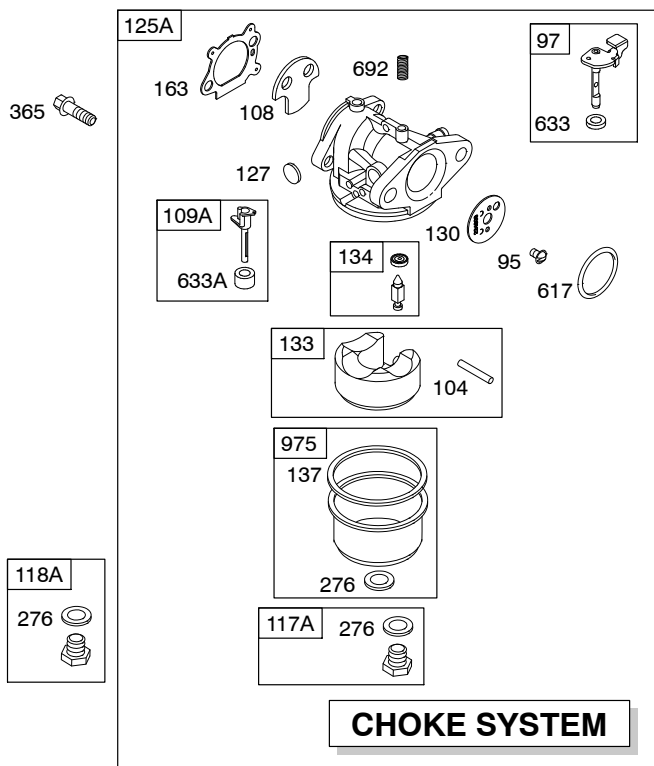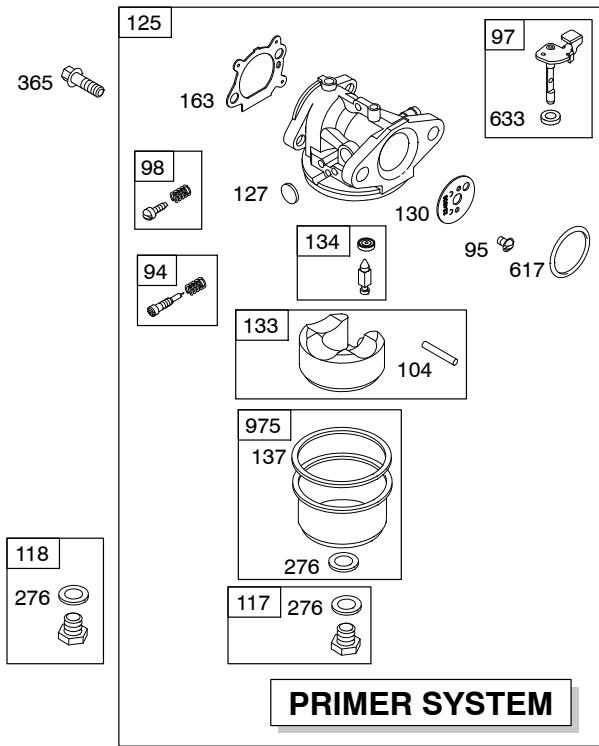











124L00

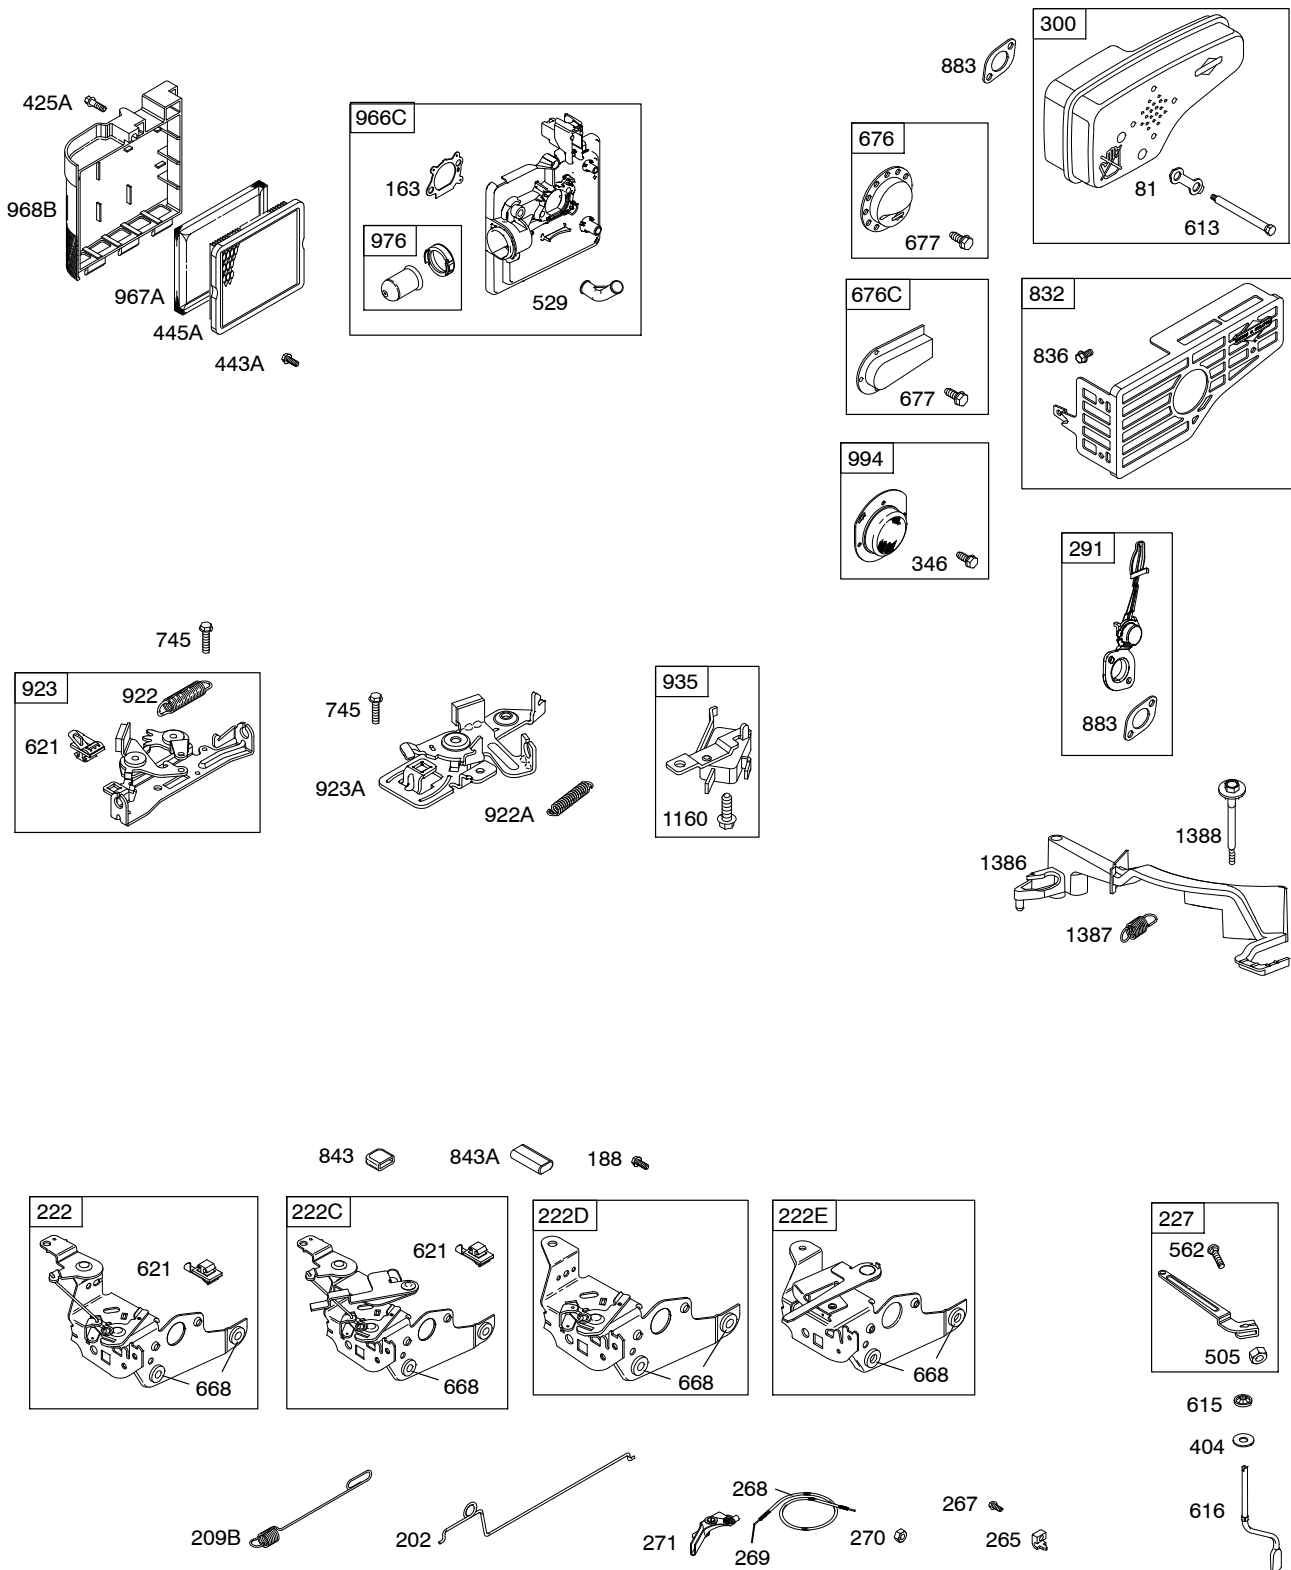

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3976-4 Assemblies include all parts shown in frames. **05/20/2008**

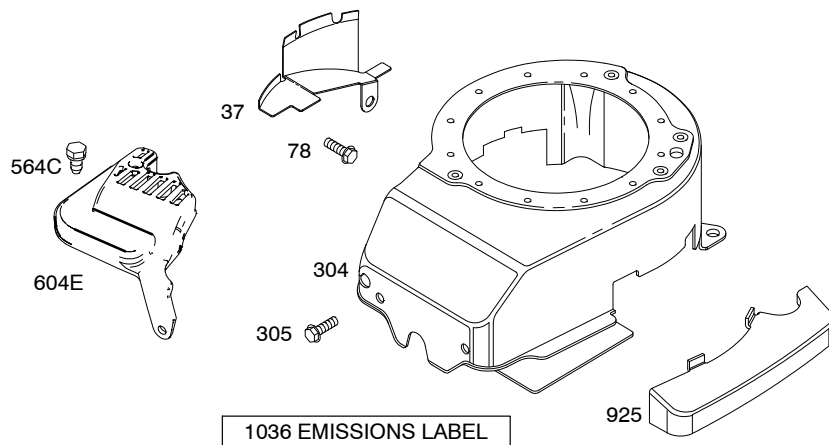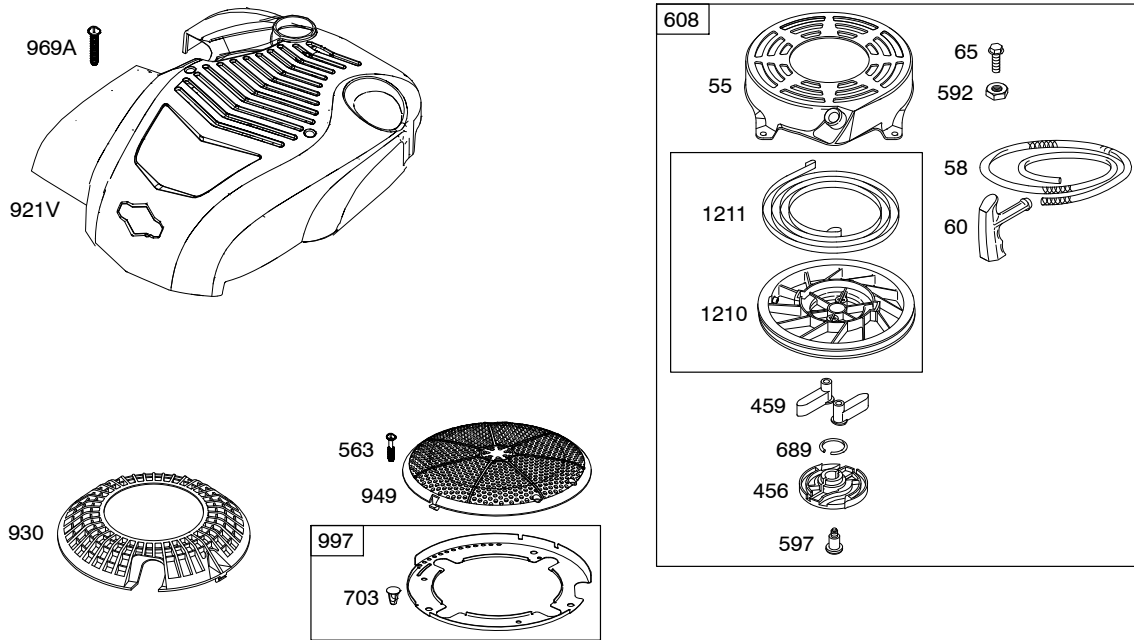

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3976-5 Assemblies include all parts shown in frames. 05/20/2008

   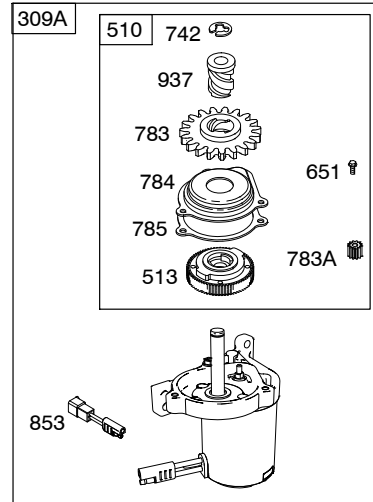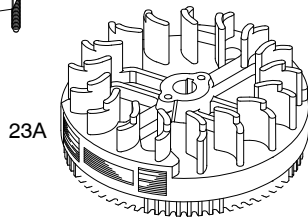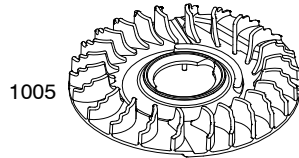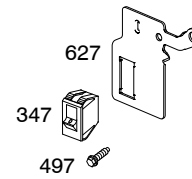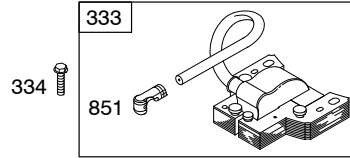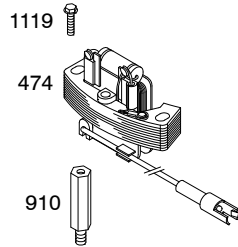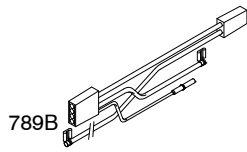

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3976-6 Assemblies include all parts shown in frames. **05/20/2008**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	23A	691992	Flywheel	27	691866	Lock-Piston Pin
2	399269	Kit-Bushing/Seal (Magneto Side)			Used on Type No(s). 0120, 0124, 0153, 0165, 0530.	28	499423	Pin-Piston (Standard)
3	★299819S	Seal-Oil (Magneto Side)			----- Note -----	29	499424	Rod-Connecting (Standard)
4	493279	Sump-Engine			691987 Flywheel	32	691664	Screw (Connecting Rod)
5	691160	Head-Cylinder			Used on Type No(s). 0112, 0115, 0645, 0650, 0212, 0975, 1103.	32A	695759	Screw (Connecting Rod)
7	★Ø692249	Gasket-Cylinder Head	24	222698S	Key-Flywheel	33	262651S	Valve-Exhaust
8	695250	Breather Assembly	25	795429	Piston Assembly (Standard) (Used After Code Date 07090300).	34	262652S	Valve-Intake
9	★Ø696125	Gasket-Breather			----- Note -----	35	691270	Spring-Valve (Intake)
10	691125	Screw (Breather Assembly)			791097 Piston Assembly (Standard) (Used Before Code Date 07090400).	36	691270	Spring-Valve (Exhaust)
11	691781	Tube-Breather			795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300).	37	694086	Guard-Flywheel
12	★692232	Gasket-Crankcase			791326 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).	40	692194	Retainer-Valve
13	690912	Screw (Cylinder Head)			795431 Ring Set (Standard) (Used After Code Date 07090300).	43	691997	Slinger-Governor/Oil
15	691680	Plug-Oil Drain (Square Socket)			----- Note -----	45	690548	Tappet-Valve
16	691455	Crankshaft Used on Type No(s). 0530.			791098 Ring Set (Standard) (Used Before Code Date 07090400).	46	691449	Camshaft
		----- Note -----			795432 Ring Set (.020" Oversize) (Used After Code Date 07090300).	50A	794305	Manifold-Intake
		696009 Crankshaft Used on Type No(s). 0212.			791324 Ring Set (.020" Oversize) (Used Before Code Date 07090400).	51A	★794306	Gasket-Intake
		691450 Crankshaft Used on Type No(s). 0645, 0650, 0947, 0975, 1103.				54	691650	Screw (Intake Manifold)
		691452 Crankshaft Used on Type No(s). 0115.	26	795431		55	691421	Housing-Rewind Starter
		694849 Crankshaft Used on Type No(s). 0120, 0124.			----- Note -----	58	697316	Rope-Starter (Cut To Required Length)
		691451 Crankshaft Used on Type No(s). 0112, 0153, 0165.			791098 Ring Set (Standard) (Used Before Code Date 07090400).	60	281434S	Grip-Starter Rope
20	★399781S	Seal-Oil (PTO Side)			795432 Ring Set (.020" Oversize) (Used After Code Date 07090300).	65	690837	Screw (Rewind Starter)
22	691092	Screw (Crankcase Cover/ Sump)			791324 Ring Set (.020" Oversize) (Used Before Code Date 07090400).	78	691108	Screw (Flywheel Guard)
						81	691740	Lock-Muffler Screw
						94	●493765	Kit-Idle Mixture
						95	691636	Screw (Throttle Valve)
						97	493267	Shaft-Throttle (Metal)
								----- Note -----
								696565 Shaft-Throttle (Plastic)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3976-7

Assemblies include all parts shown in frames.

05/20/2008

124L00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
98	398185	Kit-Idle Speed	187B	791891	Line-Fuel (Includes Filter)	227	690783	Lever-Governor Control	
104	●691242	Pin-Float Hinge	187D	795090	Line-Fuel (Molded)	231	691636	Screw (Choke Valve)	
108A	795935	Valve-Choke (Used After Code Date 08031200).	188	693399	Screw (Control Bracket)	240	298090S	Filter-Fuel	
		----- Note -----	190	690940	Screw (Fuel Tank)	265	690798	Clamp-Casing	
		790844 Valve-Choke (Used Before Code Date 08031300).	202	691829	Link-Mechanical Governor	267	691044	Screw (Casing Clamp)	
108A	790844	Valve-Choke	209B	790944	Spring-Governor Used on Type No(s). 0530.	268	691025	Casing-Control Wire (Cut to Required Length)	
109A	498593	Shaft-Choke			----- Note -----	269	691026	Wire-Control (Cut to Required Length)	
109B	795936	Shaft-Choke (Used After Code Date 08031200).			691292 Spring- Governor Used on Type No(s). 0115, 0212.	270	691027	Nut (Control Wire Casing)	
		----- Note -----			699056 Spring- Governor Used on Type No(s). 0645, 0650, 0947, 0975, 1103.	271	691028	Lever-Control	
		790843 Shaft-Choke (Used Before Code Date 08031300).			691290 Spring- Governor Used on Type No(s). 0120, 0124.	276	◆271716	Washer-Sealing (Main Jet)	
117	494870	Jet-Main (Standard)			691291 Spring- Governor Used on Type No(s). 0153, 0165.	287	690940	Screw (Dipstick Tube)	
117A	498981	Jet-Main (Standard)			691851 Spring- Governor Used on Type No(s). 0112.	291	790830	Thermostat	
117B	691428	Jet-Main (Standard)	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	300	692038	Muffler	
118	497315	Jet-Main (High Altitude)			222C	692150	Bracket-Control (Variable Speed) (5 Position Manual Choke)		
118A	494870	Jet-Main (High Altitude)			222D	791138	Bracket-Control (Fixed Speed)		
118B	695042	Jet-Main (High Altitude)			222E	692982	Bracket-Control (Manual Friction 5 Position Manual Choke)		
121	498260	Kit-Carburetor Overhaul					----- Note -----		
125	498170	Carburetor (Primer System)					790828 Muffler Used on Type No(s). 0650.		
125A	792253	Carburetor (Choke System)					304	493294	Housing-Blower Used on Type No(s). 0112, 0124, 0153, 0165, 0530.
125B	794304	Carburetor (Autochoke System)					----- Note -----		
127	●694468	Plug-Welch					493293 Housing- Blower Used on Type No(s). 0212, 0947, 0975, 1103.		
130	696564	Valve-Throttle					695892 Housing- Blower Used on Type No(s). 0115, 0645.		
133	398187	Float-Carburetor					790826 Housing- Blower Used on Type No(s). 0650.		
134	●398188	Kit-Needle/Seat					791291 Housing- Blower Used on Type No(s). 0120.		
137	◆693981	Gasket-Float Bowl							
146	690979	Key-Timing							
163	★◆272653	Gasket-Air Cleaner							

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊙ Included in Valve Gasket Set-Ref. No.1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3976-8

Assemblies include all parts shown in frames.

05/20/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	525	495265	Tube-Dipstick	684	690345	Screw (Breather Passage Cover)
306	690450	Shield-Cylinder	529	691923	Grommet	689	691855	Spring-Detent
307	690345	Screw (Cylinder Shield)	562	92613	Bolt (Governor Control Lever)	692	690572	Spring-Friction
309A	795092	Motor-Starter	563	691138	Screw (Debris Guard Screen)	697	691127	Screw (Drive Cap)
332	690662	Nut (Flywheel)	564C	690351	Screw (Control Cover)	718	690959	Pin-Locating
333	802574	Armature-Magneto	584	697734	Cover-Breather Passage	741	795755	Gear-Timing
334	691061	Screw (Magneto Armature)	585	★691879	Gasket-Breather Passage	703	696309	Clip
337	802592S	Plug-Spark (Resistor)	592	690800	Nut (Rewind Starter)	741	795755	Gear-Timing (Plastic)
339	794797	Tube/Connector Assemble	597	691696	Screw (Pawl Friction Plate)	----- Note -----		
346	690661	Screw (Spark Arrestor)	601	791850	Clamp-Hose	794388	Gear-Timing (Use Without Woodruff Key)	
347	691396	Switch-Rocker	604E	794794	Cover-Control	(Used After Code Date 07093000).		
356	692390	Wire-Stop	608	497680	Starter-Rewind	790345	Gear-Timing (Use Without Woodruff Key)	
356B	693010	Wire-Stop	613	691340	Screw (Muffler)	(Used Before Code Date 07100100).		
358	497316	Gasket Set-Engine	----- Note -----		691830	Gear-Timing (Uses Woodruff Key)		
363	19069	Flywheel Puller	790833	Screw (Muffler)	742	93941	Retainer-E Ring	
365	691688	Screw (Carburetor)	Used on Type No(s). 0650.		745	691648	Screw (Brake)	
383	89838S	Wrench-Spark Plug	615	690340	Retainer-Governor Shaft	783	691918	Gear-Pinion (Starter Drive)
404	690272	Washer (Governor Crank)	616	698801	Crank-Governor	783A	691269	Gear-Pinion
425A	690670	Screw (Air Cleaner Cover)	617★◆	270344	Seal-O Ring (Intake Manifold)	784	795095	Cover-Starter Gear
443A	692523	Screw (Air Cleaner Primer Base)	621	692310	Switch-Stop	785	692352	Gasket-Starter Cover
445A	491588S	Filter-Air Cleaner Cartridge	627	792565	Bracket-Stop Switch	789B	696547	Harness-Wiring
455	791960	Cup-Flywheel	633	◆691321	Seal-Choke/Throttle Shaft	832	499034	Guard-Muffler
456	692299	Plate-Pawl Friction	633A	◆693867	Seal-Choke/Throttle Shaft	836	690664	Screw (Muffler Guard)
459	281505S	Plate-Ratchet	635	66538S	Boot-Spark Plug	842	★691031	Seal-O Ring (Dipstick Tube)
474	691991	Alternator	651	691660	Screw (Starter Gear Cover)	843	691884	Sleeve-Lever
497	690664	Screw (Stop Switch Bracket)	668	★493823	Spacer	843A	691895	Sleeve-Lever
505	691251	Nut (Governor Control Lever)	670	692294	Spacer-Fuel Tank	847	692047	Dipstick/Tube Assembly
510	795093	Drive-Starter	676	396548	Deflector-Muffler	851	493880S	Terminal-Spark Plug
513	692358	Drive-Clutch	676C	493871	Deflector-Muffler	853	695268	Adapter-Wire
523	499621	Dipstick	677	690661	Screw (Muffler Deflector)	868	697338	Seal-Valve
524	★692296	Seal-Dipstick Tube						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3976-9

Assemblies include all parts shown in frames.

05/20/2008

124L00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
869	691155	Seat-Valve (Intake)	949	696306	Guard-Debris Screen	1058	277039	Operator's Manual
870	690380	Seat-Valve (Exhaust)	973	691325	Spline-Starter	1059	692311	Kit-Screw/Washer
871	262001	Bushing-Valve Guide (Exhaust)	957C	794793	Cap-Fuel Tank (Plastic)	1095	498528	Gasket Set-Valve
		----- Note -----	966C	794798	Base-Air Cleaner Primer	1119	692979	Screw (Alternator)
		63709 Bushing-Valve Guide (Intake)	967A	493537S	Filter-Pre Cleaner	1160	690345	Screw (Interlock Switch)
883	★∅691881	Gasket-Exhaust	968B	692298	Cover-Air Cleaner	1210	498144	Pulley/Spring Assembly (Pulley)
910	691094	Stud (Alternator)	969A	691138	Screw (Blower Housing Cover)	1211	498144	Pulley/Spring Assembly (Spring)
920	691656	Solenoid-Starter	972C	794792	Tank-Fuel (Plastic)	1319	794467	Label-Warning
921V	795089	Cover-Blower Housing	975	493640	Bowl-Float	1330	270962	Manual-Repair
922	691831	Spring-Brake	976	694395	Primer-Carburetor	1386	790848	Vane-Air (Autochoke System)
922A	692135	Spring-Brake	977	498261	Gasket Set-Carburetor	1387	790849	Spring-Air Vane
923	691994	Brake	994	398067	Arrestor-Spark	1388	790850	Screw (Air Vane) (Autochoke System)
923A	695891	Brake	997	696310	Shield-Debris			
925	795403	Cover-Linkage	1005	691346	Fan-Flywheel			
930	691919	Guard-Rewind	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)			
935	499421	Switch-Interlock						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3976-10

Assemblies include all parts shown in frames.

05/20/2008

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>