


BRINKMANN®
Windy™
2-Speed Personal Fan

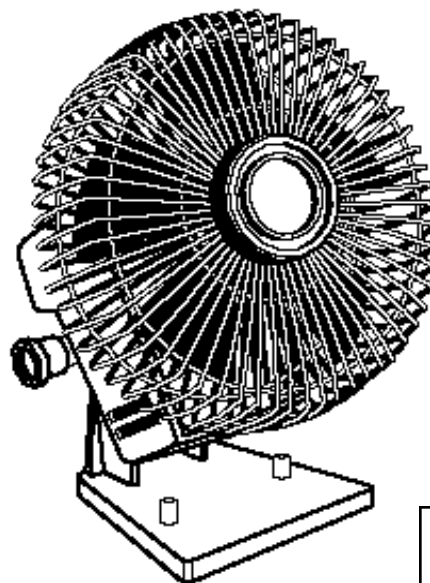

**READ AND
SAVE THESE
INSTRUCTIONS**

Full Three Year Warranty

The Brinkmann Corp. warrants your fan against defects for three years from the date of purchase.

If found to be defective in material and workmanship, Brinkmann will repair or replace this fan at no charge to you. To obtain repair service, just mail your fan with postage prepaid to the service center listed below. Also enclose note stating the specific cause for returning the unit. Allow 4 weeks for service and mailing time. Make sure your unit is properly packaged when mailing. Brinkmann is not responsible for damages that occur in shipping.

Your warranty will be void if malfunction was caused by damage, misuse or abuse while in your possession.

This warranty gives you specific legal rights. You may have other rights which vary from state to state.

Brinkmann reserves the right to make changes in prices, designs, specifications, operating instructions or discontinue models without any obligations.

Service Center: The Brinkmann Corp. 1204 W. 27th Street, Kansas City, MO 64108.

Introduction to Windy™

Windy™ was designed as a personal fan to provide you with many years of cooling comfort in a quiet and efficient way.

On warm days, or nights, Windy will make you feel many degrees cooler. It produces a cooling breeze of 325 feet per minute when placed approximately three feet from you. Since Windy directs the breeze on you, and does not waste its cooling energy on the surroundings, it will cost you about 2¢ a day to operate.

Windy, with its quietness and good looks, can be used anywhere. Use it in your bedroom, kitchen, den, study or place of leisure, Take it with you on your travels. It makes a nice office, workshop, dormitory or even assembly line companion.

How to Use Windy™


Plug fan cord into a 120 volt, 60 Hz outlet. Now turn switch to high or low speed (see figure). Windy has a two speed selection for convenience. Fan can be placed on any flat surface.

Air flow may be directed up or down by tilting fan angle. Adjust knobs (see illustration) so that fan can easily be tilted to any position, If fan will not hold its position, tighten knobs slightly. **Do not overtighten.** Fan can now be tilted to any position without further knob adjustment.

Important Safeguards

When using electrical appliances, especially in the presence of children, safety precautions should be taken. Among these are:

1. When left unattended, always unplug fan.
2. Do not use while bathing. Do not place or drop fan in water.
3. Never use fan if it has been damaged, dropped in water or does not perform properly.
4. Never drop or insert an object into the fan guard. Prevent children from doing this.
5. Do not operate fan outside when raining.

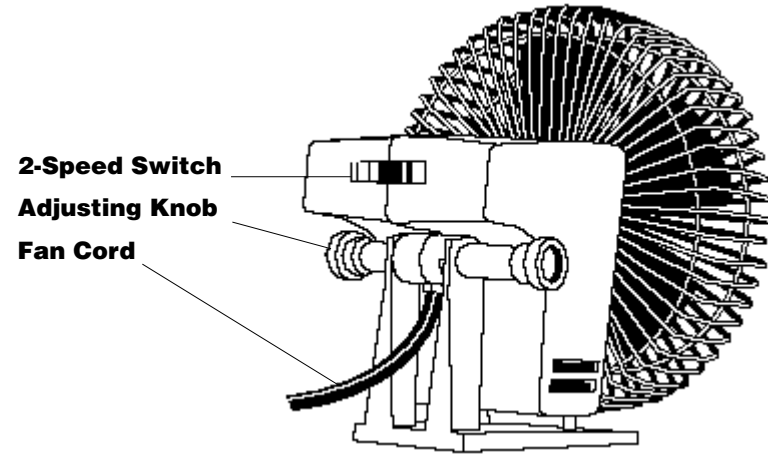

How to Care For Windy™

1. Do not attempt to take fan apart. If it is malfunctioning, return to an authorized Brinkmann Service Center for repair.
2. Straighten cord periodically.
3. Use a vacuum cleaner to remove dust or lint from the fan guard area. Unplug fan first.
4. Use a damp cloth to clean body and stand of fan. Make sure fan is unplugged.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK,
DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>