

# READ AND SAVE THESE INSTRUCTIONS

## INSTRUCTIONS FOR MOUNTING LIGHT FIXTURE KG1N

 
 
 
 


**WARNING:** To reduce the possibility of electrical shock, be sure that the power is turned off at its source (fuse or circuit breaker). All electrical components must be installed in accordance with national and local electrical codes. To reduce the risk of fire and electrical shock, use this light fixture only with UL Listed Casablanca ceiling fans indicated as adaptable on the chart included with these instructions.

### BEFORE YOU START:

- THIS LIGHT FIXTURE NOT FOR USE ON 3 SPEED PULL-CHAIN FANS. (MODEL NUMBERS ENDING WITH A "D")
- Light fixture to fan compatibility chart located on last page of instructions.

## INSTALLATION

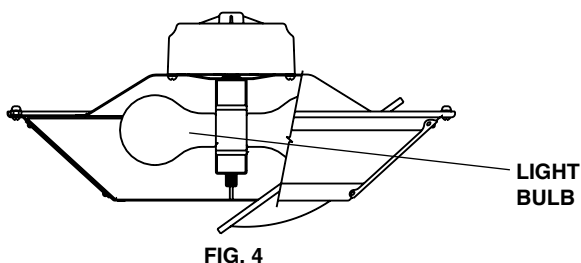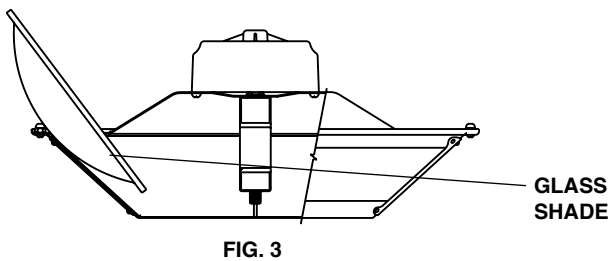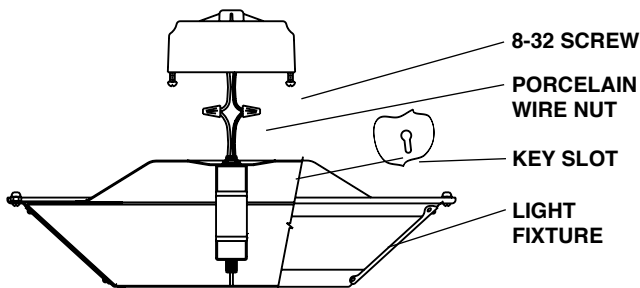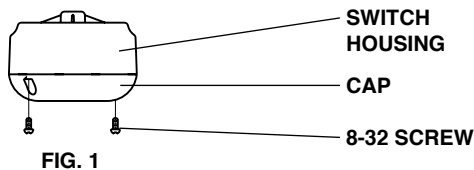

**1.** Remove the cap from fan by removing two brass 8-32 screws and save these screws for attaching light fixture. Remove plastic wire nuts from switch housing wires and strip 1/2" insulation from both wires (black and white). This cap and plastic wire nuts will not be reused. See FIG. 1

**2.** Thread the two 8-32 screws half way into the two threaded holes on the switch housing. See FIG. 2

**3.** While holding light fixture up to the fan, attach the wires from the fan switch housing and the wires from the light fixture together (black-to-black and white-to-white) by twisting the bare ends of the wires together. Then secure the splices by threading on the porcelain wire nuts provided. Test the secureness of each splice by pulling on the wire nut. Check that there is no bare wire showing from the wire nut then cover both connections with electrical tape.

**4.** Align the two 8-32 screws on the switch housing with the two key slots on the housing cover. Rotate light fixture counter-clockwise, make certain screw heads have rotated to the narrow end of the slot.


**Caution:** Make sure no wires are pinched between light fixture and switch housing. Tighten the screws to secure light fixture.

**5.** Insert the glass shade from the top opening. See FIG. 3

**6.** Tilt the glass shade upward to the side to install light bulbs. Do not exceed the maximum wattage indicated on the light fixture. Place the glass shade back on the light fixture so that the glass shade will not rattle when the fan is in operation. See FIG. 4

**CAUTION:** Make sure no wires are pinched between light fixture and switch housing.

# LIGHT FIXTURE TO FAN COMPATIBILITY CHART

 

MODEL SERIES	LIGHT FIXTURES																												
	K1	K2	K4	K4B	K4C	K4S	K4Z	K5L	KG1HB	KG1HC	KG1J	KG1P	KG1Q	KG1Q-R	KG1R	KG1S	KG1T	KG1U	KG2F	K104	K134	K164	KG210	KG240	KG400	K4K	KG1X	KWM	
Artisan 3700T	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
Avalon 2800D	●	●	●	●																	●		●				●	●	
Clairemont 5100D	●	●	●	●	●	●		●	●			●									●	●	●	●	●		●	●	●
Commodore 3000D	●	●	●	●	●	●		●	●			●									●	●	●	●			●	●	
Delta II 14000D	●	●	●	●	●	●		●	●			●									●	●	●	●			●	●	
Four Seasons 7300D																					●	●	●	●	●		●	●	●
Four Seasons 7500D																					●	●	●	●	●		●	●	●
Four Seasons 7600D																					●	●	●	●	●		●	●	●
Genesis 900D	●	●	●	●	●	●		●	●			●									●	●	●	●			●	●	
Hermosa 3900D	●	●	●	●	●	●		●	●			●									●	●	●	●			●	●	●
Hermosa 3900T	●	●	●	●	●	●		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Hugger 7100D																					●	●	●	●			●	●	●
Hugger 7200D																					●	●	●	●			●	●	●
Lady Delta 16000D	●	●	●	●	●	●		●	●			●									●	●	●	●			●	●	●
New Orleans 8000D	●	●	●	●	●	●		●	●			●									●	●	●	●			●	●	
Outsider 8100D																													●
Palisades 42000D	●		●	●		●			●			●																	
Palisades 42000V	●		●	●		●			●	●	●	●	●	●	●	●	●	●	●	●						●			
Panama 12000T	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Panama 12000R	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
San Marino 3100T			●	●		●	●		●	●	●	●	●	●	●	●	●	●	●	●									
Ventura 27000T	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Victorian 2000D	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Victorian 2000T	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

FAN CONTROL: R=COMFORT•TOUCH V=VERSA•TOUCH T=INTELI•TOUCH D=PULL CHAIN

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>