

FWV460

Manual for Installation, Use and Maintenance

CDA



Important

The CDA Group Ltd cannot be held responsible for injuries or losses caused by incorrect use or installation of this product. Please note that CDA reserve the right to invalidate the guarantee supplied with this product following incorrect installation or misuse of the appliance.

Under no circumstances should any external covers be removed for servicing or maintenance except by suitably qualified personnel.

Appliance information:

Please enter the details on the appliance rating plate below for reference, to assist CDA Customer Care in the event of a fault with your appliance and to register your appliance for guarantee purposes.

Appliance Model

Serial Number


CE Declarations of Conformity:

This appliance has been designed, constructed and marketed in compliance with safety requirements of EEC Directive 2006/95/EEC (Low voltage) and requirements of EMC Directive 2004/108/EEC.

This appliance has been manufactured to the strictest standards and complies with all applicable legislation, including Electrical safety (LVD) and Electromagnetic interference compatibility (EMC). Parts intended to come into contact with food conform to EEC/89/109.4

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.


Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin. 

Please note:

This appliance is designed solely to produce ice cubes and dispense chilled water. Other types of use are not permitted and may prove dangerous. The CDA Group Ltd will not be held liable for any damage caused by incorrect use of the appliance

- Read all instructions thoroughly before use.
- Before first use, you must allow the icemaker to settle for at least twenty four hours prior to switching the power on.
- To protect against fire, electrical shock and injury to persons do not immerse cord or plugs in water or other liquid.
- The use of accessory attachments not recommended by The CDA Group Ltd may result in fire, electric shock or injury.
- If the appliance is switched off, you should allow five minutes before switching it on again to prevent unnecessary damage to the compressor.

Icemaker

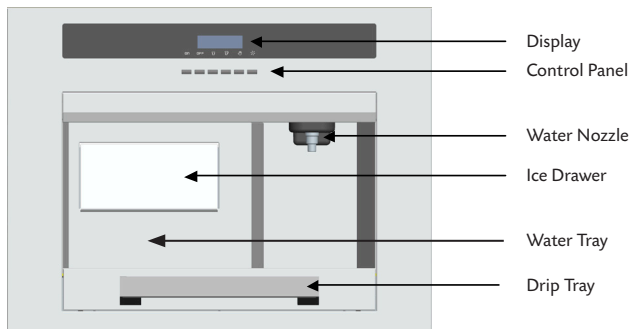

Icemaker control panel



1. On button
2. Off button
3. Water glass button – this button dispenses a small amount of water.
4. Water jug button – this button dispenses a large amount of water.
5. Manual water button – this button dispenses water as long as the button is pressed.
6. Maintenance button – this button allows the icemaker to automatically empty the pipes.

The Icemaker

Before first use:

1. Pull the machine out of its housing by lifting the handle of the machine and pulling it towards you.
2. Fill the water tank (even if the appliance is to be plumbed in to the mains water supply).
3. Turn on the machine at the switch on the left side of the machine.
4. Push the machine back into the housing.
5. Switch on the machine by pressing the **ON** button.
6. The machine is now ready for use and the display shows **ICE ON WATER READY**.

The water tank

It is possible to use the appliance without connecting it to the mains water supply. There is an integral water tank which can be used in this instance. To ensure the best results from your appliance, it is recommended that the water tank be emptied frequently and refilled with fresh water, and no water be left in the tank for long periods.






 
 

When the water tank is empty, the message **WATER MISSING** will show on the display.

To fill the water tank:

1. Pull the machine out of its housing by lifting the handle of the machine and pulling it towards you.
2. Open the lid of the water tank and fill it until the water is 4cm from the top level. Then close the lid.
3. Push the machine back into the housing.

Please note:

You should follow the steps below in order to remove any impurities from the system and ensure best performance from your ice maker. Failure to carry out this simple procedure could cause problems or damage to the workings of the icemaker.

1. Turn off the mains water supply, if applicable
2. Use a sterilising solution such as Milton fluid to clean the removable ice drawer and the ice drawer housing. Follow the instructions supplied with the sterilising solution to ensure the ice drawer is thoroughly cleaned.
3. Fill the internal water tank with 2.5l of water then add a spoonful of bicarbonate of soda to the water.
4. Use the water empty function (press and hold  and ; then press  before emptying the water tank by holding ) to flush the system through with the bicarbonate solution from the water tank.
5. Repeat steps 3 and 4.
6. Fill the water tank with 2.5l of water
7. Use the water empty function (press and hold  and ; then press  before emptying the water tank by holding ) to clear out any bicarbonate solution remaining.
8. Repeat steps 6 and 7.
9. Turn the ice maker off
10. Turn the mains water supply back on, if applicable, or fill the water tank.
11. Turn the ice maker on. Normal operation will resume.



The Icemaker

Bicarbonate of soda is a safe compound and poses no risk to health. It is commonly available and is sold in all supermarkets.

You should only use cold drinking water in this appliance, with water hardness level less than 7F.

The water tank can be removed for cleaning, following the steps above, and then lifting it out of the machine.

The water storage tray is located below the ice drawer. In normal use this fills with water, which is chilled and ready for dispensing; this does not constitute a fault.

The Icemaker


To make ice


The icemaker will make ice automatically once it is switched on and will continue to make ice until the ice compartment is full. Whenever ice is removed, the icemaker will make more ice until the compartment is full again.

To dispense water

The amount of water dispensed from the water nozzle is controlled by three different buttons.




 

 
 – water glass

 – water jug

 – manual setting – this button dispenses water as long as the button is pressed.

The water nozzle is height adjustable for ease of use. To adjust the height, hold the black outer section of the water nozzle and raise or lower it to the height required. The nozzle will automatically remain at the height set.

To change the preset buttons

It is possible to adjust the amount of water dispensed by the preset buttons ( & ). To do so, place a glass or jug under the water nozzle and press button 5 until the required amount has been dispensed. Then confirm the setting by pressing buttons  &  for the water glass button or buttons  &  for the water jug button.

Please note:

To stop water dispensing once a preset button has been pressed, simply press the button again.

To dispense ice

When the ice drawer is full, the display shows **ICE FULL WATER READY**.

Open the drawer fully and use the scoop provided to remove the ice as required.

Please note:

To ensure the ice is fresh, we recommend you empty the ice drawer every 6-8 hours.

If the ice drawer is not emptied for a long period of time, the appliance will go on standby for approximately ten minutes, and the display shows **ICE OFF WATER READY**. After the standby period has ended, the appliance will begin to make ice again. If you do not want to wait for the standby period to finish, press the ON button.

Care and maintenance

Always disconnect the appliance from the power before any cleaning or maintenance.

As the icemaker has a stainless steel or enamel surface, you should use a nonabrasive cleaner. Any abrasive cleaner (including Cif) will scratch the surface and could erase the control panel markings. Stainless steel can be effectively cleaned by simply using a dilute solution of water and mild detergent and drying to a shine with a clean cloth.





Proprietary stainless steel cleaners are available. We recommend the CDA E-Cloth available from the CDA Sales Team for cleaning stainless steel surfaces.

You should remove and clean regularly the water tank, the ice compartment drawer and both sections of the drip tray.

Once cleaning is complete, reconnect the mains power supply.

If the appliance is not to be used for prolonged periods of time, you should empty, clean thoroughly and unplug the appliance.

To empty the icemaker, follow the steps below:

1. Press and hold button  and  together and then press button . This will empty the water in the icemaker's internal system. The display will show **ICE OFF WATER EMPTY** to confirm the icemaker's internal system is empty.
2. Empty the ice from the ice compartment.
3. Place a jug under the water nozzle and press button  until no more water is dispensed.
4. To make sure the pipework is completely empty, you should unscrew the cap at the back, using a cup to catch the last of the water.

IMPORTANT:

Steam cleaners must not be used when cleaning this appliance.

Ensure that all parts are correctly replaced after cleaning before attempting to use the icemaker.

Troubleshooting

Problem	Solution:
WATER MISSING shows in the display	The water tank is empty and needs to be refilled
ICE FAULT WATER READY shows in the display at first switch on	Turn the icemaker off with OFF and the main switch on the side, before switching it on again.
The icemaker emits a continuous beep	UV Sterilizer needs replacing - contact CDA Customer Care
The dispensed water has an unpleasant taste	Ensure that only water pipes suitable for drinking water are used
ICE FAULT shows in the display	Turn the icemaker off with OFF remove some ice and turn it on again. We recommend that the unit is not left on permanently.

IMPORTANT:

Do not operate with a damaged cord, plug, after the appliance malfunctions or has been damaged in any way. You should contact CDA Customer care for inspection, repair or adjustment.

Installation

If necessary the included 6 metre water hose can be cut down to the required length using a sharp knife. You should ensure no burrs are left on the hose.

The water connection fitting and flow reducer are prefitted. However, if you should need to reconnect the fitting, proceed as follows:

Connect one push fit tap adaptor to each end of the water hose.

Insert the supplied flow restrictor and black o-ring into the tap adaptor as per fig 6. (Please note, the flow restrictor should be fitted to the tap adaptor that is to be fitted to the water supply tap)

Secure the tap adaptor that does not contain the flow restrictor to the valve on the back of the appliance and then connect the remaining tap adaptor to the mains water supply tap.

Once both tap adaptors are securely fitted turn on the water supply and check for leaks.

Please note:

Due to the weight of this appliance, the housing unit must be secured to the wall prior to installation.

You must ensure that all water connections are sound and check there are no leaks before completing installation.

For best performance, the mains water pressure must be between 0.1 - 3 bar.

Do not use outdoors.

Do not install near a hob or oven.

To reduce the risk of electric shock, do not mount over a sink.

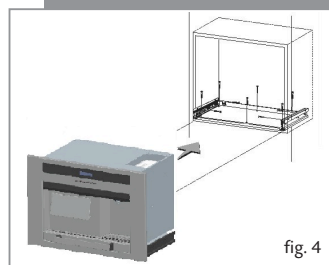


fig. 4


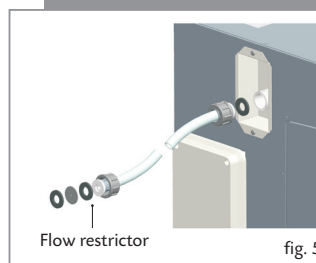


fig. 6

Electrical information

Warning! This appliance must be earthed.

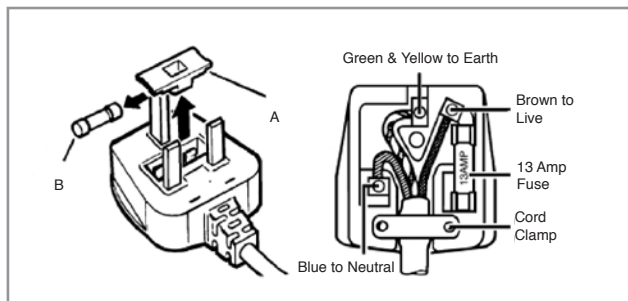

The mains lead of this appliance has been fitted with a BS 1363A 13 amp fused plug. To change a fuse in this type of plug, follow the steps below:

1. Remove the fuse cover and fuse.
2. Fit replacement 13A fuse, ASTA approved to BS 1362 type, into the fuse cover.
3. Replace fuse cover.

Important: Do not use the appliance without the fuse cover in position.

How to connect an alternative plug

If the fitted plug is not suitable for your socket outlet, then it should be cut off and disposed of safely to avoid the risk of electric shock. A suitable alternative plug of at least 13 Amp rating to BS 1363 should be used.

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

- The wire which is coloured GREEN and YELLOW must be connected to the terminal which is marked with letter (E) or by the Earth symbol \perp or coloured GREEN and YELLOW.
- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter (N), or coloured BLACK.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter (L) or coloured RED or BROWN.

If in doubt regarding the electrical connection of this appliance, consult a qualified electrician. Do not shorten the supply cable, the appliance may require removing for servicing.

N.B. Ensure that the plug socket is situated in an easily accessible place.



To contact our Customer Care Department, or for Service,
please contact us on the details below.

Customer Care Department • The CDA Group Ltd. • Harby Road • Langar • Nottinghamshire • NG13 9HY
T : 01949 862 012 F : 01949 862 003 E : service@cda.eu W : www.cda.eu

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>