

WARNING

To prevent possible SERIOUS INJURY or DEATH from electrocution:

- Be sure power is NOT connected BEFORE installing the receiver.

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

MOUNTING RECEIVER

- Unplug the opener before proceeding.
- Fully extend antenna wire below bottom of case as shown.
- The receiver can be mounted directly on the door opener with the clips provided (*Figure 1*).

OR

- Attached to a ceiling/inside wall of the garage with connecting bell wire (not provided). Fasten the receiver to the ceiling or inside garage wall with dry wall screws provided (*Figure 2*).

NOTE: Transformer Model 85 or 95 is required if your residential garage door opener is a LiftMaster, Chamberlain or Sears.

INSTALLATION USING CLIPS

Loosen the three terminal screws on the receiver (labeled 1, 2 and 3) (*Figure 1*). Insert one end of a mounting clip under each terminal. Do not retighten at this time.

Loosen the three terminal screws on the opener used for push button controls and radio power.

Leaving the push button bell wire in place, insert the other ends of the mounting clips under the opener terminal screws.

NOTE: If the number sequence of opener terminals does not match the receiver, turn the receiver around (so back is facing out) and complete the connection.

Retighten the terminal screws on opener and receiver.

Reconnect power to the opener. The receiver push bar should light. If it does not, use Transformer Model 85 or 95.

INSTALLATION USING BELL WIRE

Attach one end of 3-strand bell wire (not provided) to receiver terminals 1, 2 and 3. Connect the other end to the three opener terminals used for push button controls and radio power. Use insulated staples to secure bell wire between receiver and opener (*Figure 2*).

Reconnect power to the opener. The receiver push bar should light. If it does not, use Transformer Model 85 or 95.

INSTALLATION WITH TRANSFORMER

With the transformer, use a 2-wire connection only. Attach wire to receiver terminals 1 and 2 and to the opener terminals used for push button control. Plug the transformer into and 120 Volt outlet (*Figure 3*).

NOTICE TO U.S. CONSUMERS:

Some states prohibit the service or repair of garage door openers which cannot be made to comply with the safety standards contained in UL 325 (1988 revision). In order to comply with both the letter and the spirit of these laws, this universal radio control should not be used with any LiftMaster®, Chamberlain®, or Sears Craftsman® garage door opener manufactured prior to April 1, 1982. To find out if your Chamberlain-made garage door opener was manufactured prior to or after April 1, 1982, please call 1-800-528-9131 before installing this universal radio control.

Figure 1

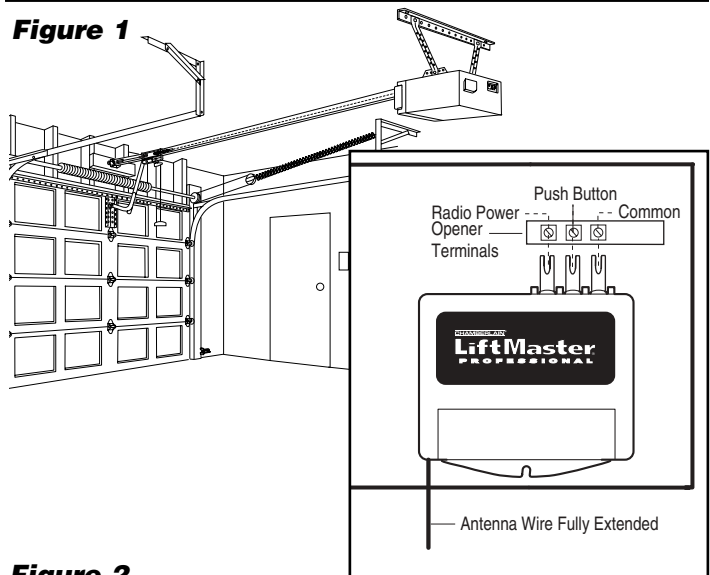


Figure 2


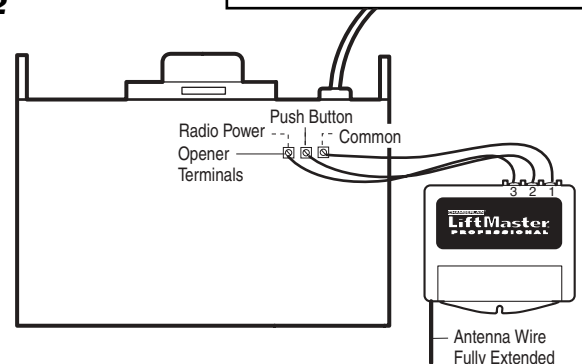


Figure 3

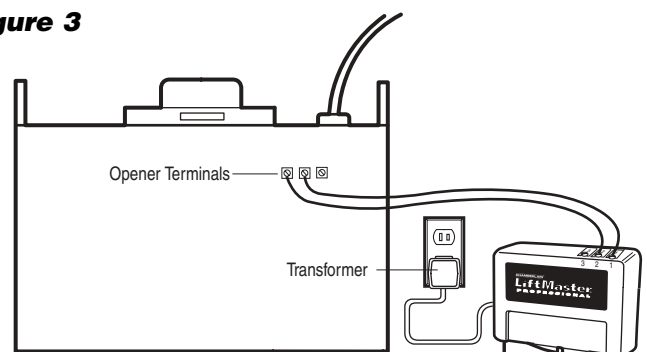

NOTE: Transformer Model 85 or 95 is required if your residential garage door opener is a LiftMaster, Chamberlain or Sears.

PROGRAMMING THE REMOTE TO THE RECEIVER

With Security+®, the code between the remote control and the receiver changes with each use, accessing over 100 billion new codes.

You can activate your opener with up to 8 Security+® remote controls and one Security+® Keyless Entry.

1. Pry open the front panel of receiver case with a coin or a screwdriver (Figure 4). Re-connect power to opener.
2. Press and release the "SMART" button on the receiver. The "SMART" indicator light will glow steadily for 30 seconds (Figure 5).
3. Within 30 seconds, press and hold the button on the hand-held remote that you wish to operate your garage door (Figure 6).

The opener will now operate when the push button on either the receiver or the remote control is pressed.


Repeat Steps 2 and 3 for each remote control that will be used to operate the garage door opener.

TO ERASE ALL REMOTE CONTROL CODES

Press and hold the "SMART" button on the receiver panel until the indicator light turns off (about 6 seconds). All remote control codes are now erased. Then follow the steps above to reprogram each remote control.

REPLACING THE REMOTE CONTROL BATTERY

The lithium battery should produce power for up to 5 years. To replace battery, pry open case with visor clip or screwdriver, as shown. Insert battery positive side up. Dispose of old battery properly.

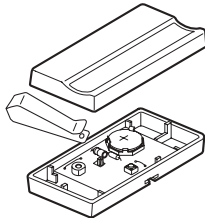

SET OUTPUT DURATION (COMMERCIAL APPLICATIONS ONLY)

⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH, the use of CONSTANT OPERATION on residential openers is PROHIBITED.

For commercial applications, the receiver can be set for either constant or momentary closure on the output contacts. Use of constant closure is prohibited on residential garage door openers because it overrides the safety reversal devices.

With the jumper in the "M" (Momentary) position, the contacts will close for 1/4 second regardless of the length of radio transmission. With the jumper in "C" (Constant) position, the contacts will stay closed as long as the radio continues transmitting.

The receiver is factory set at M.

SPECIFICATIONS

Output Rating.....5 Amps 28VAC or DC Max.
Power18V - 30V ~, 30mA, 60Hz
18 - 30V ==, 30mA

RF Frequency.....315MHz

If the power is other than shown in specifications, Accessory Transformer Model 85 or 95 is required.

Accessory Remote Controls — Series 300.

Figure 4

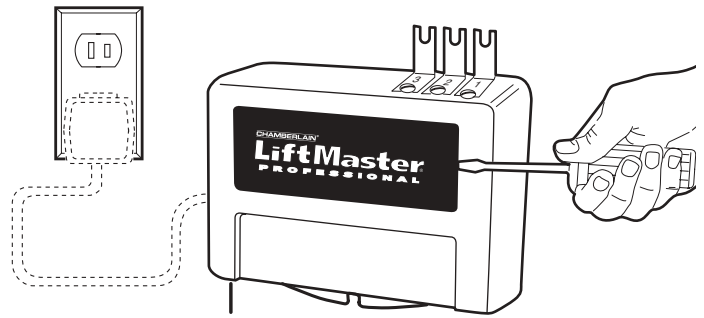


Figure 5


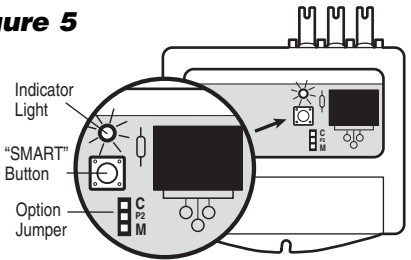


Figure 6

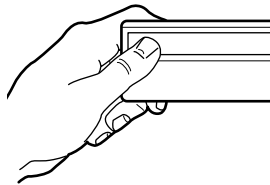



⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

NOTICE: To comply with FCC and/or Industry Canada (IC) rules, adjustment or modifications of this receiver and/or remote control are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

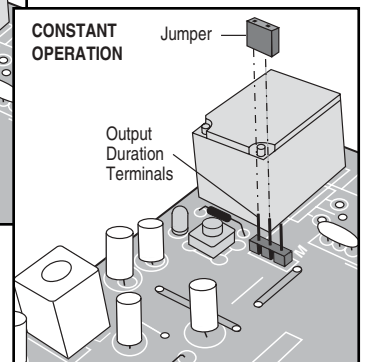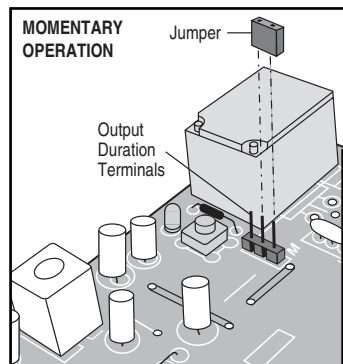

FOR SERVICE DIAL OUR TOLL FREE NUMBER: 1-800-528-2817

©2006 The Chamberlain Group, Inc.
All Rights Reserved

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>