

# Model S660

➤ *Owner's Guide*



## *limited lifetime consumer warranty*

This Ungo Pro Security system is warranted against defects in material and workmanship. The main unit is covered by this limited lifetime warranty. This Limited Lifetime Warranty applies to Ungo Pro Security systems that have been installed by an authorized Ungo Pro Security dealer. This warranty is to the Original Purchaser ("Owner") and to the original vehicle in which it was installed into. This warranty is not transferable to any subsequent owner(s) of the product(s).

### **Warranty Program:**

|                 |                                |
|-----------------|--------------------------------|
| Main Unit       | Limited Lifetime               |
| Remote Controls | One year from date of purchase |
| Siren           | One year from date of purchase |
| Shock Sensor    | One year from date of purchase |
| LED             | One year from date of purchase |
| Override Switch | One year from date of purchase |

The Warranty does not cover batteries or products deemed damaged through alterations or installation. It also does not cover products mishandled, misused, neglected, abused, water damaged, or with removed/altered serial numbers.

PROOF OF PURCHASE WILL BE REQUIRED FOR WARRANTY SERVICE OF THIS PRODUCT.

This warranty does not cover the costs incurred for removal or reinstallation of the main unit and/or any damage to the vehicle or the vehicle's electrical system.

The sole responsibility of Clarion Corporation of America ("Clarion") under this Warranty shall be limited to the repair or replacement of the product, at the sole discretion of Clarion.

If it becomes necessary to send the product or any defective part to Clarion, the product must be shipped in its original carton or equivalent carton, fully insured, with shipping charges prepaid. Clarion will not assume any responsibility for any loss or damage incurred in shipping.

ALL IMPLIED WARRANTIES EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW SHALL HAVE NO GREATER DURATION THAN THE WARRANTY PERIOD SET FORTH ABOVE. UNDER NO CIRCUMSTANCES SHALL CLARION CORPORATION BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OR INABILITY TO USE OF THE PRODUCT. BECAUSE SOME STATES DO NOT ALLOW LIMI-

TATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE THE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Should you have any difficulties with the performance of this product during warranty, please call: 1-800-GO-CLARION or visit your local Ungo Pro Security dealer. You may also contact the National Service Manager at the following address below for additional service help you may need.

Clarion Corporation of America  
Attn: National Service Manager  
661 W. Redondo Beach Blvd.  
Gardena, Ca 90247

# *table of contents*

---

|   |           |
|---|-----------|
| <b>limited lifetime consumer warranty</b> . . . . . | <b>i</b>  |
| <b>remote configurations</b> . . . . .              | <b>3</b>  |
| LCD 2-way configuration . . . . .                   | 3         |
| standard 4-button configuration . . . . .           | 5         |
| <b>what is included</b> . . . . .                   | <b>6</b>  |
| <b>important information</b> . . . . .              | <b>6</b>  |
| system maintenance . . . . .                        | 7         |
| fcc/id notice . . . . .                             | 8         |
| <b>remote functions</b> . . . . .                   | <b>9</b>  |
| LCD 2-way remote standard configuration . . . . .   | 9         |
| Standard LCD 2-way icon configuration . . . . .     | 11        |
| 4-button remote standard configuration . . . . .    | 16        |
| <b>LCD 2-way remote operation</b> . . . . .         | <b>17</b> |
| system signal paging features . . . . .             | 18        |
| <b>using your system</b> . . . . .                  | <b>19</b> |
| warning! safety first . . . . .                     | 19        |
| active arming . . . . .                             | 19        |
| passive arming . . . . .                            | 19        |
| warn away® response description . . . . .           | 21        |
| triggered response description . . . . .            | 21        |
| multi-level security arming . . . . .               | 23        |
| arming while driving . . . . .                      | 24        |
| disarming . . . . .                                 | 24        |
| disarming while driving . . . . .                   | 25        |
| high security disarm . . . . .                      | 25        |
| disarming without a remote . . . . .                | 26        |
| silent mode . . . . .                               | 27        |
| panic mode . . . . .                                | 27        |
| valet® mode . . . . .                               | 28        |
| setting the clock . . . . .                         | 28        |
| temperature check mode . . . . .                    | 29        |
| nuisance prevention circuitry . . . . .             | 29        |
| <b>diagnostics</b> . . . . .                        | <b>30</b> |
| arming diagnostics . . . . .                        | 31        |
| disarming diagnostics . . . . .                     | 31        |
| system status chirps . . . . .                      | 32        |
| table of zones . . . . .                            | 33        |
| interpreting zone diagnostics . . . . .             | 33        |

|   |    |
|---|----|
| code hopping . . . . .                      | 34 |
| high frequency . . . . .                    | 35 |
| owner recognition . . . . .                 | 35 |
| rapid resume logic . . . . .                | 36 |
| power saver mode . . . . .                  | 36 |
| programming options . . . . .               | 37 |
| security & convenience expansions . . . . . | 39 |
| glossary of terms . . . . .                 | 41 |

# *remote configurations*

## → LCD 2-way configuration



|    |   |
|----|---|
| 1  | Vehicle Interior Temperature Indicator        |
| 2  | Numeric Display                               |
| 3  | AM/PM Indicator                               |
| 4  | Alarm Clock Mode Indicator                    |
| 5  | Timer Function Indicator                      |
| 6  | Transmit Range Indicator                      |
| 7  | Transmission Indication                       |
| 8  | Vibrate/Beep Mode Indicator                   |
| 9  | Power Saver Mode Indicator                    |
| 10 | Remote Start Timer Mode Indicator             |
| 11 | No Function                                   |
| 12 | Vehicle Page Mode Indicator                   |
| 13 | Full Trigger Shock Sensor Indicator           |
| 14 | Hood/Trunk Open or Trigger Indicator          |
| 15 | Parking Light Indicator                       |
| 16 | Door Open or Trigger Indicator                |
| 17 | Arm/Lock Button                               |
| 18 | Disarm/Unlock Button                          |
| 19 | Remote Start Indicator                        |
| 20 | Hood/Trunk Open or Trigger Indicator          |
| 21 | Remote Start Button                           |
| 22 | Valet® Mode Indicator                         |
| 23 | Remote Start Safety Shutdown Indicator        |
| 24 | Battery Level Indicator                       |
| 25 | Auxiliary Button                              |
| 26 | Temperature-Controlled Remote Start Indicator |
| 27 | Silent Arm/Disarm Mode Indicator              |
| 28 | Full Trigger Alert Indicator                  |
| 29 | Arm/Disarm Indicator                          |
| 30 | Function Button                               |
| 31 | Celsius/Fahrenheit Indicator                  |

→ **standard 4-button configuration**



controls the **Arm** and **Panic On/Off** function.



controls the **Disarm** and **Panic Off** function.




controls **Silent Mode™** and **Auxiliary channel 2** output.




no function.



and  pressed together control channel **4** output.



and  pressed together control channel **5** output



## *what is included*

---

- Control module
- ASK transceiver/antenna
- One 4-button remote
- One 2-way LCD remote
- Stinger™ DoubleGuard® 2-stage shock sensor
- Revenger™ Soft Chirp™ 6-tone programmable siren
- Status LED indicator light
- Push-button Valet® switch

## *important information*

---

Congratulations on the purchase of your remote alarm system. Due to the complexity of this system, it must be installed by an authorized dealer only. Installation of this product by anyone other than an authorized dealer voids the warranty. All dealers are provided with a preprinted dealer certificate to verify authorization.

By carefully reading this Owner's Guide prior to using your system, you will maximize the use of this system and its features. You can print additional or replacement copies of this manual by accessing our web site at [www.clarion.com](http://www.clarion.com).

## → system maintenance

The system requires no specific maintenance other than battery replacement for the remotes.

### **LCD 2-Way Remote Battery Replacement**

The 2-way remote is powered by a 1.5V AAA battery. The Battery Level indicator has three level indicators that serve as a visual indication of battery charge. When the battery reaches a low charge level that requires replacement, the transceiver will generate a single notification chirp, and the Battery Level indicator will flash continuously.






To replace the battery, gently pull the battery cover release tab, then slide the door down to expose the battery and remove the expired battery. Place the new battery into the transceiver observing the correct polarity. When power is returned the transceiver will light all icons in the LCD and generate all beeper tones once.

### **4-Button Remote Battery Replacement**

Your remote is powered by a small, lightweight 3-volt lithium battery (CR2032) that will last approximately one year under normal use. When the battery begins to weaken, operating range will be reduced and the LED on the remote will dim.

→ **fcc/id notice**

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

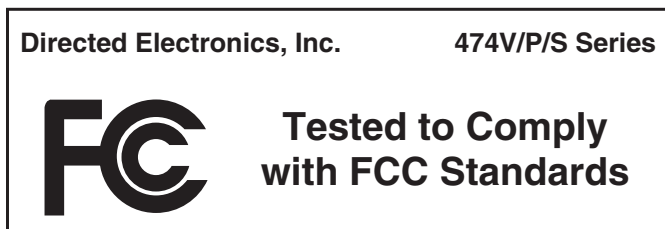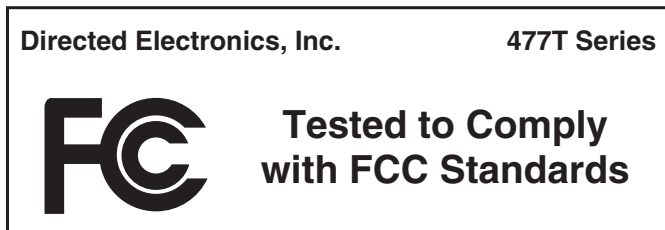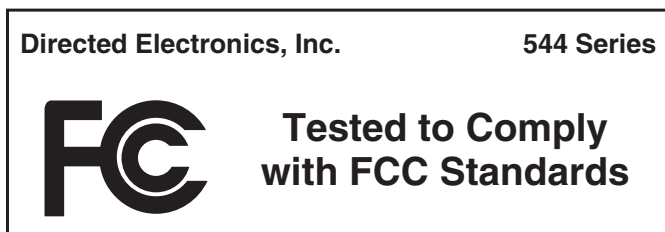

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

## *remote functions*

---

The remote buttons are used to send commands to the system. The descriptions below reflect the standard configuration for this system. The buttons can be custom configured for the user's specific needs by the installer.

### → **LCD 2-way remote standard configuration**

#### **LCD 2-way button configuration**



#### **Button**

The System Arm/Lock and Multi-Level Security Arming functions are controlled by pressing this button.



#### **Button**

The System Disarm/Unlock and High Security Disarm functions are controlled by pressing this button.



#### **Button**

Channel 2 output is controlled by pressing and holding this button for two seconds.



#### **Button**

The panic feature is controlled by pressing and holding this button for three seconds. Press again to disable panic mode.



#### **Button**

The LCD backlighting will turn on when pressed for less than one second; when held for more than five seconds the transceiver will enter adjustment mode allowing the setting of the clock, timer mode, and audible melody selection. For more information, please refer to the *Function Button Configurations* section of this guide.

### **Button**

When pressed and held this button activates the second unlock or other accessory.

### **and** **Buttons**

The numeric display toggles between the time of the day and the alarm clock when these buttons are pressed simultaneously.

### **and** **Buttons**

Press these buttons simultaneously to activate the parking timer. Each additional press will toggle through the available options (10 min., 20 min., 30 min., 1 hour, 1.5 hours, 2 hours, and off).

### **and** **Buttons**

When pressed simultaneously these buttons toggle between beep notification and vibrate notification.

### and Buttons

When pressed simultaneously these buttons activate battery saver mode, which will drop power consumption on the transceiver battery to zero when the alarm is inactive or disarmed.

### → **Standard LCD 2-way icon configuration**

#### Icon

The numeric display icon will show the hours and minutes.

#### Icon

The AM/PM icon indicates the time before or after noon.

#### Icon

The alarm clock mode icon indicates that the alarm clock mode is active.

#### Icon

The timer function icon flashes during timed functions including parking timer.

#### Icon

The transmit range indicator icon stays visible as long as the system is within operating range.



**Icon**

The remote transmission indicator icon displays when the transceiver is transmitting a signal.



**Icon**

The vibrate/beep mode icon appears when the transceiver is set to vibrate mode.



**Icon**

The power saver mode can be turned on or off with the transceiver. This icon displays the status.



**Icon**

No function.



**Icon**

The vehicle page mode icon displays when the alarm module is paging the transceiver.



**Icon**

The full trigger shock sensor icon indicates that the shock sensor has been triggered by a hard shock.



**Icons**

The hood/trunk open or trigger icon illuminates when the hood or trunk trigger has been activated or the hood or trunk is open, and bypasses those zones until it is closed.

**Icon**

The parking light icon will flash twice when armed or disarmed. The icon also flashes during WarnAway and at the beginning and end of remote start cycles.

**Icon**

The door open or trigger icon illuminates when the door trigger has been activated or the door is open, and bypasses that zone until it is closed.

**Icon**

No function.

**Icon**

The Valet® mode icon appears when the system is in Valet® mode.

**Icon**

The remote start safety shut down icon indicates the vehicle may be in gear or other unsafe condition inhibiting remote start operation.

**Icon**

The battery level icon indicates the level of power remaining in the battery.

**Icon**

The silent arm/disarm icon appears when the system has been armed or disarmed in the silent mode.

**Icon**

The full trigger alert icon illuminates when the security system has been triggered by a heavy impact, door trigger violation,



optional sensor violation, or a hood/trunk trigger.



**Icon**

The arm icon appears when the vehicle is armed and locked. The disarm icon appears when the vehicle is disarmed and unlocked.

### Standard LCD 2-way button functions

| Function  | Button        | Icon | Audible Indication        |
|---|---------------|------|---------------------------|
| Lamp On<br>(10 sec)                                   |               |      |                           |
| Power-Saver Mode*                                     | +             |      | Melody                    |
| Beep/Vibrate Mode                                     | +             |      | 4 Vibrations/<br>1 Beep   |
| Time Adjust<br>Mode (hour)**                          | for 5 Seconds |      | 2 Beeps                   |
| Time Adjust<br>Mode (min)**                           | 1 Time***     |      |                           |
| Alarm Clock<br>Set Mode (hour)**                      | 2 Times***    |      |                           |
| Alarm Clock<br>Set Mode (min)**                       | 3 Times***    |      |                           |
| Alarm Clock Music<br>or Power on Music<br>Selection** | 4 Times***    |      | 5 Selections<br>1/2/3/4/5 |
| Alarm Clock Adjust<br>Mode (on/off)**                 | 5 Times***    |      |                           |
| Timer Count Down<br>Adjust Mode<br>(hour)**           | 6 Times***    |      |                           |
| Timer Count Down<br>Adjust Mode<br>(min)**            | 7 Times***    |      |                           |

|                                  |  |             |         |  |              |        |
|----------------------------------|--|-------------|---------|--|--------------|--------|
| Timer Count                      |  | 8 Times***  |         |  | 5 Selections |        |
| Down Ending Melody Selection 1** |  |             |         |  | 1/2/3/4/5    |        |
| RS Timer Count                   |  | 9 Times***  |         |  |              |        |
| Down Mode (on/off)*              |  |             |         |  |              |        |
| Remote Start On                  |  | 10 times*** |         |  | 5 Selections |        |
| Melody Selection 2               |  |             |         |  | 1/2/3/4/5    |        |
| 10 Min Parking                   |  | +           | 1 Time  |  |              | Melody |
| Count Down Mode                  |  |             |         |  |              |        |
| 20 Min Parking                   |  | +           | 2 Times |  |              | Melody |
| Count Down Mode                  |  |             |         |  |              |        |
| 30 Min Parking                   |  | +           | 3 Times |  |              | Melody |
| Count Down Mode                  |  |             |         |  |              |        |
| 60 Min Parking                   |  | +           | 4 Times |  |              | Melody |
| Count Down Mode                  |  |             |         |  |              |        |
| 90 Min Parking                   |  | +           | 5 Times |  |              | Melody |
| Count Down Mode                  |  |             |         |  |              |        |
| 120 Min Parking                  |  | +           | 6 Times |  |              | Melody |
| Count Down Mode                  |  |             |         |  |              |        |
| Parking Count Down               |  | +           | 7 Times |  |              | Melody |
| Off Mode                         |  |             |         |  |              |        |
| Alarm Clock Mode                 |  | +           |         |  |              | Melody |
| On/Off****                       |  |             |         |  |              |        |
| Celsius/Fahrenheit               |  | +           | +       |  | or           | Melody |
| Select Mode                      |  |             |         |  |              |        |

\* This function will operate in the disarmed state only.

\*\* The button will advance the selection upward. The button will advance the selection downward or select the off setting.

\*\*\* Be sure to hold down for five seconds prior to entering timer clock adjust mode operation.

\*\*\*\* Press once to have the alarm clock on. Press twice to have the

alarm clock off.

The remote will revert to normal operation from the set mode when 15-seconds has elapsed without a button entry.

## → **4-button remote standard configuration**

### **Button**

The arming is controlled by pressing this button. The panic alarm is triggered by pressing and holding this button. Press this button again to cancel the panic alarm.

### **Button**

The disarming function is controlled by pressing this button.

### **Button**

Silent Mode™ and an optional auxiliary function are controlled by this button. (Silent Mode works by pressing this button for less than one second before arming or disarming. An optional auxiliary function, such as trunk release, can be controlled by pressing and holding this button for 1.5 seconds.)

**The auxiliary output controls \_\_\_\_\_.**

### and Buttons

An optional auxiliary convenience or expansion function that you have added to your system can be activated by pressing these buttons simultaneously.

The auxiliary output controls \_\_\_\_\_.

### and Buttons

An optional auxiliary convenience or expansion function that you have added to your system can be activated by pressing these buttons simultaneously.

The auxiliary output controls \_\_\_\_\_.

### and Buttons

No function.

## *LCD 2-way remote operation*

The remote start system operates at 434 MHz and incorporates Directed's proprietary A.S.K. out-board two-way transceiver. The high frequency combined with Binary Data communication achieves superior range with two-way communication.

### **system signal paging features**

A page is the signal the control module sends to the transceiver as confirmation of receipt of a command or alarm system status.

When the transceiver receives a page it will generate a page notifi-

cation to the user (notifications are audible beeps or the remote vibrates) and the LCD icons will display the current system status.

### **Command Page**

When a command (arm/disarm, remote start, or auxiliary channel) from the transceiver is sent and received, the system will send a command page back to confirm receipt.

### **Page Recognition Mode**

The transceiver will leave a zone icon illuminated when it has received a triggered response and will wait for violation recognition. Press any button on the transceiver, the LCD information and alarm page alerts will be cleared.

**note:** The transceiver buttons will not send a command to the system until the alarm page is cleared.

## *using your system*


---

### → **warning! safety first**

The following safety warnings must be observed at all times:

- Due to the complexity of this system, installation of this product must only be performed by an authorized Unigo dealer.

### → **active arming**

You can arm the system by pressing  of your remote for one second. When the system arms, you will hear a short siren sound, or chirp, and see the parking lights flash once. If the power door locks are controlled by the system, the doors will also lock. While the system is armed, the status LED will flash approximately once per second, indicating that the system is actively protecting your vehicle. If you hear a second chirp after arming and note that the status LED is flashing in groups, see the Diagnostics Section of this guide. This extra chirp is called Bypass Notification, which indicates that a security sensor or switch has been bypassed and the system is not monitoring that area (zone) of the vehicle.

### → **passive arming**

The system can be programmed to arm itself automatically (called passive arming). If the system is programmed for passive arming, it will automatically arm 30 seconds after the ignition is turned off and the system detects that you have left the vehicle by opening and closing a door. Whenever the system is in its 30-second passive

arming countdown, the status LED will flash twice as fast as it does when the system is armed. At the 20-second point of the countdown, the siren will chirp to indicate that the system is about to arm. At the 30-second point, the parking lights will flash to indicate that the system is armed.

**note:** If any protected entry point (such as a door or a switch-protected trunk or hood) is open, the system will not passively arm (unless forced passive arming is programmed on. See Programming Options section.) Additionally, each time a sensor is triggered during the arming countdown, the 30-second countdown starts over.

**When armed your vehicle is protected as follows:**

- Light impacts trigger the Warn Away® signal. When triggered, the siren chirps and the parking lights flash for a few seconds.
- Heavy impacts trip a Triggered Sequence. The sequence consists of the siren sounding continuously and the parking lights flashing for a pre-programmed period, which can range in duration from 1 to 180 seconds.
- If a door is opened, the system will immediately start chirping the siren and flashing the parking lights. Three seconds later, the siren output changes to a continuous blast. This progressive response gives you time to disarm the system with your remote if you inadvertently open the door while the system is armed, while still providing instant response (even if the door is immediately closed).
- Turning on the ignition key will trip the same progressive response as opening a door.

- The optional starter kill prevents the vehicle's starter from cranking.

### ➔ **warn away® response description**

A Warn Away® Response consists of an alarm page along with the responses described below.

- **Shock Sensor** - Light impacts to the vehicle will flash the vehicle lights and chirp the siren for a few seconds.
- **Remote Control Notification** - Ten quick beeps (or one vibration).
- **Remote Control LCD** - The full trigger alert icon (28) will dimly illuminate for two seconds
- The transceiver will enter Page Recognition Mode and operate alarm page alerts.

**note:** Icons 13 and 14 represent alarm system zone inputs. For more information about icons and the zones they represent refer to the *Standard Remote Configurations* section.

### ➔ **triggered response description**

A Triggered Response can be activated by any of the triggers listed below and consists of an alarm page along with the response described for each trigger. The default Triggered Response duration is 30 seconds but can be programmed from 1-180 seconds by your installer with the ProSecurity Programmer.

- **Sensor Trigger** - Heavy impacts to the vehicle will instantly sound the siren and flash the lights for the programmed duration and report Zone 2.





- **Door Trigger** - If a door is opened the siren will chirp for three seconds, then the siren will sound and the lights will flash for the programmed duration and report Zone 3. The three seconds allow the user time to disarm the system with a minimum of noise should a door be opened inadvertently while the system is armed.
- **Hood Trigger** - Opening the hood will sound the siren, flash the lights for the programmed duration, and report Zone 1.
- **Trunk Trigger** - Opening the trunk (if connected) will instantly sound the siren and flash the lights for the programmed duration and report Zone 4.
- **Ignition Trigger** - If the ignition is turned on the siren will chirp for three seconds, then the siren will sound and the lights will flash for the programmed duration and report Zone 5.






**When a Triggered Response is activated the transceiver will:**

- Repeat four quick beeps (or vibrate) for 15 seconds.
- The full trigger alert icon (28) will turn on for 15 seconds.
- The zone icons will turn on and remain on until a transceiver button is pressed, clearing the page alert.
- The transceiver will enter page recognition mode and generate alarm page alerts.

**note:** Icons 13, 14, 16, and 20 represent alarm system triggered sequence zone inputs. For more information about icons and the zones they represent refer to the *Standard Remote Configurations* section.



## → multi-level security arming

Multi-Level Security Arming allows you to select which of the system's inputs or sensors will be active and which will be bypassed when the system is armed. (See *Table of Zones* section of this guide.) Pressing  (only in Standard Configuration) again within five seconds of arming the system will activate the Multi-Level Security feature. Each time  is pressed again, a different security level is selected. The different security levels are selected as follows:

- Press  once: The siren chirps once. The system is armed.
- Press  a second time within five seconds: The siren chirps twice followed by a long chirp. Zone 2 is now bypassed.
- Press  a third time within five seconds: The siren chirps three times followed by a long chirp. Zone 4 is now bypassed.
- Press  a fourth time within five seconds: The siren chirps four times followed by a long chirp. Zones 2 and 4 are now bypassed.
- Press  a fifth time within five seconds: The siren chirps five times followed by a long chirp. All input zones, except the ignition, are now bypassed.

**note:** Multi-Level Security Arming only applies to a single arming cycle. Once the system is disarmed and then re-armed, all the zones will be active again.


### → **arming while driving**

Your security system can be armed while driving the vehicle! Simply press  on the remote for two seconds while the vehicle is running. The siren will chirp once to indicate that the security system is armed, and then once more to indicate that the ignition is on. The system will not respond to any input except the door triggers, and the starter kill relay (if installed) will not be activated. Once you have arrived at your destination, the system will disarm when the ignition is turned off. The siren will chirp twice and the LED will then stop flashing. The system can also be disarmed at any time by pressing .


The LCD 2-way remote will beep once (or vibrate), and the arm icon (29) will be displayed on the LCD.

**note:** If the transceiver received a Warn Away® or triggered response page while armed, the first press of the unlock button will clear the page alert. A second press will turn the siren off, and a third press will disarm the system.



### → **disarming**

To disarm the security system, press . You will hear two chirps, and the parking lights will flash twice. If the power locks are controlled by the system, the doors will also unlock. The siren chirping either four or five times when disarming indicates Tamper Alert, which is described in the Diagnostics Section of this guide.

### → **disarming while driving**

Press  on the remote or simply turn off the ignition to disarm the system. The lights will flash twice, the doors will unlock, the siren will chirp twice, and the status LED will turn off. The 2-way remote will beep twice (or vibrate). The disarm icon (29) will be displayed on the LCD.

### → **high security disarm**


This security system offers High Security Disarm. High Security Disarm is a feature that makes it possible to silence and reset the system while it is triggering, without disarming the system. If the system is triggered and the siren has been sounding for longer than six seconds, pressing  on the remote will stop the trigger and return the unit to the armed state. The system will not disarm, but rather reset. This prevents you from disabling the system should you wish to disarm it without visually checking the vehicle. Pressing  after resetting the system will disarm the system; pressing this button during the first six seconds of the triggered sequence will disarm the security system immediately. The six second timer is provided for your convenience, in case the system is accidentally triggered.

## → **disarming without a remote**

If your remote is lost or damaged, you can manually disarm your vehicle security system. To disarm the system without a remote, you must have the vehicle's ignition key and know where the Valet® button is located. Be sure to check with your installer at the time of installation for both the location and the preset response (1-5 presses) of the Valet® button.



To disarm the security system, turn the ignition to the ON position. Press the Valet® button the preset number of times (one to five times) within 15 seconds. After five seconds, the system will disarm. If the system does not disarm, you may have waited too long; turn the ignition off and on and try again.

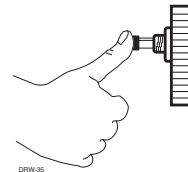


**Location of Valet® Button** \_\_\_\_\_

**Number of Presses** \_\_\_\_\_



**important!** The Valet® button can be programmed to respond to 1-5 presses for the disarm function. You must check with the installer to verify the programming for your individual unit.

## → silent mode

To temporarily turn off the arm or disarm chirps, use Silent Mode™. Simply press  for less than one second before arming or disarming, and the confirmation chirp(s) will be eliminated for that one operation only. If you want the arm/disarm chirps turned off permanently, your dealer can do this for you.

**note:** The Warn Away® response to lighter impacts is bypassed if the system is armed using Silent Mode. This ensures that no chirps will be emitted by the siren in an area you want chirp-free. The system is still fully capable of triggering. Only the Warn Away® response is bypassed.

## → panic mode

If you are threatened in or near your vehicle, you can attract attention by triggering the system with your remote. Just press  for two seconds, and you will enter Panic Mode. The siren will sound and the parking lights will flash for the programmed siren duration. To stop Panic Mode at any time, press  on the remote again.

**note:** Once panic mode has been entered, the siren will sound for the programmed duration.

The LCD 2-way remote will beep (or vibrate) continuously when the system enters panic mode. The 2-way remote will not generate a page notification when panic mode is exited.

 
## → valet® mode

You can prevent your security system from automatically arming and triggering by using Valet® Mode. This is very useful when washing the vehicle or having it serviced. In Valet® Mode, the security system will not arm, even with the remote, but all convenience functions (door locks, trunk release, etc.) will continue to work normally.

### To enter or exit Valet® Mode:






1. Turn the ignition on.
2. Turn the ignition off.
3. Press and release the Valet® button within 10 seconds.



The status LED will light solidly if you are entering Valet® Mode, and it will go out if you are exiting Valet® Mode.





### To enter or exit Valet® Mode using the remote:

Steps 2 through 3 must be quickly and smoothly completed.

1. Open any vehicle door.
2. Press .
3.  ess
4. Press  again.

The status LED will light solidly if you are entering Valet® Mode, and it will go out if you are exiting Valet® Mode.

### → **setting the clock**

To set the clock press and hold  for five seconds, the transceiver will chirp twice and the hour selection will start flashing. Immediately press  to advance the hour selection to reverse the hour selection. Once the correct hour is displayed press  again and the minute selection will start flashing. Then press  to advance the minute selection to reverse the minute selection. Once the correct time is displayed simply stop pressing any buttons for 15 seconds and the transceiver will automatically exit the clock mode.

### → **nuisance prevention circuitry**

Your system has Directed's Nuisance Prevention Circuitry™ (NPC™). It prevents annoying repetitive trigger sequences due to faulty door pin switches or environmental conditions such as thunder, jackhammers, airport noise, etc.



### Example

If the alarm triggers three times within a 60-minute period and each time the same sensor or switch triggers the alarm, NPC™ will interpret those triggers as false alarms. After the third trigger, NPC™ ignores, or bypasses, that sensor or switch (along with any other sensors or switches sharing the same zone) for 60 minutes.

If the bypassed sensor tries to trigger the security system while it is being bypassed, the 60-minute bypass period will start over. This ensures that a sensor that is continually being triggered will remain bypassed.

The vehicle doors are protected by NPC™ differently. If your security system is triggered by an open door for three full cycles, the system will bypass the doors until the trigger ceases.

**note:** Arming and disarming the system does not reset this function! The only ways to reset a bypassed zone are for it to not trigger for 60 minutes, or to turn on the ignition. If testing your system, it is important to remember that the NPC™ programming can cause zones to be bypassed and appear to stop working. If five chirps are heard when disarming, NPC™ has been engaged. If you wish to clear the NPC™ memory, turn the ignition on.

## *diagnostics*

---

The microprocessor at the heart of your system is constantly monitoring all of the switches and sensors connected to it. It is designed to detect any faulty switches and sensors and prevents

them from disabling the entire system. The microprocessor will also record and report any triggers that occurred during your absence. Refer to the *System Status Chirps* and *Table of Zones* sections of this guide for diagnostic information.

### → **arming diagnostics**

If the security system is armed at the same time that an input is active (such as a door opening or sensor triggering), you will hear one siren chirp to indicate arming and a second siren chirp to indicate Bypass Notification. A Bypass Notification chirp means that the security system ignores the input that was active when the system was armed, until that input ceases. Three seconds after that input ceases, the security system will resume normal monitoring. For example, if your vehicle has an interior light exit delay and you arm your security system before the interior light turns off, you may hear a second Bypass Notification chirp. Once the light turns off, however, the security system resumes normal monitoring.

**note:** Bypass Notification does not occur when the system is in Silent Mode or if the notification chirps have been programmed off by the installer.

### → **disarming diagnostics**

Extra chirps that are heard when disarming the system are the Tamper Alert. If four chirps are heard when disarming the system, then the security system was triggered in your absence. If five chirps are heard when disarming the system, a zone was triggered so many times that the Nuisance Protection Circuitry™ has

bypassed that zone. In either case, the status LED will indicate which zone was involved (see *Table of Zones* section). The security system will retain this information in its memory and chirp four or five times each time it is disarmed, until the next time that the ignition is turned on.

### → system status chirps

The siren will chirp when arming/disarming the system. The pattern of chirps will audibly report the system's status as described below.

| Action | Number of Chirps      | Description                           |
|--------|-----------------------|---------------------------------------|
| Arm    | 1                     | System armed                          |
| Arm    | 1 (3-second delay), 1 | System armed with Bypass Notification |
| Disarm | 2                     | System disarmed                       |
| Disarm | 4                     | System disarmed with Tamper Alert     |
| Disarm | 5                     | System disarmed NPC active            |

## → table of zones

A zone is represented by the number of LED flashes used by the system to identify a particular type of input. Standard input assignments are listed in the following table, along with spaces to write in any optional sensors or switches that have been installed.

| <b>ZONE</b><br>(Number of<br>LED Flashes) | <b>DESCRIPTION</b>  | <b>DEALER-INSTALLED<br/>OPTIONS</b> |
|---|---|-------------------------------------|
| 1   | Trunk Pin   |                                     |
| 2   | Instant trigger - a heavier impact detected by the shock sensor |                                     |
| 3   | Door switch trigger   |                                     |
| 4   | Instant trigger - for optional sensors                          |                                     |
| 5   | Ignition trigger  |                                     |
| 6   | Hood Pin  |                                     |

## → interpreting zone diagnostics

Warn Away responses are not reported by arming or disarming diagnostics. If you receive a Bypass notification when arming or a Tamper Alert notification when disarming, look at the LED. Active or triggered zones will be indicated by a pattern of blinks by the LED.


### **Example**

If zone 3 was active or triggered, the LED will blink three times with a two-second pause. Then it will blink three times again, and repeat until the ignition is turned on.

**note:** Your system stores the last two triggered zones in memory. If your system has been triggered but the LED has been reset by turning on the ignition, your dealer can still recall the last two zones that were triggered. Contact your dealer for details.

## *code hopping*

---

The receiver and remotes use a mathematical formula called an algorithm to change their code each time the remote is used. This technology has been developed to increase the security of the unit. The control unit knows what the next codes should be. This helps to keep the remote “in sync” with the control unit even if you use the remote control out of range of the vehicle. However, if the remote has been pressed many times out of range of the vehicle, or the battery has been removed, it may fall out of sync with the control unit and fail to operate the system. To re-sync the remote simply press  several times within range of the vehicle. The alarm will automatically re-sync and respond to the remote normally.

## *high frequency*

---

Your system transmits and receives at 434 MHz. This provides a cleaner spectrum with less interference and a more stable signal. Enjoy a phenomenal increase in range, even in areas with high radio interference.

## *owner recognition*

---

Owner Recognition is a revolutionary new feature available only from Directed. Using a ProSecurity Programmer, hand-held programming tool, your dealer can program many of the system settings. The programmer makes it possible to program different settings for each remote that is used with the system. Then, whenever a specific remote is used, the system will recall the settings assigned to that remote. Owner Recognition lets up to four users of the system have different settings that meet their specific needs. It is almost like having four separate alarms in your vehicle, one for each user.

**note:** Owner Recognition cannot be programmed without a ProSecurity Programmer and the necessary software. Check with your dealer for more information.

## *rapid resume logic*

---

This ProSecurity system will store its current state to non-volatile memory. If power is lost and then reconnected the system will recall the stored state from memory. This means if the unit is in Valet® Mode and the battery is disconnected for any reason, such as servicing the car, when the battery is reconnected the unit will still be in Valet® Mode. This applies to all states of the system including arm, disarm, and Valet® Mode.

## *power saver mode*

---

Your system will automatically enter Power Saver Mode while armed or in Valet® Mode, after a period of time in which no operation has been performed. This lowers the current draw on the vehicle's battery. Power Saver Mode takes over under the following conditions:

- Power Saver when the system is armed: After the system has been armed for 24 hours the LED will flash at half its normal rate, decreasing the system's current draw.
- Power Saver in Valet® Mode: When the system enters Valet® Mode the LED illuminates steadily. If the vehicle is not used (ignition is not turned on) for a one hour period while the system is in Valet® Mode, the LED will shut off. If the system remains in Valet® Mode, the LED will come back on the next time the ignition is turned on and then back off.

## *programming options*

---

Programming options control your system's normal, operational set-up. Most options do not require additional parts, but some may require installation labor.

The following is a list of the programmable options, with the factory settings in Bold.

- **Active** arming (from remote only) or passive arming (automatic arming 30 seconds after the last door has been closed).
- Arming/disarming siren chirps **on** or off.
- The ignition controlled door lock feature **on** or off: When this feature is programmed on, the doors will lock three seconds after the ignition is turned on, and unlock when the ignition is turned off. If your installer is programming the security system with the ProSecurity Programmer, ignition lock and unlock are independent features that can be programmed separately.
- Passive door locking (with passive arming) or **active door locking** (only when arming with the remote). Passive locking allows the vehicle's doors to lock when the security system passively arms (after the 30-second countdown). This feature only works if passive arming has been programmed.
- Panic mode **enabled**/disabled when the ignition is turned on. (Some states have laws against sirens sounding in moving cars.)
- Forced passive arming **on** or off. If your security system is programmed for passive arming and the forced passive



arming feature has been programmed on, the system will passively arm after one hour, even if a protected entry has been left open. Forced passive arming ensures that the system will be armed if a door has accidentally been left ajar when leaving the vehicle.

**note:** When the system passively arms after one hour, the entry point that has been left open, and anything connected to the same zone, is bypassed and cannot trigger the system. However, the remaining inputs to the system are fully operational.

- Full trigger response **30** or 60 seconds: This determines how long the full triggered sequence lasts. Some states have laws regulating how long a security system can sound before it is considered a nuisance. If your installer is programming the security system with the ProSecurity Programmer, the full triggered response can be programmed for any duration ranging from 1 to 180 seconds.
- Automatic Engine Disable (AED) on or **off**. The purpose of this feature is to protect the vehicle from being stolen at all times, regardless of whether or not the alarm is armed. If AED is programmed on, the starter of the vehicle will be disabled 30 seconds after the ignition is turned off. Once the key is turned off, the LED will flash slowly (one-half its normal armed rate) to indicate the AED arming cycle. Thirty seconds later, the starter will be disabled. To start the car, it will be necessary to disarm the system with the remote. It is also possible to disarm the AED feature by turning the ignition key to the RUN position and pressing

the Valet® button the programmed number of times. AED is also disabled when the system is in Valet® mode.

**note:** This feature will only function if the FailSafe® Starter Kill relay has been installed.

- Siren tones and chirp volume. The output of the Revenger™ Soft Chirp™ siren consists of six different tones in sequence. Any of these tones can be eliminated by a dealer, resulting in a unique, easily identifiable siren sound. The chirps can be either full volume or **6 decibels quieter** than the full alarm blast.

## *security & convenience expansions*

Listed below are some of the many expansion options available. Please consult your dealer for a complete explanation of all the options available to you.

**Audio Sensor:** Metal on glass, glass cracking, and breaking glass produce distinctive acoustic signatures. The 506T audio sensor uses a microphone to pick up sounds, then analyzes them with proprietary acoustic software to determine if the glass has been struck.

**Backup Battery:** The 520T keeps the system armed, triggers the alarm and keeps the starter interrupt active if main battery is disconnected.

**Hood Lock:** Prevents the vehicle's hood from being opened without a key, keeping thieves away from the system's siren, the battery connections, and other components under the hood.

**Field Disturbance Sensor:** An invisible dome of coverage is established by installing the 508D "radar" sensor. Your system can react to any intrusions into this field with the full triggered sequence.

**Power Locks:** This system offers lock outputs that can control some manufacturers' power door lock systems. For other systems, additional parts may be required.

**Power Trunk Release:** The accessory output of the system can operate a factory power release for the vehicle's trunk or hatch. Although the on-board relay can control most power trunk releases, sometimes an optional relay is required. If the factory release is not power-activated, Directed®'s 522T trunk release solenoid can often be added.

**Power Window Control:** Automatic power window control is provided with the 529T and 530T systems. These can operate power windows, and can roll them up automatically when the system is armed, roll them down, or both up and down.

## *glossary of terms*

---

**Control Unit:** The “brain” of your system. Usually hidden underneath the dash area of the vehicle. The control unit houses the microprocessor which monitors your vehicle and controls all system functions.

**Fault-Proof Starter Interrupt:** An automatic switch controlled by your system that prevents the vehicle’s starter from cranking whenever the system is armed. The vehicle is never prevented from cranking when the system is disarmed, in Valet® mode, or if the starter interrupt switch itself fails. Your system has feature-ready circuitry for the starter interrupt, however installation may require additional labor.

**Input:** A physical connection to the system. An input can be provided by a sensor, pinswitch or by existing systems in the vehicle, such as ignition or courtesy lights.

**LED:** A blue light mounted at a discretionary location inside the vehicle. It is used to indicate the status of your system.

**Shock Sensor:** This system has a dual zone shock sensor. This sensor is mounted in the vehicle and designed to pick up impacts to the vehicle or glass.

**LCD 2-Way Remote:** A hand-held, transceiver which operates and monitors the various functions of your system.

**Trigger or Triggered Sequence:** This is what happens when the

alarm “goes off” or “trips.” The triggered sequence of your system consists of the siren sounding and parking lights flashing for the programmed duration.

**Valet® Button:** A small push-button switch mounted at a discretionary location inside the vehicle. It is used to override the starter interrupt when a remote is lost or damaged, or to enter or exit Valet® Mode.


**Warning Zone Response:** Lighter impacts to the vehicle will generate the Warning Zone response. It consists of several seconds of siren chirps and parking light flashes.

**Zone:** A zone is a separate input that the alarm can recognize as unique. Each input to the system is connected to a particular zone. Often two or more inputs may share the same zone.


Cut along dotted line and fold for a quick and easy reference to keep in your purse or wallet.

## QUICK REFERENCE GUIDE


### Arming

- To arm, press . When the system arms, you will hear a short chirp, and the parking lights will flash once.


### Arming while driving

- To arm the system while driving, press  on your remote while the vehicle is running. The system will chirp once and then once more to indicate that the ignition is on.

### Disarming

- To disarm, press . You will hear two chirps, and the parking lights will flash twice.


### High security disarm

- For high security disarm, press  on your remote and the siren will stop sounding. To completely disarm the security system, press again and the system will chirp 4 or 5 times (reporting the trigger).



### Disarming without a remote

- Turn on the ignition. Press the Valet® button within 15 seconds. The system should now disarm. If it does not, you may have waited too long, so turn the ignition off and on and try again.

### Silent Mode™

- Pressing  briefly before arming or disarming will eliminate the confirmation chirp(s) for that one operation only.

### Panic Mode

- Press  for 2 seconds, and you will enter Panic Mode. The siren will sound and the parking lights will flash for 30 seconds. To stop Panic Mode at any time, press  on the remote again.

Location of Valet® switch \_\_\_\_\_

Number of Valet® switch pulses for disarming \_\_\_\_\_

***Get Started  
Get Protected***



Ungo Pro Security  
661 W. Redondo Beach Blvd.  
Gardena, Ca. 90247

800-GO-CLARION

© 2005 Directed Electronics, Inc. - All rights reserved GS660 02-05

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>