

# 11. ESPECIFICACIONES

## Sintonizador de FM

Game de frecuencias: 87,9 MHz a 107,9 MHz  
Sensibilidad útil: 11 dBf  
Sensibilidad a 50 dB de silenciamiento: 17 dBf  
Selectividad de canal alternativo: 75 dB  
Separación estéreo (1 kHz): 35 dB  
Respuesta en frecuencia (±3 dB): 30 Hz a 15 kHz

## Sintonizador de AM

Respuesta en frecuencia: 530 kHz a 1.710 kHz  
Sensibilidad útil: 25 µV

## Reproductor de discos compactos


Sistema: Sistema de audio de discos compactos  
Discos utilizables: Discos compactos  
Respuesta en frecuencia: 10 Hz a 20 kHz (±1dB)  
Relación señal-ruido: 100 dB (1 kHz) IHF-A  
Gama dinámica: 95 dB (1 kHz)  
Distorsión armónica: 0,01%

## Audio

Salida de potencia máxima:  
200 W (50 W × 4 ch)  
Salida de potencia media continua:  
18 W × 4, con 4 Ω, 20 Hz a 20 kHz, 1% de distorsión armónica total  
Acción de control de graves (30 Hz): ±13 dB  
Acción de control de agudos (10 kHz): ±10 dB  
Salida de línea (con CD, 1 kHz, 10 kΩ): 1,8 V

## Generales

Tensión de alimentación: 14,4 V CC (permisible de 10,8 V a 15,6 V), negativo a masa  
Consumo de corriente: Menos de 15 A  
Impedancia de los altavoces: 4 Ω (permisible de 4 Ω a 8 Ω)  
Peso: 3,97 lb. (1,8 kg)  
Dimensiones:  
7" (178 mm) de anchura × 2" (50 mm) de altura × 6-1/8" (155 mm) de fondo

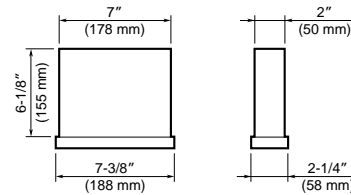

## Notas:

- Las especificaciones están de acuerdo con las normas de la EIA.
- Las especificaciones y el diseño están sujetos a cambio sin previo aviso por motivo de mejoras.

# Clarion®

## ■ Contents

### English

1. PRECAUTIONS.....	2
2. CONTROLS.....	3
3. BUTTON TERMINOLOGY.....	4
4. FEATURES.....	5
5. HANDLING COMPACT DISCS.....	6
6. DCP.....	7
7. REMOTE CONTROL.....	8
8. OPERATION.....	10
9. TROUBLESHOOTING.....	16
10. ERROR DISPLAYS.....	17
11. SPECIFICATIONS.....	18

## ■ Table des matières

### Français

1. PRÉCAUTIONS.....	19
2. COMMANDES.....	3
3. NOMENCLATURE DES TOUCHES.....	20
4. CARACTÉRISTIQUES.....	21
5. MANIPULATION DES DISQUES COMPACTS.....	22
6. CLAVIER DE COMMANDE AMOVIBLE (DCP).....	23
7. TÉLÉCOMMANDE.....	24
8. FONCTIONNEMENT.....	26
9. DÉPISTAGE DES PANNES.....	32
10. AFFICHAGE DES ERREURS.....	33
11. SPÉCIFICATIONS.....	34

 
## ■ Índice

### Español

1. PRECAUCIONES.....	35
2. CONTROLES.....	3
3. NOMENCLATURA DE LOS BOTONES.....	36
4. CARACTERÍSTICAS.....	37
5. MANEJO DE LOS DISCOS COMPACTOS.....	38
6. PANEL DE CONTROL DESMONTABLE (DCP).....	39
7. CONTROLADOR REMOTO.....	40
8. OPERACIÓN.....	42
9. SOLUCIÓN DE PROBLEMAS.....	48
10. INDICACIONES DE ERROR.....	49
11. ESPECIFICACIONES.....	50

ProAudio

C-BUS COMPACT disc DIGITAL AUDIO



Owner's manual  
Mode d'emploi  
Manual de instrucciones

# DX515

AM/FM CD PLAYER  
WITH CD CHANGER CONTROL  
•  
RADIO AM/FM-LECTEUR CD  
AVEC PILOTAGE DE CHANGEUR CD  
•  
RADIO AM/FM Y REPRODUCTOR CD  
CON CONTROL DE CAMBIADOR DE CD


# 1. PRECAUTIONS

- When the inside of the car is very cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour and the condensation will disappear naturally to allow normal operation.
- Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.
- This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio/TV technician for help.

## ⚠ CAUTION

USE OF CONTROLS, ADJUSTMENTS, OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THE COMPACT DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

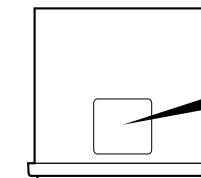

Bottom View of Source Unit



## INFORMATION FOR USERS:

CHANGES OR MODIFICATIONS TO THIS PRODUCT WILL VOID THE WARRANTY AND WILL VIOLATE FCC APPROVAL.

Be sure to unfold and read the next page.  
Veuillez déployer et vous référer à la page suivante.  
Cerciórese de desplegar y de leer la página siguiente.

Español

# Clarion Co., Ltd.

All Rights Reserved. Copyright © 2001: Clarion Co., Ltd.  
Printed in China / Imprimé en Chine / Impreso en China


PE-2385B  
280-7589-00

2001/1 (D-C)


English

## 2. CONTROLS / LES COMMANDES / CONTROLES

Main unit / Appareil principal / Unidad principal

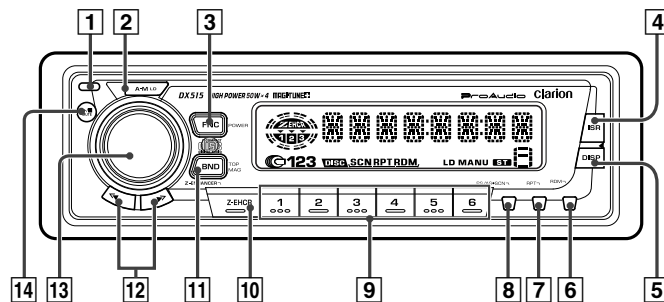

With the FLIP DOWN PANEL opened /  
Ouvrez le PANNEAU RABATTABLE /  
Apertura del PANEL ABATIBLE

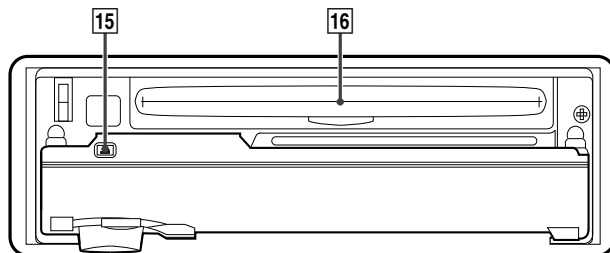

Display / Afficheur / Visualizador



**Note:** Be sure to unfold this page and refer to the front diagrams as you read each chapter.  
**Remarque:** Veuillez déplier cette page et vous référer aux schémas quand vous lisez chaque chapitre.  
**Nota:** Cuando lea los capítulos, despliegue esta página y consulte los diagramas.

## 3. BUTTON TERMINOLOGY

**Note:**

• Be sure to read this chapter referring to the front diagrams of chapter 2. CONTROLS on page 3 (unfold).

- 1 Open Button
- 2 A-M (Audio Mode) Button  
LD (Loudness) Button
- 3 POWER Button  
FNC (Function) Button
- 4 ISR (Instant Station Recall) Button
- 5 DISP (Display) Button
- 6 RDM (Random) Button
- 7 RPT (Repeat) Button
- 8 SCN (Scan) Button  
PS/AS (Preset Scan/Auto Store) Button
- 9 Preset Buttons (1 to 6)  
Direct Buttons (1 to 6)
- 10 Z-EHCR (Z-enhancer) Button
- 11 BND (Band) Button  
TOP (Top Play) Button  
MAG (Magazine) Button
- 12 SRCH (Search) Left and Right (◀ and ▶) Buttons
- 13 Rotary Knob
- 14 Play/Pause (▶/||) Button  
MUTE Button
- 15 Eject (▲) Button
- 16 CD insertion slot

## 10. INDICACIONES DE ERROR

Cuando ocurra un error, se visualizará el tipo del mismo.  
Tome las medidas descritas a continuación para solucionar el problema.

	Indicación de error	Causa	Solución
CD	CD ER2	El disco compacto se haya atascado en el interior del reproductor de discos compactos y no puede extraerse.	Éste es un problema del reproductor de discos compactos. Póngase en contacto con el comercio en el que adquirió la unidad.
	CD ER3	El disco compacto no puede reproducirse debido a ralladuras, etc.	Reemplace el disco compacto por otro que no esté rayado ni alabeado.
	CD ER6	El disco compacto está cargado al revés en el reproductor de discos compactos y no puede reproducirse.	Extraiga el disco y cárguelo adecuadamente.
Cambiador de discos compactos	CDCH ER2	No hay discos cargados en el interior del cambiador de discos compactos.	Éste es un problema del cambiador de discos compactos. Póngase en contacto con el comercio en el que adquirió la unidad.
	CDCH ER3	El disco compacto del cambiador de discos compactos no puede reproducirse debido a ralladuras, etc.	Reemplace el disco compacto por otro que no esté rayado ni alabeado.
	CDCH ER6	El disco compacto del cambiador de discos compactos no puede reproducirse debido a que está cargado al revés.	Extraiga el disco y cárguelo adecuadamente.

Si aparece una indicación de error no descrita arriba, presione el botón de reposición. Si el problema continúa, desconecte la alimentación y póngase en contacto con el comercio en el que adquirió la unidad.

## 4. FEATURES

- Rotary Encoder Volume Control
- DIN Chassis with Detachable Control Panel
- Z-Enhancer with 3 Mode Sound Selector
- **MAGTUNE**® FM Reception System
- AM/FM Bands-1 AM, 3 FM/18 FM/6 AM Touchbutton Memory
- 8-Times Oversampling Digital Filter and Dual 1-Bit D/A Converters
- Zero-Bit Detector™ Mute Circuit
- Repeat/Random Play/Intro Music Scan
- Multi-Color LC Display
- 4-Channel RCA Line Level Output with Fader Control
- 200 W (50 W × 4) Maximum Power Output
- Infrared Remote Control

### *Flip Down Panel*

---


This unit uses a flip-down structure that makes possible large-size displays.

#### **⚠ CAUTION**

**When opening and closing the FLIP DOWN PANEL, be careful not to catch your fingers. They could be injured.**


1. Always use this unit with the FLIP DOWN PANEL closed.
2. Do not force operations or use this device abnormally when opening or closing the FLIP DOWN PANEL.
3. Do not use the FLIP DOWN PANEL as a tray to place objects on when it is open.
4. When closing the FLIP DOWN PANEL, do not press the Open button **1**.
5. Strong impacts to the operating or display section can cause damage or deformation.
6. If the flip down panel does not open fully, gently open it with your hand.

# 5. HANDLING COMPACT DISCS

This unit has been designed specifically for playback of compact discs bearing the  mark. No other discs can be played.

To remove the compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

Removing the disc

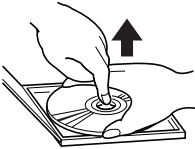


Proper way to hold the compact disc




Always handle the compact disc by the edges. Never touch the surface.

To remove fingermarks and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

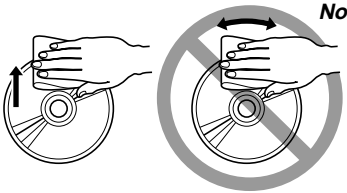


New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen, etc. to remove roughness from the edge of the disc.

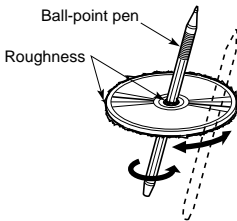

## Note on Compact Discs


Never stick labels on the surface of the compact disc or mark the surface with a pencil or pen.

No

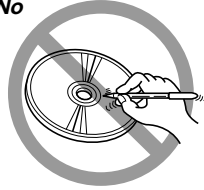


Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.

No

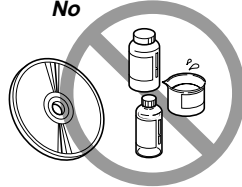


Do not use compact discs that have large scratches, are misshapen, or cracked, etc. Use of such discs will cause misoperation or damage.

No

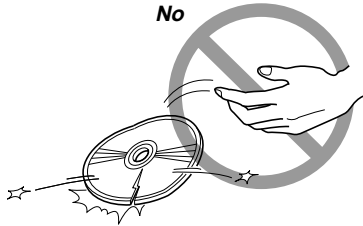

Do not expose compact discs to direct sunlight or any heat source.

No

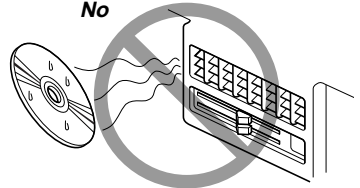

## Note:

- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc. These may get caught in the internal mechanism and damage the disc.


# 6. DCP

The control panel can be detached to prevent theft. When detaching the control panel, store it in the DCP (DETACHABLE CONTROL PANEL) case to prevent scratches.

We recommend taking the DCP with you when leaving the car.


## Removing the DCP

1. Hold down POWER button **3** for 1 second or longer to switch off the power.

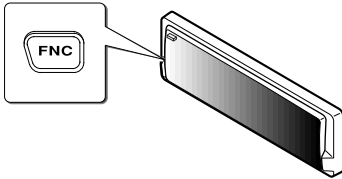


2. Deeply push in Open button **1** to unlock the FLIP DOWN PANEL.


\* If the FLIP DOWN PANEL does not open fully, gently open it with your hand.

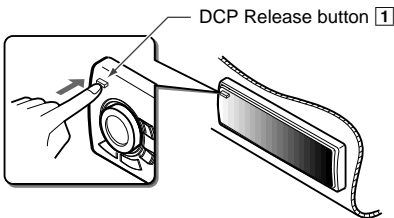

3. Pull the DCP toward you and remove it.

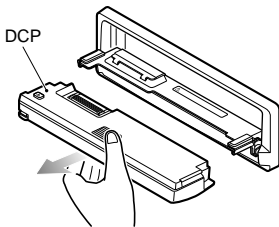

4. Close the HOLD FLAP.

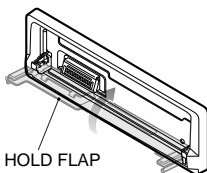


## ⚠ CAUTION

Be sure to close the HOLD FLAP for safety when removing the DCP.

## Attaching the DCP

1. Insert the right side of the DCP into the main unit.
2. Insert the left side of the DCP into the main unit.

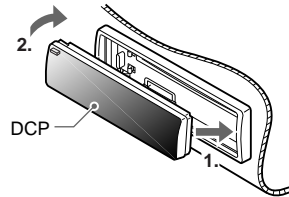


## ⚠ CAUTION

- The DCP can easily be damaged by shocks. After removing it, be careful not to drop it or subject it to strong shocks.
- If the FLIP DOWN PANEL is kept open, the DCP may drop due to vibration of the car. This results in damage to the DCP. So close the FLIP DOWN PANEL or remove the DCP to store into the case.
- The connector connecting the unit and the DCP is an extremely important part. Be careful not to damage it by pressing on it with fingernails, screwdrivers, etc.

### Note:


- If the DCP is dirty, wipe off the dirt with a soft, dry cloth only.

# 7. REMOTE CONTROL

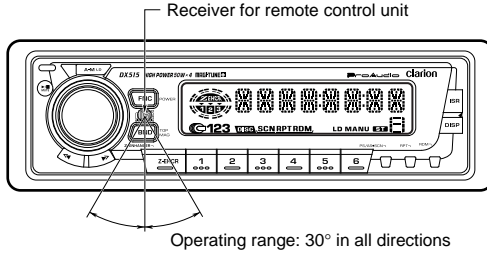

Operating range: 30° in all directions

## Remote Control Unit

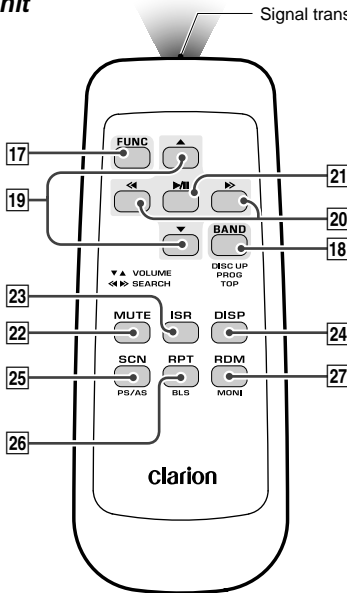


## Inserting the Batteries

1. Turn the remote control unit over, then slide the rear cover in the direction of the arrow.
2. Insert the AA (SUM-3, IECR-6/1.5V) batteries that came with the remote control unit facing in the directions shown in the figure, then close the rear cover.

### Notes:

Using batteries improperly can cause them to explode. Take note of the following points:

- When replacing batteries, replace both batteries with new ones.
- Do not short-circuit, disassemble or heat batteries.
- Do not dispose of batteries into fire or flames.
- Dispose of spent batteries properly.

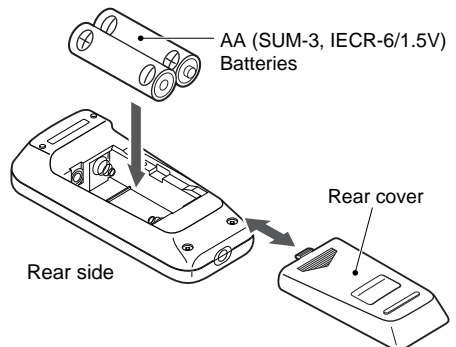

## Functions of Remote Control Unit Buttons

Button \ Mode	Radio	CD	CD changer
17 FUNC	Turns power on and off. When pressed and held for 1 second: Turns power off. Switches between radio, CD and CD changer.		
18 BAND DISC UP PROG TOP	Switches reception band.	Plays the first track. Top play.	Moves the next disc in increasing order.
19 VOLUME	Increases and decreases volume (in all modes).		
20 SEARCH	Moves preset channels up and down.	Moves tracks up and down. When pressed and held for 1 second: Fast-forward/ fast-backward.	Moves tracks up and down. When pressed and held for 1 second: Fast-forward/ fast-backward.
21 PLAY/PAUSE	Turns mute on and off.	Switches between playback and pause.	Switches between playback and pause.
22 MUTE	Turns mute on and off.	Switches between playback and pause.	Switches between playback and pause.
23 ISR	Recalls ISR radio station in memory. Press and hold for more than 2 seconds: Stores current station into ISR memory (radio mode only).		
24 DISP	Switches among main display, sub display and clock display.		
25 SCAN PS/AS	Preset scan. When pressed and held for 2 seconds: Auto store.	Scan play.	Scan play. When pressed and held for 1 second: Disc scan play.
26 RPT BLS	No function.	Repeat play.	Repeat play. When pressed and held for 1 second: Disc repeat play.
27 RDM MONI	No function.	Random play.	Random play. When pressed and held for 1 second: Disc random play.

\* Some of the corresponding buttons on the source unit and remote control unit have different functions.

# 8. OPERATION

## Note:

- Be sure to read this chapter referring to the front diagrams of chapter 2. CONTROLS on page 3 (unfold).

## Basic Operations

### ⚠ CAUTION

When this unit is turned on, starting and stopping the engine of a car with its volume raised to the maximum level may harm your hearing. Be careful about adjusting the volume.

### Turning ON the Power and Adjusting the Volume

- 1) Press the POWER button [3].  
\* To turn off the power, press the POWER button [3] for 1 second or longer.
- 2) Press the FNC button [3] and select another operation mode. Every time the FNC button [3] is pressed, the display changes the operation mode as:  
Radio → CD → CD changer → Radio

### Notes:

- The operation mode not connected to the unit will not be selected.
  - If the CD mode is selected when no disc is inserted, the display shows "NO DISC".
- 3) Turning the Rotary knob [13] clockwise increases the volume; turning it counterclockwise decreases the volume.  
\* The volume level is from 0 (minimum) to 33 (maximum).

## Audio Mode Adjustments

Press the A-M button [2] to select the adjustment mode. The mode switches as follows each time the A-M button is pressed:

BASS → TREB → BAL → FAD → Previous mode

### Adjusting the Bass

- 1) Press A-M button [2] and select "BASS".
- 2) Turning the Rotary knob [13] clockwise emphasizes the bass; turning it counterclockwise attenuates the bass.  
\* The factory default setting is "0". (Adjustment range: -6 to +6)
- 3) When the adjustment is complete, press A-M button [2] several times until the function mode is reached.

### Adjusting the Treble

- 1) Press A-M button [2] and select "TREB".
- 2) Turning the Rotary knob [13] clockwise emphasizes the treble; turning it counterclockwise attenuates the treble.  
\* The factory default setting is "0". (Adjustment range: -6 to +6)
- 3) When the adjustment is complete, press A-M button [2] several times until the function mode is reached.

### Adjusting the Balance

- 1) Press A-M button [2] and select "BAL".
- 2) Turning the Rotary knob [13] clockwise emphasizes the sound from the right speaker; turning it counterclockwise emphasizes the sound from the left speaker.  
\* The factory default setting is "0". (Adjustment range: L9 to R9)
- 3) When the adjustment is complete, press A-M button [2] several times until the function mode is reached.

### Adjusting the Fader

- 1) Press A-M button [2] and select "FAD".
- 2) Turning the Rotary knob [13] clockwise emphasizes the sound from the front speakers; turning it counterclockwise emphasizes the sound from the rear speakers.  
\* The factory default setting is "0". (Adjustment range: F9 to R9)
- 3) When the adjustment is complete, press A-M button [2] several times until the function mode is reached.

### Setting the Z-enhancer

This unit comes with three types of sound tone effects stored in memory. Select the one you prefer.

\* The factory default setting is "Z-EHCR OFF".

Each time you press Z-EHCR button [10], the tone effect changes in the following order.

"Z-ENHANCER 1" → "Z-ENHANCER 2" →

"Z-ENHANCER 3" → "Z-EHCR OFF" →

"Z-ENHANCER 1"...

- Z-ENHANCER 1: bass emphasized
- Z-ENHANCER 2: treble emphasized



- Z-ENHANCER 3: bass and treble emphasized
- Z-EHCR OFF: no sound effect

### Loudness Effect

In order to turn on/off the loudness effect, use the LD button [2] for 1 second or longer. Every time the LD button [2] is pressed and held for 1 second or longer, the loudness effect switches on and off.

\* When the loudness effect is on, the display will show "LD".

### Switching the Display

Every time the DISP button [5] is pressed, the display will change between the main display and the clock display.

Main display



Clock display



Main display ...

### Setting the Clock

- 1) Press the DISP button [5] to display the clock display.
- 2) Press and hold the DISP button [5] for 1 second or longer.
- 3) Press the SRCH Left button [12], then set the current hour.
- 4) Press the SRCH Right button [12], then set the current minute.
- 5) Press the DISP button [5], then the clock is set.

#### Notes:

- If you select another operation mode while you are setting the clock, the clock setting operation will be canceled.
- If you remove the vehicle's battery for a check or repair, the clock will be reset, so you must set it again.

## Radio Mode Operations

### FM Reception

For enhanced FM performance the **MAGTUNE3**® tuner includes signal actuated stereo control and Multipath noise reduction circuits.

### Listening to the Radio

- 1) Press the FNC button [3] to select the radio mode, then the radio will be on.
- 2) To select a preset band, press the BND button [11], then select one of the preset bands such as FM1, FM2, FM3, or AM. Every time the BND button [11] is pressed, the display will change as:  
FM1 → FM2 → FM3 → AM → FM1
- 3) Press the SRCH Left/Right button [12], then the station at which there is a broadcast will be selected (Seek selection).

### Mute

Use this function to turn off the sound immediately.

Press the MUTE button [14]. The sound turns off and "MUTE" appears on the display. Press the MUTE button again to cancel the mute mode.

### Manual Tuning

- 1) Press the BND button [11], then select FM1, FM2, FM3 or AM.
- 2) Press and hold the BND button [11] for 1 second or longer, then the display will show "MANU", which means that a manual selection function is on.
- 3) Press the SRCH Left/Right button [12] and select the right station.

### Seek Tuning

- 1) Press the BND button [11], then select FM1, FM2, FM3 or AM.
- 2) If the "MANU" on the display is on, press and hold the BND button [11] for 1 second or longer. When the "MANU" display is off, the Seek Selection function is on.
- 3) Press the SRCH Left/Right button [12], then when it selects the station in which there is a broadcast, it automatically stops.

## Preset Memory Function

Preset Memory Function can store up to 24 stations: six stations for each of FM1, FM2, FM3 and AM.

### Note:

- When the present memory function is used, all the content of the memory will be erased.

### Manual memory function

- 1) Press the BND button **[11]**, and select the band you want to store in the memory.
- 2) Press the SRCH Left/Right button **[12]** then select the station you want to store in the memory.
- 3) Press and hold the Preset button **[9]** for 2 seconds or longer, then the station will be stored in the memory.

### Auto store function (Automatic Station Store)

- 1) Press the BND button **[11]**, then select the band you want to store in the memory.
- 2) Press and hold the AS button **[8]** for 2 seconds or longer, then the station at which the reception is the strongest will be automatically stored in the memory.

### Note:

- When the number of stations stored is less than six, the previous content of the memory for each direct button will be retained.

## Preset Scanning (Preset Station Scan)

When the PS button **[8]** is pressed, the preset memory numbers flash and the stations are tuned in for 7 seconds each in the order in which they were stored. Press the PS button again to cancel the preset scanning mode.

## Instant Station Recall (ISR)

With this function, a specific radio station can be recalled from any mode.

### ISR memory

- 1) Press the FNC button **[3]**, then select the radio mode.
- 2) Select the radio station which you want to store in the memory.

- 3) Press and hold the ISR button **[4]** for 2 seconds or longer.

### Recalling ISR

Press the ISR button **[4]** then the display will show "ISR", then the radio station previously memorized will be selected. Press the ISR button **[4]** again to disengage the unit from the Recalling ISR function.

## Area Change

Use this function when you are using the car stereo anywhere outside the U.S.

### Switchable frequency spacing

This car stereo is initially set to tune in frequency intervals of 10 kHz for AM and 200 kHz for FM, the standard calibrations in the U.S. When using the unit outside the U.S., use the following procedure to switch the frequency range. The table below lists the frequency specifications for the U.S. and other countries.

		Initial Setting (U.S. standard)	New Setting (outside U.S.)
AM	Frequency spacing	10 kHz	9 kHz
	Frequency range	530 to 1,710 kHz	531 to 1,629 kHz
FM	Frequency spacing	200 kHz	50 kHz
	Frequency range	87.9 to 107.9 MHz	87.5 to 108 MHz

### Switching the area change Outside U.S. (New Setting)

While pressing the BND button **[11]**, press the SRCH Left button **[12]**, then "outside U.S." will be selected.

### Inside U.S. standard (Initial Setting)


While pressing the BND button **[11]**, press the SRCH Right button **[12]**, then the "U.S. standard" will be selected.

## CD Mode Operations

### Loading a Disc

1. Press Open button **[1]** to access the CD insertion slot behind the FLIP DOWN.
2. Insert the disc into the CD insertion slot with its label side up, then the CD will start playing.

For 5-inch (12 cm) CD    For 3-inch (8 cm) single CD

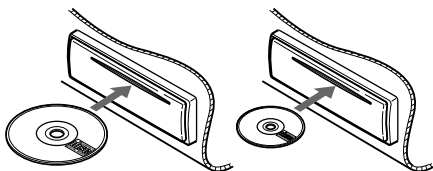

- \* When inserting a single CD (3"(8 cm)), insert it from the center of the slot.
- \* When inserting a single CD (3"(8 cm)), do not connect an adapter.

#### Notes:

- Some CDs recorded in CD-R mode may not be usable.
- Even when recorded in CD-R/W mode, some CDs may not be usable.

3. Close the FLIP DOWN PANEL.

### ⚠ CAUTION

**Be careful not to catch your hand or fingers while closing the FLIP DOWN PANEL.**

#### Note:

- If the FLIP DOWN PANE, does not open fully, gently open with your hand.
- After loading a CD, always close the FLIP DOWN PANEL.

### Listening to the Disc already Inserted

Press the FNC button **[3]** to select the CD mode, the CD will start playing.

### Stopping (pausing) Playback

Press the Play/Pause button **[14]**. "PAUS" appears on the display.

Press the Play/Pause button **[14]** again to resume playback.

### Ejecting the CD

1. Press Open button **[1]** to open the FLIP DOWN PANEL.
2. Press Eject button **[15]** to eject the CD. Take it out from the ejected position.
3. Close the FLIP DOWN PANEL.

### ⚠ CAUTION

**Be careful not to catch your hand or fingers while closing the FLIP DOWN PANEL.**

#### Notes:

- If the FLIP DOWN PANEL does not open fully, gently open with your hand.
- After taking out the CD, be sure to close the FLIP DOWN PANEL.
- \* If a CD (12 cm) is left in the ejected position for 15 seconds, the CD is automatically reloaded (Auto reload).
- \* 8 cm CDs are not auto reloaded. Be sure to remove it when ejected.

#### Note:

- If you force a CD into before auto reloading, this can damage the CD.

### Top Function

Press the TOP button **[11]**, then the CD will start playing from the first song (track number 1).

### Selecting Tracks (songs)

Press the SRCH Left/Right button **[12]**.

▶▶ : Playback will start from the next track.

◀◀ : Playback will start from the beginning of the track currently playing. When this button is pressed again, the CD will play from the previous track.

### Fast-Forward and Fast-Backward

Press and hold the SRCH Left/Right button **[12]**.

▶▶▶ : To fast-forward

◀◀◀ : To fast-backward

- \* Pressing the SRCH Left/Right button for 1 second or longer will move forward or backward 5 times faster than normal play, and pressing it for 3 seconds or longer will do the operation 30 times faster.

## Scan Play (Intro Music Scan)

Press the SCN button [8], then the display shows "SCN", then the CD will play the first 10 seconds of each track of the whole disc. Press the SCN button [8] again to disengage the unit from scan play.

\* A scan play will start from the track following the one currently playing.

## Repeat Play

Press the RPT button [7], then the display shows "RPT", then the track currently playing will be played repeatedly. Press the RPT button [7] again to disengage the unit from repeat play.

 
## Random Play

Press the RDM button [6], then the display will show "RDM", then the entire tracks on the disc will be played at random. Press the RDM button [6] again to disengage the unit from random play.

## CD Changer Mode Operations

### Listening to the Disc

Press the FNC button [3] and select the CD changer mode, then the CD starts playing.



\* If "NO MAGA" appears on the display, insert the magazine into the CD changer. Then, while the player checks the magazine "LOADING" appears on the display.

\* If "NO DISC" appears on the display, eject the magazine and insert discs into each slot. Then, reinsert the magazine back into the CD changer.

### Stopping (pausing) Playback

Press the Play/Pause button [14]. "PAUS" appears on the display.

Press the Play/Pause button [14] again to resume playback.

### Selection of CDs

Press the Direct button (1 to 6) [9] then select the CD you wish to play.

\* If there is no CD in a slot of magazine, it is invalid to press the Direct button [9] corresponding to its disc number.

### Selecting Tracks (songs)

Press the SRCH Left/Right button [12].

▶▶ : Playback will start from the next track.

◀◀ : Playback will start from the beginning of the track currently playing. When this button is pressed again, the CD will play from the previous track.

## **Fast-Forward and Fast-Backward**

Press and hold the SRCH Left/Right button **12**.

▶▶ : To fast-forward

◀◀ : To fast-backward

\* Pressing the SRCH Left/Right button for 1 second or longer will move forward or backward 5 times faster than normal play, and pressing it for 3 seconds or longer will do the operation 30 times faster.

## **Scan Play (Intro Music Scan)**

Press the SCN button **8**, then the display shows "SCN", then the CD will play the first 10 seconds of all the tracks of all CDs. Press the SCN button **8** again to disengage the unit from scan play.

\* A scan play will start from the track following the one currently playing.

### **Disc scan play**

Press and hold the SCN button **8** for 1 second or longer, then the display will show "DISC" and "SCN", and plays the first 10 seconds of the first song of all the CDs in the CD changer.

Press the SCN button **8** again to disengage the unit from disc play.

\* A scan play will start from the first tracks of next CDs following the one currently playing.

## **Repeat Play**

Press the RPT button **7**, then the display shows "RPT", then the track currently playing will be played repeatedly. Press the RPT button **7** again to disengage the unit from repeat play.

### **Disc repeat play**

Press and hold the RPT button **7** for 1 second or longer, then the display shows both the "DISC" and "RPT", then the disc currently being played will be played repeatedly.

Press the RPT button **7** again to disengage the unit from disc repeat play.

## **Random Play**

Press the RDM button **6**, then the display will show "RDM", then the entire tracks on the disc will be played at random.

Press the RDM button **6** again to disengage the unit from disc random play.

### **Disc random playback**

Press and hold the RDM button **6** for 1 second or longer, then the display will show both the "DISC" and "RDM", then the entire tracks of all the discs in the CD changer will be played at random.


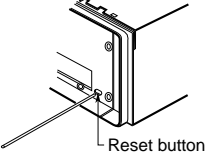
Press the RDM button **6** again to disengage the unit from disc play.

## **Switching Magazine**

This function can be used only when the connected CD changer can store a multiple number of magazines.

Every time the MAG button **11** is pressed, the next magazine will be selected.

# 9. TROUBLESHOOTING

	Problem	Cause	Measure
General	Power does not turn on. (No sound is produced.)	Fuse is blown.	Replace with a fuse of the same amperage. If the fuse blows again, consult your store of purchase.
		Incorrect wiring.	Consult your store of purchase.
	No sound output when operating the unit with amplifiers or power antenna attached.	Power antenna lead is shorted to ground or excessive current is required for remote-on the amplifiers or power antenna.	<ol style="list-style-type: none"> <li>1. Turn the unit off.</li> <li>2. Remove all wires attached to the power antenna lead. Check each wire for a possible short to ground using an ohm meter.</li> <li>3. Turn the unit back on.</li> <li>4. Reconnect each amplifier remote wire to the power antenna lead one by one. If the amplifiers turn off before all wires are attached, use an external relay to provide remote-on voltage (excessive current required).</li> </ol>
	Nothing happens when buttons are pressed.  Display is not accurate.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power, then press the Open button  and remove the DCP. Press the reset button for about 2 seconds with a thin rod. <div style="text-align: center;">  </div>
	DCP or main unit connectors are dirty.	Wipe the dirt off with a soft cloth moistened with cleaning alcohol.	
CD	Compact disc cannot be loaded.	Another compact disc is already loaded.	Eject the compact disc before loading the new one.
	Sound skips or is noisy.	Compact disc is dirty.	Clean the compact disc with a soft cloth.
		Compact disc is heavily scratched or warped.	Replace with a compact disc with no scratches.
Sound is bad directly after power is turned on.	Water droplets may form on the internal lens when the car is parked in a humid place.	Let dry for about 1 hour with the power on.	

# 10. ERROR DISPLAYS

If an error occurs, one of the following displays is displayed.  
Take the measures described below to eliminate the problem.

	Error Display	Cause	Measure
CD	CD ER2	A CD is caught inside the CD deck and is not ejected.	This is a failure of CD deck's mechanism and consult your store of purchase.
	CD ER3	A CD cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped disc.
	CD ER6	A CD is loaded upside-down inside the CD deck and does not play.	Eject the disc then reload it properly.
CD changer	CDCH ER2	A CD inside the CD changer is not loaded.	This is a failure of CD changer's mechanism and consult your store of purchase.
	CDCH ER3	A CD inside the CD changer cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped disc.
	CDCH ER6	A CD inside the CD changer cannot be played because it is loaded upside-down.	Eject the disc then reload it properly.

If an error display other than the ones described above appears, press the reset button. If the problem persists, turn off the power and consult your store of purchase.

# 11. SPECIFICATIONS

## FM Tuner

Frequency Range: 87.9 MHz to 107.9 MHz  
Usable Sensitivity: 11 dBf  
50 dB Quieting Sensitivity: 17 dBf  
Alternate Channel Selectivity: 75 dB  
Stereo Separation (1 kHz): 35 dB  
Frequency Response ( $\pm 3$  dB): 30 Hz to 15 kHz

## AM Tuner

Frequency Range: 530 kHz to 1,710 kHz  
Usable Sensitivity: 25  $\mu$ V

## CD Player


System: Compact disc audio system  
Usable Discs: Compact disc  
Frequency Response: 10 Hz to 20 kHz ( $\pm 1$  dB)  
Signal-to-Noise Ratio: 100 dB (1 kHz) IHF-A  
Dynamic Range: 95 dB (1 kHz)  
Harmonic Distortion: 0.01%

## Audio

Maximum Power Output:  
200 W (50 W  $\times$  4 ch)  
Continuous Average Power Output:  
18 W  $\times$  4, into 4  $\Omega$ , 20 Hz to 20 kHz, 1%THD  
Bass Control Action (30 Hz):  $\pm 13$  dB  
Treble Control Action (10 kHz):  $\pm 10$  dB  
Line Output (with CD 1 kHz, 10 k $\Omega$ ): 1.8 V

## General

Power Supply Voltage: 14.4 V DC (10.8 V to 15.6 V allowable), negative ground  
Current Consumption: Less than 15 A  
Speaker Impedance: 4  $\Omega$  (4  $\Omega$  to 8  $\Omega$  allowable)  
Weight: 3.97 lb. (1.8 kg)  
Dimensions:  
7" (178 mm) Width  $\times$  2" (50 mm) Height  $\times$  6-1/8" (155 mm) Depth

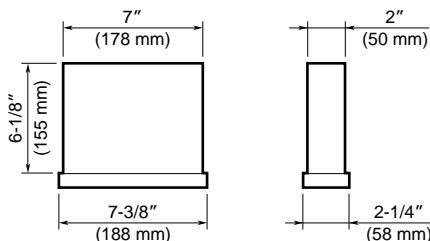

## Notes:

- Specifications comply with EIA Standards.
- Specifications and design are subject to change without notice for further improvement.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>