

clarion®

Owner's manual

Mode d'emploi

Bedienungsanleitung

Istruzioni per l'uso

Gebruiksaanwijzing

Manual de instrucciones

Bruksanvisning

Manual de instruções

DXZ368RMP

CD/MP3/WMA RECEIVER/CeNET CONTROL
RADIO CD/MP3/WMA/CONTRÔLE CeNET
CD/MP3/WMA-RECEIVER/CeNET CONTROL
RICEVITORE PER CD/MP3/WMA/CeNET CONTROL
CD/MP3/WMA-RECEIVER/CeNET CONTROL
RADIO CD/MP3/WMA/CONTROL CeNET
CD/MP3/WMA-LÄSARE/CeNET KONTROLL
RECEPTOR CD/MP3/WMA/CONTROLO CeNET

Thank you for purchasing this **Clarion** product.

- * Please read this owner's manual in its entirety before operating this equipment.
- * After reading this manual, be sure to keep it in a handy place (e.g., glove compartment).
- * Check the contents of the enclosed warranty card and keep it carefully with this manual.

NET

COMPACT
disc
DIGITAL AUDIO
TEXT

MP3
ID3 TAG

Plays
Windows
Media™

R-D-S
EON

ISO
CONNECTOR

CAUTIONS:

This appliance contains a laser system and is classified as a "CLASS 1 LASER PRODUCT". To use this model properly, read this Owner's Manual carefully and keep this manual for your future reference. In case of any trouble with this player, please contact your nearest "AUTHORIZED service station". To prevent direct exposure to the laser beam, do not try to open the enclosure.

!CAUTION

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED IN THE OWNER'S MANUAL MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

ADVARSEL.

Denne mærking er anbragt udvendigt på apparatet og indikerer, at apparatet arbejder med laserstråler af klasse 1, hvilket betyder, at der anvendes laserstråler af svageste klasse, og at man ikke på apparatets yderside kan blive udsat for utilsadelig kraftig stråling. APPARATET BØR KUN ÅBNES AF FAGFOLK MED SÆRLIGT KENDSKAB TIL APPARATER MED LASERSTRÅLER!

Indvendigt i apparatet er anbragt den her gengivne advarselmærkning, som advarer imod at foretage sådanne indgreb i apparatet, at man kan komme til at udsætte sig for laserstråling.


OBS!

Apparaten innehåller laserkomponenten som avger laserstråling överstigande gränsen för laserklass 1.

VAROITUS

Suojakoteloä si saa avata. Laite sisältää laserdiodin, joka lähettää näkymätöntä silmille vaarallista lasersäteilyä.

| | | |
|--|------------------|-----------------|
| MODEL | DXZ368RMP | clarion |
| 12V ⚡ GROUND | | |
| LW | 153-279kHz | CE |
| MW | 531-1602kHz | |
| FM(UKW) | 87.5-108MHz | |
| | | EMCTYPE 1042760 |
| CLASS 1 LASER PRODUCT | | |
| This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from MSLGP | | |
| PE-2803E 206-6734-00 Clarion Co., Ltd. MADE IN MALAYSIA | | |

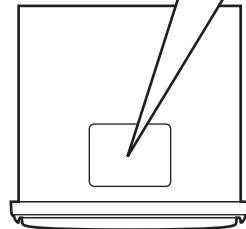

Contents

| | |
|---|----|
| 1. PRECAUTIONS | 3 |
| Handling Compact Discs | 4 |
| 2. CONTROLS | 5 |
| 3. NOMENCLATURE | 6 |
| Names of the Buttons and their Functions | 6 |
| Major Button Operations when external equipment is connected to this unit | 7 |
| Display Items | 9 |
| LCD Screen | 9 |
| 4. REMOTE CONTROL (Optional item) | 10 |
| Inserting the Battery | 10 |
| Functions of Remote Control Unit Buttons | 11 |
| 5. DCP | 12 |
| 6. OPERATIONS | 13 |
| Basic Operations | 13 |
| Radio Mode Operations | 15 |
| RDS Operations | 16 |
| CD/MP3/WMA Mode Operations | 20 |
| Operations Common to Each Mode | 25 |
| 7. OPERATIONS OF ACCESSORIES | 29 |
| CD Changer Operations | 29 |
| TV Operations | 30 |
| Digital Radio/DAB Operations | 31 |
| 8. TROUBLESHOOTING | 34 |
| 9. ERROR DISPLAYS | 36 |
| 10. SPECIFICATIONS | 37 |



1. PRECAUTIONS

- When the inside of the car is very cold and the player is used soon after switching on the heater moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
- Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.
- This unit is applicable for on-road 4 wheel vehicle purpose only. Use for tractor, fork truck, bulldozer, off road vehicle, 2 or 3 wheel motor bicycle, marine boat or other special purpose vehicle is not appropriate.

INFORMATION FOR USERS:


CHANGES OR MODIFICATIONS TO THIS PRODUCT NOT APPROVED BY THE MANUFACTURER WILL VOID THE WARRANTY.

Handling Compact Discs

This unit has been designed specifically for play-back of compact discs bearing the  or  mark. No other discs can be played.

To remove the compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

Removing the disc

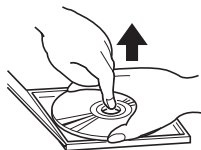


Proper way to hold the compact disc




Always handle the compact disc by the edges. Never touch the surface.

To remove fingermarks and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

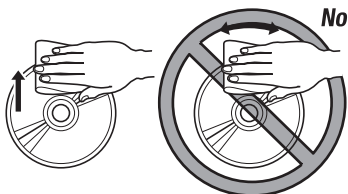

New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen, etc. to remove roughness from the edge of the disc.

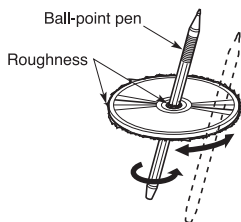


Note:


- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc. These may get caught in the internal mechanism and damage the disc.

Note on compact discs

Never stick labels on the surface of the compact disc or mark the surface with a pencil or pen.

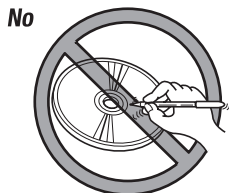


Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.

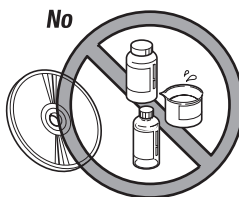

Do not use compact discs that have large scratches, are misshapen, or cracked, etc. Use of such discs will cause misoperation or damage.




Do not expose compact discs to direct sunlight or any heat source.

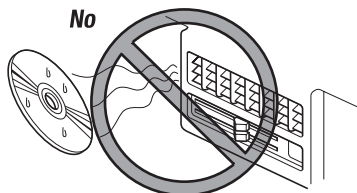


**Be sure to unfold and read the next page. / Veuillez déplier et vous référer à la page suivante.
Bitte ausbreiten und die nächste Seite lesen. / Assicurarsi di aprire e leggere la pagina successiva.
Volgende pagina uitvouwen en doorlezen a.u.b. / Cerciõrese de desplegar y de leer la página siguiente.
Glöm inte att vika ut och läsa nästa sida. / Não deixe de abrir e ler a próxima página.**

2. CONTROLS / LES COMMANDES / REGLER / CONTROLLI / REGELAARS / CONTROLES / KONTROLLER / CONTROLOS

MAIN UNIT / APPAREIL PRINCIPAL / HAUPTGERÄT / APPARECCHIO PRINCIPALE / HOOFDTOESTEL / UNIDAD PRINCIPAL / HUVUDENHET / UNIDADE PRINCIPAL

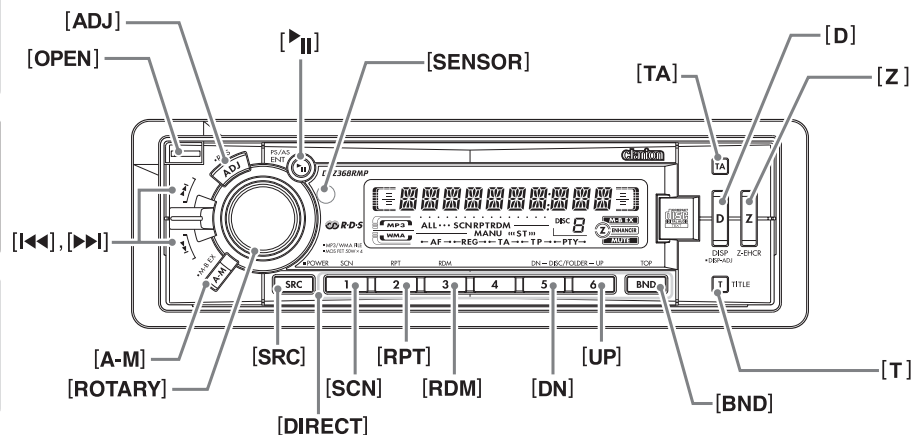

With the FLIP DOWN PANEL opened / Ouvrez le PANNEAU RABATTABLE
ÖFFNUNG DER KLAPPSCHALTAFEL / Apertura del PANNELLO APRIBILE
Met het NEERKLAPBARE PANEEL geopend / Apertura del PANEL ABATIBLE
DEN NEDFÄLLBARA PANELEN öppen / Abrindo o PAINEL RECLINÁVEL

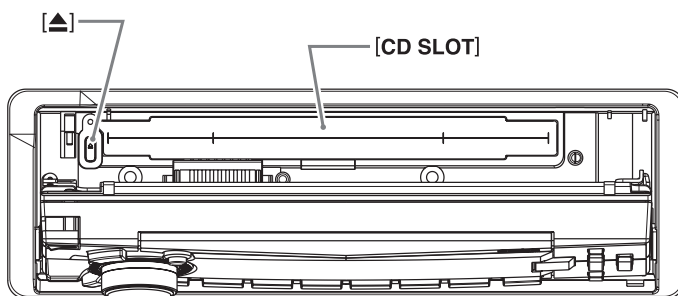

Note: Be sure to unfold this page and refer to the front diagrams as you read each chapter.

Remarque: Veuillez déplier cette page et vous référer aux schémas quand vous lisez chaque chapitre.

Hinweis: Bitte diese Seite ausfallen und beim Lesen der einzelnen Kapitel die Frontdiagramme beachten.

Nota: Assicurarsi di aprire questa pagina e fare riferimento a questi diagrammi quando si legge ciascun capitolo.

Opmerking: Vouw deze pagina uit en zie tevens de afbeeldingen van het voorpaneel tijdens het doorlezen van de volgende hoofdstukken.

Nota: Cuando lea los capítulos, despliegue esta página y consulte los diagramas.

Observera: Vik ut denna sida för att kunna se figurerna över bilstereons framsida medan du läser de olika kapitlen.

Nota: Certifique-se de abrir esta página e consulte os diagramas frontais conforme realiza a leitura de cada capítulo.

3. NOMENCLATURE

Note:

- Be sure to read this chapter referring to the front diagrams of chapter "2. CONTROLS" on page 5 (unfold).

Names of the Buttons and their Functions

[OPEN] button

- Deeply push in [OPEN] button to unlock the flip down panel.

[ADJ] button

- Press the button to switch to the ADJ mode.
When the button press and hold for 1 second or longer to enter RDS ADJ mode.

[▶||] button

- Perform preset scan while in the radio mode.
Press and hold the button for 2 seconds or longer to perform auto store.
- Play or pause a CD while in the CD/MP3/WMA mode.

[SENSOR]

- Receiver for remote control unit.
- Operating range: 30° in all directions.

[TA] button

- Press the button to set the TA (Traffic Announcement) standby mode.

[D] button

- Switch the display indication (Main display, Title display, Clock display).
- Press and hold the button for 1 second or longer to enter the display adjustment mode.

[Z] button

- Press the button to select one of the 3 types of sound characteristics already stored in memory.

[T] button

- Press the button to input a title in the CD mode.
- Press the button to switch the user titles or track titles, while in the CD/MP3/WMA mode.
- Press the button to scroll the title during the CD-text play, while in the CD/MP3/WMA mode.

[BND] button

- Switch the band, or seek tuning or manual tuning while in the radio mode.
- Play a first track while in the CD/MP3/WMA mode.
Press and hold the button for 1 second or longer to perform multi-session.
- Press the button to change the character.

[UP], [DN] buttons

- Select the Folder. (MP3/WMA disc only)

[RDM] button

- Perform random play while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder random play while in the MP3/WMA mode.

[RPT] button

- Repeat play while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder repeat play while in the MP3/WMA mode.

[SCN] button

- Perform scan play for 10 seconds of each track while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder scan play while in the MP3/WMA mode.

[DIRECT] buttons

- Store a station into memory or recall it directly while in the radio mode.

[SRC] button

- Press the button to turn on the power.
- Press and hold the button for 1 second or longer to turn off the power.
- Switch the operation mode among the radio mode, etc.

[ROTARY] knob

- Adjust the volume by turning the knob clockwise or counterclockwise.
- Use the knob to perform various settings.

Names of the Buttons and their Functions

[A-M] button

- Press the button to switch to the audio mode. (bass/treble, balance/fader)
- Press and hold for 1 second or longer to turn on or off the M-B EX mode.

[▲] button

- Eject a CD when it is loaded into the unit.

[CD SLOT]

- CD insertion slot.

[◀◀, ▶▶] lever

- Select a station while in the radio mode or select a track when listening to a CD. This lever is used to make various settings.
- Press the lever upward or downward and hold in position for 1 second or longer to enter the fast-forward or fast-backward mode.

Major Button Operations when external equipment is connected to this unit

When the CD/DVD changer is connected

* For details, see the section “**CD changer operations**”. For the DVD changer, refer to the Owner’s Manual provided with the DVD changer.

[▶||] button

- Play or pause a CD or DVD.

[D] button

- Press the button to display the title. (Main display, Title display, Clock display)
- Press and hold the button for 1 second or longer to enter the display adjust mode.

[T] button

- Press the button switches the user titles or track titles, etc. while in the CD changer mode.
- Press and hold the button for 1 second or longer to input a title in the CD changer mode.
- Press the button to scroll the title during CD-text play.

[BND] button

- Move the next disc in increasing order.

[UP] , [DN] buttons

- Select the disc.

[RDM] button

- Perform random play. Press and hold the button for 1 second or longer to perform disc random play.

[RPT] button

- Perform repeat play. Press and hold the button for 1 second or longer to perform disc repeat play.

[SCN] button

- Perform scan play for 10 seconds of each track. Press and hold the button for 1 second or longer to perform disc scan play.

[◀◀, ▶▶] lever

- Select a track when listening to a disc.
- Press the lever upward or downward and hold in position for 1 second or longer to enter the fast-forward or fast-backward mode.

When the TV/DAB is connected

* For details, see the section “**TV Operations**” or “**Digital Radio/DAB Operations**”.

[▶||] button

- Perform preset scan while in the TV mode. Press and hold the button for 2 seconds or longer to perform auto store. (This function is only TV tuner.)
- Perform service scan while in the DAB mode.

[TA] button

- Press the button to set the TA (Traffic Announcement) standby mode in the DAB mode. (This function is only DAB tuner.)

[BND] button

- Switch the band.
Press and hold the button for 1 second or longer to switch to the seek tuning or manual mode.

Major button operations when external equipment is connected to this unit

[DIRECT] button

- Store a station into memory or recall it directly.


[ADJ] button

- Press the button to switch to the ADJ mode.
- Press and hold the button for 1 second or longer to switch to the TV picture mode or VTR (external) picture mode.

[◀, ▶] lever

- Select a station.

Display Items

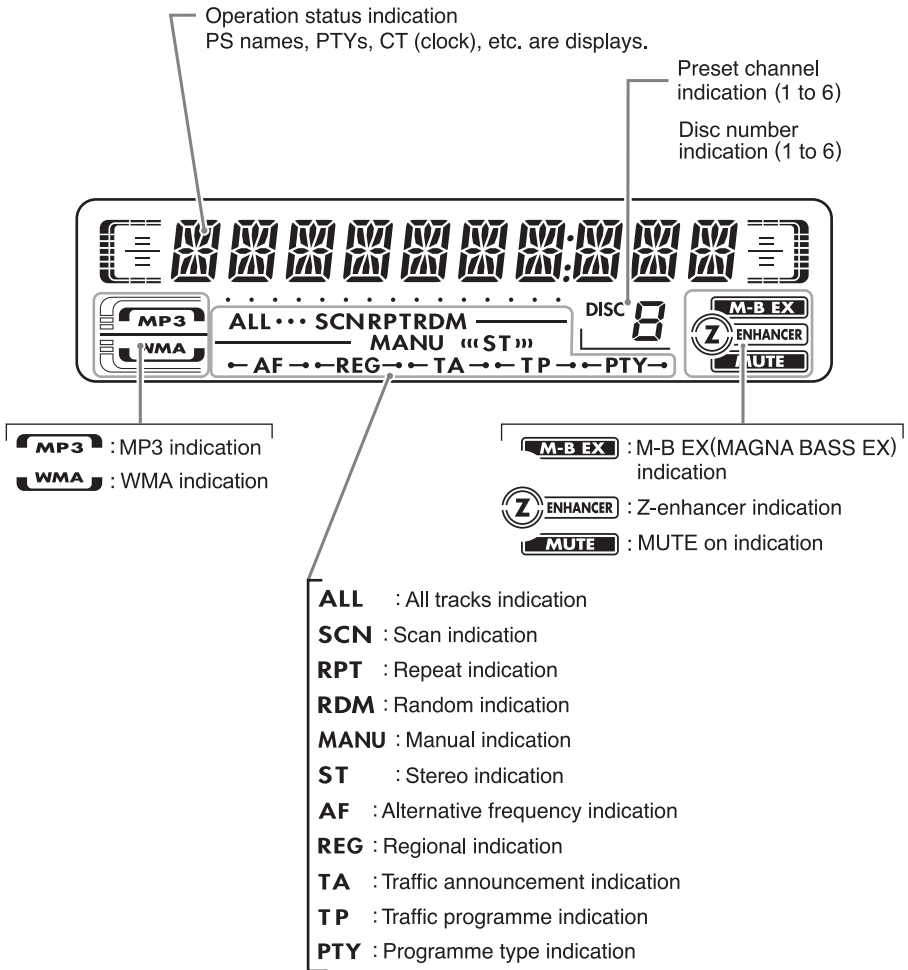


LCD Screen

In extreme cold, the screen movement may slow down and the screen may darken, but this is normal. The screen will recover when it returns to normal temperature.

4. REMOTE CONTROL (Optional item)

If you buy the RCB-176-700 sold separately, you can enjoy the use of the Remote Control function.

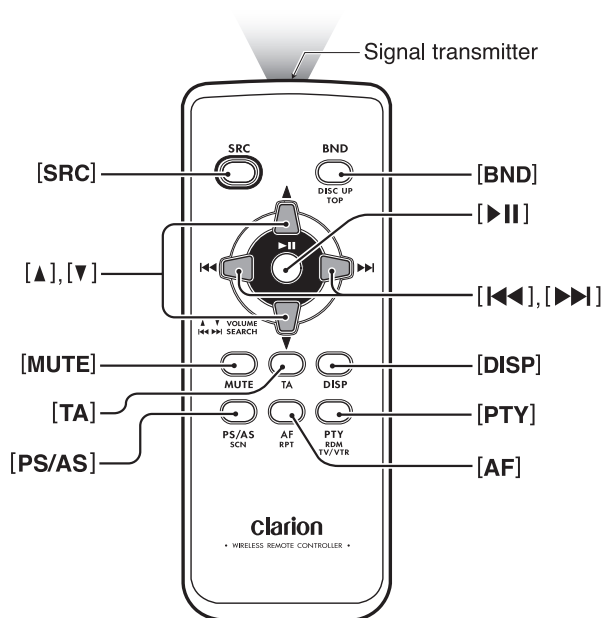



Inserting the Battery

1. Turn over the remote control unit and slide the cover in the direction indicated by the arrow in the illustration.
2. Insert the battery (CR2025) into the insertion guides, with the printed side (+) facing upwards.
3. Press the battery in the direction indicated by the arrow so that it slides into the compartment.
4. Replace the cover and slide in until it clicks into place.

Notes:

Misuse may result in rupture of the battery, producing leakage of fluid and resulting in personal injury or damage to surrounding materials. Always follow these safety precautions:

- Use only the designated battery.
- When replacing the battery, insert properly, with +/- polarities oriented correctly.
- Do not subject battery to heat, or dispose of in fire or water. Do not attempt to disassemble the battery.
- Dispose of used batteries properly.

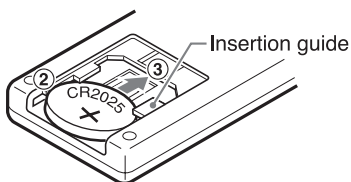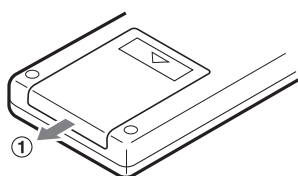

Functions of Remote Control Unit Buttons

| Mode Button | Radio (RDS)/DAB | CD/MP3/WMA | CD Changer DVD Changer | TV |
|-------------|--|---|---|--|
| [SRC] | Switch among radio, DAB, CD/MP3/WMA, CD changer, DVD changer and TV. | | | |
| [BND] | Switch reception band. | Play the first track. Top play. | Move the next disc in increasing order. | Switch reception band. |
| [▲], [▼] | Increase and decrease volume (in all modes). | | | |
| [◀◀], [▶▶] | Move preset channels up and down. | Move tracks up and down. Press and hold the button for 1 second or longer: Fast-forward/fast-backward. | | Move preset channels up and down. |
| [▶▶] | No function. | Switch between playback and pause. | | No function. |
| [MUTE] | Turn mute on and off. | | | |
| [TA] | TA on and off. | | | |
| [DISP] | Switch among main display, title display, clock (CT) display. | | | |
| [PS/AS] | Preset scan. Press and hold the button for 2 seconds or longer: Auto store. | Scan play. Press and hold the button for 1 second or longer to perform folder scan play while in the MP3/WMA mode. | Scan play. Press and hold the button for 1 second or longer: Disc scan play. | Preset scan. Press and hold the button for 2 seconds or longer: Auto store. |
| [AF] | AF function on and off. Press and hold the button for 1 second or longer: REG function on and off | Repeat play. Press and hold the button for 1 second or longer to perform folder repeat play while in the MP3/WMA mode. | Repeat play. Press and hold the button for 1 second or longer: Disc repeat play. | No function. |
| [PTY] | PTY mode on and off. | Random play. Press and hold the button for 1 second or longer to perform folder random play while in the MP3/WMA mode. | Random play. Press and hold the button for 1 second or longer: Disc random play. | Switch between TV and VTR. |

* Some of the corresponding buttons on the main unit and remote control unit have different functions.


5. DCP

The control panel can be detached to prevent theft. When detaching the control panel, store it in the DCP (Detachable Control Panel) case to prevent scratches.


We recommend taking the DCP with you when leaving the car.

Removing the DCP


1. Press the [SRC] button for 1 second or longer to switch off the power.

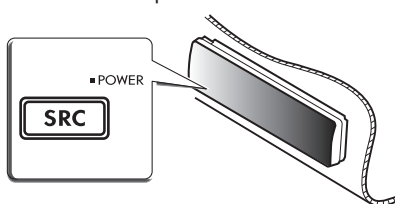


2. Press in the [OPEN] button.
 - * If the flip down panel does not open fully, gently open it with your hand.

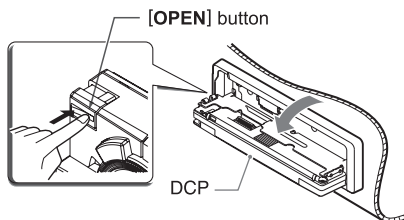

3. Pull the DCP toward you and remove it.

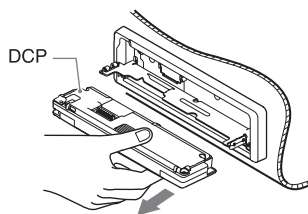

4. Close the HOLD FLAP.

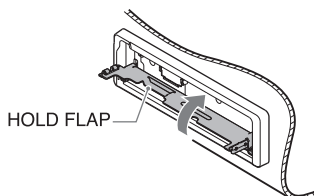


CAUTION

Be sure to close the HOLD FLAP for safety when removing the DCP.


Attaching the DCP

1. Insert the right side of the DCP into the main unit.
2. Insert the left side of the DCP to attach into the main unit.

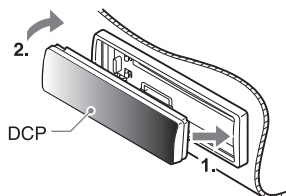

CAUTION

- The DCP can easily be damaged by shocks. After removing it, be careful not to drop it or subject it to strong shocks.
- If the FLIP DOWN PANEL is kept open, the DCP may drop due to vibration of the car. This result in damage to the DCP. So close the FLIP DOWN PANEL or remove the DCP to store into the case.
- The connector connecting the main unit and the DCP is an extremely important part. Be careful not to damage it by pressing on it with fingernails, pens, screwdrivers, etc.

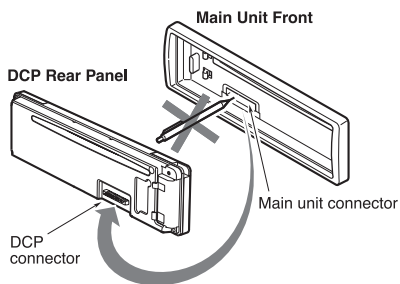

Note:

- If the DCP is dirty, wipe off the dirt with a soft, dry cloth only.

6. OPERATIONS

Basic Operations

Note: Be sure to read this chapter referring to the front diagrams of chapter "2. CONTROLS" on page 5 (unfold).

CAUTION

Be sure to lower the volume before switching off the unit power or the ignition key. The unit remembers its last volume setting. If you switch the power off with the volume up, when you switch the power back on, the sudden loud volume may hurt your hearing and damage the unit.

Turning on/off the power

Note:

- Be careful about using this unit for a long time without running the engine. If you drain the car's battery too far, you may not be able to start the engine and this can reduce the service life of the battery.

1. Press the [SRC] button.
2. The illumination and display on the unit light up. The unit automatically remembers its last operation mode and will automatically switch to display that mode.
3. Press and hold the [SRC] button for 1 second or longer to turn off the power for the unit.

Note:

- The first time this unit is turned on after the wire connections are completed, it must be checked what equipment is connected. When the power is turned on, "SYSTEM CHK" appears in the display, then "TUNER" appears in the display and goes to radio mode.

Selecting a mode

1. Press the [SRC] button to change the operation mode.
2. Each time you press the [SRC] button, the operation mode changes in the following order:
Radio mode → DAB mode → CD/MP3/WMA mode → CD changer mode → DVD changer mode → TV mode → Radio mode...

* External equipment not connected with CeNET is not displayed.

Note:

- If the CD mode is selected when no disc is inserted, the display shows "NO DISC".

Switching the display

Press the [D] button to select the desired display.

Each time you press the [D] button, the display switches in the following order:

Main display → Title display → Clock (CT) display → Main display

* Once selected, the preferred display becomes the display default. When a function adjustment such as volume is made, the screen will momentarily switch to that function's display, then revert back to the preferred display several seconds after the adjustment.

* When you have entered a title in a CD/MP3/WMA, it appears in the title display. If you have not entered a title, "NO TITLE" appears in the title display instead.

For information on how to enter a title, refer to the subsection "Entering titles" in section "Operations Common to Each Mode".

* When CT data is not received, "CT--:--" appears in the display.

Adjusting the volume

Turning the [ROTARY] knob clockwise increases the volume; turning it counter-clockwise decreases the volume.

* The volume level is from 0 (minimum) to 33 (maximum).

Audio mode adjustments

1. Press the [A-M] button to select the adjustment mode. The mode switches as follows each time the [A-M] button is pressed:

BASS → TREB → BAL → FAD → Previous mode

2. Turning the [ROTARY] knob to adjust the selected audio mode.

BASS (Bass) : Adjustment range : -6 to +7

TREB (Treble): Adjustment range : -6 to +6

BAL (Balance): Adjustment range : L13 to R13

FAD (Fader) : Adjustment range : F12 to R12

* The display returns to the previous mode 7 seconds after the adjustment.

Basic Operations

Setting the Z-Enhancer

This unit are provided with 3 types of sound tone effects stored in memory. Select the one you prefer.

* The factory default setting is “**Z-EHCR OFF**”.

Each time you press the [**Z**] button, the tone effect changes in the following order:

“**Z-EHCR OFF**” → “**BASS BOOST**” → “**IMPACT**” → “**EXCITE**” → “**Z-EHCR OFF**” ...

- **BASS BOOST** : bass emphasized
- **IMPACT** : bass and treble emphasized
- **EXCITE** : bass and treble emphasized mid de-emphasized
- **Z-EHCR OFF** : no sound effect

Adjusting the balance

1. Press the [**A-M**] button and select “**BAL 0**”.
2. Turning the [**ROTARY**] knob clockwise emphasizes the sound from the right speaker; turning it counterclockwise emphasizes the sound from the left speaker.
 - * The factory default setting is “**BAL 0**”.
(Adjustment range: L13 to R13)
3. When the adjustment is complete, press the [**A-M**] button several times until the function mode is reached.

Adjusting the fader

1. Press the [**A-M**] button and select “**FAD 0**”.
2. Turning the [**ROTARY**] knob clockwise emphasizes the sound from the front speakers; turning it counterclockwise emphasizes the sound from the rear speakers.
 - * The factory default setting is “**FAD 0**”.
(Adjustment range: F12 to R12)
3. When the adjustment is complete, press the [**A-M**] button several times until the function mode is reached.

Adjusting MAGNA BASS EX

The MAGNA BASS EX does not adjust the low sound area like the normal sound adjustment function, but emphasizes the deep bass sound area to provide you with a dynamic sound.

* The factory default setting is off.

1. Press and hold the [**A-M**] button for 1 second or longer to turn on the MAGNA BASS EX effect. “**M-B EX**” lights in the display.
2. Press and hold the [**A-M**] button for 1 second or longer to turn off the MAGNA BASS EX effect. “**M-B EX**” goes off from the display.

CT (Clock Time) function

The CT function receives CT data sent from an RDS station and displays the time. Press the [**D**] button to switch to the CT display.

* If a CT data is not being received, “**CT--:--**” appears in the display.

Note:

- CT data is not transmitted in some countries and by some broadcast stations. Also, in some areas, the CT may not display accurately.

Radio Mode Operations

Listening to the radio

1. Press the [SRC] button and select the radio mode, then the radio will be on.
2. To select a preset band, press the [BND] button, then select one of the preset bands such as FM1, FM2, FM3 or AM. Every time the [BND] button is pressed, the display will change as:
FM1 → FM2 → FM3 → AM → FM1...
3. Press the [◀▶] lever upward or downward to tune in the desired station.

Seek tuning

There are 2 types of seek tuning: DX SEEK and LOCAL SEEK.

DX SEEK can automatically tune in to receivable broadcast stations; LOCAL SEEK can tune in to only broadcast stations with a good reception sensitivity.

1. Press the [BND] button and select the desired band (FM or AM (MW, LW)).
2. Tune into a station.
 - * If "MANU" is lit in the display, press and hold the [BND] button for 1 second or longer. "MANU" in the display goes off and seek tuning is now available.
 - * If "TA" is lit in the display, TP stations are automatically sought.

● DX SEEK

Press the [◀▶] lever upward or downward to start automatic station tuning.

When the lever is pressed upward, search will be performing in the direction of higher frequencies. When the lever is pressed downward, search will be performed in the direction of lower frequencies.

* When seek tuning starts, "DX" appears in the display.

● LOCAL SEEK

If the lever is pressed upward or downward and held in position for 1 second or longer, local seek tuning will be enabled. Broadcast stations with good reception sensitivity are selected.

* When local seeking starts, "LO" appears in the display.

Manual tuning

There are 2 ways available: Quick tuning and step tuning.

When you are in the step tuning mode, the frequency changes one step at a time. In the quick tuning mode, you can quickly tune the desired frequency.

1. Press the [BND] button and select the desired band (FM or AM (MW/LW)).
 - * If "MANU" is not lit in the display, press and hold the [BND] button for 1 second or longer. "MANU" is lit in the display and manual tuning is now available.
2. Tune into a station.
 - * If no operation is performed for more than 7 seconds, manual tuning is cancelled and the display returns to the previous mode.

● Quick tuning:

Press the [◀▶] lever upward or downward and hold in position for 1 second or longer to begin station tuning.

● Step tuning:

Press the [◀▶] lever upward or downward to perform manual tuning.

* If no operation is performed for more than 7 seconds, manual tuning is cancelled and the display returns to the previous mode.

Preset memory function

Preset memory function can store up to 24 stations:

six stations for each of FM1, FM2, FM3 and AM.

Manual memory function

1. Press the [BND] button, to select a band you want to store in the memory.
2. Press the [◀▶] lever to tune into a desired station.
3. Press and hold one of the [DIRECT] button for 2 seconds or longer to store the current station into preset memory.

Radio Mode Operations

Auto store

Auto store is a function for storing up to 6 stations that are automatically tuned in sequentially. If 6 receivable stations cannot be received, a previously stored station remains unoverwritten at the memory position.

1. Press the **[BND]** button and select the desired band (FM or AM (MW/LW)).
2. Press and hold the **[PS/AS]** button for 2 seconds or longer. The stations with good reception are stored automatically to the preset channels.
 - * If auto store is performed in the FM bands, the stations are stored in FM3 even if FM1 or FM2 was chosen for storing stations.

Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press the **[PS/AS]** button.
2. When a desired station is tuned in, press the **[PS/AS]** button again to continue receiving that station.

Note:

- Be careful not to press and hold the **[PS/AS]** button for 2 seconds or longer, otherwise the auto store function is engaged and the unit starts storing stations.

Recalling a preset station

A total of 24 preset positions (6-FM1, 6-FM2, 6-FM3, 6-AM) exists to store individual radio stations in memory. Pressing the corresponding **[DIRECT]** button recalls the stored radio frequency automatically.

1. Press the **[BND]** button and select the desired band (FM or AM (MW/LW)).
2. Press the corresponding **[DIRECT]** button to recall the stored station.
 - * Press and hold one of the **[DIRECT]** buttons for 2 seconds or longer to store that station into preset memory.

RDS Operations

RDS (Radio Data System)

This unit has a built-in RDS decoder system that supports broadcast stations transmitting RDS data.

This system can display the name of the broadcast station being received (PS) and can automatically switch to the broadcast station with the best reception as you move long distances (AF switching).

Also, if a traffic announcement or programme type is broadcast from an RDS station, no matter what mode you are in, this broadcast is received. Additionally, if EON information is received, this information enables automatic switching of other preset stations on the same network and interruption of the station being received with traffic information from other stations (TP). This function is not available in some areas.

When using the RDS function, always set the radio to FM mode.

- AF : Alternative Frequency
- PS : Programme Service Name
- PTY : Programme Type
- EON : Enhanced Other Network
- TP : Traffic Programme
- * RDS interrupt does not function during AM radio reception.
- * When set receives RDS signal, and can read PS data, PS appears in the display.

AF function

The AF function switches to a different frequency on the same network in order to maintain optimum reception.

* The factory default setting is "ON".

1. Press and hold the **[ADJ]** button for 1 second or longer to switch to the RDS adjustment Mode.
2. Press the **[◀▶]** lever upward or downward to select "AF".
3. Turn the **[ROTARY]** knob clockwise to select "ON" or counter-clockwise to select "OFF".

• **ON:**
"AF" in the display lights and AF function turns on.

• **OFF:**
"AF" in the display goes off and AF function turns off.

RDS Operations

4. Press the **[ADJ]** button to return to the previous mode.

* If the reception of the current broadcast station deteriorates, “**SEARCHING**” appears in the display and the radio searches for the same programme on another frequency.

● AF function between RDS and DAB

When the same programme is broadcasted by both RDS and DAB, and this function is ON, the unit switches to receive the broadcast with the better reception automatically.

* This function only operates when the DAH923 or DAH913 DAB unit, sold separately, is connected.

* This factory default setting is “**ON**”.

1. Press the **[ADJ]** button to switch to the adjustment selection display.
2. Press the **[◀▶]** lever upward or downward to select “**LINK ACT**”.
3. Turn the **[ROTARY]** knob to select “**ON**” or “**OFF**”.

● **ON:**

AF switching between DAB and RDS enabled.

● **OFF:**

AF switching between DAB and RDS disabled.

4. Press the **[ADJ]** button to return to the previous mode.

REG (Regional programme) function

When the REG function is ON, the optimum regional station can be received. When this function is OFF, if the regional station area switches as you drive, a regional station for that region is received.

* The factory default setting is “**OFF**”.

Notes:

- This function is disabled when a national station such as BBC R2 is being received.
- The REG function ON/OFF setting is valid when the AF function is ON.

1. Press and hold the **[ADJ]** button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the **[◀▶]** lever upward or downward to select “**REG**”.
3. Turn the **[ROTARY]** knob to select “**ON**” or “**OFF**”.

● **ON:**

“**REG**” in the display lights and REG function turns on.

● **OFF:**

“**REG**” in the display goes off and REG function turns off.

4. Press the **[ADJ]** button to return to the previous mode.

Manually tuning a regional station in the same network

1. This function is valid when the AF function is ON and the REG function is OFF.

Note:

- This function can be used when a regional broadcast of the same network is received.
2. Press any one of the **[DIRECT]** buttons to call out the regional station.
 3. If the reception condition of the called out station is bad, press the **[DIRECT]** button of the same number. The unit receives a local station on the same network.

TA (Traffic Announcement)

In the TA standby mode, when a traffic announcement broadcast starts, the traffic announcement broadcast is received as top priority regardless of the function mode so you can listen to it. Traffic programme (TP) automatic tuning is also possible.

* This function can only be used when “**TP**” is lit in the display. When “**TP**” is lit, this means that the RDS broadcast station being received has traffic announcement programmes.

● Setting the TA standby mode

If you press the **[TA]** button when only “**TP**” is lit in the display, “**TP**” and “**TA**” light in the display and the unit is set into the TA standby mode until a traffic announcement is broadcast. When a traffic announcement broadcast starts, “**TRA INFO**” appears in the display. If you press the **[TA]** button while a traffic announcement broadcast is being received, the traffic announcement broadcast reception is cancelled and the unit goes into the TA standby mode.

RDS Operations

● Cancelling the TA standby mode

As "TP" and "TA" lit in the display, press the [TA] button. The "TA" in the display goes off and the TA standby mode is cancelled.

* If "TP" is not lit, pressing the [TA] button searches for a TP station.

● Searching for a TP station

When "TP" is not lit, if you press the [TA] button, "TA" in the display lights and the unit automatically receives a TP station.

Note:

● If a TP station is not received, the unit continues the search operation. Pressing [TA] button again goes off "TA" in the display and stops TP station searching.

Auto store function for TP stations

You can automatically store up to 6 TP stations into preset memory. If the number of TP can be received less than 6, broadcast stations already stored in memory and left without being overwritten.

As "TA" lit in the display, press and hold the [▶||] button for 2 seconds or longer. The TP stations with the good reception sensitivity are stored into preset memory.

* Even if you select FM1 or FM2, a TP station is stored into memory for FM3.

RDS MODE adjustment

Press and hold the [ADJ] button for 1 second or longer to select the RDS MODE.

The mode switches as follows each time the [◀◀, ▶▶] lever are pressed upward or downward:

PTY ON ↔ **PTY-S<E>** ↔ **AF ON** ↔ **REG ON*** ↔ **INFO SEL (E)**

Press [ADJ] button to exit RDS MODE.

* "REG ON" only available when "AF ON".

PTY

This function enables you to listen to a broadcast of the selected programme type even if the unit is on a function mode other than radio.

- * Some countries do not yet have PTY broadcast.
- * In the TA standby mode, a TP station has priority over a PTY broadcast station.
- * The factory default setting is "OFF".

1. Press and hold the [ADJ] button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the [◀◀, ▶▶] lever upward or downward to select "PTY".
3. Turn the [ROTARY] knob to select "ON" or "OFF".

● ON:

"PTY" in the display lights and PTY standby mode is turned on. When the selected PTY broadcast starts, the PTY item name appears in the display.

● OFF:

"PTY" in the display goes off and PTY standby mode is cancelled.

4. Press the [ADJ] button to return to the previous mode.

● Cancelling a PTY interrupt broadcast

Press the [TA] button during the PTY interrupt broadcast, the PTY interrupt is cancelled and the unit returns to PTY standby mode.

Selecting PTY

1. Press and hold the [ADJ] button for 1 second or longer to switch to the RDS adjustment mode.
2. Press the [◀◀, ▶▶] lever upward or downward to select "PTY-SEL <E>".
3. Press the [▶||] button.
4. Press any one of the [DIRECT] buttons to call the Preset Memory for PTY selection..
Alternatively, turn the [ROTARY] knob to select the desired PTY.
5. Press the [ADJ] button to return to the previous mode.

* Below are the factory default settings stored for the [DIRECT] buttons.

| Preset number | PTY item | |
|---------------|-----------------|-------------------------|
| | ENGLISH | Contents |
| 1 | News | News |
| 2 | Info | Information |
| 3 | Pop M | Pop Music |
| 4 | Sport | Sport |
| 5 | Classics | Serious Classical Music |
| 6 | Easy M | Easy Listening Music |

* The PTY select mode is cancelled automatically 7 seconds after a PTY is selected.

PTY seek

1. Press and hold the **[ADJ]** button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the **[◀◀, ▶▶]** lever upward or downward to select "**PTY-SEL <E>**".
3. Press the **[▶||]** button.
4. Press the **[▶▶]** lever upward to search for a PTY broadcast in the direction of higher frequencies; press the **[◀◀]** lever downward to search in the direction of lower frequencies.
 - * If no station with the selected PTY broadcast can be received, the unit returns to the PTY select mode.

PTY preset memory

1. Press and hold the **[ADJ]** button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the **[◀◀, ▶▶]** lever upward or downward to select "**PTY-SEL <E>**".
3. Press the **[▶||]** button.
4. Turning the **[ROTARY]** knob to select the desired PTY.
The 29 types of PTY below can be selected.
5. If you press and hold any one of the **[DIRECT]** buttons for 2 seconds or longer, the selected PTY is stored into that preset channel memory.

| PTY item | |
|-----------------|----------------|
| ENGLISH | Contents |
| News | News |
| Affairs | Today's events |
| Info | Information |
| Sport | Sports |
| Educate | Education |
| Drama | Drama |
| Culture | Culture |
| Science | Science |
| Varied | Variety |
| Pop M | Pop music |
| Rock M | Rock music |
| Easy M | Easy music |
| Light M | Light music |
| Classics | Classics |
| Other M | Other music |
| Weather | Weather |
| Finance | Finance |
| Children | For children |
| Social | Social |
| Religion | Religion |
| Phone In | Phone in |
| Travel | Travel |
| Leisure | Leisure |
| Jazz | Jazz |
| Country | Country |
| Nation M | Nation music |
| Oldies | Oldies |
| Folk M | Folk music |
| Document | Documentaries |

Emergency broadcast

If an emergency broadcast is received, all the function mode operations are stopped.

"**ALARM**" appears in the display and the emergency broadcast can be heard.

● Cancelling an emergency broadcast

If you press the **[TA]** button, emergency broadcast reception is cancelled.

RDS Operations

Switching the PTY display language

You can select one of 4 languages (English, German, Swedish or French) for the PTY displayed in the display.

* The factory default setting is "ENGLISH".

1. Press the [ADJ] button to switch to the adjustment selection display.
2. Press the [◀▶] lever upward or downward to select "LANGUAGE".
3. Turn the [ROTARY] knob to select the desired language.
4. Press the [ADJ] button to return to the previous mode.

Volume setting of TA, emergency broadcast (ALARM) and PTY

The volume for TA, ALARM and PTY interrupts can be set during TA, ALARM or PTY interrupt.

* The factory default setting is "15".

During a TA, ALARM or PTY interrupt, turn the [ROTARY] knob to set the volume to the desired level (0 to 33).

* When the TA, ALARM or PTY interrupt ends, the volume returns to the level it had before the interrupt.

CD/MP3/WMA Mode Operations

What is MP3?

MP3 is an audio compression method and classified into audio layer 3 of MPEG standards. This audio compression method has penetrated into PC users and become a standard format. This MP3 features the original audio data compression to about 12 percent of its initial size with a high quality sound. This means that about 10 music CDs can be recorded on a CD-R disc or CD-RW disc to allow a long listening time without having to change CDs.

What is WMA?

WMA is the abbreviation of Windows Media Audio, an audio file format developed by Microsoft Corporation.

Notes:

- If you play a file with DRM (Digital Rights Management) for WMA remaining ON, no audio is output.
- Windows Media™, and the Windows® logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

● To disable DRM (Digital Rights Management):

1. When using Windows Media Player 8, click on TOOLS → OPTIONS → COPY MUSIC tab, then under COPY SETTINGS unclick the check box for PROTECT CONTENT. Then, reconstruct files.
2. When using Windows Media Player 9, click on TOOL → OPTIONS → MUSIC RECORD tab, then under Recording settings, unclick the Check box for RECORD PROTECTED MUSIC. Then, reconstruct files. Personally constructed WMA files are used at your own responsibility.

● Precautions when creating MP3/WMA disc

- Usable sampling rates and bit rates:
 1. MP3: Sampling rate 11.025 kHz-48 kHz, Bit rate: 8 kbps-320 kbps/VBR
 2. WMA: Bit rate 48 kbps-192 kbps

CD/MP3/WMA Mode Operations

● File extensions

- Always add a file extension “.MP3” or “.WMA” to MP3 or WMA file by using single byte letters. If you add a file extension other than specified or forget to add the file extension, the file cannot be played.

● Logical format (File system)

- When writing MP3/WMA file on a CD-R disc or CD-RW disc, please select “**ISO9660 level 1, 2 or JOLIET or Romeo**” as the writing software format. Normal play may not be possible if the disc is recorded on another format.
- The folder name and file name can be displayed as the title during MP3/WMA play but the title must be within 64 single byte alphabetical letters and numerals (including an extension).
- Do not affix a name to a file inside a folder having the same name.

● Folder structure

- A disc with a folder having more than 8 hierarchical levels will be impossible.

● Number of files or folders

- Up to 255 files can be recognized per folder. Up to 512 files can be played.
- Tracks are played in the order that they were recorded onto a disc. (Tracks might not always be played in the order displayed on the PC.)
- Some noise may occur depending on the type of encoder software used while recording.

CD-DA/MP3/WMA selection on multi-session CD

- If a multi-session CD which contains CD-DA and MP3/WMA files is being inserted, user can select either CD-DA or MP3/WMA files to be played.
- Default setting for files to be played on multisession CD is CD-DA files.
- Press the [BND] button for more than 1 second will toggle between selection of CD-DA and [MP3/WMA] files to be played.
- When CD-DA type is selected, display will show “**M-SESS CD**”. When MP3/WMA type is selected, display will show “**M-SESS MP3**”.

- CD-DA/MP3/WMA Selection function can only be performed in CD/MP3/WMA mode. It will only activate after re-insert CD. For example, current setting is CD-DA type. Press [BND] button for more than 1 second to set MP3/WMA type. User has to eject CD and re-insert again as to play MP3/WMA files.
- Types of recording that can be played are as follows.

| Disc \ Setting | Set to CD | Set to MP3/WMA |
|---------------------------------------|--------------|----------------|
| Mixed with CD and MP3/WMA type tracks | Play CD | Play MP3/WMA |
| CD type track only | Play CD | Play CD |
| MP3/WMA type track only | Play MP3/WMA | Play MP3/WMA |

- When a mixed mode CD is loaded and CD is set, the track to be played first is MP3/WMA file data and no sound is heard.

Note:

- When playing a CCCD (Copy Control CD), set the setting to CD type. When this is set to MP3/WMA type, the CD cannot be played normally in some cases.

CAUTION

- Do not try to put your hand or fingers in the disc insertion slot. Also never insert foreign objects into the slot.
- Do not insert discs where adhesive comes out from cellophane tape or a rental CD label, or discs with marks where cellophane tape or rental CD labels were removed. It may be impossible to extract these discs from the unit and they may cause the unit to break down.

Backup eject function

Just pressing the [▲] button ejects the disc even if the power to the unit was not turned on.

- Press the [OPEN] button to open the FLIP DOWN PANEL.

CD/MP3/WMA Mode Operations

Note:

- If the FLIP DOWN PANEL will not open far enough, open it gently with your hand.
2. Press the [▲] button. Remove the disc after it is ejected.
3. Close the FLIP DOWN PANEL.

Notes:

- Always close the FLIP DOWN PANEL once you take out the disc.
- If you force a CD into before auto reloading, this can damage the CD.
- If a CD (12 cm) is left in the ejected position for 15 seconds, the CD is automatically reloaded. (Auto reload).
- 8 cm CDs are not auto reloaded. Be sure to remove it when ejected.

Listening to a disc already loaded in the unit

Press the [SRC] button to select the CD/MP3/WMA mode.

When the unit enters the CD/MP3/WMA mode, play starts automatically.

If there is no disc loaded, the indication "NO DISC" appears in the title display.



* The mode changes each time the [SRC] button is pressed. (Modes are not displayed for equipment that is not connected.)

Radio → (DAB) → CD/MP3/WMA → (CD changer) → (DVD changer) → (TV) → Radio...

Loading a CD

1. Press the [OPEN] button to access the CD SLOT behind the FLIP DOWN PANEL.
2. Insert a CD into the center of the CD SLOT with the labeled side facing up. The CD plays automatically after loading.

Notes:

- Never insert foreign objects into the CD SLOT.
- If the CD is not inserted easily, there may be another CD in the mechanism or the unit may require service.
- Discs not bearing the  or  mark and CD-ROMs cannot be played by this unit.
- Some CDs recorded in CD-R/CD-RW mode may not be usable.

CAUTION

Be careful not to catch your hand or fingers while closing the FLIP DOWN PANEL.

Notes:

- If the FLIP DOWN PANEL does not open fully, gently open with your hand.
- After loading a CD, always close the FLIP DOWN PANEL.

Pausing play

1. Press the [⏸] button to pause play. "PAUSE" appears in the display.
2. To resume CD play, press the [▶] button again.

Displaying CD titles

This unit can display title data for CD-text/MP3/WMA disc and user titles input with this unit.

1. Press the [D] button to display the title.
2. Each time you press the [T] button, the title display changes in the following order:

● CD-TEXT data

User title (disc) → CD-text title (disc) → Artist name → CD-text title (track) → User title (disc)...

● MP3/WMA disc

Folder → Track → Album TAG → Artist TAG → Title TAG → Folder...

Notes:

- If the CD playing is not a CD-text data or no user title has been input, "NO TITLE" appears in the display.
- If MP3/WMA disc is not input TAG, "NO TAG" appears in the display.
- For MP3, supports ID3 Tags V2.3/2.2/1.1/1.0.
- Tag displays give priority to V2.3/2.2
- In the case of album Tags for WMA, the information written into the extension header is displayed.
- Only ASCII characters can be displayed in Tags.


Display selection

1. You can choose the display type for MP3/WMA CD by pressing the [D] button.

To select the next type, press the [D] button again.

CD/MP3/WMA Mode Operations


The arrangement is shown below.

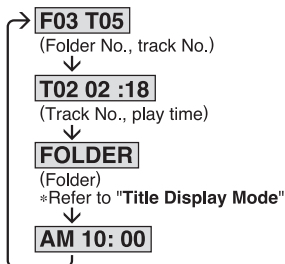

Title display mode

1. There are 5 types of display for the Title Display mode.
2. To select the next type, press the [T] button for less than 1 second.

The arrangement is shown below.

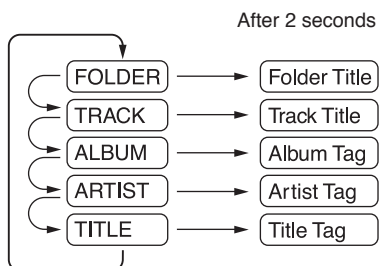

3. The displayed item can be scrolled by pressing the [T] button for more than 1 second.
4. If a MP3/WMA file does not support for ID3 TAG, the display will show "NO TAG"
5. If a MP3/WMA file encode with ID3 TAG header but no consist of any TAG information, the display will show nothing.

Notes:

- The folder name will be displayed as "ROOT" which the file allocates in the root folder.
- The MP3 player decodes each file ID3 TAG ver 2 by default, if ID3 TAG ver 2 is unavailable, ID3 TAG ver 1 will be decoded.
- UNICODE ID3 (Chinese, Japanese and etc) is not supported.

Selecting a track

● Track-up

1. Press the [▶▶] lever upward to move to the beginning of the next track.
2. Each time the [▶▶] lever is pressed upward, playback proceeds to another track in the advancing direction.

● Track-down

1. Press the [◀◀] lever downward to move the beginning of the current track.
2. Press the [◀◀] lever downward twice to move to the beginning of the previous track.

Fast-forward/fast-backward

● Fast-forward

Press the [▶▶] lever upward and hold in position for 1 second or longer.

● Fast-backward

Press the [◀◀] lever downward and hold in position for 1 second or longer.

* For MP3/WMA discs, it takes some time until the start of searching and between tracks. In addition, the playing time may have a margin of error.


MP3/WMA playing order

When selected for play folder up down functions, files and folders are accessed in the order in which they were written by the CD-ROM writer. Because of this, the order in which they are expected to be played may not match the order in which they are actually played. You may be able to set the order in which MP3/WMA are to be played by writing them onto a medium such as a CD-R with their file names beginning with play sequence numbers such as "01" to "99", depending on your CD writer.

For example, a medium with the following folder/ file hierarchy is shown below.

CD/MP3/WMA Mode Operations

Example of a medium's folder/file hierarchy

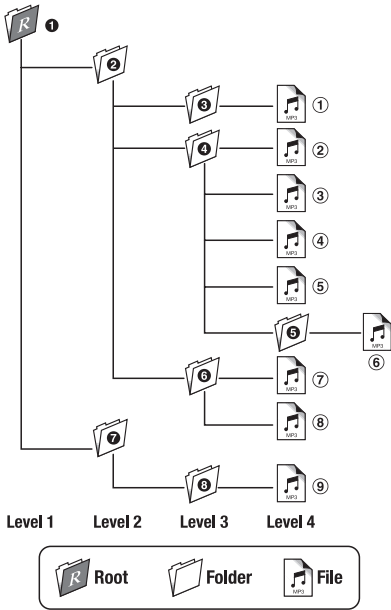


Folder select

This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.

1. Press the [DN] or the [UP] button.

Press the [DN] button to move the previous folder. Press the [UP] button to move the next folder.

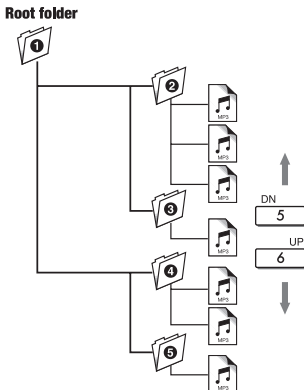

- * Press the [UP] button while in the final folder to shift to the first folder.
- * Folder without an MP3/WMA file is not selectable.

2. To select a track, press the [◀, ▶] lever upward or downward.

Top function

The top function resets the CD player to the first track of the disc. Press the [BND] button to play the first track (track No. 1) on the disc.

- * In case of MP3/WMA, the first track of a folder being played will be returned.

Other various play functions

● Scan play

This function allows you to locate and play the first 10 seconds of all the tracks recorded on a disc.

1. Press the [SCN] button to perform scan play. The indication "SCN" lights in the display.

- * Scan play starts from the next track after the track currently being played.

● Folder scan play

This function allows you to locate and play the first 10 seconds of the first track of all the folders on an MP3/WMA disc.

1. Press and hold the [SCN] button for 1 second or longer to perform folder scan play.

The indications "ALL..." and "SCN" light in the display.

- * Folder scan play starts from the next track after the track currently being played.

● Repeat play

This function allows you to play the current track repeatedly.

1. Press the [RPT] button to perform repeat play. The indication "RPT" lights in the display.

● Folder repeat play

This function allows you to play a track currently being played in the MP3/WMA folder repeatedly.

1. Press and hold the [RPT] button for 1 second or longer to perform folder repeat play.

The indications "ALL..." and "RPT" light in the display.

CD/MP3/WMA Mode Operations

● Random play

This function allows you to play all tracks recorded on a disc in a random order.

1. Press the [RDM] button to perform random play.

The indication "RDM" lights in the display.

● Folder random play

This function allows you to play all the tracks of all the folders recorded on an MP3/WMA disc in a random order.

1. Press and hold the [RDM] button for 1 second or longer to perform folder random play.

The indications "ALL..." and "RDM" light in the display.

● To cancel play

1. Press the operating button previously selected.

Operations Common to Each Mode

To change display setting

1. Press and hold the [D] button for 1 second or longer to switch to the adjustment selection display.

2. Press the [◀◀, ▶▶] lever upward or downward to select the "item name".

"SCREEN SVR" ↔ "MSG INP(E)" ↔
"AUTO SCROL" ↔ "DIMMER"

3. Turn the [ROTARY] knob to select the "desired setting value".

* In the case of item names appearing with the "E" suffix, after the item name, the [▶▶] button must be pressed to display the setting value.

* After completing settings, press the [D] button to return to the previous mode.

● Turning the screen saver function on or off

This unit is provided with the screen saver function which allows you to show various kinds of patterns and characters in the operation status indication area of the display in a random order. You can turn on and off this function.

If the button operation is performed with the screen saver function on, the operation display corresponding to the button operation is shown for about 30 seconds and the display returns to the screen saver display.

* The factory default setting is "ON".

- 2-1. Select "SCREEN SVR".

- 3-1. Turn the [ROTARY] knob to select the setting.

Each time you turn the [ROTARY] knob, the setting changes in the following order:

SS OFF → SS ON → SS MESSAGE.

● Entering MESSAGE INFORMATION

Message up to 30 characters long can be stored in memory and displayed as a type of screen saver setting.

* The factory default setting is "WELCOME TO CLARION".

Operations Common to Each Mode

- 2-1. Select "MSG INP <E>".
- 3-1. Press the [**▶||**] button.
- 3-2. Press and hold [**BND**] button for 1 second or longer to clear the old message.
- 3-3. Press the [**◀◀, ▶▶**] lever upward or downward to move the cursor.
- 3-4. Press the [**BND**] button to select a character. Each time you press the [**BND**] button, the character changes in the following orders:
Capital letters → Numbers → Symbols → Capital letters...
- 3-5. Turn the [**ROTARY**] knob to select the desired character.
- 3-6. Repeat step 3-3 to 3-5 to enter up to 30 characters for message.
- 3-7. Press and hold the [**▶||**] button for 2 seconds or longer to store the message in memory and cancel input message mode.
 - * Press and hold the [**BND**] button for 1 second or longer to cancel the input message. Then press and hold the [**▶||**] button for 2 seconds or longer to store the message and the message return to default setting.

● Setting the method for title scroll

Set how to scroll in CD-TEXT, MP3/WMA title.

- * The factory default setting is "ON".

2-1. Select "AUTO SCROL".

- 3-1. Turn the [**ROTARY**] knob to select "ON" or "OFF".

● ON:

To scroll automatically.

● OFF:

To scroll just 1 time when the title was changed or the [**T**] button was pressed for 1 second or longer.

● Dimmer control

You can setting the dimmer control "ON" or "OFF".

- * The factory default setting is "ON".

2-1. Select "DIMMER".

- 3-1. Turn the [**ROTARY**] knob to select "ON" or "OFF".

To change other settings

1. Press the [**ADJ**] button to switch to the adjustment selection display.

2. Press the [**◀◀, ▶▶**] lever upward or downward to select the "item name".

Each time the [**◀◀, ▶▶**] lever is pressed up/down, the item display changes in the following order:

"BLINK LED" ↔ "AMP CANCEL" ↔
("LINK ACT") ↔ "LANGUAGE" ↔ "TEL-SP" ↔ "TEL-SWITCH" ↔ "SYS CHK(E)"

3. Turn the [**ROTARY**] knob to select the "desired setting item".

- * After completing settings, press the [**ADJ**] button to return to the previous mode.

● Anti-theft indicator

The red Anti-theft indicator is a function for preventing theft. When the DCP is removed from the unit, this indicator blinks.

- * The factory default setting is "OFF".

2-1. Select "BLINK LED".

- 3-1. Turn the [**ROTARY**] knob to select "ON" or "OFF".

● Setting the external amplifier

- * The factory default setting is "OFF".

2-1. Select "AMP CANCEL".

- 3-1. Turn the [**ROTARY**] knob to select "ON" or "OFF".

● ON:

Use with connected AMP.

● OFF:

Use with inside AMP.

● Setting the car speaker output for the cellular phone (Optional BLT-433)

- * The factory default setting is "RIGHT".

- * To output the telephone calls, set the cellular phone interrupt to ON.

2-1. Select "TEL-SP".

- 3-1. Turn the [**ROTARY**] knob to select "RIGHT" or "LEFT".

● RIGHT:

Telephone calls can be heard on the front right speaker connected to this unit.

● LEFT:

Telephone calls can be heard on the front left speaker connected to this unit.

Operations Common to Each Mode

● Cellular phone interrupt setting

If you connect this unit and your cellular phone with a separately sold unit (BLT-433), you can listen to your telephone calls on your car speakers.

* The factory default setting is "OFF".

2-1. Select "TEL-SWITCH".

3-1. Turn the [ROTARY] knob to select the setting. Each time you turn the [ROTARY] knob, the setting changes in the following order:

OFF → ON → MUTE → OFF...

● OFF:

This unit continues normal operation even when the cellular phone is used.

Note:

● If connecting a hands-free kit, please ensure the setting is ON to receive the telephone audio through the system.

● ON:

You can listen to your telephone calls from the speakers connected to this unit.

* When listening to your calls on your car speakers, you can adjust the volume by turning the [ROTARY] knob.

● MUTE:

The sound from this unit is muted during telephone calls.

● Triggered audio mute for cellular telephones

This unit requires special wiring to mute the audio signal automatically when a cellular telephone rings in the car.

* This function is not compatible with all cellular telephones. Contact your local authorized Clarion dealer for information on proper installation and compatibility.

* The factory default setting is "OFF".

● Performing a system check

This function allows you to perform a system check from the adjust mode when required.

2-1. Select "SYS CHK <E>".

3-1. Press and hold the [P||] button for 1 second or longer.

"SYSTEM CHK" appears in the display, then the unit returns to the previous operation mode.

Entering titles

Titles up to 10 characters long can be stored in memory and displayed for CD, CD changer and TV stations. The number of titles that can be entered for each mode are as follows.

| Mode | Number of titles |
|---------|------------------|
| CD mode | 50 titles |
| TV mode | 20 titles |

| CD changer mode | Number of titles |
|--------------------|------------------|
| DCZ628 connected | 100 titles |
| CDC655Tz connected | 100 titles |

1. Press the [SRC] button to select the mode you want to enter a title (CD, CD changer or TV).
2. Select and play a CD in the CD changer or tune in to a TV station for which you want to enter the title.
3. Press the [D] button and display the title display.
4. Press and hold the [T] button for 1 second or longer.
The display switches to the title input display.
5. Press the [◀▶] lever upward or downward to move the cursor.
6. Press the [BND] button to select a character.
Each time you press the [BND] button, the character changes in the following order:
Capital letters → Numbers → Symbols → Umlaut → Capital letters...
7. Turn the [ROTARY] knob to select the desired character.
8. Repeat steps 5 to 7 to enter up to 10 characters for the title.
9. Press and hold the [P||] button for 2 seconds or longer to store the title into memory and cancel title input mode.

Operations Common to Each Mode

Clearing titles

1. Select and play a CD in the CD changer or tune in to a TV station for which you want to clear the title.
2. Press the **[D]** button and display the title display.
3. Press and hold the **[T]** button for 1 second or longer.
The display switches to the title input display.
4. Press and hold the **[BND]** button for 1 second or longer.
All characters in the title disappear.
5. Press and hold the **[▶||]** button for 2 seconds or longer to clear the title and cancel title input mode.

7. OPERATIONS OF ACCESSORIES

CD Changer Operations

Note:

- The following operations are the same as for CD mode:
 - * **Pause**
 - * **Track selection**
 - * **Fast-forward/fast-backward**
 - * **Scan play**
 - * **Repeat play**
 - * **Random play**
- See “**CD/MP3/WMA Mode Operations**” (page 20-25) for details.

CD changer functions

When an optional CD changer is connected through the CeNET cable, this unit controls all CD changer functions. This unit can control a total of 2 changers.

Press the [SRC] button and select the CD changer mode to start play. If 2 CD changers are connected, press the [SRC] button to select the CD changer for play.

- * If “**NO MAG**” appears in the display, insert the magazine into the CD changer. “**DISC CHECK**” appears in the display while the player loads (checks) the magazine.
- * If “**NO DISC**” appears in the display, eject the magazine and insert discs into each slot. Then, reinsert the magazine back into the CD changer.

Note:

- Some CDs recorded in CD-R/CD-RW mode may not be usable.

CAUTION

CD-ROM discs cannot be played from every CD changer, it's depended on the model.

Displaying CD titles

This unit can display title data for CD-text CDs and user titles input with this unit.

- * Title data for CD-text CDs can be displayed with this unit only when it is connected to CDC655Tz.

1. Press the [D] button to display the title.
2. Each time you press the [T] button, the title display changes in the following order:

User title (disc) → CD-text title (disc) →
Artist name → CD-text title (track) → User
title (disc)...

Notes:

- If the CD playing is not a CD-text CD or no user title has been input, “**NO TITLE**” appears in the display.
- If a CD-text CD is not input its disc title or a track title, “**NO TITLE**” appears in the display.

Procedure to scroll a title

Set “**SCROLL**” to “**ON**” or “**OFF**”.

(The factory default setting is “**ON**”. Refer to the subsection “**Turning the screen saver function on or off**” in section “**Operation common to each mode**”.)

• When set to “**ON**”

The title is automatically kept scrolling.

• When set to “**OFF**”

To scroll just 1 time when the title was changed or the [T] button was pressed for 1 second or longer.

Selecting a CD

Press the [UP] or [DN] button to select the desired disc.

- * If a CD is not loaded in a slot of magazine, pressing the [UP] or [DN] button can not work.

CD Changer Operations

Other various play functions

● Disc scan play

Disc scan play locates and plays the first 10 seconds of the first track on each disc in the currently selected CD changer. This function continues automatically until it is cancelled.

* Disc scan play is useful when you want to select a desired CD.

1. Press and hold the **[SCN]** button for 1 second or longer. “**ALL...**” and “**SCN**” light in the display and disc scan play starts.

● Disc repeat play

After all the tracks on the current disc have been played, disc repeat play automatically replays the current disc over from the first track.

This function continues automatically until it is cancelled.

1. Press and hold the **[RPT]** button for 1 second or longer. “**ALL...**” and “**RPT**” light in the display and disc repeat play starts.

● Disc random play

The disc random play selects and plays individual tracks or discs automatically in no particular order.

This function continues automatically until it is cancelled.

1. Press and hold the **[RDM]** button for 1 second or longer. “**ALL...**” and “**RDM**” light in the display and disc random play starts.

● To cancel play

1. Press the operating button previously selected.

TV Operations

Note:

- The following operations are performed the same as for radio mode:

- * **Channel selection**
- * **Storing channels in memory**
- * **Calling channels from memory**
- * **Auto store**
- * **Preset scan**

See “**Radio Mode Operations**” (page 15-16) for details.

TV tuner functions

When an optional TV tuner is connected through the CeNET cable, this unit controls all TV tuner functions. To watch TV requires a TV tuner and monitor.

Watching a TV

1. Press the **[SRC]** button and select the TV mode.
2. Press the **[BND]** button to select the desired TV band (TV1 or TV2). Each time the button is pressed, the input selection toggles between TV1 and TV2.
3. Press the [**◀▶**] lever upward or downward to tune in the desired TV station.

Watching a video

The TV tuner has a VTR input terminal to which 1 external device can be connected. Connect a 12 V video cassette player (VCP) or videocassette recorder (VCR) to the TV tuner input terminal.

1. Press and hold the **[ADJ]** button for 1 second or longer to select VTR.
2. To return to the TV broadcast, press and hold the **[ADJ]** button for 1 second or longer.

Setting the TV area

When you select the TV area (TV reception area), the TV tuner area setting changes.

1. Press the **[ADJ]** button to switch to the adjustment selection display.
2. Press the [**◀▶**] lever upward or downward to select “**TV AREA <E>**”.
3. Press the [**▶**] button.
4. Turn the **[ROTARY]** knob to select the reception area.

TV Operations

5. Press the [▶||] button.
6. Press the [ADJ] button to return to the previous mode.

Setting the TV diver

You can change the reception setting for the TV antenna connected to the TV tuner.

1. Press the [ADJ] button to switch to the adjustment selection display.
2. Press the [◀◀, ▶▶] lever upward or downward to select "TV DIVER".
3. Turn the [ROTARY] knob clockwise to set to "ON" or counterclockwise to set to "OFF".

- **ON:**

Sets the diver setting to ON.

- **OFF:**

Sets the diver setting to OFF.

4. Press the [ADJ] button to return to the previous mode.

Digital Radio/DAB Operations

DAB control function

When a CeNET cable is used to connect a DAB (DAH913 or DAH923) (sold separately), all functions can be operated.

Listening to the DAB station

1. Press the [SRC] button to select the DAB mode.
2. When the unit receives a DAB station, the display changes in the following order:
Frequency channel → Service label

Switching displays

1. Press the [D] button to select the desired display.
2. Each time you press the [D] button, the display switches in the following order:
S-LABL → PTY → CLOCK → S-LABL ...

Notes:

- The display shown in the normal reception mode and the preset reception mode is the same when a DAB station is received.
- The number of programmes and broadcasting times depend on the DAB stations.
- When the strength of DAB signals is weak, audio output is muted.

Seek tuning

1. Press the [SRC] button to select the DAB mode.
2. Press the [◀◀, ▶▶] lever upward or downward and hold in position for 1 second or longer.
 - * The main unit stops the seek tuning when it cannot find a DAB station. The display returns to the previous mode.

Manual tuning

1. Press the [SRC] button to select the DAB mode.
2. Press and hold the [BND] button for 1 second or longer. "MANU" lights up in the display.
3. Press the [◀◀, ▶▶] lever upward or downward to select a station.

Digital Radio/DAB Operations

- * If no operation is performed for more than 7 seconds, manual tuning is cancelled and the display returns to the previous mode.

Switching programmes

1. Press the **[SRC]** button to receive a DAB station.
2. Press the **[◀▶]** lever upward or downward to switch programmes in the DAB station.

Note:

- The programme name may be the same depending on DAB programmes.

Programme scan

This function scans through each receivable programme in a DAB station being received for 10 seconds sequentially. This is useful when you want to search for a desired programme.

1. Press the **[SRC]** button to receive a DAB station.
2. Perform the following operation depending on the connected model.

Press the **[▶||]** button. "SCN" lights up and the unit starts scanning each programme for 10 seconds sequentially.

Each time the main unit scans, the programme name is shown in the display.

3. To stop programme scan when a desired programme is tuned in.

Press the **[▶||]** button.

Manual memory

The main unit has a manual memory function for DAB programmes. Up to 18 programmes (6 programmes each) can be preset in the preset buttons.

[M1], **[M2]** and **[M3]**

1. Press the **[SRC]** button to select the DAB mode.
2. Press and hold the **[BND]** button for 1 second or longer to select any one shown above.
3. Press the **[◀▶]** lever upward or downward to select a desired programme.
4. Press and hold one of the **[DIRECT]** buttons (1 to 6) for 2 seconds or longer to store the programme.

Note:

- The interrupt programme (PTY or INFO) cannot be written into a manual memory.

Recalling a preset programme

1. Press the **[SRC]** button to select the DAB mode.
2. Press the **[BND]** button. Each time you press the **[BND]** button, the display changes in the following order:

[M1] → [M2] → [M3] → [M1]...

3. Press one of the **[DIRECT]** buttons to recall a preset programme.

Note:

- Press and hold the **[DIRECT]** button for 2 seconds or longer to store the programme currently being received. (Manual memory)

INFO (Announcement)

In the INFO standby mode, when the selected announcement programme starts, the main unit switches to the selected announcement programme automatically.

● Setting the INFO standby mode

If you press and hold the **[TA]** button for 1 second or longer, the main unit is set into the INFO standby mode until the selected announcement is broadcast. When the selected announcement broadcast starts, the announcement item appears in the display. If you press and hold the **[TA]** button for 1 second or longer while the selected announcement broadcast is being received, the selected announcement broadcast reception is cancelled and the main unit goes into the INFO standby mode.

● Cancelling INFO standby mode

To cancel the INFO standby mode, press and hold the **[TA]** button for 1 second or longer.

● Information select

This is a function for selecting INFORMATION ON or OFF in the Information interrupt mode.

You can set ON up to 6 information items.

Digital Radio/DAB Operations

You can select any of the 6 items below:

| INFORMATION item | |
|------------------|--------------------|
| ENGLISH | Contents |
| Travel | Transport flash |
| Warning | Warning / Service |
| News | News flash |
| Weather | Area weather flash |
| Event | Event announcement |
| Special | Special event |

1. Perform the following operation depending on the connected model.
Press and hold the **[ADJ]** button for 1 second or longer to switch to the RDS adjustment selection display.
2. Press the **[|◀◀, ▶▶|]** lever upward or downward to select “**INFO-S <E>**”, then press the **[▶||]** button to enter “**INFO-S <E>**” mode.
3. Press the **[|◀◀, ▶▶|]** lever upward or downward to select an information item. You can select any of 6 items:
Travel → Warning → News → Weather →
Event → Special → Travel → ...
4. Turn the **[ROTARY]** knob to set the information item for ON or OFF.
5. Press the **[▶||]** button to store the setting.
6. Press the **[ADJ]** button to return to the previous display.

For the following items, see “**RDS Operations**” (page 16)

- **AF function**

* If the reception of the current broadcast station deteriorates, “**SEARCHING**” appears in the display and the radio searches for the same programme on another frequency.

- **TA (Traffic Announcement)**

- **PTY**

- **Emergency broadcast**

- **Switching the PTY and INFO display language**

- **Volume setting of TA, INFO emergency broadcast (ALARM) and PTY**

8. TROUBLESHOOTING

| | Problem | Cause | Measure |
|---------|--|---|--|
| General | Power does not turn on. (No sound is produced) | Fuse is blown. | Replace with a fuse of the same amperage. If the fuse blows again, consult your store of purchase. |
| | | Incorrect wiring. | Consult your store of purchase. |
| | No sound output when operating the unit with amplifiers or power antenna attached. | Power antenna lead is shorted to ground or excessive current is required for remote-on the amplifiers or power antenna. | <ol style="list-style-type: none"> 1. Turn the unit off. 2. Remove all wires attached to the power antenna lead. Check each wire for a possible short to ground using an ohm meter. 3. Turn the unit back on. 4. Reconnect each amplifier remote wire to the power antenna lead one by one. If the amplifiers turn off before all wires are attached, use an external relay to provide remote-on voltage (excessive current required). |
| | Nothing happens when button are pressed. Display is not accurate. | The microprocessor has malfunctioned due to noise, etc. | Turn off the power, then press the [OPEN] button and remove the DCP. Press the reset button for about 2 seconds with a thin rod. |
| | | DCP or main unit connectors are dirty. | Wipe the dirt off with a soft cloth moistened with cleaning alcohol. |
| | No sound heard. | The speaker protection circuit is operating. | <ol style="list-style-type: none"> 1. Turn down sound volume. Function can also be restored by turning the power off and on again. (Speaker volume is reduced automatically when the speaker protection circuit operates). 2. If the sound is muted again, consult our service department. |

| | Problem | Cause | Measure |
|----------------|---|---|--|
| CD/MP3/WMA | No sound heard. | MP3/WMA files are absent in a disc. | Write MP3/WMA files onto the disc properly. |
| | | Files are not recognized as an MP3/WMA file. | Use MP3/WMA files encoded properly. |
| | | File system is not correct. | Use ISO9660 level 1, 2 or JOLIET or Romeo file system. |
| | Sound skips or is noisy. | Disc is dirty. | Clean the disc with a soft cloth. |
| | | Disc is heavily scratched or warped. | Replace with a disc with no scratches. |
| | Sound is cut or skipped. Noise is generated or noise is mixed with sound. | MP3/WMA files are not encoded properly. | Use MP3/WMA files encoded properly. |
| | Sound is bad directly after power is turned on. | Water droplets may form on the internal lens when the car is parked in a humid place. | Let dry for about 1 hour with the power on. |
| Wrong filename | File system is not correct. | Use ISO9660 level 1, 2 or JOLIET or Romeo file system. | |

9. ERROR DISPLAYS

| | Error Display | Cause | Measure |
|------------|---------------|--|--|
| CD/MP3/WMA | ERROR 2 | A DISC is caught inside the CD deck and is not ejected. | This is a failure of CD deck's mechanism and consult your store of purchase. |
| | ERROR 3 | A DISC cannot be played due to scratches, etc. | Replace with a non-scratched, non-warped-disc. |
| | ERROR 6 | A DISC is loaded upside-down inside the CD deck and does not play. | Eject the disc then reload it properly. |

| | Error Display | Cause | Measure |
|------------|---------------|---|---|
| CD Changer | ERROR 2 | A CD inside the CD changer is not loaded. | This is a failure of CD changer's mechanism and consult your store of purchase. |
| | ERROR 3 | A CD inside the CD changer cannot be played due to scratches, etc. | Replace with a non-scratched, non-warped disc. |
| | ERROR 6 | A CD inside the CD changer cannot be played because it is loaded upside-down. | Eject the disc then reload it properly. |

| | Error Display | Cause | Measure |
|-------------|---------------|--|--|
| DVD Changer | ERROR 2 | A DISC inside the DVD changer cannot be played. | This is a failure of DVD mechanism and consult your store of purchase. |
| | ERROR 3 | A DISC cannot be played due to scratches, etc. | Retry or replace with a non-scratched, non-warped-disc. |
| | ERROR 6 | A DISC inside the DVD changer cannot be played because it is loaded upside-down. | Eject the disc then reload it properly. |
| | ERROR P | Parental level error. | Set the correct Parental level. |
| | ERROR R | Region code error. | Eject the disc and replace correct region code disc. |

10. SPECIFICATIONS

FM tuner

Frequency Range: 87.5 MHz to 108 MHz
 Usable Sensitivity: 11 dBf
 50 dB Quieting Sensitivity: 17 dBf
 Alternate Channel Selectivity: 75 dB
 Stereo Separation (1 kHz): 35 dB
 Frequency Response (± 3 dB): 30 Hz to 15 kHz

AM tuner

Frequency Range:
 MW 531 kHz to 1602 kHz
 LW 153 kHz to 279 kHz
 Usable Sensitivity: 25 μ V

CD player

System: Compact disc audio system
 Usable Discs: Compact disc
 Frequency Response: 10 Hz to 20 kHz (± 1 dB)
 Signal-to-Noise Ratio: 85 dB (1 kHz) IHF-A
 Dynamic Range: 80 dB (1 kHz)
 Harmonic Distortion: 0.01%

MP3


Decode Format: MPEG 1,2 and 2.5 -Layer 3
 Sampling rate (kHz): MPEG-1: 32,44.1,48
 MPEG-2: 16,22.05,24
 MPEG-2.5: 8,11.025,12
 Bit-rate (kbps): 8, 16, 24, 32, 40, 48, 56, 64,
 80, 96, 112, 128, 144, 160, 192,
 224, 256, 320, VBR
 CD-ROM Format: ISO9660 Level 1, 2, Romeo
 and Joliet
 Folder Level Limit: 8 Level
 Folder Support: 255
 File Support: 512
 Folder Name: Maximum 64 bytes
 File Name: Maximum 64 bytes

Audio

Maximum Power Output: 200 W (50 W X 4 ch)
 Power Output: 4 X 25 W (DIN 45324, +B=14.4 V)
 Bass Control Action (100 Hz): ± 14 dB
 Treble Control Action (10 kHz): ± 14 dB
 Line Output (with A/C 1 kHz, 10 k Ω): 1.8 V

General

Power Supply Voltage:
 14.4 V DC (10.8 V to 15.6 V allowable), negative ground
 Current Consumption: Less than 15 A
 Speaker Impedance: 4 Ω (4 Ω to 8 Ω allowable)
 Weight: 2.42 lb. (1.1 kg)
 Dimensions:
 178 mm Width X 50 mm Height X 152 mm Depth

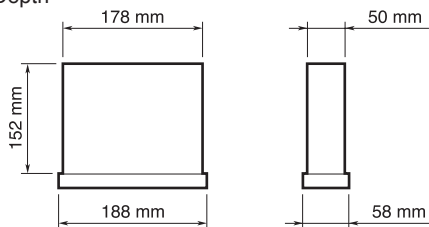

Notes:

- Specifications comply with JEITA Standards.
- Specifications and design are subject to change without notice for further improvement.
- Please make sure when connecting external power amplifier, that you properly, to the car chassis, ground the amplifier.
- If this is not done, severe damage to the source unit may happen.

Clarion®

// High-Tech High-Touch //

» DICHIARAZIONE DI CONFORMITA' «

(D.M. 28 agosto 1995, no548)

Io, Fabbricante / Mandatario nell'UE

**Clarion Europa GmbH
Hessenring 19-21
64546 Mörfelden-Walldorf**

Dichiaro che il prodotto

**Autoradio con CD
DXZ368RMP**


è conforme alle disposizioni contenute nel suddetto decreto relativamente alla prevenzione e l'eliminazione dei disturbi radioelettrici provocati dai ricevitori di radiodiffusione sonora e televisiva.

Io, Fabbricante / Mandatario nell'UE

Data 30 Ottobre 2005

**Clarion Europa GmbH
Hessenring 19-21
64546 Mörfelden-Walldorf**

Firma

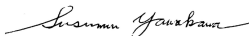

PBL No 05IRC006M

IDCFMFFA003

CE DECLARATION OF CONFORMITY

We **Clarion Europa GmbH**

(supplier's name)

Hessenring 19-21, 64546 Mörfelden-Walldorf, GERMANY

(address)

declare under our sole responsibility that the product

CAR RADIO with CD PLAYER

MODEL:DXZ368RMP

Product code: PE2803

TYPE: 1042760

(name, type or model, possibly sources and numbers of items)

to which this declaration relates is in conformity with the following
standard(s) or other normative document(s)

EN 55013:2001 + A1, EN 55020:2002 + A2

(title and/or number and date of issue of the standard(s) or
other normative document(s))

(if applicable) following the provisions of **89/336/EEC** Directive.

And following the provisions of **2004/104/EC** Directive,
according to paragraph 3.2.9 of Annex I,
meets the limits defined in paragraph 6.5, 6.6, 6.8 and 6.9 of Annex I

(supplier's comment)



Mörfelden-Walldorf GERMANY

Susumu Yamakawa

01 JAN 2006

President

(Place and date of issue)

(name and signature or equivalent
marking of authorized person)

RefNo 05RCNV006

D.F.DQC05A152

Clarion Co., Ltd.

All Rights Reserved. Copyright © 2006: Clarion Co., Ltd.
Printed in Malaysia / Imprimé en Malaisie / Gedruckt in Malaysia / Stampato in Malaysia
Gedruckt in Maleisi / Impreso en Malasia / Tryckt i Malaysia / Impresso na Malásia

PE-2803E
280-8346-00

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>