




© 2007 Clarity, a division of Plantronics, Inc. All rights reserved. Amplifying your life, Clarity, the amplification device, Clarity and the amplification device combined, Clarity, D603, Digital Clarity Power and DCP are trademarks or registered trademarks of Plantronics, Inc. Rev. C (5-09)



CONTENTS & PARTS CHECKLIST

Your package includes all the items as shown here. If there is anything missing, please contact our Customer Care Department immediately.
NOTE: PLEASE RETAIN A COPY OF PROOF OF PURCHASE FOR YOUR RECORDS.

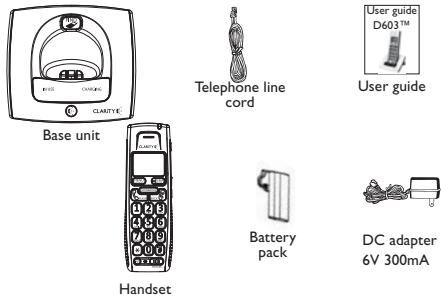

INSTALLING YOUR D603

1. Connect one end of the telephone cord into the (square) LINE port on the bottom of the base; connect the other end of the phone cord into our wall telephone outlet. See Figure 1.
2. Connect the DC adapter cord into the DC 6V 300mA port on the bottom of the base; plug the adapter into your wall outlet. See Figure 1.
3. Slide open the battery compartment door and connect the rechargeable battery into the battery compartment. See Figure 2.
4. Put the handset on the base to charge for at least 24 hours before first use. Subsequent charging time should be 6-8 hours a day.

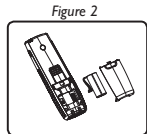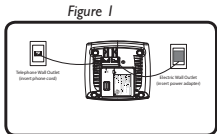


Battery Performance

The battery icon will blink on the menu screen when the battery is low. A fully charged battery will provide an estimated 10 hours of talk time and 100 hours of standby time.

To keep your battery pack in the best condition, leave the handset off the base for a few hours at a time. Running the battery pack down at least once will help it last as long as possible. The charge capacity of rechargeable battery pack will reduce with time as it wears out, giving the handset less talk/standby time. Eventually it will need to be replaced.

Note: Battery pack and handset may become warm during charging. This is normal.


FEATURE LIST AND OVERVIEW

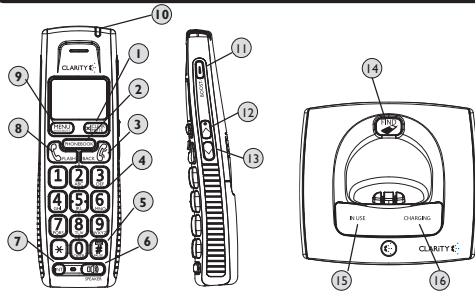

1. **X/CLEAR/MUTE** button (Mute/Clear/Delete): (Pre-dial/Editing mode): Press once to delete a character or digit. Press and hold to delete all characters/digits. (During a call): Press this button to mute a call; press again to unmute call. (Calls List/Phonebook entry): Press this button to delete the entry.
2. **PHONEBOOK** button: Press this button to access the phonebook. (Editing Mode): Press to move the cursor to the left. **Note:** The phonebook will hold up to 30 name and numbers.
3. **(End)/BACK** button: Press to end a call. (Menu Mode): Press to move back a menu level.
4. **Dial pad/Alphanumeric keypad:** Enter the desired number you wish to call or characters when typing a name into the phonebook entry. (* button (Tone): During a call, press this button to switch from pulse to tone dialing (temporarily). After the call has ended, the dial mode will resume to pulse.) **Note:** you can predial (dial before pressing Talk) or press Talk and dial after hearing the dial tone.
5. **#/Pause/ABC/FORMAT** button: (Idle/Pre-dial/During a call mode): Press to insert a # symbol. (In number editing mode): Press once to insert the # symbol; press and hold # key to insert a pause. (In name editing mode): Toggle between ABC/Abc/abc (In calls list entry): Press to toggle the Caller ID display format among 7, 8, 10 and 11 digits.
6. **SPEAKER** button: Press the SPEAKER button to engage the speakerphone function; press again to turn the feature off.
7. **INT (Intercom):** This feature is only available when there are at least 2 registered handsets. It allows you to make internal calls, transfer external calls from one handset to another and use the conference option.
8. **(Talk)/FLASH** button: Press to make a call, answer an incoming call or to engage the Call Waiting/Caller ID function (feature provided by local telephone company).

SCREEN ICONS

 Menu Screen on Handset



- Speakerphone is ON
- New calls are received; turns off after new calls are reviewed.
- Ringer volume is turned off.
- New voice mail, not yet listened to. (from your local telephone company)
- Level of charge in your battery; flashes when it needs recharging.

FEATURE LIST AND OVERVIEW

9. **MENU/HOLD/SELECT** button: Press to access the menu list and to confirm/save settings in the menu. (During a call): Press to place the call on hold.
10. **Handset Top Light:** The light will flash during an incoming call; the light will remain on when you are on a call and BOOST is on.
11. **BOOST On/Off:** Press BOOST to engage the extra amplification (screen briefly displays BOOST ON). In BOOST OFF mode, the phone has a volume range of up to 16dB of amplification. In BOOST ON mode, the phone has a volume range of up to 30 dB of amplification.
12. **UP: Scroll up/Volume up/Call list:** (Idle mode): Press to access calls list. (Menu Mode): Press to scroll up. (Editing Mode): Press to move cursor to the left. (During a call): Press to increase volume.
13. **DOWN: Scroll down/Volume down/Redial list:** (Idle Mode): Press to access the redial list. (up to 32 digits, up to 5 calls) (Menu Mode): Press to scroll down. (Editing Mode): Press to move cursor to the right. (During a call): Press to decrease volume. (Call List/Phonebook/Redial list entry): Press to scroll down the list.
14. **FIND:** Press to find /page all registered handsets.
15. **IN USE light:** Turns on green when the phone is on a call.
16. **CHARGING light:** Turns on red when the handset is charging in the cradle.

ADDITIONAL HANDSETS

Registering Additional Handsets

The original handset is pre-registered for use. Up to 5 handsets can be registered to one base station. Additional handsets must be registered to the base before you can use them.

1. Place the unregistered handset on the charger.
2. Press and hold the FIND button for 4 seconds on the base.
3. Release the FIND button once the IN USE light starts to flash.
4. A confirmation tone will sound when registration is successful. Handset X is displayed where X denotes the number of handsets. The phone will then go back to idle.

De-register All Handsets

1. Unplug the power from the base.
2. Press and hold the FIND button on the base for 10 seconds.
3. Plug back in the power of the base.
4. Release once the IN USE light starts to flash rapidly.
5. Within 2 seconds, press and release the FIND button on the base again. This will de-register all handsets. The IN USE light on the base will be OFF and NOT REGISTERED will display on each handset menu screen.

RESET SETTINGS

Reset All Settings

This will reset all the personalized settings to the default settings. **Note:** All entries in the Phonebook, Redial List and Call List will be cleared.

1. Press the MENU button and use the UP/DOWN buttons to select Reset Settings.
2. Next, press the MENU button and use the UP/DOWN buttons to select All Settings.
3. Press the MENU button to select Yes.

MENU OPTIONS

There are five main menu options on the D603: Date & Time, Phonebook, Setup HS, Setup BS and Reset Settings.

To navigate through the menu:

1. Press the MENU button;
2. Press the UP/DOWN arrow buttons to scroll through the menu;
3. Press the MENU button to open a sub menu or to select an option. Press the (Talk Off)/BACK button to go back to the previous menu level or to cancel an action.

Note: If you do not press any button on the handset for 30 seconds the display will automatically return to standby.

Main Menu	Date & Time	Phonebook	Setup HS	Setup BS	Reset Setting
Sub Menu	Year	View	Ringer Tone	Ringer Tone	CLR Voice Mail
	Date	Add	Ringer Volume	Ringer Volume	All Settings
	Time	Edit	Key Tone	Dial Mode	
	Delete	Delete All	Low Batt Tone	Area Code	
	Delete All	PB Capacity	Out Range Tone		
	Speed Dial	Speed Dial	Handset Name	Language	
		LCD Contrast			

CALL LIST (CID)

This is a service provided through your local telephone company. The D603 will automatically display the incoming callers name and number along with the date and time for the call. It will record up to 30 calls.

Note: The time and date will automatically register after receiving your first call.

Call List (CID)
 The call list contains the missed and received calls. Entries are displayed in chronological order with the most recent call at the top of the list. When there is a missed call that has not been answered, NEW will be displayed on the menu screen.

Note: When the call list is full, a new call replaces the oldest in the list. If you receive more than one call from the same number, only the most recent call is kept in the call list.

View Call List
 To View the Call List information press the UP button while your phone is in idle mode, the most recent number will be displayed. Press the UP/DOWN buttons to scroll through the call list.

Formatting Call List Information
 When reviewing an entry from the call list, press the # button repeatedly to display the number in different formats. For example, if the call number is displayed as 800-426-3738, the various formats will be: 426-3738, 1-426-3738, 800-426-3738 and 1-800-426-3738.

Save Number from Call List to Phonebook

1. Use the UP/DOWN buttons to scroll to the CID entry you would like to save.
2. Press the MENU button and enter the name, using your dial pad.
3. Press the MENU button once again to edit the number.
4. Press the MENU button to save to the Phonebook.

Note: Up to 30 names and number can be stored into the phonebook. Numbers can be stored up to 24 digits long and names can be up to 16 characters long. Entries will be stored in alphabetical order.

Delete a Call List Entry

1. Press the UP button to enter the call list.
2. Press the UP/DOWN buttons to your desired entry.
3. Press the CLEAR/DELETE button to delete the entry.

Delete Entire Calls List

1. Press the UP button to enter the call list.
2. Press and hold the CLEAR/DELETE button until "DELETE ALL CALL LOG ENTRIES" is displayed.
3. Press the MENU to confirm and delete all entries.

BOOST FUNCTION AND VOLUME CONTROL

Boost Function - Amplify Incoming Sounds
 1. While on a call, press the BOOST button to engage the amplifier. The D603 has a BOOST button that controls the loudness of the receiver. Once the BOOST button is pressed, an extra level of amplification is added over the entire range of the Volume Control. During a call, the BOOST button can toggle the Clarity Power Function On or Off according to the user's needs. The BOOST button will reset automatically every time the phone is hung up for at least 5 seconds. The handset top light will illuminate (Red) while the BOOST function is activated.

2. During a call, press UP/DOWN buttons to adjust the volume to the desired sound level (up to 30 dB of amplification) on the earpiece or loudspeaker. The Volume Control adjusts the level of volume in the handset and speaker in both BOOST or non-BOOST modes. The volume control provides up to 16 dB of volume before the BOOST button is activated.

CAUTION: VOLUME MAY BE LOUD. PROCEED WITH CARE.

MENU OPTIONS

Setup BS (Base) (Main Menu)

Submenu settings allows you to select your personalized settings for the base: Ringer Tone (Melody settings 1-3), Ringer Volume (1-5), Dial Mode and Area code.

Reset Setting (Main Menu)
 Submenu settings allows you to Clear your Voice Mail (service provided by your local telephone company) or to reset All Settings to the default settings.

Date and Time (Main Menu)
 The submenu will allow you to manually input the Year, Date and Time. If you have CID service (service provided by your local telephone company), this information will automatically register during your first call.

Phonebook (Main Menu)
 Submenu settings allows the following options: View, Add, Edit, Delete, Delete All. Check your Phonebook Capacity and Set your Speed Dial for keys 1-9.

Setup HS (Handset) (Main Menu)
 Submenu settings allows you to select your own personalized settings for the handset: Ringer Tone (Melody settings 1-3), Ringer Volume (Off, Vol. 1-5), Key Tone (On/Off), Low Batt Tone (On/Off), Out of Range (On/Off), Tone, Handset Name and Language (English/Francois/Espanol).

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>