



Liberty Phone 30T
User Guide



Conditions for Use – Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

WARNING: The 30T is capable of amplifying sounds to a loud volume. It is important to instruct all potential users of its proper operation. It is advised to adjust the volume control to its minimum level (Lo) while not in use and alert other users that hearing damage can potentially result from misuse.

WARNING: To avoid the possibility of electrical shock, do not use this product *near water (For example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool)* while in the bathtub or shower or when you are wet. If the phone becomes submerged in water, do not attempt to retrieve it until after you have unplugged the line cord from the modular wall jack. Do not plug the phone back in until it has dried completely.

WARNING: Avoid using the telephone during electrical storms. *There may be a remote risk of electric shock from lightning.* If an electrical storm is present in your immediate area, the possibility of electrical shock exists.

WARNING: Do not use the phone if you suspect a gas leak in the area. The phone's electrical contacts could create a spark, which could ignite any heavy concentrations of leaking gas.

SAVE THESE INSTRUCTIONS

*Congratulations on your purchase of your
new ClearSounds 30T Liberty Phone!*

Please visit our web site at www.hitec.com to:

- Register your product
- Download additional manuals and troubleshooting tips
- Access free content on hearing loss

The ClearSounds 30T Liberty Phone is the ultimate in simplicity. The 30T Liberty Phone is designed to provide amplification for people with mild to moderate hearing loss.

Please read this User Guide carefully
in order to get the very best results
from your telephone.

Components

The following items are included in your 30T Liberty Phone:

- Handset
- Base (Note: The handset and base are hard-wired together)
- Line cord (Hard wired into base)
- (2) Screws for Wall Mounting

Features & Functions

Connecting the Phone

1. Set the volume and ringer controls to the desired levels.
2. Plug the long line cord into the modular baseboard or wall jack. Make sure the plug snaps securely into place.

NOTE: *There is no limit to the number of sockets you can have installed in your home.*

However, there is a limit to the number of telephones you can operate on your exchange line. Installing too many telephones would overload the line, which would inhibit the telephones from ringing. To avoid overloading your exchange line there is a method of calculating the number of telephones you can use. Add all of the Ringer Equivalence Numbers (abbreviated REN) together, which are marked on the base of each telephone. Numbers differ so do check. The numbers added together must total 5 or less.


The REN value of your ClearSounds 30T, is 1.0.

Ringer

1. The switch located above the handset microphone allows the ringer to be switched On or Off.
2. If you don't like the ringer melody, you can choose a new one by changing the settings as follows.

	Low	Med	High
Tone 1	1	2	3
Tone 2	4	5	6
Tone 3	7	8	9

The default setting is 6.

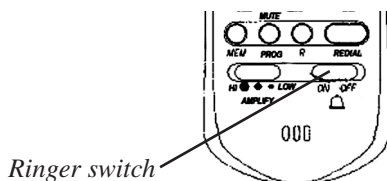

3. To set the ringer tone, lift the handset and press the PROG button. Then press the # button and the number 1-8 on the keypad. (See the chart above.)

WARNING: when the ringer has been set to the off setting (digit 0), an incoming call will be indicated by the handset strobe light flashing. The ringer will be automatically returned to the previous setting (1 to 9) when the handset is lifted from the base unit.

Operation

Last Number Redial Button

If the telephone number you have called is busy or if you want to repeat the call to the number you dialed previously, lift the handset, await dial tone and press the “Redial” button. The previously dialed number will be AUTOMATICALLY RE-DIALED. Up to 31 digits can be stored in the redial memory.


Mute Button

If you wish to talk privately to some one else in the room, without your caller overhearing, press and release the “Mute” button. You can now hear the caller, however the caller can not hear you. To resume normal conversation, press and release the “Mute” button. This button is also used in the programming process when storing telephone numbers in the one and two touch memories.

Handset Earpiece Volume Control

CAUTION: This telephone product is specifically designed for people with hearing loss. It offers a handset earpiece volume switch that can be adjusted from normal (Low) to loud (HI). Due care must be taken by all users that the handset earpiece volume switch is set to the lowest level acceptable by each respective user. Care should therefore be exercised to ensure that any other users are familiar with this requirement.

The handset earpiece volume can be adjusted by moving the volume switch, located above the handset microphone, to High, Medium or Normal.

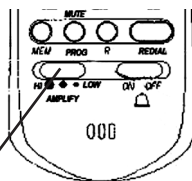

Amplification switch

Using The Telephone

Having connected the telephone to the telephone socket, lift the handset, await dial tone, and dial required number. On the completion of the call, carefully replace handset in cradle.

Memory Operation

Your telephone can store up to 3 ‘One touch’, and 10 ‘Two touch’ telephone numbers. Each telephone number must be stored in a specific memory location and can be up to 21 digits long. If you wish to store a number having more than 21 digits (as may be required, for example, by international numbers preceded by a 3 or 4 digit national operator access code), it is suggested that the 3 or 4 digit access code is stored in a ‘One touch’ location and the other international number stored in any other location.

NOTE: Numbers stored in the memory may be lost if the telephone is disconnected from the telephone line.

Storing Telephone Numbers

a) 'One touch' locations

1. Make sure the telephone is plugged into the jack and lift the handset.
2. Press **PROG** button
3. Press one of the 'One touch' direct memory buttons, M1, M2 or M3.
4. Dial the telephone number you wish to store.
5. Press the **PROG** button again.
6. Repeat steps 2 to 5 for the remaining two 'One touch' locations.
7. Replace handset.

b) 'Two touch' locations

1. Make sure the telephone is plugged into the jack and lift the handset.
2. Press **PROG** button.
3. Press **MEM** button.
4. Press any button 0 to 9 on the keypad under which you wish to store the telephone number.
5. Dial the telephone number you wish to store
6. Press the **PROG** button again
7. Repeat steps 2 to 6 for any other numbers you wish to store allocating a different keypad number for each and then replace the handset.

Dialing Stored Telephone Numbers

- a) **'One touch' locations**- Lift handset, await dial tone and press appropriate direct memory button M1, M2 or M3. The stored number will be dialed out automatically.
- b) **'Two touch' locations**- Lift handset, await dial tone. Press the **MEM** button followed by the keypad button under which the desired number is stored. The stored number will be dialed out automatically.
- c) To dial a number partly stored number in a 'One touch' location (such as an access code) with the remaining part in another location, lift the handset and press the 'One touch' location button under which the 3 or 4 digit access code is stored and then either press:
 - (i) The 'One touch' location button where the remainder of the number is stored, or
 - (ii) The **MEM** button followed by the location button 0-9 under which the remainder of the number is stored.

NOTE: *If you wish to change a number in a memory location, simply follow the instructions for storing a number. Entering the new number will automatically erase the previous number.*

Wall Mounting

Use this template to mark the screw hole centers. Slide out, turnaround and slide backing the wall mounting handset clip (which can be found in the base unit, just below where the ear piece locates), this ensures that the handset stays firmly in position.



Warranty

ClearSounds Communication warrants the 30T Amplified Telephone against any defect in materials or workmanship for the period of one year from the date of purchase.

Within a period of one year from purchase date, ClearSounds Communication will repair or replace (our discretion) your 30T Amplified Phone at no cost. If we elect to replace your phone, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for a period of 90 days or the original time on the original warranty, whichever is longer.

The guarantee does not cover accidents, negligence or breakage to any parts. This includes shipping damage, failure to follow instructions, misuse, fire, floods, use of incompatible accessories, Acts of God or failure in your phone service carrier's line service. The product must not be tampered with or taken apart by anyone who is not an authorized ClearSounds Communication representative. Tampering with the phone will void any written or implied warranties.

ClearSounds Communication shall not be responsible for loss of time, inconvenience, loss of use of your 30T, property damage caused by your 30T or any other incidental or consequential damages.

Warranty service is available only with proof of purchase.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM

Shipping cost must be prepaid and the product must be packaged appropriately for shipping.



FCC Registration Notice

THE INFORMATION INFORMING THE USER OF HIS AND THE TELEPHONE COMPANY'S RIGHT AND OBLIGATIONS IS OUTLINED BELOW. THIS INFORMATION WILL BE INCLUDED IN THE FINAL VERSION OF THE MANUAL.

- a) This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
- b) All applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.
- c) A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
- d) The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. [For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.]
- e) If this equipment ____ causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
- f) The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
- g) Should you experience trouble with this equipment, please contact (*company name, repair center address and phone number*) for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

- h) Please follow instructions for repairing if any (e.g. battery replacement section); otherwise do not alternate or repair any parts of device except specified.
- i) Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation for information.
- j) **NOTICE:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this BB101 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
- k) This equipment is hearing aid compatible.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio TV technician for help.**



For product support and help visit our website at <http://www.hitec.com>
Telephone 1800-288-8303 or Fax 1800-654-9219
or E-mail csphones@hitec.com

For warranty service, please contact us at:

ClearSounds Communication
800-288-8303
8160 S. Madison Ave., Burr Ridge, IL 60527

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>