



## Radio Controls and Indicators

### Talk Button

Press and hold to communicate with others. With the microphone about five cm (2 inches) from your mouth, speak in a normal voice.

Release the **Talk** button when you are finished talking and listen for a response. You cannot receive incoming calls while pressing the **Talk** button.

**NOTE** Both radios must be tuned to the same channel to communicate.



Speaker/  
Microphone/  
Charge Jack

LCD  
Display

### Mode/Power Button

Press and hold to turn the radio **on** or **off**.

Press and release to enter mode function to change channels.

The channel numbers will blink when that mode is selected. Use the **Up/Down** buttons to select a channel.

### Up/Down Buttons

Press and release to adjust the volume.

While in mode function, press and release to change channels.

### Call Button

Press and release to alert others that you are calling.



## TWO-WAY RADIO MODEL MT 200

Printed in the Philippines  
Part No. 480-255-P  
Version A

Nothing Comes Close to a Cobra®

English



# Batteries and Wall Charger



## Batteries

### Remove Belt Clip



### Pull Latch Up



### Insert Batteries



### To install or replace batteries:

1. Remove belt clip by releasing belt clip latch and sliding clip up.
2. Pull up on the battery door latch to remove the battery compartment cover.
3. Insert the supplied three AAA rechargeable batteries (also works with non-rechargeable alkaline batteries). Position batteries according to polarity markings.
4. Replace battery compartment cover and belt clip.

## Wall Charger

### Radio Charger Jack



### To charge batteries in radio:

1. Check to see that the batteries have been inserted properly. See above for battery installation instructions.
  2. Insert round connector of wall charger into the charge jack located at the top of the radio. The wall charger has two round connectors which enables you to charge either one or two radios at a time.
  3. Plug the wall charger into electrical outlet.
- It normally takes 15 hours to fully recharge batteries. It is not recommended to recharge batteries more than 24 hours. Estimated operation time on a full charge is 8 hours.
- Use only the supplied rechargeable batteries and wall charger for recharging your Cobra microTALK® radio. Non-rechargeable alkaline batteries can also be used.



## Backlit LCD Display

### Channel Number

While in **Standby** mode or when selecting a channel, shows current channel (1 through 8).

When adjusting the volume, shows current level (1 through 8).



### Transmit Icon

Visible when transmitting a message.

### Receive Icon

Visible when receiving a message.

### Battery Low Icon

Blinks when battery power level is low.

Your microTALK® radio has a unique circuit designed to extend battery life. If there are no transmissions within 10 seconds, the radio will automatically switch to **Battery Save** mode. This will not affect the radio's ability to receive incoming transmissions.

### Channel/Volume Indicator

"CH" is visible when in **Standby** mode or when selecting a channel.

"LE" is visible when adjusting volume.



# D.O.C. , Warranty and Customer Service

## Declaration of Conformity

This declaration is the responsibility of the manufacturer/importer

Cobra Electronics Europe Limited  
 Dungar House  
 Northumberland Avenue  
 Dun Laoghaire  
 County Dublin, Ireland

Date: 21 November 2005

This certifies that the following designated product

### PRIVATE MOBILE RADIO: MT 200

complies with the essential protection requirements of R & TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to Radio Spectrum Matters, EMC and Electrical Safety.

This declaration applies to all specimens manufactured in accordance with the attached technical documentation described in Annex II of the Directive which forms part of this declaration. Assessment of compliance of the product (class 2.6) with the requirements relating to the essential requirements according to Article 3 R & TTE was based on Annex IV of Directive 1999/5/EC and the following standards:

Radio Spectrum: **EN 300 296-1 V1.1.1 (2001-03)**  
**EN 300 296-2 V1.1.1 (2001-03)**

EMC: **EN 301 489-1 V1.4.1 (2002-08)**  
**EN 301 489-5 V1.3.1 (2002-08)**

Electrical Safety: **IEC 60950-1:2001 /**  
**EN 60950-1:2001**

RF Exposure: **EN 50392 (2004-02)**

DUBLIN, IRELAND MIKE KAVANAGH

## Warranty & Customer Service

**For warranty and customer service information, please contact your local dealer.**

# CE 0682

For use in EU countries, subject to local laws and regulations.

CEEL™ is a trademark of Cobra Electronics Corporation, USA.

Snake design and microTALK® are registered trademarks of Cobra Electronics Corporation, USA.

©2006 Cobra® Electronics Europe Limited  
 Dungar House, Northumberland Avenue  
 Dun Laoghaire, County Dublin, Ireland

[www.cobra.com](http://www.cobra.com)



This equipment is intended for use in:

AT	✓	CY	✓	FI	✓	IE	✓	LU	✓	PT	✓
BA		CZ	✓	FR	✓	IS	✓	MK		RO	✓
BE	✓	DE	✓	GB	✓	IT	✓	MT	✓	SE	✓
BG	✓	DK	✓	GR	✓	LT	✓	NL	✓	SI	✓
CH	✓	EE	✓	HR		LV	✓	NO	✓	SK	✓
CS		ES	✓	HU	✓	LI	✓	PL	✓	TR	✓

✓Countries of use

**4 English**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>