

CODE ALARM

**PROFESSIONAL
SERIES**

**CA 1050
Owner's Guide**

***Vehicle Security and
Keyless Entry System***


IMPORTANT NOTE: The operation of the Security and Convenience System as described in this manual is applicable to most vehicles. However, due to the configuration of some vehicles, some functions AND/OR SAFETY PRECAUTIONS may not apply. Please see your installing dealer for more information.


Table of Contents

Using Your Remote Control	3
Arming the Security System	3
Passive Arming Bypass	3
Bypassing the Shock Sensor	3
Hidden Alarm Function	3
Disarming the Security System	3
Valet Mode	4
Manually Overriding the Security System	4
Eliminating Arm/Disarm Notification Chirps	4
Activating Trunk Release (optional)	4
Using the Car Finder Feature	4
Using the Personal Protection Alarm	5
Car Jack Mode	5
LED and Siren/Horn Indications	6
Transmitter Button Functions	7
Replacing Remote Control Batteries	7
Warranty Information	8




Using Your Remote Control

Arming the Security System



 
To arm the system, exit the vehicle, close all doors, then press the  button. The parking lights will flash 2 times, indicating the system is armed, has locked the doors (if equipped and connected) and activated the starter disable feature. The LED status indicator will blink steadily, once per second.

NOTE: The system is defaulted with Silent Choice enabled, which requires a second press of the  button to activate an audible arming response from the vehicle.

Passive Arming Bypass



If passive arming is enabled on your system, while the system is disarmed, press  2 times within 5 seconds, the system will respond with 1 chirp and the LED will turn on. The security system will remain in this temporarily bypassed state for as long as you wish. To exit passive bypass, press the  or  button and the system will return to normal status.

Bypassing The Shock Sensor


To arm the system and ignore the shock sensor press  button, then within 5 seconds press  +  , the system will respond with 1 long chirp.


NOTE: The system will only change the shock sensor setting for one arm cycle and will be defaulted back to normal operation the next time the system is armed.

Hidden Alarm Function

Press the  button first, within 3 seconds press the  button to activate the hidden alarm function. The security system will arm with "Hidden Alarm Function" in which the siren / horn will be silenced if the system is triggered.

Disarming the Security System

To disarm the system press the  button. The parking lights will flash 1 time, indicating the system is disarmed and has unlocked the doors (if equipped and connected).

NOTE: The system is defaulted with Silent Choice enabled, which requires a second press of the  button to activate an audible arming response from the vehicle.

*Throughout this manual, 'press' refers to pressing for less than 1 second; 'press and hold' refers to pressing for more than 2 seconds.

Valet Mode

To engage valet mode:

1. Turn the ignition key to the ON position.
2. Press and hold the emergency override button.
3. The LED will light solid indicating that the system is in valet mode.

When valet mode is activated the status LED will light solid, and all security and remote start functions will be disabled.

To disengage valet Mode:

1. Turn the ignition key to the ON position.
2. Press and release the emergency override button.
3. The LED will turn off indicating that the system has exited valet mode.

Manually Overriding the Security System

Your system can be disarmed without the use of the transmitter. This is necessary, since you will need the ability to operate your vehicle if the transmitter is lost or its battery fails. To by-pass the alarm system;

1. Open the vehicle door. The alarm will sound.
2. Turn the ignition key to the ON position.
3. Within 5 seconds, press and release the valet push button switch.


The alarm system will stop sounding and enter the (by-passed) mode. You can now start and operate the vehicle normally.

Eliminating Arm / Disarm Notification Chirps


System ARM/DISARM chirps can be toggled ON or OFF without entering the programming feature banks.

1. Turn the ignition ON then OFF.
2. Press and release the valet/programming button 3 times. The system will respond with 1 chirp for ON or 2 chirps for OFF.





Activating the Trunk Release Feature (Optional)

If this feature is enabled on your system, pressing and holding the  button for 3 seconds will open the vehicle's trunk or hatch.

Using the Progressive Car Finder Feature



Press the  button to locate your vehicle. The system will sound 5 times at low volume, increasing in volume each time the button is pressed.

Using the Personal Protection Alarm (Panic)

Press and hold the  button for 3 seconds to activate the personal protection alarm. During panic mode, the normal function of the transmitter buttons will be suspended. The transmitter's  and  buttons can be used to lock and unlock the door (if the option is installed). To stop the alarm, press and hold the  button on the transmitter again for 3 seconds. The system will automatically stop after 30 seconds.

Car Jack Mode

This feature must be turned on in system programming, please consult your installing dealer.

Triggering Car Jack mode: While the ignition is ON and press and hold  +  for 2 seconds, the parking lights will flash 1 time and the system will act as follows;

1. 50 seconds after being triggered the siren will chirp for 15 seconds, during this 15 seconds you will be alerted to push the valet button to turn off Car Jack mode. If Car Jack mode is not turned off at this time it will advance to the next step.
2. Following the 15 second chirps (total time now 65 seconds) the siren will go into full sound and the parking lights will start flashing.
3. 90 seconds after trigger in, addition to the siren and parking lights, the system will activate the starter kill. THE SYSTEM WILL REMAIN IN THIS STATE UNTIL THE BATTERY IS DEPLETED.

OVERRIDE THE SYSTEM TO TURN OFF CAR JACK MODE: Turn the ignition OFF then On and press the valet button within 10 seconds.

LED and Siren/Horn Indications

LED Display Indications

LED	Function
OFF	DISARMED
SLOW FLASH	ARMED
FAST FLASH	PASSIVE ARMING
ON (SOLID)	VALET MODE
2 FLASH... PAUSE	ZONE 2 TRIGGER, HOOD/TRUNK
3 FLASH... PAUSE	ZONE 3 TRIGGER, DOOR
4 FLASH... PAUSE	ZONE 4 TRIGGER, SHOCK
5 FLASH... PAUSE	ZONE 5 TRIGGER, IGNITION

Siren/Horn Indications

Chirps	Function
1	DISARM
2	ARM
3	DOOR AJAR UPON ARMING
4	DISARM / TRIGGERED
5	CAR LOCATOR

Parking Light Flash Indications

Flashes	Function
1	DISARM
2	ARM
3	DISARM / TRIGGERED
5	CAR LOCATOR

Transmitter Button Functions

	Lock	Unlock	Car Find / Panic	Trunk	Operation Method
Lock	X				Press and Release
Unlock		X			Press and Release
Trunk				X	Push and Hold (3 Sec)
Car Finder			X		Press and Release
Panic			X		Push and Hold (3 Sec)
Shock Bypass	X		X		Press and Release Lock then Press Lock + Car Find (within 5 Sec)
Passive Arming Bypass				X	Press 2 Times
Arm with Hidden Alarm Function	X			X	Press Trunk then Lock (within 5 Sec)

Replacing Remote Control Batteries

1-Way 4 Button Remote Control:

The batteries (model CR2016) inside each remote control should last approximately 1 year under normal use. When the batteries become weak you will notice the remote control range (the distance from the vehicle the remote control will work) deteriorate and the small LED on the remote control will dim. To replace the remote control batteries:

1. Remove 3 screws and disassemble the halves of the remote control.
2. Remove the old batteries, observing the +/- symbols on the batteries and replace with new CR2016 batteries.
3. Reassemble the halves of the remote control and install the 3 screws.
4. Test operation of the remote control.

Code Systems, Inc. Limited Lifetime Warranty

Code Systems Inc. ("CODE") warrants to the ORIGINAL PURCHASER of this CODE vehicle security product (the "Product"), purchased from an authorized CODE dealer, that (except as provided below) should this Product under normal use and conditions, be proven defective in material or workmanship DURING THE LIFETIME OF THE VEHICLE IN WHICH IT WAS ORIGINALLY INSTALLED, such defect(s) will be repaired or replaced (at CODE's option) without charge for parts directly related to repairs of the defect(s).

Switches, indicator lights, and transmitter cases are similarly warranted to the original purchaser for a period of one (1) year from the date of purchase of the Product.

CODE accessories, sold separately, are covered by the applicable warranty accompanying the accessory.

This warranty is non-transferable, non-assignable and is voided when: (1) the Product is removed from the vehicle in which it was originally installed; or (2) the vehicle in which the Product was originally installed is transferred to another party.

This warranty does not apply to any product damaged by accident, physical or electrical abuse, improper installation, alteration, or use contrary to its intended function, fire, flood, or other natural acts.

In order for the Product to be repaired or replaced under the terms of this warranty, the defective Product must be returned to an authorized CODE dealer and accompanied by a copy of the retail sales receipt. The date of purchase and year, make and model of the vehicle in which the Product was originally installed must be clearly indicated on the sales receipt.

This warranty is exclusive and CODE MAKES NO OTHER WARRANTIES EXPRESSED OR IMPLIED. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. IN NO CASE SHALL CODE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

CODE does not warrant that the Product cannot be compromised or circumvented. THE EXTENT OF CODE'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT SHALL CODE'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE ORIGINAL PURCHASER OF THE PRODUCT WITHOUT INSTALLATION LABOR.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state

Audiovox Electronics Corporation.
Customer Service 1-800-421-3209
WWW.CODE-ALARM.COM

FCC COMPLIANCE

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including any interference that may cause undesired operation.

Warning!

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>