

CODE ALARM

CA 3050 Owners Manual

Your system has many features and available options some of which are selected at time of installation. Consult your installing dealer for options that may have been installed and are not listed.

ARMING THE SYSTEM:

1. Turn the engine OFF, exit the vehicle, and close all doors, hood and trunk.
2. Press and release the LOCK button of your Factory (OEM) transmitter one time.

The parking lights will flash once, the siren will chirp once, and the dash mounted LED will begin to flash slowly confirming the system is armed.

NOTE: If the siren/horn sounds 3 chirps, then you have left a door, trunk, or hood lid ajar. Simply close the opened entry point to provide full protection.

PASSIVE ARMING THE SYSTEM:

If the passive arming feature has been selected:

Turn the engine OFF, exit the vehicle, and close all doors, hood and trunk.

The dash mounted LED will begin to flash rapidly indicating that the 30 second passive arming timer has begun. If the LED does not begin to flash rapidly, then you have left a door, hood, or trunk ajar. Closing this entry point will allow the arming cycle to begin. If any entry point is opened during the 30 second arming cycle, arming will be suspended. When all entry points are closed, the arming cycle will begin again. At the end of the 30 seconds, the parking lights will flash once, the siren will chirp once, and the dash mounted LED will begin to flash slowly confirming the system is armed.

PROTECTION WHILE THE SYSTEM IS ARMED:

Opening any protected entry point, hood, trunk, or doors will cause the alarm to trigger immediately. The siren will sound and the parking lights will flash for 30 seconds, then stop and continue to monitor all protected entry points. If the thief left the door opened, the system will sound for six 30 second cycles then shut down, isolate the triggered zone and continue to protect all other zones. Whenever the system is armed, the dash mounted LED will slowly flash. This serves as a visual deterrent to a potential thief. This LED is a very low current light emitting diode, and will not cause the battery to drain even if left unattended for long periods of time.

Whenever the system is triggered, the vehicle's parking lights will flash for the full siren sounding period. Optional - whenever the system is triggered, the interior courtesy light will flash for the full siren sounding period. Optional- whenever the system is armed, the vehicle starter circuit is disabled, and the vehicle will not start with the ignition key. Whenever the system is armed, any strong impact to the vehicle will cause the shock sensor to trigger the alarm. Any lesser impact will cause the pre-detect stage of the shock sensor to emit a few short series of warning tones from the siren.

DISARMING THE SYSTEM:

As you approach the vehicle, press and release the UNLOCK button on your Factory (OEM) transmitter. The parking lights will flash 2 times, the siren will chirp 2 times, and the dash mounted LED will turn off.

NOTE: If the passive arming mode was selected at time of installation, the dash mounted LED will start flashing rapidly indicating that the system is rearming. Opening any door will suspend the automatic arming.

If the parking lights flashed 3 times, and the siren chirps 4 times, this indicates that the alarm system was triggered during your absence. Before turning on the ignition key, examine the dash mounted LED's flash pattern.

The number of flashes identifies the triggered zone. For additional information, refer to INTRUSION WARNING SIGNALS found later in this manual.

INTRUSION WARNING SIGNAL:

This system will inform you if an intrusion attempt has occurred while you were away from the vehicle. Upon disarm, the siren will chirp 4 times and the parking lights will flash 3 times. Enter the vehicle and before turning on the ignition switch, observe the LED flash pattern.

If the LED flashes 2 times...pause, 2 times...pause etc., then an intrusion attempt was made to open the hood, trunk, or by an accessory triggering device. Check the vehicle for indications of forced entry to these openings.

If the LED flashes 3 times...pause, 3 times...pause etc., then an intrusion attempt was made to the vehicle doors. Check all doors for indications of forced entry.

If the LED flashes 4 times...pause, 4 times...pause etc., then an intrusion attempt was made by impact or a strong vibration that the shock sensor detected. Check the vehicle for possible damage to the glass or body panels.

NOTE: The LED intrusion warning indications are stored in the system's memory and will be erased when the ignition switch is turned on.

VALET/OVERRIDE SWITCH:

The valet switch allows you to temporarily bypass all alarm functions, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, all alarm functions are bypassed, however the remote panic feature and remote door locks will remain operational.

1. Enter the vehicle, and turn the ignition key to the ON position.
2. Press and hold the valet pushbutton switch until the dash mounted LED turns on solid. The system will remain in the valet mode.
3. To return to normal operation, press and release the push button switch any time the ignition is on.

NOTE: Always remember to return the vehicle to the valet OFF position. This will ensure that the vehicle remains protected at all times.

MANUALLY OVERRIDING YOUR SYSTEM:

USING THE VALET/OVERRIDE SWITCH:

Your Security system can be disarmed without the use of the OEM transmitter. This is necessary, since you will need the ability to operate your vehicle if the transmitter is lost or its battery fails. To Bypass the system:

1. Open the vehicle door. The system will sound.
2. Turn the ignition key to the ON position.
3. Within 5 seconds, press and release the valet pushbutton switch.

The system will stop sounding and enter the (by-passed) mode. You can now start and operate the vehicle normally.

Typically this override mode is used only if the Factory (OEM) transmitter has become inoperative.

ELIMINATING/RETURNING THE NORMAL ARM/DISARM CHIRPS

You can selectively eliminate the normal arm & disarm chirps using the valet/override switch, following these steps.

- 1) Turn the ignition key ON the OFF.
- 2) Within 10 seconds of turning the ignition key OFF, press and release the valet/override switch 3 times.
- 3) If, before step 1, the chirps were ON, then you will hear 2 short chirps, which indicates the chirps are turned OFF.
- 4) If, before step 1, the chirps were OFF, then you will hear 1 short chirp, which indicates the chirps are turned ON.
- 5) Whenever the system's power has been disconnected, the chirps will be ON when power is reconnected.

CA-3050

SYSTEM FUNCTIONS AT A GLANCE

ALARM DASH LED INDICATORS

RAPID FLASHING	=	PASSIVE ARMING
SLOW FLASHING	=	ARMED
OFF	=	DISARMED
ON SOLID	=	VALET MODE
4 FLASH...PAUSE	=	INTRUSION SHOCK SENSOR
3 FLASH...PAUSE	=	INTRUSION DOOR
2 FLASH...PAUSE	=	INTRUSION HOOD OR TRUNK

ALARM SIREN CHIRP INDICATION

1 CHIRP*	=	ARM
2 CHIRPS*	=	DISARMED
3 CHIRPS	=	ARMING WITH ENTRY POINT OPENED
4 CHIRPS	=	DISARM AFTER INTRUSION
CONTINUOUS	=	ALARM TRIGGERED

ALARM PARKING LAMP INDICATIONS

1 FLASH	=	ARM
2 FLASH	=	DISARM
3 FLASH	=	DISARM AFTER INTRUSION
CONTINUOUS FLASH	=	TRIGGERED



Code Systems, Inc. Limited Lifetime Warranty

Code Systems Inc. ("CODE") warrants to the ORIGINAL PURCHASER of this CODE vehicle security product (the "Product"), purchased from an authorized CODE dealer, that (except as provided below) should this Product under normal use and conditions, be proven defective in material or workmanship DURING THE LIFETIME OF THE VEHICLE IN WHICH IT WAS ORIGINALLY INSTALLED, such defect(s) will be repaired or replaced (at CODE's option) without charge for parts directly related to repairs of the defect(s).

Switches, indicator lights, and transmitter cases are similarly warranted to the original purchaser for a period of one (1) year from the date of purchase of the Product.

CODE accessories, sold separately, are covered by the applicable warranty accompanying the accessory.

This warranty is non-transferable, non-assignable and is voided when: (1) the Product is removed from the vehicle in which it was originally installed; or (2) the vehicle in which the Product was originally installed is transferred to another party.

This warranty does not apply to any product damaged by accident, physical or electrical abuse, improper installation, alteration, or use contrary to its intended function, fire, flood, or other natural acts.

In order for the Product to be repaired or replaced under the terms of this warranty, the defective Product must be returned to an authorized CODE dealer and accompanied by a copy of the retail sales receipt. The date of purchase and year, make and model of the vehicle in which the Product was originally installed must be clearly indicated on the sales receipt.

This warranty is exclusive and CODE MAKES NO OTHER WARRANTIES EXPRESSED OR IMPLIED. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. IN NO CASE SHALL CODE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

CODE does not warrant that the Product cannot be compromised or circumvented. THE EXTENT OF CODE'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT SHALL CODE'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE ORIGINAL PURCHASER OF THE PRODUCT WITHOUT INSTALLATION LABOR.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state

CODE-SYSTEM, INC. Theft Protection Program

The Theft Protection Program is designed to provide the retail purchaser of a security system provided by CODE-ALARM, INC. ("CODE") an additional benefit, at no additional cost to the purchaser, should their vehicle be stolen while protected by a CODE-ALARM security system. While CODE has created this program as a way of showing appreciation to its customers, CODE RESERVES THE RIGHT TO UNILATERALLY CHANGE, ALTER, MODIFY, OR DISCONTINUE ALL OR PART OF THIS THEFT PROTECTION PROGRAM WITHOUT PRIOR NOTICE. THIS THEFT PROTECTION PROGRAM IS NOT AN INSURANCE POLICY AND SHOULD NOT REPLACE AN AUTOMOBILE OR HOMEOWNERS INSURANCE POLICY. THIS THEFT PROTECTION PROGRAM DOES NOT COVER LOSSES ARISING FROM THE THEFT OF ITEMS WITHIN THE AUTOMOBILE OR ANY DAMAGES ARISING FROM, RELATED TO, AND/OR INCIDENTAL OR A CONSEQUENCE OF A VEHICLE THEFT EXCEPT AS SPECIFICALLY DELINEATED BELOW.

Plan duration: 3 Years from the date of installation.

Plan amount: Maximum allowable value equal to insurance deductible or up to \$2,500 whichever is less.

Conditions of the Theft Protection Program:

1. The Theft Protection Program is non-transferable and non-assignable.
2. The system must be installed by an authorized CODE dealer.
3. Vehicle must be less than three (3) model years old at the time of installation.
4. The security system must have been fully armed at the time of the vehicle theft.
5. The vehicle in which the system is installed must be insured for theft by a licensed insurance underwriter in the state in which the vehicle is registered.

Terms of payment:

1. The vehicle must first be considered a total loss due to theft by your insurance company.
2. Your insurance company has settled all claims arising from this theft and there are no other pending legal actions as a result of this theft.

How to file a request for payment:

If the above conditions are met, make your request for payment by submitting the following to CODE. The request for payment must be received by CODE no later than sixty (60) days after the vehicle is reported stolen.

1. Copy of the retail sales receipt for the purchase of the security system, clearing showing the model of system purchased and the year, make and model of the vehicle in which the system was installed.
2. A copy of the police report for the stolen vehicle.
3. A copy of the paid insurance claim and reimbursement check from the insurance company.

***The Theft Protection Program is not available in all states please contact dealer for more information.**

**CODE SYSTEMS, INC.
1-800-421-3209**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>