

Coleman / MAX CABIN TENT 13' x 9' MODEL 200002250

Before you begin

Read all instructions before set up.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.


- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- Secure with **all** stakes and guylines provided to prevent property damage or personal injury.
- For best results in windy conditions, position narrow end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Pole Descriptions

Description	Qty.	Pole Dia.	Pole Repair Kit	Pole Replacement Kit
Leg Pole, metal	4	19mm	N/A	5010000650
Leg Pole, metal, with white marking	2	19mm	N/A	5010000651
Top Pole, thick, grey,	1	12.7mm	5010000538	5010000550
Top Pole, thick, black	2	12.7mm	5010000538	5010000550
Door Pole, long, thin, black, fiberglass, rubber tips	1	6.3mm	5010000543	5010000545
Vert. Door Pole, short, black, fiberglass, rubber tips	1	6.3mm	5010000543	5010000545

To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. (Fig. 1)
 2. Assemble all fiberglass and metal poles by interlocking the shock-corded, sections together.
 3. Insert thick, black, Top Poles through the sleeves on top of tent forming an "X"; then push end of each pole into black Pole Connector to form an arch. (Fig. 1 & 1A)
 4. Insert thick, grey Top Pole through the grey trimmed center sleeve, running from the front to the back of tent; then push end of pole into black Pole Connector to form an arch. (Fig. 1 & 1B)
 5. Insert four metal Leg Poles into end of Pole Connectors at the four corners of the tent. (Fig. 1 & 1C)
- NOTE:** Make sure end with metal "V" spring is inserted into Pole Connector.
6. Insert two metal Leg Poles (with white markings) into end of Pole Connectors at front & back of the tent. (Fig. 1 & 1C)
- NOTE:** Make sure end with metal "C" spring is inserted into Pole Connector.



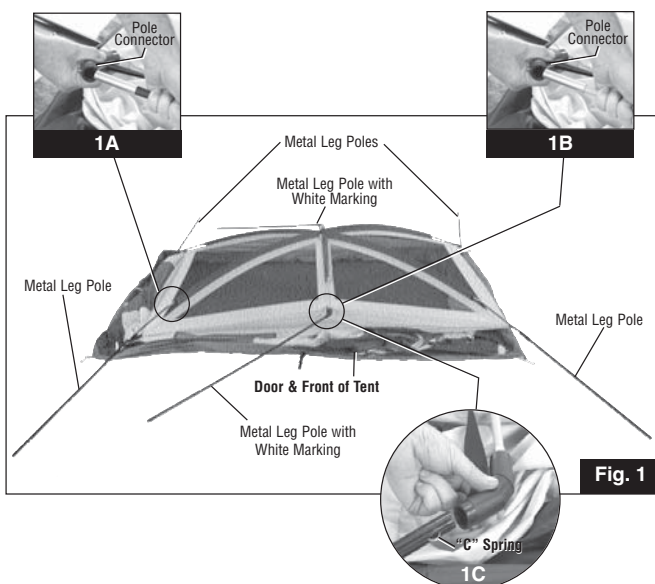


7. Rotate metal Leg Poles to upright position; then insert metal pin on web strap at front, back, & four corners of tent into bottom of each pole. (Fig. 2 & 2A)
- NOTE:** You can use the tri-glide to adjust the length of the center webbing to make it easier to insert the metal pin into the metal center pole.
8. Snap large frame clips on seams of tent onto metal Leg Poles to secure. (Fig. 2 & 2B)
 9. Stretch four corners of tent until taut; then drive metal stake through ring on web strap of each to secure (Fig. 2 & 2C).
 10. Stretch web strap at front & back of tent until taut; then drive metal stake through ring on each to secure (Fig. 2 & 2C).



Hinged, Rigid Door

1. Insert Vertical Door Pole (shorter black pole with plastic cap tips) through zippered vertical sleeve on hinged side of door. (Fig. 3)
2. Insert end of Vertical Door Pole into bottom hinge plate, apply pressure to form a slight bow, then insert other tip of pole into top hinge (Fig. 4). Zip up vertical pole sleeve. (Fig. 5)
3. Insert Door Pole (long, black pole with plastic cap tips) into zippered pole sleeve at top of door. (Fig. 5)
4. Insert end of Door Pole into top hinge plate, apply pressure to form a bow, then insert other tip of pole into the bottom hinge. (Fig. 6)
5. Zip up "C" shaped pole sleeve to enclose Door Pole. (Fig. 7)

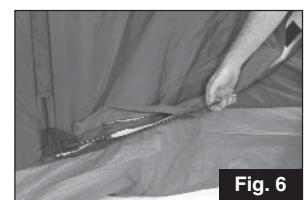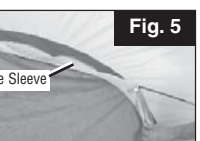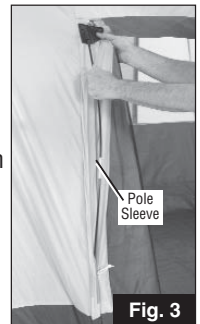

To Attach Rainfly

1. Drape Rainfly over tent with the triangle-shaped leg flaps with elastic cords centered over the four corner of the tent. (See Fig. 8 on other side of this tag).
- NOTE:** Hook and loop fasteners, located on seams of under side of rainfly, should be centered over the Leg Poles.

(continued on other side)

To Attach Rainfly (continued)

Fig. 8



2. Locate **all** hook & loop fasteners on underside of Rainfly and Leg Covers; then wrap around four corner and front and back Leg Poles to secure. (Fig. 9, 9A, & 9B)
3. Stretch elastic straps and hook clip on each to the metal loops at the four corners of the tent at the bottom of the Leg Poles. (Fig. 9 & 9C)
4. Stretch elastic straps above center front and back leg; then hook onto metal ring on Leg Pole. (Fig. 9 & 9D)
5. Stretch all guylines until taut, then secure with stakes. (Fig. 9 & 9E)

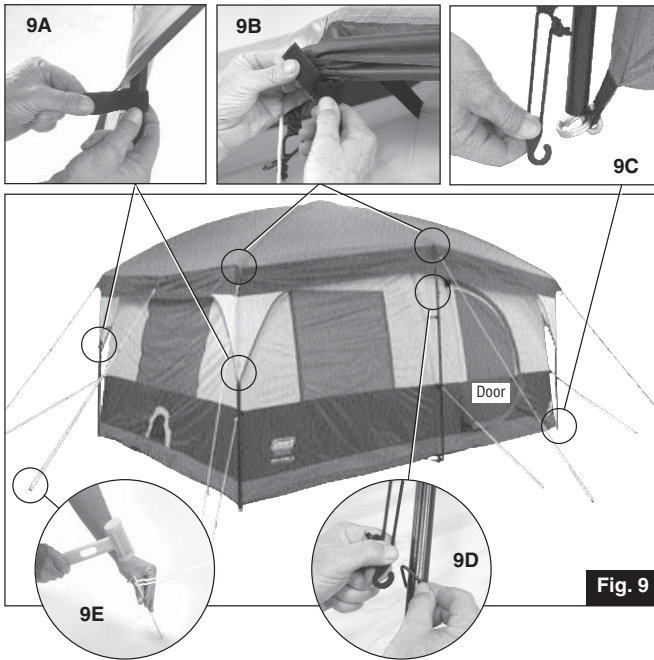


Fig. 9

Electrical Cord Access

1. Unzip access panel in the lower left front corner of tent and bring in electrical cord. Use only UL approved cords that are rated for outdoor usage. (Fig. 10)

Fig. 10



Cooler Access

The smaller zippered opening at the back of tent is designed for added ventilation and easy access to your beverage cooler.

1. To use as a cooler access, unzip other flap to make an avenue to bring beverages into tent. (Fig. 11)
2. To use as a vent, unzip flap to expose screen.

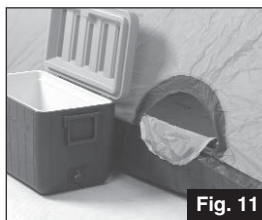


Fig. 11

Attaching Room Divider & Overhead Storage Panel

1. Divider Panel can be installed through center of the tent by inserting the toggles through top and bottom fabric loops as shown. (Fig. 12 & 12A)
2. Install the Overhead Storage Panel by inserting the toggles through the fabric loops at the top of the tent.

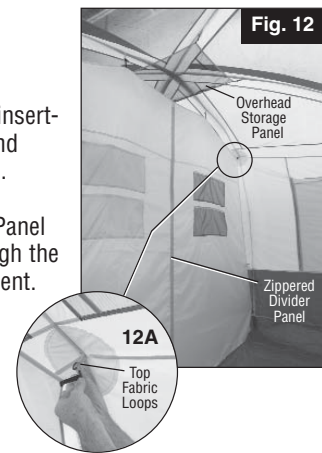


Fig. 12

To Store

1. All poles and stakes **must** be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
2. Make sure tent is clean and dry before placing in carry case.
3. Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
4. Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
5. Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Tree limbs, tree sap, bird droppings, or moisture steadily dripping off tree limbs can cause damage to the tent fabric and its coating resulting in leaks or loss of flame-resistant properties.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. NEVER PULL ON THE TENT TO REMOVE STAKES AS THIS COULD RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.
- Tent poles should not be left telescoped together during storage.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: Keep all flame and heat sources away from this tent fabric.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219
1-800-835-3278 • www.coleman.com

MADE IN BANGLADESH • PRINTED IN BANGLADESH

© 2009 The Coleman Company, Inc.

Coleman®, and are registered trademarks of The Coleman Company, Inc.

4010004270 (20090226)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>