

## Before you begin

Read all instructions before set up.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to install your tent.

### ⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- Secure with **all** stakes and guylines provided to prevent property damage or personal injury.
- For best results in windy conditions, position narrow end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

## Pole Descriptions

Description	Qty.	Pole Dia.	Pole Repair Kit	Pole Replacement Kit
Long Leg Pole, steel (w/ red marking)	2	19mm	N/A	5010000678
Short Leg Pole, steel	4	19mm	N/A	5010000680
Curved Ridge Pole, steel (w/ red marking)	1	19mm	N/A	5010000677
Curved Ridge Pole, steel	2	19mm	N/A	5010000679
Vertical Door Pole, black, short w/rubber tips	1	6.3mm	5010000543	5010000545
Door Pole, black, long w/rubber tips	1	6.3mm	5010000543	5010000545


## Self-Rolling Window Spring Descriptions

Color Code	Description	Qty.	Length	Replacement Part No.
Green		1	610mm	5010000627
Orange		10	670mm	5010000628

**CAUTION:** "Springs" may have sharp edges. Handle with care to avoid injury. **Keep out of reach of children.**


## To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction.

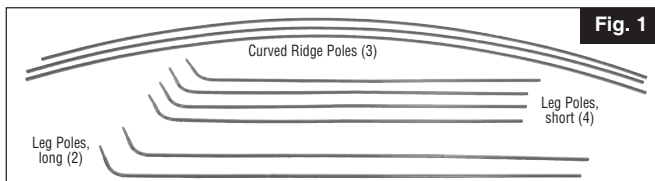

2. Assemble six, steel, shock-corded, Leg Poles. (Fig. 1)

3. Push down on steel button on tapered end and insert into end with four holes. **NOTE:** Make sure steel button locks into third hole on pole as shown. (Fig. 2)

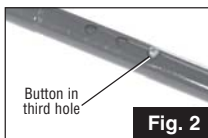




4. Assemble three, steel, shock-corded, curved Ridge Poles. (Fig. 1)

5. Stretch four corners of tent until taut; then drive plastic stake web strap of each to secure. (Fig. 3)



6. Insert Ridge Pole (with red marking) into center sleeve on top of tent with the red trim (Fig. 4 & 6). Insert the remaining curved Ridge Poles into the other two sleeves on top of tent.

7. Insert curved end of Leg Pole (with red marking) into the ends of the Ridge Pole (with red dot). Insert curved end of remaining short Leg Poles into the ends of the remaining Ridge Poles. (Fig. 5 & 6)

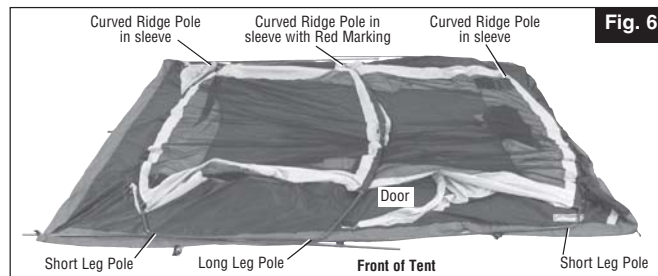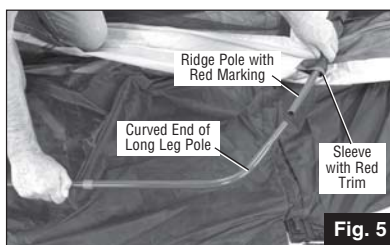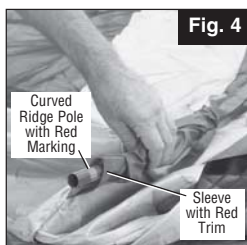


8. Rotate all six Leg Poles upright and insert pin on each web loop at the side locations as shown. (Fig. 7 & 7A)




9. Stretch tent to finished size:

- Push in button on Leg Pole while twisting lower Leg Pole section counterclockwise (Fig. 8);
- Pull up on top Leg Pole section until tent is taut;
- Twist the lower Leg Pole clockwise until the button locks into the center or lowest hole;
- Repeat on remaining Leg Poles.

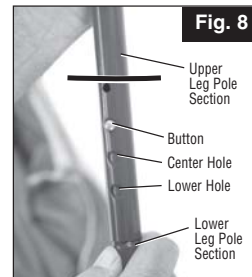




10. Locate Frame Clips on front and back of tent; then attach to Leg Poles as shown. (Fig. 9)

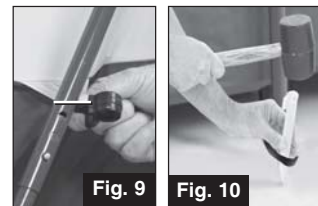

11. Insert plastic stakes through web straps located at bottom of each Leg Poles; then drive in to secure. (Fig. 10)

## Hinged, Rigid Door

1. Assemble Vertical Door Pole (shorter black pole with plastic tips); then insert through zippered vertical pole sleeve on hinged side of door. (Fig. 11)
2. Insert end of Vertical Door Pole into bottom hinge plate, apply pressure to form a slight bow, then insert other tip of pole into top hinge. Zip up vertical pole sleeve. (Fig. 12 & 13)
3. Assemble Door Pole (longer black pole with plastic cap tips); then insert into zippered pole sleeve at top of door. (Fig. 14)
4. Insert end of Door Pole into top hinge plate, apply pressure to form a bow, then insert other tip of pole into the bottom hinge. (Fig. 15)
5. Zip up pole sleeve to enclose Door Pole. (Fig. 16)

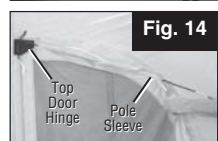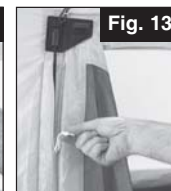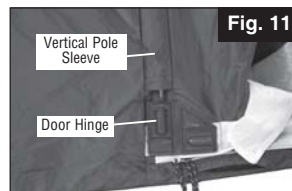

(continued on other side)

## To Attach Rainfly

1. Drape Rainfly over tent. Make sure seams on Rainfly are facing down and centered over curved Ridge Poles at sides of the tent as shown. (Fig. 17)  
**NOTE:** Large hook and loop fasteners, located at the ends underside of Rainfly, should be centered over ends of tent.
2. Press hook fastener flaps on underside of Rainfly onto loop pads on ends of tent to secure. (Fig. 17A)
3. Wrap hook & loop fastener on underside of Rainfly around center Leg Poles at front and back of tent. (Fig. 17B)
4. Insert metal hook on elastic straps on Rainfly into the hole on each Leg Pole. (Fig. 17 & 17C)



Fig. 17

5. Stretch guylines until taut, then secure with stakes. (Fig. 17D)

## Self-rolling Windows

**CAUTION:** "Springs" may have sharp edges. Handle with care to avoid injury. Keep out of reach of children.


**NOTE:** Carefully unroll metal "springs" stored in bag with stakes. The color marking on each "spring" should match the color of the fabric "flag" sewn to the window or door sleeve opening. (Fig. 18)

1. Locate sleeve(s) in window panel, open hook & loop fastener; then insert "spring(s)" with matching color marking. (Fig. 18 & 19)

**NOTE:** When inserting into the sleeve(s), the color marking on the "spring(s)" should always face the operator.

2. Close hook & loop fastener to secure.
3. Before unzipping and opening the window, push in at top to engage "spring(s)" to activate the self-rolling feature. (Fig. 20)
4. Unzip to allow the window panel to roll down automatically; zip back to close window panel. (Fig. 21 & 22)

**NOTE:** Repeat steps above for inserting the color matching "spring(s)" into sleeve(s) for the rest of the windows.

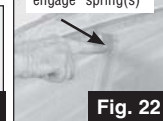

**CAUTION:** All "springs" **must** be removed from sleeves before tearing down tent to avoid damage to the tent fabric or part. To avoid injury, carefully roll up "springs". Keep out of reach of children. Store rolled "springs" in bag with stakes.

## Cooler Access


The smaller zippered opening at the back of tent is designed for added ventilation and easy access to your beverage cooler.

1. To use as a vent, unzip flap to expose screen. (Fig. 23)
2. To use as a cooler access, unzip other flap to make an avenue to bring beverages into tent. (Fig. 24)



## Electrical Cord Access

1. Unzip access panel in the lower right corner of tent and bring in electrical cord.  
**NOTE:** Use only UL approved cords rated for outdoor usage. (Fig. 25)

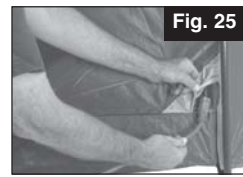


## Tent Lighting System

Your tent comes pre-wired with the Coleman® Tent Lighting System. See manual that came with the light and carefully read all instructions before use then save for future reference.



## Attaching Room Divider

1. Divider Panel can be installed through center of the tent by inserting toggles through the top and bottom fabric loops as shown. (Fig. 26 & 27)

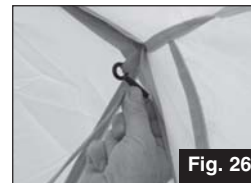

## To Store

1. All "springs" **must** be rolled up and placed in bag with stakes.
2. All poles and stakes **must** be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
3. Make sure tent is clean and dry before placing in carry case.
4. Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
5. Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
6. Store in a clean, dry area.

## Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Tree limbs, tree sap, bird droppings, or moisture steadily dripping off tree limbs can cause damage to the tent fabric and its coating resulting in leaks or loss of flame-resistant properties.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. NEVER PULL ON THE TENT TO REMOVE STAKES AS THIS COULD RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.
- Tent poles should not be left telescoped together during storage.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

**⚠ WARNING: Keep all flame and heat sources away from this tent fabric.**

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 N. Hydraulic • Wichita, Kansas 67219  
1-800-835-3278 • www.coleman.com

MADE IN CHINA • PRINTED IN CHINA

© 2009 The Coleman Company, Inc.

Coleman®, , and are registered trademarks and Rockwall™ is a trademark of The Coleman Company, Inc.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>