

Before you begin

- Read all instructions before set up.
- Select a level site clear of rocks, branches, and other hard or sharp objects, to install your tent.

⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- Secure with **all** stakes and guylines provided to prevent property damage or personal injury.
- For best results in windy conditions, position narrow end of tent into the wind.
- Enlist the help of at least one other person to assist you when it is time to assemble the tent.

Pole Descriptions

Description	Qty.	Pole Repair Kit	Pole Replacement Kit
Main Poles, long, black	2	5010000539	5010000549
Rainfly Pole, black w/metal tips	2	5010000542	5010000552
Vertical Door Pole, black, short w/rubber tips	1	5010000543	5010000545
Door Pole, black, long w/rubber tips	1	5010000543	5010000545


Self-Rolling Window Spring Descriptions

Color Code	Description	Qty.	Replacement Part No.
Yellow		1	5010000626
Orange		1	5010000628

CAUTION: "Springs" may have sharp edges. Handle with care to avoid injury. Keep out of reach of children.

To Set Up Tent

1. Unfold tent and spread out on a clean, level surface with the door facing the desired direction. (Fig. 1)
2. Assemble two main tent poles by interlocking the longer, black shock-corded poles.
3. Insert both, long, black poles through sleeves in top of tent as shown. (Fig. 1)

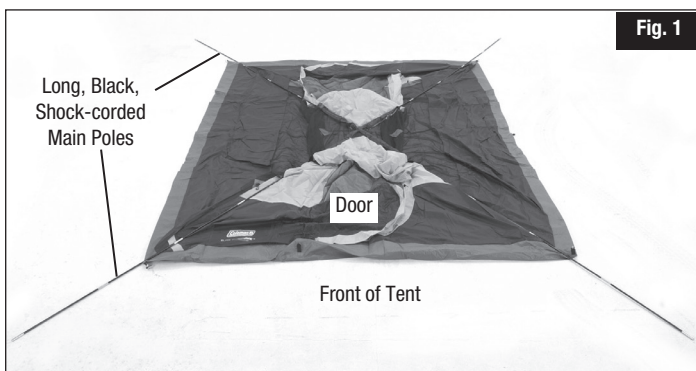

4. Insert one end of each black pole into pins in front corners of tent. (Fig. 2)






5. Go to opposite end of each pole and gradually apply pressure to the pole forming an arch. Insert the pin into the pole end at the corners of tent. (Fig. 3)
6. Attach frame clips along edges of tent to black main poles. (Fig. 3A)

7. Stretch corners and sides of tent until floor is taut then hammer stakes through loops to secure. (Fig. 3B)



Hinged, Rigid Door

1. Assemble Vertical Door Pole (shorter black pole with plastic tips); then insert through zippered vertical pole sleeve on hinged side of door. (Fig. 4)
2. Insert end of Vertical Door Pole into bottom hinge plate, apply pressure to form a slight bow, then insert other tip of pole into top hinge. Zip up vertical pole sleeve. (Fig. 5 & 6)
3. Assemble Door Pole (longer black pole with plastic cap tips); then insert into zippered pole sleeve at top of door. (Fig. 7)
4. Insert end of Door Pole into top hinge plate, apply pressure to form a bow, then insert other tip of pole into the bottom hinge. (Fig. 8)
5. Zip up pole sleeve to enclose Door Pole. (Fig. 9)

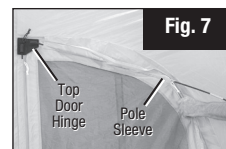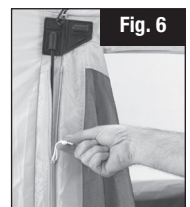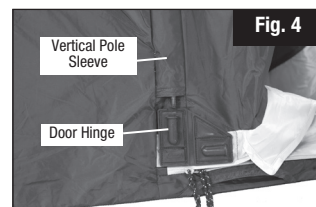


To Attach Rainfly

1. Assemble longer interlocking shock-corded rainfly pole.
2. Unfold rainfly. Locate the sleeve, along front edge, and the hook & loop fasteners on the underside of Rainfly.
3. Drape Rainfly over tent. Make sure the sleeve is centered over the door and the hook & loop fasteners, on the seams on underside of the Rainfly, are positioned over the black main poles.
4. Slide rainfly pole through sleeve at front of the Rainfly. (Fig. 10)



(continued on other side)

5. Insert metal tip of black rainfly pole into metal grommet located on front seams of tent (Fig. 11 & 11A). Gradually apply pressure to other end of pole to form an arch & insert metal tip into grommet.
6. Attach hook & loop fasteners, located on seams of the underside of Rainfly, around the black main poles, to secure. (Fig. 11B)
7. Clip hooks on elastic cords, on the front and back corners of Rainfly, onto metal loops at front and back corners of tent. (Fig. 11C)
8. Stretch guylines until taut, then secure with stakes. (Fig. 11D)

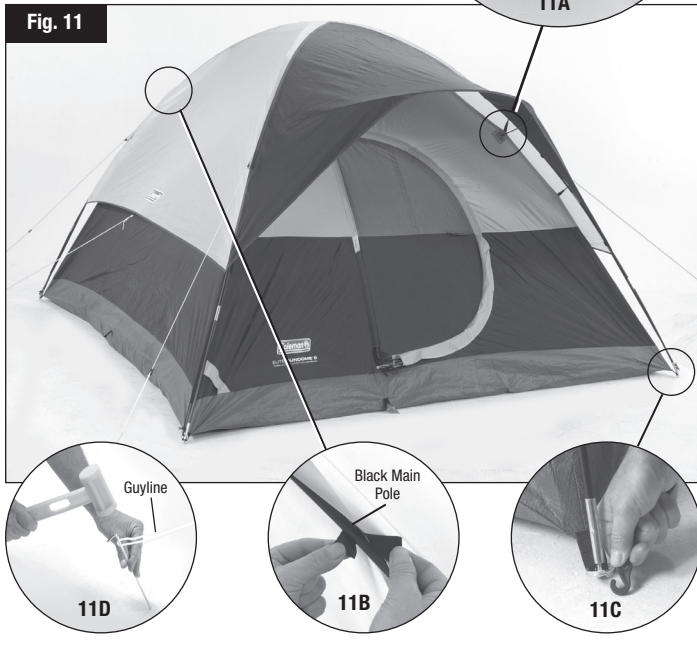





Self-rolling Windows

CAUTION: "Springs" may have sharp edges. Handle with care to avoid injury. **Keep out of reach of children.**

NOTE: Carefully unroll metal "springs" stored in bag with stakes. The color marking on each "spring" should match the color of the fabric "flag" sewn to the window or door sleeve opening. (Fig. 12)

1. Locate sleeve(s) in window panel, open hook & loop fastener; then insert "spring(s)" with matching color marking. (Fig. 12 & 13)
NOTE: When inserting into the sleeve(s), the color marking on the "spring(s)" should always face the operator.
2. Close hook & loop fastener to secure.
3. Before unzipping and opening the window, push in at top to engage "spring(s)" to activate the self-rolling feature. (Fig. 14)
4. Unzip to allow the window panel to roll down automatically; zip back to close window panel. (Fig. 15 & 16)

NOTE: Repeat steps above for inserting the color matching "spring(s)" into sleeve(s) for the rest of the windows.

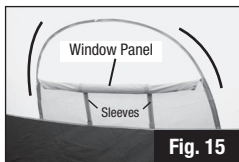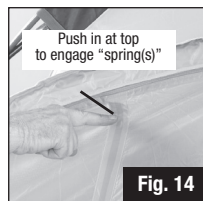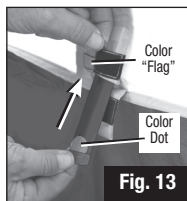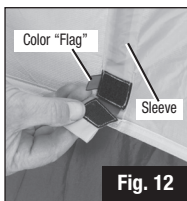

CAUTION: All "springs" **must** be removed from sleeves before tearing down tent to avoid damage to the tent fabric or part. To avoid injury, carefully roll up "springs". **Keep out of reach of children.** Store rolled "springs" in bag with stakes.

Electrical Cord Access

1. Unzip the access panel in the lower left corner of tent and bring in an electrical cord.
NOTE: Use only UL approved cords rated for outdoor usage. (Fig. 17)



To Store

1. All "springs" must be rolled up and placed in bag with stakes.
2. All poles and stakes must be placed in the storage bag to prevent damage to the fabric items placed in the carry case.
3. Make sure tent is clean and dry before placing in carry case.
4. Remove rainfly, spread out on floor of tent, then unzip door & vents before taking tent down for storage.
5. Neatly fold tent to width of pole storage bag, place on tent, roll tightly, and place in carry case.
6. Store in a clean, dry area.

Things You Should Know:

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the tent. It is NOT LEAKAGE through the shelter fabric. It can be minimized by removing wet clothing from your shelter and by providing good ventilation through the tent.
- Tree limbs, tree sap, bird droppings, or moisture steadily dripping off tree limbs can cause damage to the tent fabric and its coating resulting in leaks or loss of flame-resistant properties.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- Stakes should be removed by pulling on the stake itself. NEVER PULL ON THE TENT TO REMOVE STAKES AS THIS COULD RESULT IN PROPERTY DAMAGE OR PERSONAL INJURY.
- Tent poles should not be left telescoped together during storage.
- Do not leave your tent set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



The Coleman Company, Inc. • 3600 North Hydraulic • Wichita, Kansas 67219 U.S.A.
1-800-835-3278 • www.coleman.com

MADE IN CHINA

© 2011 The Coleman Company, Inc. All rights reserved.
Coleman®, Coleman®, and are registered trademarks of
The Coleman Company, Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>