


Continental[®]
E l e c t r i c

INSTRUCTION MANUAL



6" CLIP FAN

**MODEL:
CE27205**

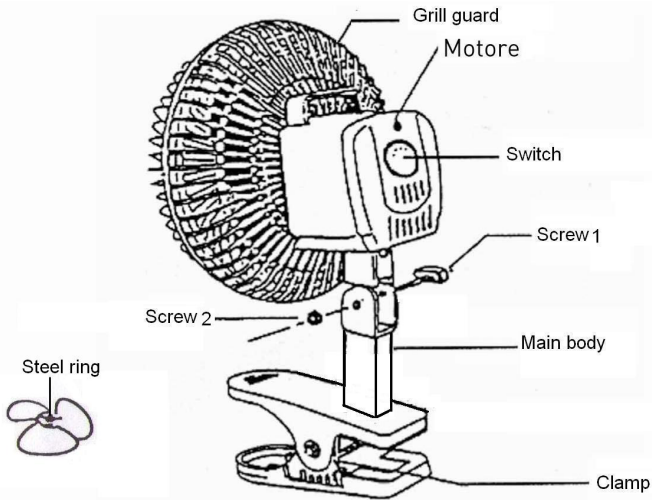

ASSEMBLY

- Position the back grille against the motor.
- Use the screw fix the main body.
- Unclose the transparent sticker on back of the fan blade, put the steel washer/steel ring into the pole of back of fan blade.
- Position the front grille against the rear grille so that the holes in the rims that accept the small nut and bolt are in line

NOTE: THERE IS A STEEL RING WHICH FIXES THE PRO FELLER BLADES IN PLACE. DO NOT RELEASE IT.
SPECIAL NOTES

- Do not insert finger or any object into the grill.
- Do not unplug by pulling on the wire.
- Unplug the fan when not in use
- Do not place the fan near flame or other source of heat motor's axis propeller blade.
- Do not use near water protect from rain
- Do not use gasoline or any volatile chemicals to clean the fan.

IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL APPLIANCES BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING.

- Please read all instructions before using this product.
- Use fan only for intended use as described instruction manual.
- To protect against electrical shock do not place fan in window immerse plug or cord in water or spray with liquid.
- Close supervision is necessary when any appliance is used by near children
- Unplug from outlet when in use. When moving fan from one location to another before putting on or taking off parts and before cleaning.
- Avoid contacting moving parts.
- Do not operate in the presence of explosive and flammable fumes.
- Do not place fan or any parts near an open flame. Cooking or other heating appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions. Or has been dropped or damaged in any manner return appliance to nearest authorized service facility for examination repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- To disconnect grip plug and pull from wall outlet never yank on cord.
- Always use on a dry level surface.
- Do not operate without fan grills properly in place.
- This products intended for house hold use only and not for commercial or industrial use.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THIS FAN WITH ANY SOLID STATE SPEED CONTROL DEVICE.

READ AND SAVE THESE INSTRUCTIONS

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>