

Model 139.53682 (With 1 Remote Control)  
Model 139.53683 (With 2 Remote Controls)



Children operating or playing with a garage door opener can injure themselves or others. *The garage door could close and cause serious injury or death.*

Install the receiver (or any additional push buttons) out of the reach of children and away from all moving parts of the door and door hardware, *but where the garage door is visible.* Do not allow children to operate the push button(s) or the remote control(s).

*A moving garage door could injure someone under it.* Activate the opener only when the door is properly adjusted, you can see it clearly, and there are no obstructions to door travel.

**DISCONNECT POWER TO THE GARAGE DOOR OPENER BEFORE PROCEEDING.**

To comply with FCC rules, adjustments or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the transmitter battery. **THERE ARE NO USER SERVICEABLE PARTS.**



#### NOTICE TO U. S. CONSUMERS:

Some states prohibit the service or repair of garage door openers which cannot be made to comply with the safety standards contained in UL 325 (1988 revision). In order to comply with both the letter and the spirit of these laws, this universal remote control converter kit should not be used with any Sears Craftsman® garage door opener manufactured prior to April 1, 1982.

The **SECURITY+** Universal Remote Control Conversion Kit consists of a receiver and remote control(s). This accessory will convert almost any garage door opener to rolling code technology. The remote control sends a coded signal from outside the garage. Inside the garage, the plug-in receiver accepts the transmitted signal and starts the door opener. With **Security+**, the code between the remote control and the receiver changes with each use, accessing over 100 billion new codes.

**IMPORTANT:** To improve the security of your opener, discard your old remote controls and erase or reset your code. For maximum security and range, you must disable the existing receiver on your opener, otherwise it could still activate your opener:

- If there is an external receiver, disconnect power to it.
- If it is an integrated receiver, either clip off the component that feeds power to the receiver *or* remove the tuning slug and antenna from the receiver section. If you have a different brand of opener, contact the manufacturer for additional information on disabling the existing receiver.
- If you have a Sears opener with an SRT receiver, erase the old codes by holding down the SRT button for 6 seconds until the indicator light turns off.
- If you have code switches, reset them to a random code and deactivate the receiver as follows: On the opener panel, peel back the lower right corner of the label to expose the tuning slug (closest to the antenna), as shown. Remove the slug with a small hex head wrench and cut the antenna wire.

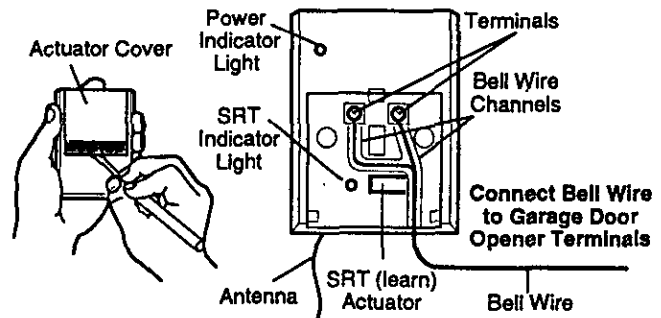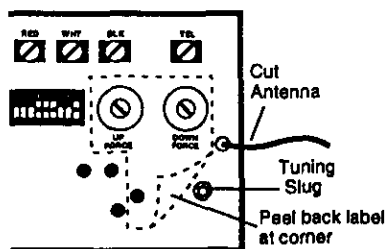

**OPEN RECEIVER:** Insert a small screwdriver in slot on receiver front panel as shown. Twist up actuator cover.

**CONNECT RECEIVER AND OPENER:** Remove about 1/4" of insulation from each end of the 2-strand bell wire. Connect one end to the receiver screw terminals (polarity is **NOT** required). Route wire along the channels and out the bottom as shown.

Connect the other end of the bell wire to the two opener terminal screws labeled "2" (white) and "1" (red), "common" and "command" or the terminals used for the push button control.

Use insulated staples (not supplied) to secure bell wire between receiver and opener. Length of bell wire depends on where the receiver will be installed. Replace the actuator cover.

Choose a 120Vac polarized outlet for the receiver which is **OUT OF THE REACH OF CHILDREN**. Plug receiver into selected outlet. Return power to the opener.

*Side two contains code setting instructions and service information.*

## PROGRAMMING THE RECEIVER

The receiver and remote control(s) have been factory preset with a matching code. The door will open when you press the **LARGE** push button. You can activate your opener with up to eight **SECURITY+** remote controls (with blue push buttons) and one **SECURITY+** Keyless Entry.


If you purchase additional remote controls to operate this receiver:

1. Remove the receiver actuator cover.
2. Press and **HOLD** the selected remote control push button (Illustration A).
3. Then press the **SRT (learn)** actuator on the receiver (Illustration B). The adjacent indicator light will **FLASH**. Release the remote control push button.

The opener will now operate when either the receiver actuator or the remote control push button is pressed.



**NOTE:** If the remote control push button is not held down until the receiver indicator light flashes, the receiver will not learn the code.

**To erase ALL remote control codes from memory:**  
**Press and HOLD receiver SRT actuator. Indicator light alongside will glow. When the indicator light turns OFF (in about 6 seconds) ALL codes will be erased.**

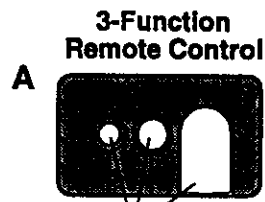


Select a remote control push button to operate receiver

## Universal Receiver

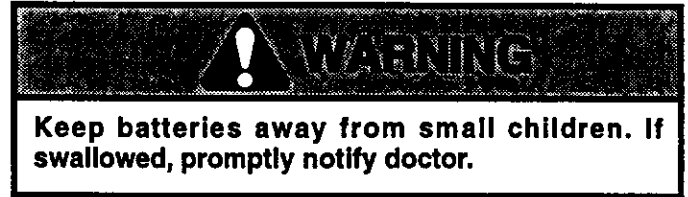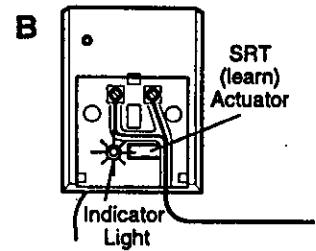

## THE REMOTE CONTROL BATTERIES

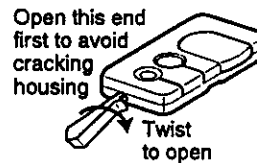


The lithium batteries should produce power for up to 5 years. Replace batteries *positive side down*, as follows: Use the visor clip or screwdriver blade to pry open the case as shown. To

replace the cover, insert the 3 tabs at the opposite end and snap shut.

## REPLACEMENT PARTS

Universal Receiver (complete) .....	41A5041-1
Receiver Actuator Cover .....	41A4926
Remote Control Housing Only (no circuit board) .....	41A5032
Visor clip .....	29B134
3V 2032 Lithium Battery .....	10A20
(1 required for Remote Model 139.53681B)	
3V 2016 Lithium Battery .....	10A19
(2 required for Remote Model 139.53681)	

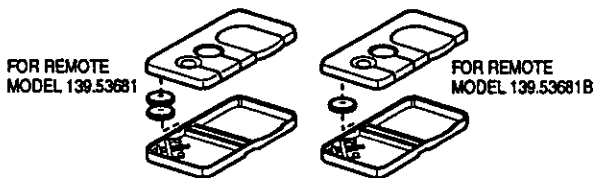

When ordering parts, always provide the following information:

- Product Type
- Model Number
- Part Number
- Part Description

For the repair or replacement parts you need  
**Call 7 am – 7 pm, 7 days a week**

**1-800-366-PART**  
**(1-800-366-7278)**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>