

Cuisinart®



COFFEE BAR™ Coffee Grinder

Models DCG-20 and DCG-20BK

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. **READ ALL INSTRUCTIONS.**
2. To protect against risk of electrical shock do not immerse cord, plug or grinder in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, before removing coffee and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized Cuisinart service facility for examination, repair or mechanical or electrical adjustment.
7. The use of attachments not recommended or sold by Cuisinart may cause fire, electrical shock, or risk of injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Check hopper for presence of foreign objects before using.
11. Use this appliance to grind roasted coffee beans only. Grinding other substances, such as nuts, spices or unroasted beans may dull the blade and cause poor grinding or injury.
12. **CAUTION:** Do not immerse in water

SAVE THESE INSTRUCTIONS


NOTICE:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

OPERATING INSTRUCTIONS

1. Plug cord into outlet.
2. Remove lid from base of grinder. If desired, measure beans in lid using measurement markings, before filling stainless steel bowl.
3. Fill stainless steel bowl with bean quantity desired. Do not fill beans above the top of the stainless steel bowl.
4. Place the lid onto grinder base.
5. Press and hold on/off button to begin grinding. Please note: A safety feature of this grinder requires that the grinder will not operate unless the lid is in place.
6. Grind until beans are ground to desired consistency. To stop grinding, release pressure from on/off button.
7. Remove plug from outlet.
8. Pour ground coffee into grinder lid.
9. Measure coffee with scoop (not included), tablespoon or lid measurement markings into coffeemaker filter basket. See measurement suggestions on reverse.

FOR HOUSEHOLD USE ONLY

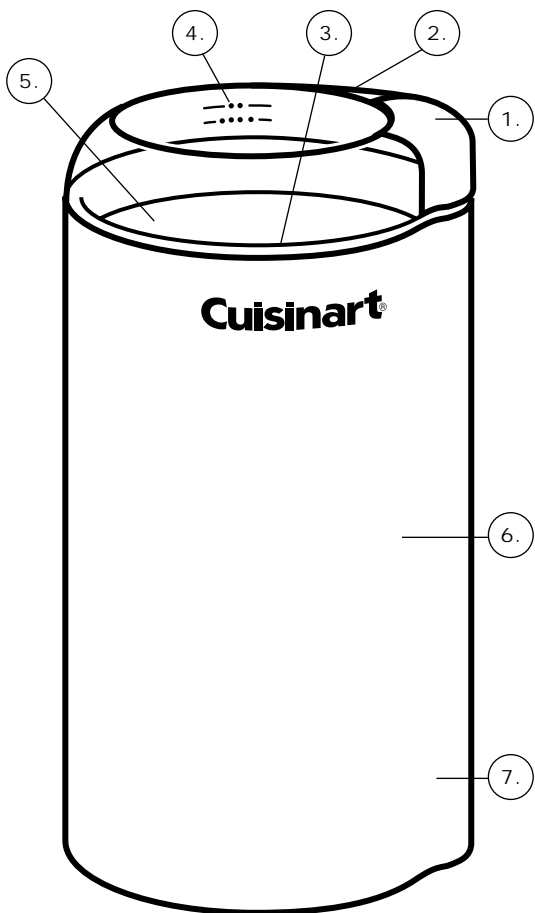

1. On/Off Button

2. Lid

3. Stainless Steel
Blades

4. Measurement
Markings

5. Stainless Steel
Bowl

6. Grinder Base

7. Cord Storage

CLEANING/STORAGE INSTRUCTIONS

1. Be sure that grinder plug has been removed from outlet.
2. Wipe inside of stainless steel bowl and lid with damp paper towel. Dry completely. If desired, lid may be washed in warm water or in the top rack of a dishwasher. **Never immerse the grinder base unit in water or other liquid.**
3. Store excess cord by pressing a section at a time into the cord storage area in the base of the unit. Up to 2 feet of cord can be stored.

WARRANTY:

The Cuisinart® Coffee Bar™ Coffee Grinder carries an 18-Month Limited Warranty.

This warranty is available to consumers only. You are a consumer if you are the owner of a Cuisinart® Coffee Bar™ Coffee Grinder that was purchased at retail for personal, family, or household use. Except as otherwise required by applicable state law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that should your Cuisinart® Coffee Bar™ Coffee Grinder prove to be defective within the warranty period, we will repair it or replace it at our option, without charge to you. To obtain warranty service, simply call our toll-free number: 800-726-0190, for additional information from our Consumer Service Representatives. Or, send the product to Consumer Service at Cuisinart, 150 Milford Road, East Windsor, New Jersey 08520. To facilitate the speed and accuracy of your return, please enclose a check or money order for \$4.00 for shipping and handling. (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions.)

GRINDING SUGGESTIONS:

Some general guidelines for grinding are listed below. However, times will vary depending upon the amount of coffee used and your personal preference. The best way to determine how coarse or fine to grind your coffee is to experiment with different grinds and coffee types to suit your taste.

Grind	Suggested Use	Grind Time
Coarse	Percolator/ French Press	10 Seconds
Medium	Automatic Drip	20 Seconds
Fine	Espresso	30 Seconds

MEASUREMENT SUGGESTIONS:

For the richest coffee flavor, we suggest using one and one-half (1-1/2) rounded tablespoons of ground coffee for every 5 ounces of water. If you have a Cuisinart® Coffee Bar™ Coffeemaker, the cups are measured in 5-ounce increments.

The measurement markings on the lid indicate reference measurements.

For example, for automatic drip coffee, if you fill the lid to the ●●●● marking with whole beans, you will have enough ground coffee to reach the ●● marking. This equals enough ground coffee for two 5-oz. cups, using the Cuisinart recipe.

Note: These markings are approximate. Experiment with different quantities to determine what works best.

© 2000 Cuisinart

Cuisinart® is a registered trademark of Cuisinart

150 Milford Road, East Windsor, NJ 08520

Printed in China. 00CU13423 IB-3714

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>