

# Cuisinart®

INSTRUCTION  
AND RECIPE  
BOOKLET



**PerfectTemp™ Programmable  
Tea Steeper & Kettle**

**TEA-100**

# IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.**
3. Do not touch hot surfaces. Use handle.
4. To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD, PLUG OR BASE UNIT** in water or other liquids.
5. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Return appliance to the nearest Cuisinart Authorized Service Facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always put kettle on base, then plug cord into wall outlet. To disconnect, push button to Off, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Scalding may occur if the lid is removed during the heating cycle.
14. Twist-lock lid securely onto kettle before serving any beverages.
15. The kettle is designed for use with this appliance. It must never be used on a range top. (Unless specific instructions for use on a range top are provided and include the precautions to be observed.)
16. Do not set a hot container on a wet or cold surface.
17. Do not use a cracked container or a container having a loose or weakened handle.
18. Do not clean container with cleansers, steel wool pads, or other abrasive material.

**FOR HOUSEHOLD  
USE ONLY  
SAVE THESE  
INSTRUCTIONS**



---

## **WARNING: RISK OF FIRE OR ELECTRIC SHOCK**



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's



enclosure that may be of sufficient magnitude to constitute a risk of fire or electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## **SPECIAL CORD SET INSTRUCTIONS**

A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Extension cords are available and may be used if care is exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals, or tripped over.

## **NOTICE**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## **UNPACKING INSTRUCTIONS**

1. Place the box on a large, sturdy, flat surface.
2. Remove the instruction book and any other literature. Remove the kettle lid.
3. Turn the box on its side and slide the unit from the box.
4. The base is located on the outside of the pulp molded insert. Remove the base and then pull the inserts away from the kettle.
5. Remove polybags from the unit.
6. Before using for the first time, we recommend rinsing kettle and steeping assembly with water.

We suggest you save all packing materials in the event that future shipping of the machine is needed. Keep all plastic bags away from children.

## **CONTENTS**

Important Safeguards . . . . .	1
Cord Set and Unpacking Instructions . . .	2
All About Tea . . . . .	3
Features and Benefits . . . . .	4
Operating Instructions . . . . .	5
Cleaning, Care and Maintenance. . . . .	6
Troubleshooting . . . . .	7
Recipes. . . . .	8
Warranty . . . . .	13

---

## A BRIEF HISTORY OF TEA

The origins of tea can be traced back nearly 5,000 years to a legendary emperor of China, an herbalist. It is believed that leaves from twigs he was burning floated into a kettle of boiling water. Thus tea was born and soon flourished throughout southern Asia. As trade routes expanded, tea made its way to the West, and today is enjoyed around the world.

## THE HEALTH BENEFITS OF TEA

Many teas are brimming with healthful benefits like natural vitamins, minerals, and antioxidants. Drinking any tea rehydrates the body, and its antioxidants may offer protections against a wide range of diseases. A cup of tea can be a gentle start to the day, a soothing mid-afternoon break, or a comfortable way to unwind and relax each evening – it all adds up to a healthy mind, body, and spirit.

## THE ART OF STEEPING TEA

Great care is taken to create each tea's unique character. When the temperature is suited to the particular tea, and steeping time is perfect, tea lovers can savor and appreciate all of tea's naturally aromatic flavors and health benefits. Refer to the chart below for our recommendations. But remember, tastes and teas vary; you can always adjust to your personal preference. Enjoy!

For most teas, the best recipe is 1 teaspoon or bag of tea per cup of water. Some herbal blends can benefit from a bit more. When making a full pot, we suggest an extra teaspoonful.

Type	Description	Temp	Time
<b>Delicate</b>	Delicate teas can be found in all varieties, be it green, black, etc. As the title describes, it is a more delicate version of that specific tea therefore requiring a lower steeping temperature and time.	<b>160°F</b>	<b>1–2 min</b> (Default - 1 ½ min)
<b>Green</b>	There are many different varieties depending from which region of the world the tea originates. Loaded with antioxidants, green tea is touted for its health benefits. The perfect steeping time makes or breaks this tea – over-steeping will create a very bitter-tasting cup of tea. Try it iced with slices of lemon!	<b>175°F</b>	<b>2–3 min</b> (Default - 3 min)
<b>White</b>	While excellent alone, this delicate tea also pairs beautifully with orange or other fruit essences. Spearmint and peppermint are also common companions.	<b>185°F</b>	<b>2–4 min</b> (Default - 3 min)
<b>Oolong</b>	This handcrafted tea is an excellent base for making flavorful tea blends. Available in a wide variety of types, ranging from fruity to floral, this tea has similar health benefits to those of green tea.	<b>190°F</b>	<b>3–4 min</b> (Default - 3 min)
<b>Herbal</b>	Tisane or herbal teas – technically are not “teas” at all. Usually made of edible ingredients such as dried herbs, fruits, flowers, spices, and seeds, they are typically caffeine-free alternatives to traditional teas.	<b>200°F</b>	<b>4–6 min</b> (Default - 5 min)
<b>Black</b>	This tea works very well when lightened with milk or cream and sweetened with honey or sugar. Earl Grey is a popular black tea blend that is mixed with bergamot, giving it an orange-like note. Enjoy first thing in the morning or for an afternoon pick-me-up.	<b>212°F</b>	<b>3–5 min</b> (Default - 4 min)

# FEATURES AND BENEFITS

1. **Kettle Lid** for use when heating water without steeping, or serving iced tea
2. **Steeping Assembly** for use when steeping tea
  - a. **Steeper Lid** turns to raise and lower tea infuser
  - b. **Tea Infuser Cover**
  - c. **Tea Infuser** holds loose or bagged tea
  - d. **Infuser Holder Tabs**
  - e. **Infuser Holder**
3. **Removable Spout Filter**
4. **Stay-Cool Handle**
5. **Glass Kettle** with easy-to-read water level markings
6. **Power Base with 360° Swivel**
7. **Control Panel**
  - a. **Power Button** turns unit on and off
  - b. **Select Button** scrolls through tea/temperature options and adjusts steeping time
  - c. **Temperature Start Button** starts heating process
  - d. **Tea/Temperature Options**
    - Delicate (160°F)
    - Green (175°F)
    - White (185°F)
    - Oolong (190°F)
    - Herbal (200°F)
    - Black (Boil – 212°F)
  - e. **Time Start Button** starts countdown steeping timer
  - f. **LCD Display** counts down steeping time and Keep Warm time
  - g. **Keep Warm Button** selects/deselects this option, and adjusts Keep Warm time



 
# OPERATION

## SETUP


1. Remove steeping assembly from kettle by aligning the infuser tab arrows in the unlocked position and lifting up, by the infuser tabs.
2. Add fresh, cold water to the kettle, filling it for the number of cups of tea you wish to make—up to 4 cups (max fill for tea is 1 Liter).



3. Remove tea infuser from holder by turning the steeper lid, so lid arrow lines up with REMOVE. Lift infuser cover to put the proper amount of loose or bagged tea into the tea infuser based on the number of cups of tea you wish to make.

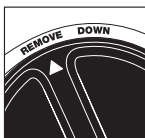

 4. Return tea infuser to the infuser holder so lid arrow lines up with REMOVE. Lock the assembly in the raised position by turning steeper lid so arrow lines up with UP.

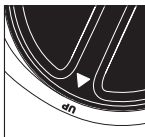

5. Insert the raised steeping assembly into the kettle. Align the infuser tab arrows and turn the assembly to the locked position with the infuser tabs.

## HEATING WATER

 
1. Turn unit on by pressing the Power button. Make sure the kettle is on the base.
2. Press Select button to scroll through and select temperature for the type of tea you are steeping.
3. Press Temp Start to begin heat-up. Selected temperature will flash during heating. NOTE: Keep Warm will be selected unless you deselect it. See more information on Keep Warm on page 6.
4. Once water reaches the selected temperature, two beeps will sound,

indicating that the unit is ready to steep tea. A recommended steeping time, determined by the tea selected, will begin flashing in the LCD display.

Note: Your unit will maintain the selected temperature and continue flashing steep time for 5 minutes. If Time Start is not pressed, the unit will enter Keep Warm mode.

## STEEPING TEA

1. Recommended steeping time may be adjusted. Simply press the Select button to advance time in 30-second increments up to 10 minutes. Press and hold the button to scroll more quickly.
2. Once desired time appears in LCD display, lower the tea infuser into the heated water by turning the lid so arrow lines up with DOWN position; press Time Start to begin countdown timer. Water temperature will continue to be maintained.
3. When the timer reaches 00:00 the unit will beep 5 times. Raise the tea infuser by turning the lid back so arrow lines up with UP. Keep Warm will flash to indicate the unit has entered Keep Warm mode.
4. Lift the kettle off the base to serve. NOTE: When kettle is off base, lights will flash to let you know the unit is paused.
5. When kettle is returned to base, the Keep Warm cycle will pick up right where it left off. NOTE: To turn the unit off at any time, press the Power button. Last selected settings will remain in the unit's memory until the unit is unplugged.

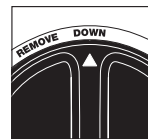

## HEATING WATER WITHOUT STEEPING TEA

Remove steeping assembly and add water to the kettle—max fill for water is 1.2 Liters. Cover with the kettle lid, so that arrow on kettle lid lines up with arrow on the handle. Follow directions for “Heating Water.”



---

## ICED TEA

Any tea can be iced. Simply increase the amount of tea and steep for the recommended time (see our recipe on page 11). Once steeped, make sure your unit is no longer heating or in Keep Warm mode, and remove the steeping assembly. Add ice and/or cold water up to the top of the glass and cover with the kettle lid for serving. You can put the kettle in the refrigerator for additional cooling, or serve immediately over ice.

## KEEP WARM MODE

Keep Warm is the unit's default option that automatically maintains your selected temperature for 30 minutes.

If instead you would like your unit to turn off after steeping, Keep Warm can be turned off (or back on) at any time before entering Keep Warm mode by pressing the Keep Warm button. When the indicator light is on, the function is selected.

Once your unit has entered Keep Warm mode, the time can be adjusted by pressing the Keep Warm button, scrolling through 5 to 30 minutes. To turn the unit off at any time, press the power button.

NOTE: If temperature selected was Boil, a temperature just below the boiling point will be maintained.

## MEMORY FEATURE

The unit features an internal memory that lets you remove the kettle from the base for up to 2 minutes without the unit shutting off. Instead, heating or Keep Warm will be paused. Lights will flash while the kettle is off the base. When the kettle is returned to the base the cycle will resume from where it left off.

## BOIL-DRY PROTECTION

Your unit is equipped with boil-dry protection. If it is heating without enough water in the unit, the heater will automatically shut off to avoid damaging the element. All indicators will flash and buttons will not work.

Once the kettle has cooled down, lift it off the base, then replace it to reset. The quickest way to cool the unit down is to fill the kettle with cold water.

## CLEANING, CARE AND MAINTENANCE

Unplug your unit and allow it to cool before cleaning. Rinse the kettle or wash with warm soapy water. Wipe the outside of the kettle and base of unit with a soft, damp cloth. Be sure that the electric kettle socket is kept dry during all cleaning.

**Steeping Assembly and Kettle Lid** – You can wash in warm soapy water and rinse thoroughly, or place on the top rack of the dishwasher.

**Removable Spout Filter** – This kettle has a filter to keep the water/tea clean. Remove it to clean by grasping and pulling upward. Run filter under hot water and rub with a clean cloth or brush, then snap it back into place.

Dry all parts after every use.

**Never immerse kettle or power base in water. Any other servicing should be performed by an authorized service representative.**

## DECALCIFICATION

Decalcification refers to removing mineral deposits, which may form in the interior of the kettle and may result in discoloration.

To get the best performance from your unit, decalcify your unit from time to time. Frequency will depend on the hardness of your water and how often you use the unit.

We suggest using a kettle descaler in order to dissolve these deposits or scale. Follow the directions on the descaler package.

If a commercial descaler is not available, fill the kettle with enough white vinegar to cover the bottom by about ½ inch. Heat the vinegar to a boil. Repeat this with cooled vinegar until all deposits are removed. When the descaling process is complete, empty the kettle and rinse out several times with clean water.

# TROUBLESHOOTING

SUBJECT	QUESTION	ANSWER/SOLUTION
Power	Why won't my unit turn on?	Check to make sure your base is plugged into a functional outlet and press the On/Off button.
		Lift and replace the kettle on the base to make sure it is properly in place and press the On/Off button.
		Contact Customer Service at 1-800-726-0190.
	Why is my unit turning itself off?	The unit will shut off automatically after Keep Warm time has elapsed. This is normal.
The unit will shut off automatically after the steeping countdown time has elapsed or after 5 minutes of no use following the heating stage if Keep Warm has not been selected. This is normal.		
Programming	Lights are flashing, what does it mean?	The selected tea/temperature will flash during heating. Once the unit has reached temperature this light will stop flashing.
		When the kettle is off the base, lights will flash to indicate that the unit is paused. Once you return the kettle to the base the unit should resume its current function.
		All indicators will flash and buttons will not work if the water level in the kettle is too low for heating. To avoid damaging the heating element, the unit will not work until it has cooled. Remove the kettle from the base, add water, return it to the base and begin heating again.
	When can I change my settings/selections?	Temperature can be changed before heating begins, by pressing the Select button. Once heating has begun, turn off the heater and start again to select a new temperature.
		You must wait for the unit to reach temperature to adjust countdown time by pressing the Select button.
	Why isn't Keep Warm holding my temperature selection?	Make sure Keep Warm mode is selected; the indicator will be lit when selected.
If your temperature selection is Black (Boil), Keep Warm will hold a temperature just below a boil in order to avoid the unit boiling dry. This is normal.		
Heating Water and Making Tea	Why are there two Max Fill lines?	The max fill for steeping tea is 1L. If you are not using the steeping assembly the max fill is 1.2 L.
	Why is my kettle taking longer than usual to heat?	Several variables can affect heat-up time, including room temperature, how much water is in the kettle and the temperature of the water.
	My tea is coming out too strong (or too weak). What should I do?	The strength of your steeped tea is affected by the ratio of water to leaves, as well as the length of time the leaves are steeped. The more leaves, the stronger the results. The more steeping time, the stronger the result. Our recommendations can be found on page 3 but as teas and tastes vary, adjust accordingly.
Cleaning	Can I put my unit in the dishwasher?	Do not immerse or put the base of unit or kettle in the dishwasher. Clean the base with a clean damp cloth. Rinse the kettle or wash with warm soapy water.
		The steeping assembly and lid are top-rack dishwasher safe.



---

# RECIPES

We've included a variety of tea recipes to enjoy with your Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle.

Loose teas can be found in most supermarkets, but for additional tisane, herbs, flowers and other ingredients to make your favorite blends, head to your local natural food store. Many tea houses and cafes not only serve tea, but also sell blends and single ingredients. Always check online retailers as well.

Don't forget to use the kettle lid to prepare hot water for your favorite hot breakfast cereals, instant soup and hot chocolate drinks.

## “Relax” Tea

*De-stress and relax with this chamomile herbal blend.*

Makes 4 servings

- 4 cups water**
- 2½ teaspoons dried chamomile**
- 1 teaspoon rose hips**
- ½ teaspoon dried spearmint**
- ½ teaspoon lemon balm**
- ½ teaspoon anise seed**

Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 4-cup marking.

Put the remaining ingredients as listed above into the tea infuser. Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn kettle on, select the Herbal setting (200°F) and press Temp Start.

Once the water reaches temperature, the timer will display 5 minutes. Lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position. Serve immediately or leave on Keep Warm until ready to serve.

## Throat Soother

*Just add honey and you have instant relief for a sore throat. But don't limit yourself to when you are under the weather—this tea is soothing anytime.*

Makes 5 servings

- 4 cups water**
- 3 teaspoons loose green tea**
- 1 teaspoon lemon balm**
- 1 teaspoon dried ginger**

Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 4-cup marking.

Put the remaining ingredients as listed above into the tea infuser. Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn kettle on, select the Green setting (175°F) and press Temp Start.

Once the water reaches temperature, set the timer to 3 minutes and lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position. Serve immediately or leave on Keep Warm until ready to serve.

---

## Vitamin C Tea

*Perfect for that extra antioxidant boost.*

Makes 4 servings

- 4 cups water**
- 1½ teaspoons loose oolong tea**
- 1½ teaspoons dried hibiscus**
- 1½ teaspoons rose hips**
- ½ teaspoon dried ginger**
- ¼ teaspoon lemon balm**
- 2 5-inch strips dried orange peel, broken into small pieces**

Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 4-cup marking.

Put the remaining ingredients as listed above into the tea infuser. Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn kettle on, select the Oolong setting (190°F) and press Temp Start.

Once the water reaches temperature, set the timer to 4 minutes. Lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position. Serve immediately or leave on Keep Warm until ready to serve.

## “Sweet” White Tea

*This white tea blend uses dried blueberries and vanilla to give it a hint of natural sweetness.*

Makes 4 servings

- 4 cups water**
- 1½ teaspoons loose white tea**
- ½ teaspoon dried hibiscus**
- ¼ teaspoon dried spearmint or peppermint**
- 3 teaspoons dried blueberries**
- 2 5-inch strips dried orange peel, broken into small pieces**
- 1 vanilla bean, split down the middle and cut into small pieces**

Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 4-cup marking.

Put the remaining ingredients as listed above into the tea infuser. Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn kettle on, select White setting (185°F) and press Temp Start.

Once the water reaches temperature, set the timer to 4 minutes and lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position. Serve immediately or leave on Keep Warm until ready to serve.

---

## Chai

*A smooth and mild version, this tea is traditionally served sweet and with milk.*

Makes 4 servings

- 4 cups water**
- 3 whole cinnamon sticks\***
- 1 vanilla bean, chopped**
- ¾ teaspoon dried ginger**
- 1½ teaspoons allspice berries**
- 2 teaspoons cardamom pods**
- ¾ teaspoon whole cloves**
- 4 teaspoons loose black tea**

Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 4-cup marking.

Put the remaining ingredients into the tea infuser (the cinnamon sticks must be standing up, and then add the remaining ingredients). Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn kettle on, select the Black setting (Boil-212°F) and press Temp Start.

Once the water reaches temperature, set the timer to 8 minutes and lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position. Serve immediately or leave on Keep Warm until ready to serve.

## Apple-Cinnamon Tea

*The perfect tea to warm up with in the fall months.*

Makes 4 servings

- 4 cups water**
- 4 whole cinnamon sticks\***
- ¾ cup chopped, dried apples**
- 1½ teaspoons loose black tea**
- 3 teaspoons mulling spices**

Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 4-cup marking.

Put the remaining ingredients into the tea infuser (the cinnamon sticks must be standing up, and then add the remaining ingredients). Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn kettle on, select the Black Setting (Boil-212°F) and press Temp Start.

Once the water reaches temperature, set the timer to 8 minutes and lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position. Serve immediately or leave on Keep Warm until ready to serve.

\* Cinnamon sticks should not be taller than the tea infuser. Stand cinnamon sticks straight up in the infuser or the assembly may not be able to close.

---

## Bubble Tea

*An Asian treat, the “bubbles” (large pearl tapioca) are an acquired taste, but they are what really make this delicious tea special. A lot of these steps can be done the day before so that they can chill/soak overnight.*

Makes 2 servings

- 2 tablespoons large pearl tapioca, dried**
- 2 cups room temperature water**
- ¼ cup packed light brown sugar**
- ¼ cup granulated sugar**
- 3 cups water**
- 2 teaspoons black tea (or two tea bags)**
- ¼ cup half & half ice (optional)**

Put the dried tapioca in a medium bowl and add the room temperature water. Cover and let sit overnight to soften. Once plumped, strain, discarding water and reserving the tapioca (tapioca should be gummy-like in texture and taste).

Prepare the sugar syrup. In a small saucepan, combine the sugars and 1 cup water and set over medium-low heat. Let mixture heat until all of the sugar has dissolved. Cool mixture to room temperature.

Prepare the tea. Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 2-cup marking. Put the tea into the tea infuser. Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle. Turn kettle on, select the Black setting (Boil-212°F) and press Temp Start.

Once the water reaches temperature, the timer will display 4 minutes. Lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position. Turn unit off and cool to room temperature.

To serve: Put 2 tablespoons each of the plumped tapioca, sugar syrup and half & half into a tall glass. Add 1 cup of the tea into the glass and stir to combine. Add ice if you desire a cooler drink. Repeat with second serving.

Serving note: Traditionally, Bubble Tea is served with a large, wide straw so the tapioca can be enjoyed while sipping the tea.

## Iced Tea

*Double brewing tea makes for a delicious iced tea. Serve immediately over ice or chill in the refrigerator. The recipe below calls for black tea, but any tea can be iced. Teas and tastes vary – so feel free to experiment with the amount of tea to use to find your favorite strength. Doubling works well for black tea, but go a little less for green.*

Makes four 8-ounce drinks

- 4 cups cold water**
- 9 teaspoons loose black tea (or 9 tea bags)**
- ice cubes**

Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 4-cup marking.

Put the tea into the tea infuser. Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn the kettle on, select the Black setting (Boil-212°F) and press Temp Start.

Once the water reaches temperature, the timer will display 4 minutes. Lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, turn unit off and raise the tea infuser from the water by turning the steeper lid to the UP position. Remove the tea infuser from the kettle and add ice, about 2 standard trays or 24 ice cubes. Cover with kettle lid for serving.

To serve, pour into tall glasses of ice or put kettle in refrigerator to chill completely.

---

## Ginger Jasmine Mar-“tea”-ni

Makes two 5-ounce drinks

### Ginger Syrup:

- ½ cup water**
- ½ cup granulated sugar**
- 2 tablespoons chopped ginger (approximately from one 2-inch piece of ginger)**

### Tea:

- 4 cups water**
- 4 teaspoons loose jasmine**

### Cocktail:

- 2 ounces chilled jasmine tea**
- 4 ounces vodka**
- 2 ounces ginger syrup**
- ½ ounce peach schnapps**
- ½ ounce fresh squeezed orange juice (about ½ small orange)**

### Prepare ginger syrup:

Put the water and sugar in a small saucepan and place over medium heat. Bring just to a boil in order to dissolve the sugar. Add the chopped ginger and allow syrup to simmer for about 30 minutes to infuse the flavor. Strain and reserve the syrup, discarding the ginger. Chill the syrup in the refrigerator until needed.

### Prepare the tea:

Fill the Cuisinart® PerfecTemp™ Programmable Tea Steeper & Kettle with water to the 4-cup marking.

Put the jasmine tea into the tea infuser. Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn kettle on, select Herbal setting (200°F) and press Temp Start.

Once the water reaches temperature, the timer will display 5 minutes. Lower the tea infuser into the heated water by turning the steeper lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position. Put in refrigerator to chill.

Prepare the cocktail: Fill a cocktail shaker with ice. Pour cocktail ingredients into the shaker. Shake well and pour equally between 2 martini glasses. Serve immediately.

## Lavender-Green Tea

*This tea is equally delicious hot or iced. It can be turned into a refreshing sorbet as well.*

Makes 4 servings

- 3½ cups water**
- 3 tablespoons dried lavender**
- 4 teaspoons green tea**

Fill the Cuisinart PerfecTemp™ Programmable Tea Steeper & Kettle with water.

Put both the lavender and green tea into the tea infuser. Insert the tea infuser into the infuser holder and lock in the raised position. Insert raised steeping assembly into kettle.

Turn kettle on, select the Green Setting (175°F) and press Temp Start.

Once the water reaches temperature, set the timer to 8 minutes, by pressing Select, and lower the tea infuser into the heated water by turning the lid to the DOWN position. Press Time Start to begin countdown.

Once the time has elapsed, raise the tea infuser from the water by turning the steeper lid to the UP position.

If enjoying hot, serve immediately or leave on Keep Warm until ready to serve. If serving iced, turn the unit off and remove the tea infuser from the kettle. Add about two full trays of ice, or about 24 ice cubes. Cover with kettle lid for serving.

For a sorbet:

- 1 recipe Lavender-Green Tea, hot**
- 2 cups granulated sugar**
- pinch salt**
- 1 tablespoon honey**
- 2 teaspoons pure vanilla extract**
- 2 tablespoons fresh lemon juice**

Pour the tea into a large bowl. Add the remaining ingredients and stir until the sugar is dissolved. Refrigerate until completely cooled.

Process in a Cuisinart® Ice Cream Maker according to the model's instructions.

---

# WARRANTY

## Limited Three-Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® PerfectTemp™ Tea Steeper & Kettle that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® PerfectTemp™ Tea Steeper & Kettle will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, [www.cuisinart.com](http://www.cuisinart.com) for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

## CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a non conforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart® products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If neither of the above two options results in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty. California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement by calling our Consumer Service Center toll-free at 800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

## BEFORE RETURNING YOUR CUISINART® PRODUCT

If your Cuisinart® PerfectTemp™ Tea Steeper & Kettle should prove to be defective within the warranty period, we will repair or, if we think necessary, replace it. To obtain warranty service, please call our Customer Service Center toll-free at 1-800-726-0190 or write to: Cuisinart, 7811 North Glen Harbor Blvd. Glendale, AZ 85307. To facilitate the speed and accuracy of your return, enclose \$10.00 for shipping and handling. (California residents need only supply a proof of purchase and should call 1-800-726-0190 for shipping instructions.) Please be sure to include your return address, description of the product's defect, product serial number, and any other information pertinent to the return. Please pay by check or money order. **NOTE:** For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Your Cuisinart® PerfectTemp™ Tea Steeper & Kettle has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

**Important:** If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and to ensure that the product is still under warranty.



# Cuisinart®

SAVOR THE GOOD LIFE®



Coffeemakers



Blenders



Juicers



Cookware



Tools and  
Gadgets

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances, cookware, tools and gadgets.

**[www.cuisinart.com](http://www.cuisinart.com)**

©2011 Cuisinart  
150 Milford Road  
East Windsor, NJ 08520

Printed in China

11CE119844

U IB-10504



Version no: TEA100 IB-10504
Size: 152 mm (W) X 203 mm (H) Total Pages: 16pps
Material: Cover: 157gsm matt artpaper Inside: 120gsm gloss artpaper
Coating: Gloss varnishing in cover
Color: Cover: 4C+1C(K) Inside: 1C+1C(K)
Die cut:
Bar Code:
Date: 07/06/11 (01)
Coordinator: Astor You

 CHUNG TAI PRINTING HOLDINGS LTD.  
中大印刷集團有限公司

Tel: 2669 6173 Fax: 2677 6556



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>