

BATTERY AND LIGHT REPLACEMENT

Please refer to the instruction booklet for assembly instructions.

You'll get years of enjoyment from your Cuisinart Salt and Pepper Mills, but even rechargeable batteries don't last forever! It's easy to extend the life of your mills by replacing them. Order replacement batteries and light bulbs from our Customer Service Center at 800-726-0190.

REPLACING THE BATTERIES:

Twist to detach spice holder from mill handle. Turn the black plastic cross bar located on the underside of the handle counterclockwise. (See diagram A) Turn the handle over, and the battery holder will easily slide out of the stainless steel shell. (See diagram B) Replace with rechargeable NiMH AA 1300mAh batteries only. Place battery holder into

handle lining up the arrows on the battery holder and stainless steel shell and turn crossbar clockwise to lock.

REPLACING THE LIGHT:

To remove the light bulb on the bottom of the mill, grasp the bulb on either side and pull it out. To replace the bulb, plug it back in with the metal wires facing the raised tabs on either side of the sleeve.

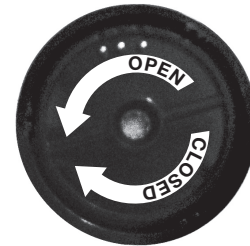


diagram A



diagram B

Cuisinart®

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>