

## 1 Review Package Contents

Make sure that the package contains the following items. If any items are missing, contact the reseller.

- DMP-210/220 Player
- Drivers and Software on CD-ROM
- Earphone
- USB Cable
- User's Manual
- Quick Install Guide
- 1 x AA Alkaline Battery

## 2 Driver and Manager Installation

The driver enables the Manager software to communicate with the DMP-210/220. When you install the Manager software, the drivers will automatically be copied to the Windows system directory.



### Note:

**Install the Manager program before connecting your DMP-210/220 to the USB port.** The Manager program loads the appropriate drivers necessary to complete the installation. If the device is connected before installing the Manager program, disconnect the DMP-210/220 from the USB port, exit the "Add New Hardware Wizard" screen and restart your computer.

## Driver and Manager Installation *Continued...*

- Make sure your computer is turned on.
- Insert the DMP-210/220 Driver CD into the CD-ROM.
- The Autorun screen will appear automatically.



- Click on the button labeled “**Install Manager**”

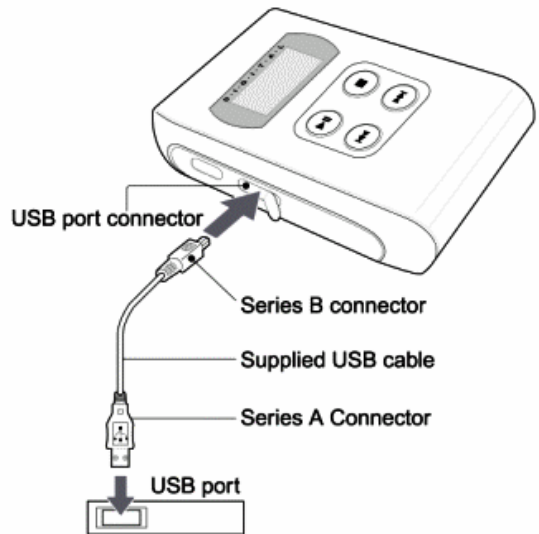 
**Note:** *If the Autorun screen does not appear, click on Start and select Run. In the run dialog box, type "drive:\autorun.exe" and click OK. Where “drive” is the letter of your CD-ROM drive.*

- Follow the on-screen instructions to complete the Manager installation.
- Reboot the computer.

### 3

## Connect the DMP-210/220 to the PC

- Open the battery compartment and insert the battery supplied with this package. Be sure to match the correct polarity.
- Press the **Play** button to turn on the DMP-210/220. The DMP-210/220 must be powered on before connecting to the computer via the USB port.
- Connect the type “A” end of the USB cable to the USB port on your computer. (This is the flatter, rectangular end of the USB cable)
- Connect the other end of the USB connector on the DMP-210/220. (This is the smaller, square end of the USB cable)
- Windows will detect and load all necessary drivers when the DMP-210/220 is connected to the USB port for the first time.

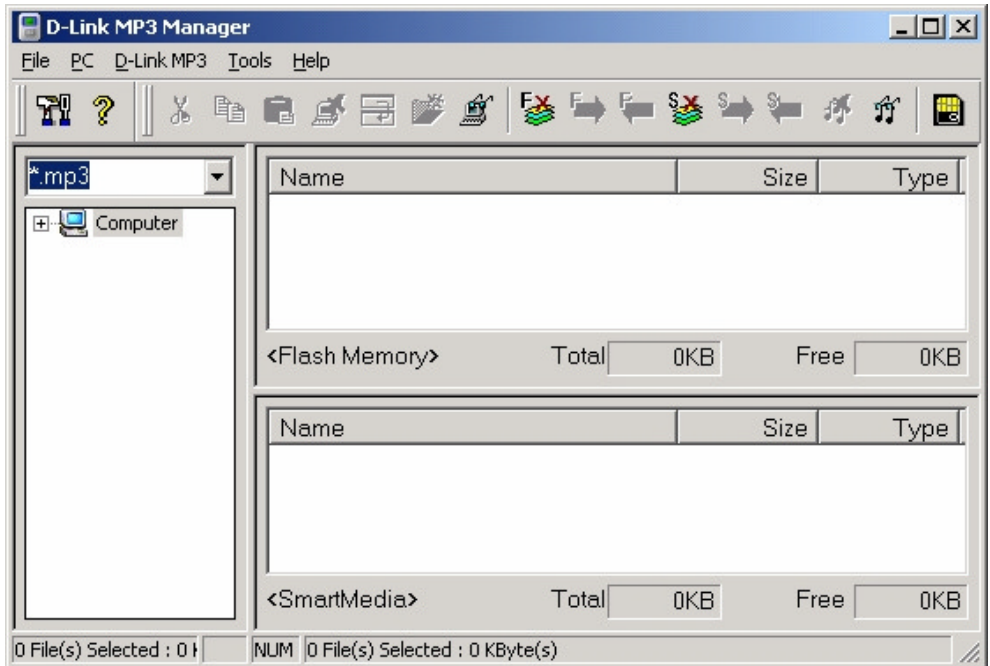 



**Note:** *Windows 2000 users may be prompted by a “Digital Signature Not Found” screen. Click “Yes” on each screen to allow the installation to continue.*

# 4



## Downloading Music to the DMP-210/220

- Start the Manager program by clicking on:  
**Start > Programs > D-Link MP3 > D-Link MP3 Manager**
- The following screen will appear



- On the **Left** side, select the **Drive** and **Folder** of your MP3 files.
- Select the MP3 files you wish to download to the DMP-210/220.
- Press the  **Send to DMP-210/220** button to download the selected MP3 files to the DMP-210/220.
- Once the download is successful, the **Flash Memory** section will refresh and show the songs currently downloaded to the DMP-210/220.

## Downloading Music to the DMP-210/220 *Continued...*

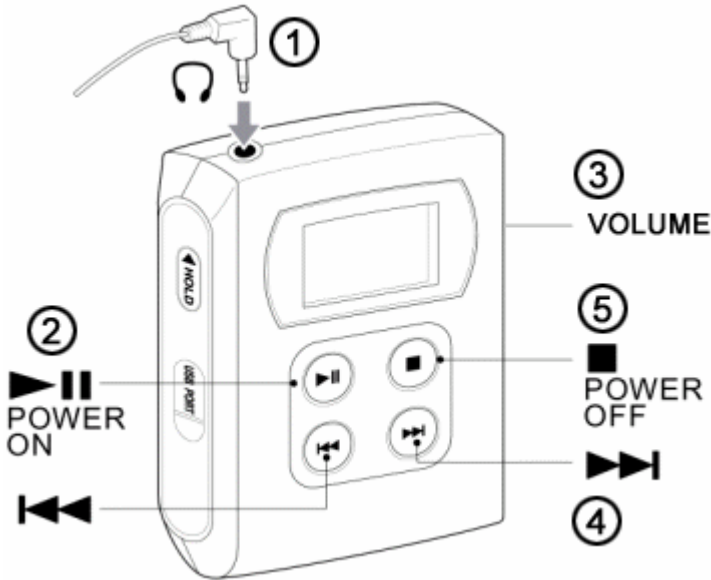 
- You may also upgrade the available memory by inserting a SmartMedia Card. SmartMedia Cards are available at most electronic stores. Refer to the User's Manual for more information.
- When using SmartMedia Cards, you will need to click the  select button to download music to the SmartMedia memory.
- Pressing the  **Update** button will refresh the view of which files are downloaded to the DMP-210/220.






Additional information and instructions are provided in the User's Manual.

# 5

## Playing Music on the DMP-210/220

Please refer to the following illustration for feature and button location.



1. Connect the supplied earphones to the earphone  jack of the player.
2. Press the  Play/Pause button to start playback.  
Playback starts from the MP3 file that you played the last time you used the DMP-210/220.
3. Adjust the volume to a comfortable level.
4. Press the  or  button to change the track number.
5. To stop playback, press the  **Stop** button.

# 6

## Troubleshooting

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION</b>
No power	Unit has not been turned on.	Press the <b>Play</b> button to turn the power on.
	No battery is inserted.	Insert proper battery.
	Battery is dead.	Replace the battery with a new battery.
I can't hear any music	Unit has not been turned on.	Press the <b>Play</b> button to turn the power on.
	Volume is set too low.	Press the <b>Volume Up</b> button to increase the volume to a comfortable level.
	No MP3 files have been downloaded to the unit.	Download MP3 files to the player.
The manager software doesn't recognize the DMP-210/220	USB cable is not connected properly	Make sure that the USB cables are connected securely.
	The DMP-210/220 is not turned on.	Press the <b>Play</b> button to turn the power on.
	The drivers have not been installed.	Install the drivers off of the installation CD.
I can't play any tracks on the SmartMedia card.	The SMC card is not inserted correctly.	Remove the SMC card and insert it securely.
	The SMC card is not inserted.	Insert the SMC card into the SMC slot on the side of the DMP-210/220.
	There are no MP3 files on the SMC card.	Run the Manager software and make sure that <b>External</b> memory is selected in the <b>Drive</b> drop-down box on the MP3 Device.

# 7

## Tips and Technical Support

- When connecting the USB cable to the computer, ensure that the USB cable is inserted securely.

### Caution:

- Listening at loud volumes for extended periods of time may damage hearing and may result in loss of hearing.
- Do not attempt to service this product. Contact D-Link Technical Support for instructions on servicing.
- To reduce the risk of fire or electrical shock, do not expose this product to water or moisture.
- Do not expose this product to extreme heat.
- Remove the battery when not in use for extended periods of time.

## Technical Support

D-Link provides free technical support for customers within the United States throughout the warranty period of this product. U.S. customers can contact D-Link Technical Support through our web site, e-mail or by phone.

### **D-Link Technical Support over Telephone :**

(949) 790-5290

6 a.m. to 6 p.m. Monday thru Friday

### **D-Link Technical Support over the Internet:**

[www.dlink.com](http://www.dlink.com)

If you are a customer residing outside of the United States, please refer to the list of D-Link locations located toward the end of the User's Manual.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>