


VACUUM CLEANER

RC-105

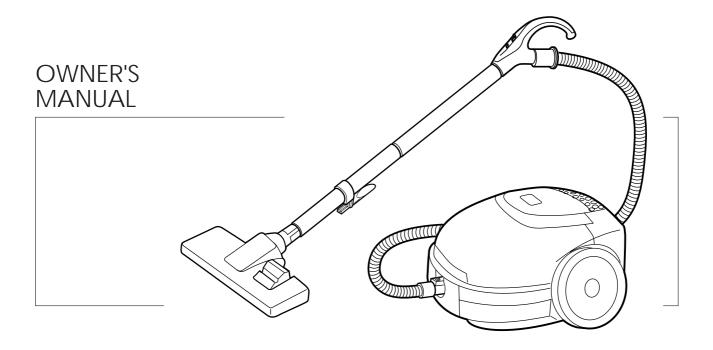


READ AND KEEP THIS

- Thank you for purchasing this vacuum cleaner.
- For proper operation, please read this manual carefully before using.


CONTENTS


Description	3
Precautions for safe use	
How to use	5
Before asking for service	9

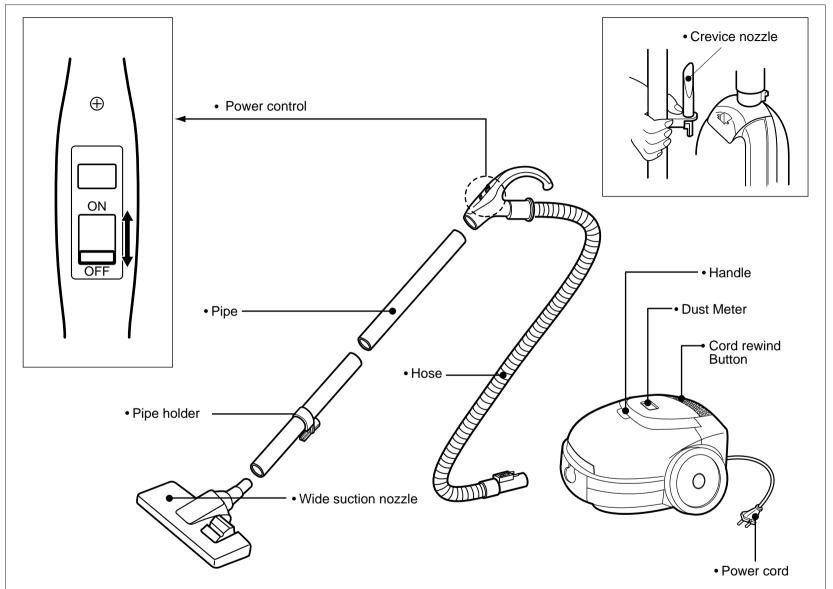


Precautions for Safe Use

 
 Plug the power cord into a 120V AC 60Hz receptalcle outlet. When pluging or unpluging, hold the plug body, not flex.



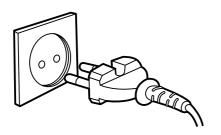


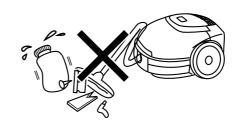


Do not vacuum without a dust bag.
 If no dust bag, the dust cover would not be closed completely.

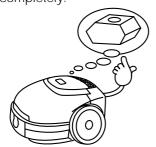


 Keep the unit away from heat sources such as a heater.

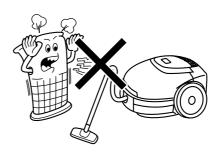

• Do not step on the hose or pull it fecibly. The hose may be flattened or torn.

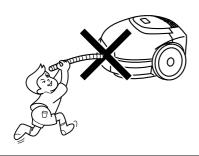

  This product is provided with a cable which, if damaged, must be replaced by a repair shop authorized by the manufacturer since special tools are repuired.






 When rewinding the power cord, hold the plug body before pressing the cord rewind button. The cord moves quickly and might hit you or other objects.



How to Use

1. How to operate


- Put together as shown on page 3. Description.
- Plug the power cord into a 120V AC 60Hz; receptacle outlet.
- Set the remote control switch "ON".
- O the vacuum cleaner will be vacuuming at this time.
- If you continue to push the remote control switch, the air hole opens and the suction power decreases.

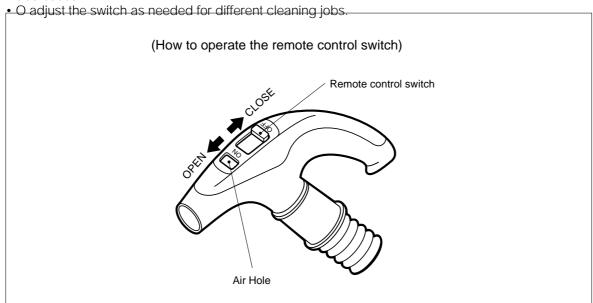

2. How to change the dust bag.




 Push the bag holder to the arrow mark, and then take the dust bag out.

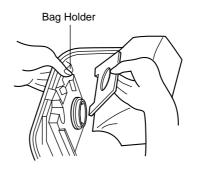


4 5


5. How to use the crevice nozzle

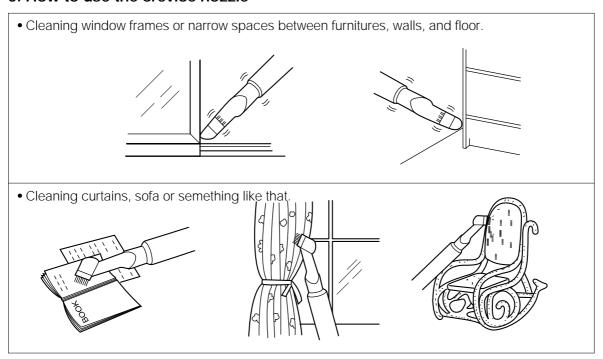

6. How to clean the filter.

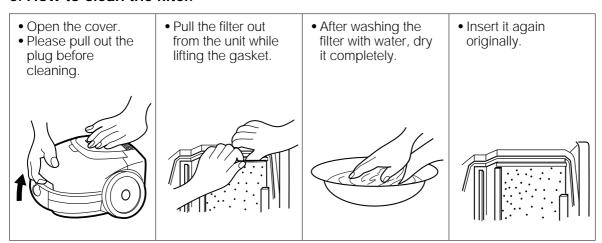

7. How to store the vacuum cleaner

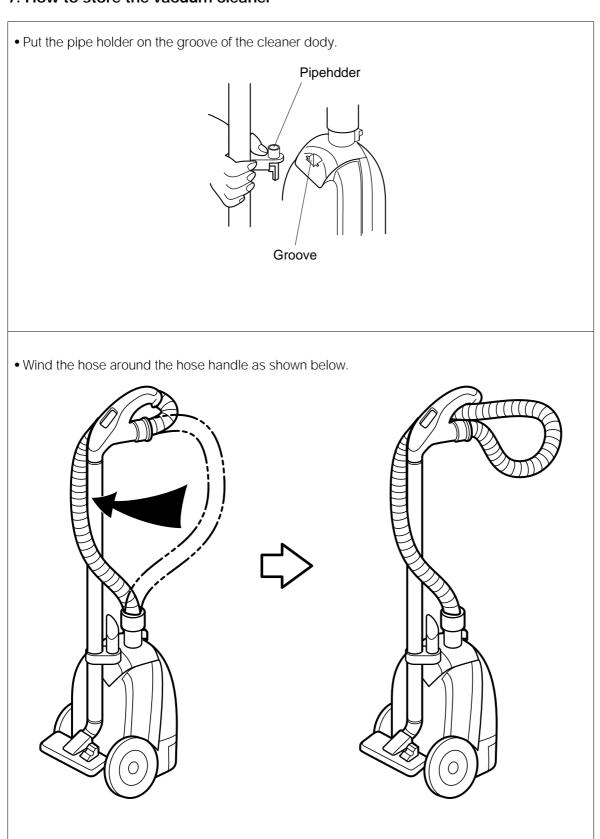

Before Asking for Service

■ Before Asking for Service, please check each item below if you have trouble with your cleaner.

Problem	Check Point	Measure
Suction power is weak.	Dust bagPipe or hose	If dust bag is dirty, clean it. If clogged or blocked, remove the object.
The cleaner does not work.	Power cordSuction hose	Check if power cord is plugged. Check if hose is attached fimly into suction hole.
Power cord does not rewind.	Power cord	Pull the power cord out a little and press the cord rewind button.
When the dust bag is full or blocked or any of the accessories is blocked, the over-heating protection for the motor is activated.		Switch off and unplug the cleaner and check the dust bag, accessories and blockages, then allow the motor to cool down. The cleaner can be switched on again about 30 minutes.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com