



You can rely on Defy. To simplify.



HB7208

INSTRUCTION MANUAL
HAND BLENDER SET

Read this manual before operation of the appliance!

Dear Customer,


Congratulations on the purchase of your new Defy appliance!

Please read this manual carefully before using your appliance for the first time and then store it within easy reach for future reference. We trust you will enjoy years of trouble free use.

The user manual:

- This manual will provide you with information on how to safely operate and care for your appliance in order that you gain the maximum benefit from it.
- Pay particular attention to any safety instructions.

Controls and parts

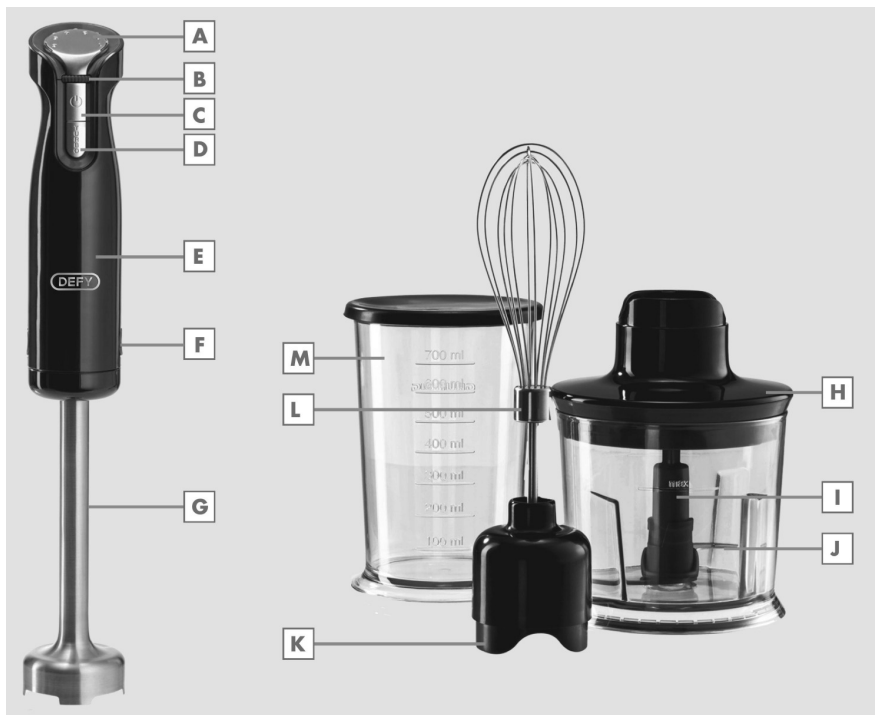

A Speed indicator LEDs

B Speed control

C On/Off button

D Turbo button

E Motor unit

F Attachment release buttons

G Blending attachment

H Chopping lid

I Chopping blade

J Chopping bowl

K Whisk holder

L Balloon whisk

M Measuring beaker

1 Safety and set-up

Please read this instruction manual thoroughly prior to using this appliance! Follow all safety instructions in order to avoid damages due to improper use!



Keep the instruction manual for future reference. Should this appliance be given to a third party, then this instruction manual must also be handed over.

- This appliance is intended for private domestic use only and is not suitable for professional catering purposes. It should not be used for commercial use.
- The blades are very sharp! Handle the sharp blades with utmost care, especially during removing and cleaning, in order to avoid injuries.
- Never clean the appliance with bare hands. Always use a brush.
- Do not touch any moving parts of the appliance. Do not attach or remove the parts until the appliance comes to a complete stop.
- Always keep hair, clothing and any other utensils away from the appliance during operation in order to prevent injury and damages.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- Do not wrap the power cord around the appliance.
- For additional protection, this appliance should be connected to a household faulty current protection switch of no more than 30 mA. Consult your electrician for advice.
- Do not immerse the appliance, power cord or power plug in water or in other liquids.
- Always remove the power plug from the wall socket before assembling the appliance, after using the appliance, before disassembling, before cleaning the appliance, before leaving the room or if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Do not squeeze or bend the power cord and do not rub it on sharp edges in order to prevent any damage.
- Keep the cord away from hot surfaces and open flames.

- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Our Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by the dealer, a service centre or a similarly qualified and authorized service person to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Do not dismantle the appliance under any circumstances. No warranty claims are accepted for damage caused by improper handling.
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure that they do not play with the appliance.**
- **Do not leave the appliance unattended as long as it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.**
- Before using the appliance for the first time, clean all parts which come into contact with food carefully. Please see details in the "Cleaning and Care" section.
- Dry the appliance and all parts before connecting it to the mains supply and before attaching the accessories.

Safety and set-up

- Do not operate the appliance without ingredients in the measuring jug or chopping bowl.
- Never place the appliance, attachments, power cord or plug on hot surfaces such as gas or electric burners or hot oven surfaces and never use with hot liquids or food. Let hot food and liquids cool down to min. 80°C or less before using the appliance.
- Do not use the appliance for anything other than its intended use.
- Never switch on the appliance for longer than necessary for processing the food.
- Never use the appliance with damp or wet hands.
- Operate the appliance with the supplied parts only.
- The appliance is designed to process only common household quantities.
- Do not use the appliance if the blades are damaged or show signs of wear.
- Make sure that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Position the appliance in such a way that the plug is always accessible.
- A spatula may be used to remove the food from the measuring jug and chopping bowl. Make sure that the appliance is switched off before doing this.
- We do not recommend operating the appliance with dry or hard foods or for ice crushing as this may result in dull blades.
- Remove bones and stones from food to prevent the blades and the appliance from being damaged.
- Make sure that the lid is seated properly on the chopping bowl before you switch on the appliance.

	The manufacturer strives for continuous improvement. For this reason, the text and illustrations in this manual are subject to change without notice.
	If the appliance is damaged in any way do not use it. Report the damage to your dealer who will take the necessary corrective action.

2 Operation

Preparation

- 1 Remove all packaging and sticker materials and dispose of them according to the applicable legal regulations.
- 2 Before using the appliance for the first time, clean parts which come into contact with food (see the "Cleaning and care" section).
- 3 Cut the food into small pieces before processing with the appliance.

Maximum quantities and processing time

Ingredients	Maximum quantities	Processing time
Meat/Fish	200g	10-15 seconds
Herbs	20g	20 seconds
Nuts	200g	15 seconds
Cheese	150g	15 seconds
Bread	1 slice	20 seconds
Eggs (hard-boiled)	2 eggs	5 seconds
Onions (cut in 8 pieces)	100 g	10 seconds

Blending

- 1 Put the food that you would like to puree or mix in the measuring beaker **M** or a similar bowl.
- 2 Attach the blending attachment **G** to the motor unit **E** by pushing the attachment to the motor until it locks. Make sure the blending attachment is properly attached to the motor unit.
- 3 Insert the plug into the wall socket.
- 4 Immerse the blending attachment **G** in the measuring beaker **M**, that contains the ingredients to be blended.



Always switch off the appliance before taking out the processed food.

Note

To prevent the ingredients from splashing, do not press the On/Off button **C** or turbo button **D** until the blending attachment has been immersed in the ingredients.

- 5 Press and hold down the On/Off button **C**.

The appliance starts operating.

- 6 Use the speed control **B** to select a speed or press and hold the turbo button **D**.

The speed indicator LED **A** illuminates according to the desired speed 1-6.

Notes

When you use the turbo button the appliance operates at maximum speed. In this case you cannot adjust the speed with the speed control **B**.

While using the turbo button **D**, all speed indicator LEDs illuminate.

Move the appliance slowly up and down and in circles to blend the ingredients.

Note

Always switch off the appliance before taking out the processed food.

- 8 Release the On/Off button **C** or turbo button **D** when you are finished and disconnect the power plug from the wall socket. Remove the mixture from the measuring beaker **M**.

- 9 Disassemble the blending attachment **G** only by pushing the attachment release buttons **F** at the sides of the appliance and pulling it off from the motor unit.

Notes



To prevent overheating do not operate the appliance continuously for more than 10 seconds.



Never switch on the appliance for longer than necessary for processing food.

To prevent overflowing of the mixture do not overfill the measuring beaker **M** or bowl. Smaller amounts are easier to process.

Operation

- To prevent any accidents use the beaker lid as anti-slip rubber pad by putting the beaker base on the lid.
- If you would like to use the blending attachment directly in the pot, first take the pot off the stove to prevent the blending attachment from overheating.

Chopping

Notes

Do not chop extremely hard items such as coffee beans, ice cubes, nutmeg, grains or bones. Remove stalks from herbs, shells from nuts and bones, tendons and gristle from meat.

Cut the food in small pieces.

1 Put the chopping bowl **J** on an even surface.

2 Place the chopping blade **I** onto the fixed shaft in the chopping bowl **J**.

Caution

Be careful when inserting the chopping blade **I** as it is very sharp.

Do not touch the chopping blade with bare hands.

3 Place the ingredients in the chopping bowl **J**.

4 Put the chopping lid **H** on the chopping bowl **J**. Make sure that the clips on the chopping lid are firmly locked on the bowl.

Caution

Never operate the appliance if the chopping lid is not properly seated on the chopping bowl, as this could damage the chopping blade.

5 Put the motor unit **E** on the chopping lid **H**. Push the motor unit so that it is firmly locked in place. Make sure the motor unit is securely attached to the chopping lid.

Note

During operation always hold the chopping bowl with one hand to prevent it from tipping over.

6 Insert the plug into the wall socket.

7 Press and hold down the On/Off button **C**.

The appliance starts operating.

8 Use the speed control **B** to select a speed or press and hold the turbo button **D**.

The speed indicator LED **A** illuminates according to the desired speed 1-6.

While using the turbo button **D**, all speed indicator LEDs illuminate.

Notes

Do not use the appliance continuously for more than 10 seconds.

To achieve the best results press the On/Off button or turbo button intermittently.

9 Release the On/Off button **C** or turbo button **D** when you finish the process and disconnect the power plug from the wall socket. Remove the motor unit **E** from the chopping lid **H** by pushing the attachment release buttons **F** at the sides of the appliance and pulling it off. Take the chopping lid **H** off. Take the chopping blade **I** out of the chopping bowl **J** carefully prior to removing the chopped food.

Mixture Butter + Honey

Butter taken from the freezer (should be kept in the freezer for min. 4 hrs. and cut into pieces of sizes approximately 10-15 mm x 35-40 mm) and honey taken from the refrigerator (should be kept in the refrigerator min. 1 day).

Operation

Whisking

- You can use the balloon whisk **L** for whipping cream and beating eggs.
- Never process more than 4 egg whites or 200 ml cream.

1 Insert the balloon whisk **L** into the whisk holder **K** until it clicks into place.

2 Connect the motor unit **E** to the whisk holder **K** by putting the whisk holder onto the motor unit. Push the whisk holder to the motor unit. Make sure that the whisk holder is securely attached to the motor unit.

3 Put the ingredients that you would like to process in the measuring beaker **M** or a similar bowl.

4 Insert the power plug into the wall socket.

5 Hold the balloon whisk **L** into the mixture to be processed.

6 Press and hold the On/Off button **C**.

The appliance starts operating.

7 Use the speed control **B** to select a speed or press and hold the turbo button **D**.

The speed indicator LED **A** illuminates according to the desired speed 1-6.

While using the turbo button **D**, all speed indicator LEDs illuminate.

8 Move the appliance slowly up and down and in circles to whisk the ingredients.

9 Release the On/Off button **C** or turbo button **D** when you are finished and disconnect the power plug from the wall socket. Remove the mixture from the measuring beaker **M**. Remove the motor unit **E** from the whisk holder **K** by pushing the attachment release buttons **F** at the two sides of the appliance and pulling it off.

3 Information

Cleaning and care

Caution

Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.

Do not touch the blades with your bare hands. The blades are very sharp. Use a brush!

Never put the motor unit **C** or power cord in water or any other liquids and never hold them under running water.

1 Switch the appliance off and disconnect it from the wall socket.

2 Let the appliance cool down completely.

3 Use a damp soft cloth to clean the motor unit **E**.

4 Immediately after using, clean the blending attachment **G**, chopping lid **H** and whisk holder **K** with warm, soapy water and dry them thoroughly. Never wash them in dishwasher.

5 Only the following parts can be cleaned in the dishwasher: balloon whisk **L**, chopping bowl **J**, chopping blade **I** and measuring jug **M**.

Note

Before using or storing the appliance after cleaning, dry all parts carefully using a soft cloth.

Storage

If you do not plan to use the appliance for a long period of time, please store it carefully. Make sure the appliance is unplugged and completely dry.

Store the appliance in a cool, dry place. Make sure the appliance is kept out of the reach of children.

Environmental note

This appliance has been made from high quality materials and parts which can be reused and are suitable for recycling.

Do not dispose of the appliance with normal household waste at the end of its service life. Consult your local authorities for disposal information and facilities available.

Help protect the environment by recycling used appliances.

Technical data



This appliance conforms to the European directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Power supply: 230 V~, 50 Hz

Power: 700 W

Noise level: 80 dB(A)

Technical and design modifications reserved.



Warning: Repairs must be carried out by authorised persons only. Repairs carried out by incompetent persons create a user risk.



DANGER! Always disconnect the plug from the wall socket before any maintenance or cleaning.

Record in the space below the listed information for future reference.

SERIAL NUMBER.....

DATE OF PURCHASE.....

PURCHASED FROM.....

.....

Please register your product at

www.defy.co.za

DEFY APPLIANCES (PTY) LTD

P.O.BOX 12004

JACOBS

DURBAN

4026

SOUTH AFRICA

Service Centres

If you have followed the instructions and still have a problem, contact the nearest Defy Service Centre. They will be able to advise you on any aspect of the appliance.

South African Service Agents:

BLOEMFONTEIN

160 Long Street, Hilton, Bloemfontein 9301
Tel: 051 400 3900
Bloemfontein.Service@defy.co.za

CAPE TOWN

5A Marconi Rd. Montague Gardens, 7441
Tel: 021 526 3000
CapeTown.Service@defy.co.za

DURBAN

35 Intersite Avenue, Umgeni Business Park,
Durban, 4051
Tel: 031 268 3300
Durban.Service@defy.co.za

EAST LONDON

16 Bowls Rd. Arcadia, East London, 5201
Tel: 043 743 7100
EastLondon.Service@defy.co.za

JOHANNESBURG

Cnr. Mimetes & Kruger Sts. Denver ext.12
Johannesburg, 2094
Tel: 011 621 0200 or 011 621 0300
Gauteng.Service@defy.co.za

POLOKWANE

87 Nelson Mandela Drive, Superbia 0699
Tel: 0152 92 1166 / 7 / 8 / 9
Polokwane.Service@defy.co.za

PORT ELIZABETH

112 Patterson Road, North End, Port Elizabeth
6001
Tel: 041 401 6400
PortElizabeth.Service@defy.co.za

PRETORIA

Block A1 Old Mutual Industrial Park,
Cnr. D.F.Malan Drive & Moot Str. Hermanstad,
0082
Tel: 012 377 8300
Pretoria.Service@defy.co.za

Sub-Saharan Africa Service Agents:

ZAMBIA: SOUTHGATE INVESTMENTS LTD

Plot 1606, Sheki Sheki Road
P.O. Box 33681
Lusaka, 10101, Zambia
Tel: +260 0211 242332/3
Fax: +260 0211 242933
sgiservicecentre@microlink.zm

NAMIBIA: ATLANTIC DISTRIBUTORS (PTY) LTD

10 Tienie Louw Street, Northern Industrial Area
P.O. Box 21158, Windhoek, Namibia
Tel: (061) 216162
Fax: (061) 216134
atlantic@mweb.com.na

ZIMBABWE: TRADECOMAFRICA

Trade Com Africa, 183 Loreley Crescent
Msasa, Harare, Zimbabwe
Tel: +263 4 486165/6
Cell: +263 772 469010
Cell: +263 772 469011

BOTSWANA: RAY MORGAN AGENCIES

RMA Service Centre, Plot 48, East Gate
Gaborone International Commerce Park
Kgale View, Gaborone
Botswana
Tel: +267 390 3996 / 390 3912
Fax: +267 318 7376
Cell: +267 7134 6539
service@rma.co.bw; raja@rma.co.bw

SWAZILAND: LYNDS DISTRIBUTORS

P.O Box 716, Mbabane, Swaziland, H100
Tel: (00268) 2515 4310/8
Fax: (00268) 2518 4318

MOZAMBIQUE: COOL WORLD. LDA

Rua da Resistencia No. 97B R/C
Cell: +258 84 44 61 234
coolworldlda@hotmail.com
Nosso Show Room
Av: da Industrias, Parcela No.735 * 735A
Machava, Maputo

**OTHER AREAS ARE SERVICED BY OVER 200 AUTHORISED SERVICE AGENTS.
PLEASE CONSULT THE NEAREST REGIONAL DEFY SERVICE CENTRE FOR DETAILS.**

5 Warranty

This certificate is issued by DEFY APPLIANCES (PTY) LIMITED manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of ONE YEAR from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Repair or replacement of any part of this appliance, found by the Company to be defective, shall be at the election of the Company. The Company reserves the right to effect such service through any of its Service Divisions or Authorised Service Dealers. The cost of such service shall be borne by the Company in full, provided that the appliance is located no further than 50km from a Company Service Centre or an Authorised Service Dealer. Where the appliance is located beyond the 50km radius, the purchaser shall be liable for the standard travelling charges, as determined by the Company.
2. Vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.
3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.
4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance.
5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.
6. **For warranties in the Republic of South Africa and Sub-Saharan Africa, please contact your nearest Defy office. Please refer to page 9 for respective South African service agents and Sub-Saharan Africa service agents.**
7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.
8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.

**KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF
PURCHASE FOR WARRANTY PURPOSES.**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>