


OWNER'S MANUAL



You can rely on Defy

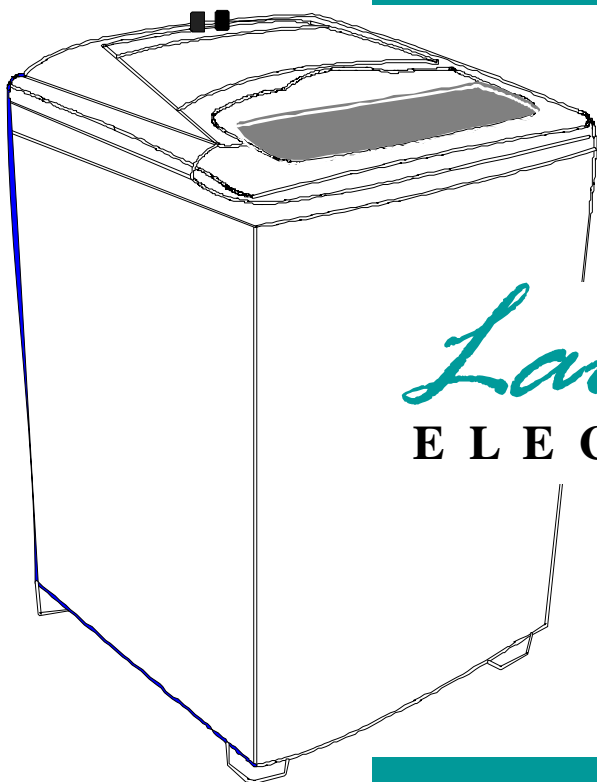

Laundromaid
ELECTROLOGIC 920


TOP
LOADING
AUTOMATIC
WASHING
MACHINE

INDEX

- 2 Features.
- 2 Accessories.
- 3 Safety precautions.
- 4 Installation.
- 5 Electrical installation.
- 6 Loading the machine.
- 7 Functions of the controls.
- 8 Programme selections.
- 9 Time delayed start.
- 9 Customising programmes.
- 10 Operating procedure.
- 11 Maintenance.
- 12 Technical specification.
- 13 Trouble shooting.
- 14 Service.
- 15 Warranty.


www.defy.co.za

Congratulations

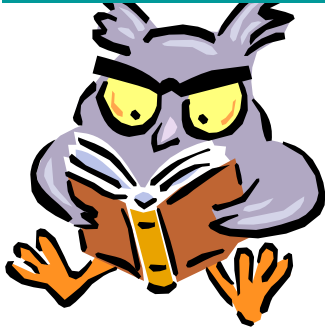

You are now the proud owner of one of the finest and most modern washing machines that today's technology can produce. You and your machine are going to make a great team together. But first it will pay if you really get to know each other. This book will tell you all you need to know about your machine, what it will do and how to do it. Please read all the instructions carefully before operating the machine.

Features

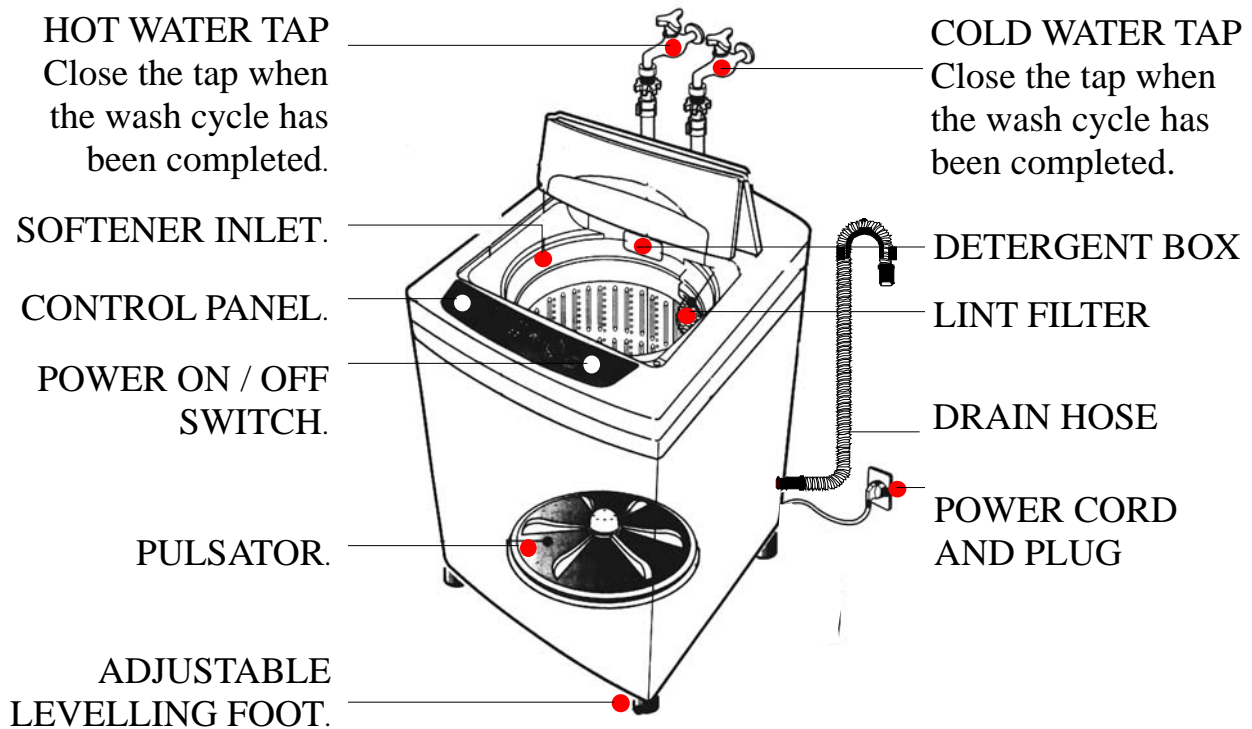


Accessories

BASE COVER



 DRAIN HOSE




DRAIN HOSE CLAMP




INLET HOSE




Safety precautions

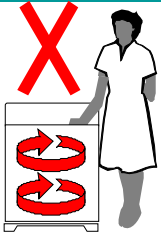


Do not reach inside the tub while the machine is working.
Wait until all motion stops.

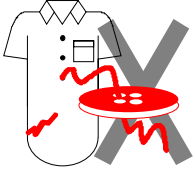


Before washing, check all clothes for loose buttons and tears.
Check pockets for coins, pins or other small articles.
Close zips and fasteners.
Wash small articles inside a pillow slip.

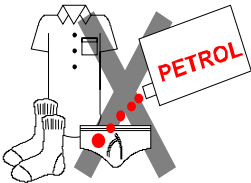


Do not wash clothes soaked in petrol, thinners, vegetable oil or any other flammable liquids. Nor should any of these liquids be added to the wash water as they constitute a fire hazard.

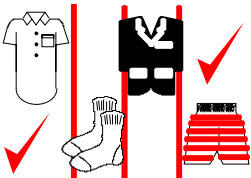

Only use the machine for washing fabrics. Do not attempt to wash plastic, leather or fibreglass. Sort and separate clothes by fabric, colour and degree of dirt.

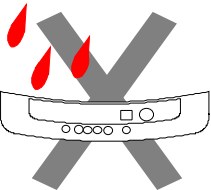

Avoid spraying water on to the control panel and back of the machine.

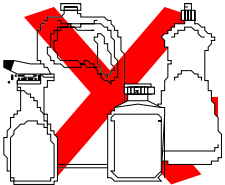

Do not use detergents which are not specifically designed for top loading automatic washing machines.



Do not allow children to play with or crawl inside the machine.
Supervise them closely when the washer is in use.



Always unplug the machine from the wall socket when it requires cleaning or service. Only permit qualified persons to repair or install parts in the washer.



Do not use water which is hotter than 65 degrees Celsius as this may deform plastic parts of the machine.


Installation

UNPACKING

- Remove all packaging and dispose of it in a responsible manner.
- Open the wash-tub lid and remove all the accessories stored in the drum.
- Do not attempt to operate the machine while any of the packaging is still in place.


POSITIONING

- The machine should be installed in a well ventilated place, away from direct sunlight.
- Hot and cold water taps should be located within 1 metre of the inlet valves.
- Position the machine on a flat and stable uncarpeted floor capable of supporting the fully loaded washer.
- An adjustable levelling foot is located at the right front of the machine and may be turned in or out to achieve stability. An unstable machine will vibrate and generate excessive noise.

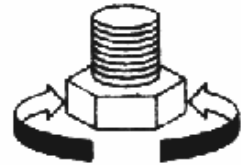


DRAIN HOSE

- Connect the drain hose to the drain outlet at the rear of the machine and secure it with the hose clamp supplied.
- Hook the outlet end of the drain hose over the lip of a sink or outlet pipe.

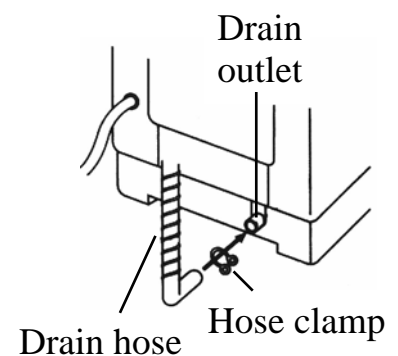


SINK OR LAUNDRY TUB DRAIN

- The top lip of the sink must be at least 860mm (A) above floor level and not higher than 1300mm.

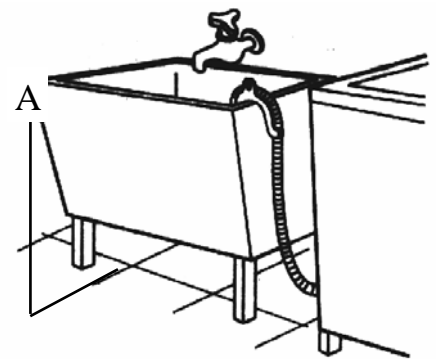

PIPE DRAIN

- The minimum inside diameter of the pipe drain should be 30mm and the pipe should be able to drain 30 litres per minute.
- The top lip of the pipe should be at least 860mm (B) above floor level and not higher than 1300mm.

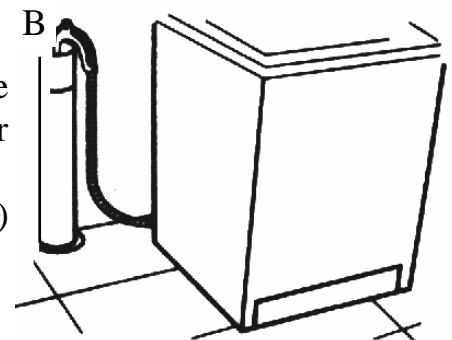

Installation—continued




INLET HOSES

- Connect the respective inlet hoses to the hot and cold water taps and to the machine's inlet fittings. The hot water inlet is on the left and the cold water inlet on the right.

CONNECTING THE WATER INLET HOSES

- Connect the inlet hoses to threaded hot and cold water taps and to the machine's inlet fittings. Take care not to confuse the hot and cold water inlets. The hot water inlet is coloured pink and the cold water inlet is coloured blue.
- If only one water tap is available, connect the inlet hose to the blue, cold water coupling.
- Open the taps and check for leaks. Re-tighten couplings if necessary.

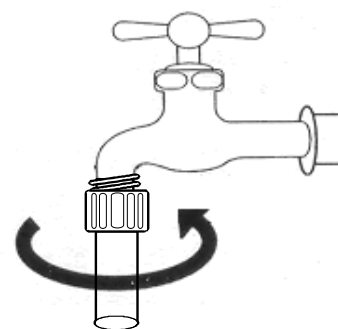

Electrical installation

- The washing machine is designed to operate on a 230 Volt, 50 Hz, 15 Amp, AC power supply.
- The machine should be connected to an earthed 3 pin wall socket.
- If the power-cord should ever need replacing, use only a genuine cord available from the nearest Defy Service Centre.



The appliance must be earthed and the manufacturer and seller do not accept responsibility for any damage due to incorrect electrical connection.

Loading the machine

PREPARATION

- Close all zippers, snaps and hooks to prevent them from snagging other articles.
- Remove pins, and other hard items to prevent them from scratching the machine.
- Empty all pockets and turn them inside out.
- Turn down cuffs and turn synthetic knits inside out.
- Tie strings and sashes so they will not tangle.
- Treat spots and stains before washing.

SORTING


- Mix large and small items in each load.
- Separate heavily soiled items from lightly soiled ones.
- Separate dark colours from light colours.
- Separate colourfast items from non-colourfast ones.
- Separate robust fabrics from delicate.
- Separate whites from coloured fabrics.

LOADING

- Lift and fold the lid.
- Arrange the articles to be washed loosely round the perimeter of the tub.
- Load evenly as an off balance load may cause unnecessary vibrations.
- Use a large load programme when washing permanent press garments. These items need more space to move than heavy items such as jeans and towels.
- Do not overload the machine as this will result in poor cleaning, increased creasing and excessive lint formation.



Functions of the controls

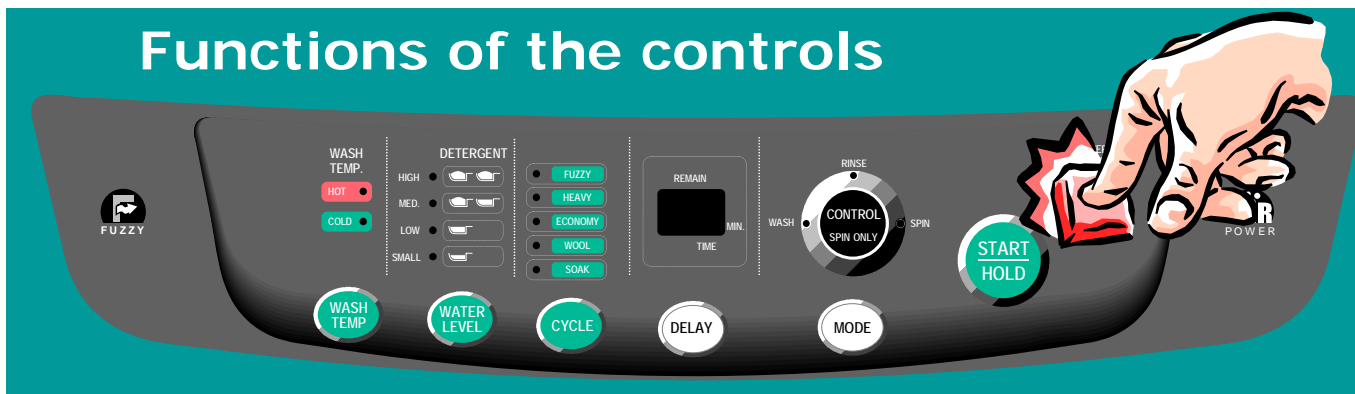

Press this pad to turn the power on or off.



 
Press this pad to select the water temperature. Repeated pressing will highlight COLD → COLD + HOT → HOT.



Press this pad to select the water level. Repeated pressing will highlight MEDIUM → HIGH → SMALL → LOW.



Press this pad to engage the time delay function.(2— 48 hours)
The wash will be completed at the end of the selected time.



Press this pad to select a partial wash cycle or any combination of:
WASH, RINSE, SPIN.



Press this pad to change the WASH TIME, RISE TIME, or SPIN TIME.
The pad is also used for selecting SPIN ONLY.




Press this pad to select the required wash cycle.
FUZZY → BLANKET → ECONOMY → WOOL → SOAK.



Press this pad to commence operation. Pressing it a second time will cause the machine to pause, during which time any settings may be altered. Pressing it again will cause the machine to resume the wash cycle at the new settings.

NOTE:

Always refer to garment care labels for the manufacturer's recommendations.

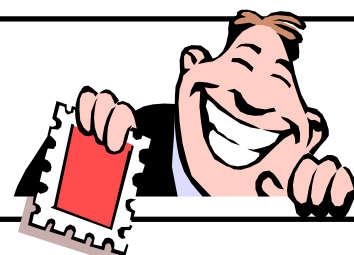


Programme selection

FUZZY LOGIC PROGRAMME

This machine has Fuzzy Logic sensors. These enable it to evaluate each load placed in the drum and to select and modify a wash programme to suit the load.


Do not use the FUZZY programme for woollen or delicate garments.

To select Fuzzy, simply press the POWER On pad and then the START / HOLD pad.

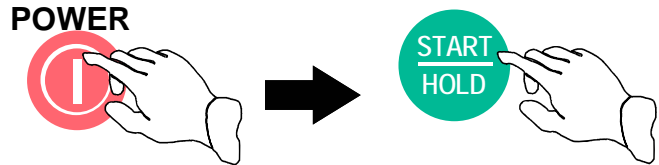


HEAVY PROGRAMME

Use this programme for washing blankets, curtains and small rugs.

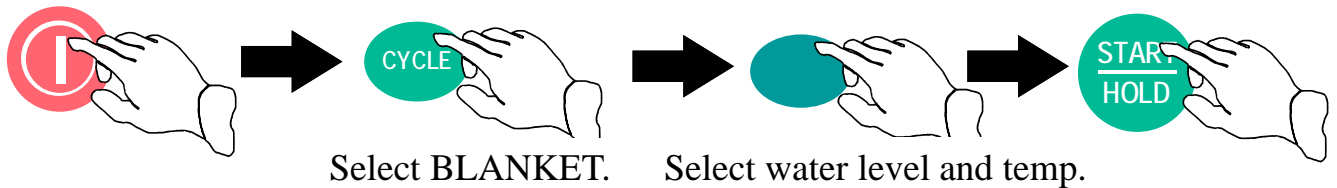

ECONOMY PROGRAMME

This programme saves water and is ideal for washing lightly soiled clothes.

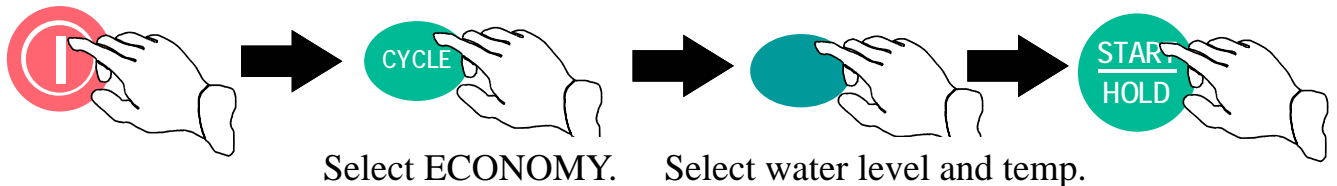

WOOL PROGRAMME


Wash 1.5 kg maximum. Do not wash chamois or leather.



After the detergent has dissolved, a buzzer will sound. Put the clothes into the tub after the buzzer has sounded. Close the lid and push the start / hold pad .

SOAK PROGRAMME

Use this programme for blue jeans, overalls and heavy duty wear.

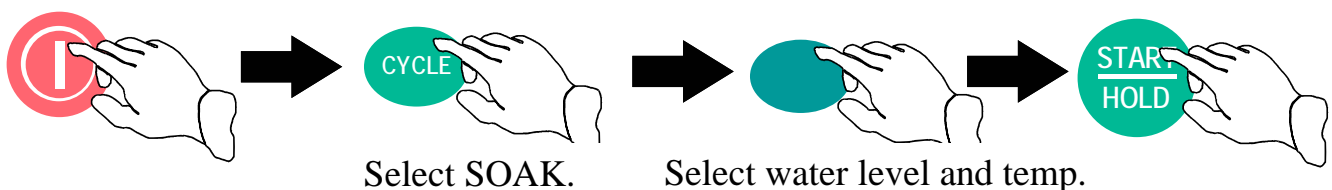


Time delayed start

The wash cycle completion time may be delayed by 2 to 48 hours. This feature is particularly useful when you are at work and only want the machine to finish washing just before you arrive home.

To cancel the “time Delayed Start” press the power button. Wait five seconds before pressing the power button once more to resume.

EXAMPLE: To set a completion time 8 hours from the present, proceed as follows:

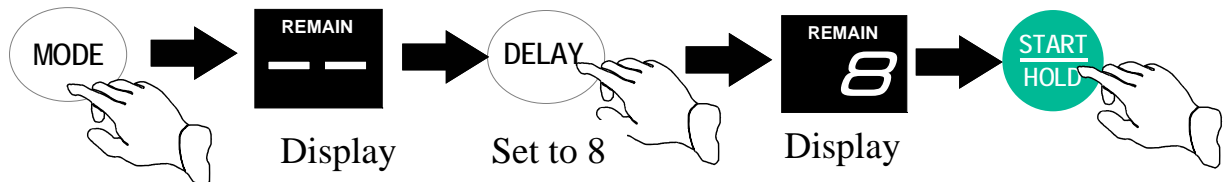

Customising programmes

POWER



Press the POWER ON pad.



SELECTING THE WASH TIME

Press the Mode pad and the WASH light will illuminate.
Repeatedly press the CONTROL pad to select 14, 18, 0, 6 or 10 minutes.
If you do not want a wash cycle, select the time at 0 minutes.



SELECTING THE NUMBER OF RINSES

Press the Mode pad and the RINSE light will illuminate.
Repeatedly press the CONTROL pad to select 2, 3, 4, 0, or 1 rinse.
If you do not want a rinse cycle, select the time at 0 rinse.



SELECTING THE SPIN TIME

Press the Mode pad and the SPIN light will illuminate.
Repeatedly press the CONTROL pad to select 5, 7, 9, 0, 1 or 3 minutes.
If you do not want a spin cycle, select the time at 0 .



Press the START / HOLD pad.

CONVENIENT SPIN ONLY SELECTION

Press the POWER ON pad.
Press the CONTROL pad.
Press the START HOLD pad.



BEFORE ANY OF THE WASH OPTIONS ARE SELECTED YOU MUST FIRST:

- Insert the power plug into an earthed wall socket and switch on.
- Open the hot and cold water taps.
- Load the washing into the machine.(see Loading)
- Add detergent and if necessary softener and bleach.(See Adding detergents)
- Close the lid.
- **NOTE: DO NOT OPEN THE HOT WATER TAP BY ITSELF.**
- **IT IS ESSENTIAL TO OPEN THE COLD WATER TAP FOR ALL PROGRAMMES.**
THE MACHINE RINSES IN COLD WATER EVEN WHEN USING A HOT WASH.



Operation procedure

LOADING DETERGENT

- Only use detergents specifically designed for top loading automatic washing machines.
- Gently pull the detergent drawer open.
- Pour the detergent, the quantity of which is dependent on the wash load, into the detergent drawer and close the drawer.


ADDING BLEACH

- If desired, liquid chlorine bleach may be added to the bleach inlet as marked on the machine.
- Do not allow bleach to spill onto clothing in the tub as undiluted bleach will damage the fabrics.
- The machine will automatically dispense the bleach at the appropriate time during the wash cycle.



ADDING SOFTENER

- If desired liquid fabric softener may be added to the softener dispense located on the rim of the tub.
- Pour an amount of softener, as recommended by the manufacturer, into the dispenser.
- Avoid spilling the softener on fabrics in the wash tub.
- The machine will automatically dispense the softener at the appropriate time during the final rinse.

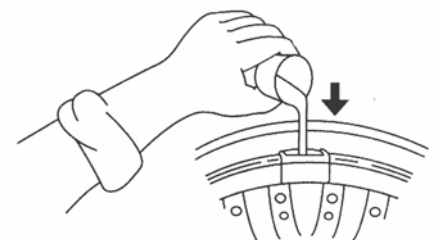


Operation procedure continued

STARTING THE MACHINE

- Close the lid.
- Press the POWER ON pad.
- Select the desired wash cycle (either fully automatic FUZZY or any of the pre-programmed washes BLANKET, ECONOMY, WOOL, SOAK or any customised programme).
- Press the START / HOLD pad.
- The machine will complete the selected programme.

Maintenance

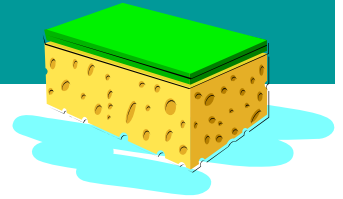

CLEANING THE EXTERIOR

- Wipe up any detergent, bleach and other spills as they occur with a soft damp cloth.
- Periodically clean the cabinet with a damp warm soapy cloth, rinse and dry.

CLEANING THE interior

- Clean the interior with 250ml of chlorine bleach mixed with 500ml of detergent.
- Run the washer through a complete cycle.
- Repeat the process if necessary.


CARE

- Do not put sharp metal objects in the washer.
- Check all pockets for pins, paper clips coins, bolts, screws and such.
- Do not lay these items on top of the washer after emptying the pockets.


HOLIDAY CARE

- If the washer will not be used for an extended period it is advisable to:
- Remove the electric plug from the wall socket.
- Turn off the water supply to the washer.


CLEANING THE LINT FILTER

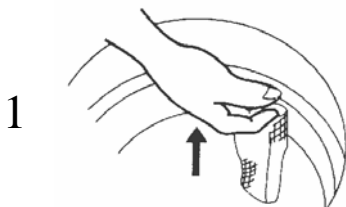

Pull the filter frame upwards.

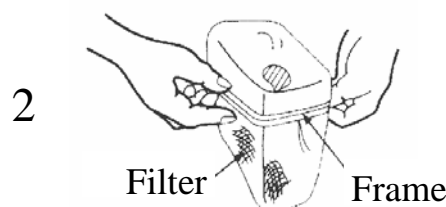

Turn the filter inside out and remove any lint and dirt under running water.

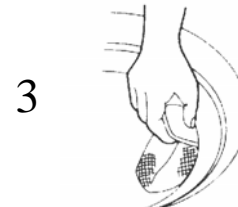


Re-shape the filter mesh and fit the filter frame back in it's slot.


Maintenance continued

CLEANING THE WATER INLET FILTER


- Periodically clean the water inlet filter.
- Remove the power plug from the wall socket.
- Turn off the water taps.
- Separate the inlet hose and remove the mesh filter.
- Clean the filter with an old toothbrush and re-fit.

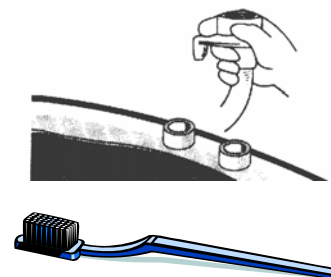


CLEANING THE DRAIN FILTER

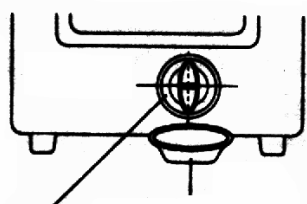


Place a shallow container under the drain-filter to collect any residual water spillage.

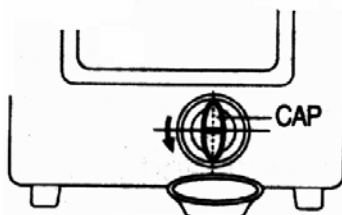


Turn the filter cap in an anticlockwise direction.

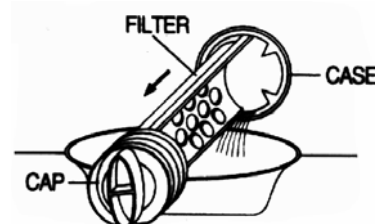


Pull the filter assembly out.

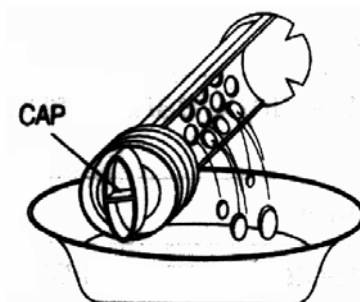

Clean the drain filter.

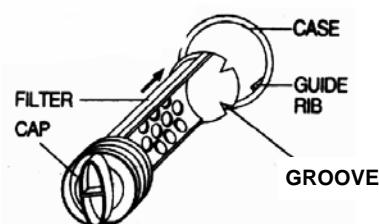

Re-fit the filter along the guides ensuring that the groove in the filter aligns with the guide rib.

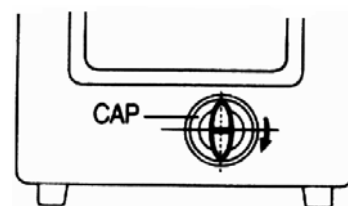

Tighten the cap by turning it in a clockwise direction.

Technical specifications

Power source AC 220-240V / 50 Hz

Power consumption 430 W

Dimensions (W x H x D) in mm. 598 x 956 x 643

Unit weight 43kg

Standard water consumption 207 litres

Water level for High, Medium, Low, Small 88, 75, 61, 48 litres

Wash mode Double action type Air bubble + Pulsator.

Trouble shooting

Most problems are easily solved if the cause is known



BEFORE CALLING A SERVICE TECHNICIAN PLEASE CHECK THE FOLLOWING:

PROBLEM

The machine will not operate at all.

There is a restricted or no water supply.
If the water flow has not stopped after 20 minutes the fault code **IE** will be displayed and a buzzer will sound to indicate a problem.

The machine will not drain.
If draining is not completed in a specified time limit the fault code **OE** will be displayed and a buzzer will sound to indicate a problem.

The machine will not spin.
If the load is unbalanced the spin cycle will be interrupted and the machine will stop. The unbalanced condition may be corrected by re-filling the tub, rinsing and then draining. If the unbalanced condition remains, the fault code **UE** will be displayed and a buzzer will sound indicating a problem.

CHECK

Is there a power failure?
Has the power pad been pressed?
Has the start / hold pad been pressed?
Is there water in the tub?

See if the tap is open?
Are the water pipes frozen?
Has the water supply been cut off?
Is the inlet filter blocked?

Is the drain hose blocked or frozen?
Is the drain hose kinked or deformed?
Is the end of the drain hose immersed in water?
Is there excessive dirt in the drain filter?

Is the wash load located all to one side?
Has the machine been installed on an uneven floor?
Is the lid open? The fault code **LE** will be displayed if this is the case.

Service Centres

If you have followed the instructions and still have a problem, contact the nearest Defy Service Centre. They will be able to advise you on any aspect of the product or send a qualified technician to repair it.

BLOEMFONTEIN P.O.Box 1691 Bloemfontein. 9300.
160 Long Street, Hilton,
Bloemfontein 9301.
Tel. 051 400 3900

CAPE TOWN P.O.Box 953 Milnerton. 7435
5A Marconi Rd.
Montague Gardens, 7441.
Tel. 021 551 8314

EAST LONDON P.O.Box 7006 East London 5200.
16 Bowls Rd. Arcadia,
East London 5201.
Tel. 043 743 7100

JOHANNESBURG P.O.Box 27150 Benrose 2011.
Cnr. Mimetes & Kruger Sts. Denver ext.12
Johannesburg. 2094.
Commercial Head Office, Tel. Sales, Administration,
Distribution, Commercial Head Office, National Groups,
Contracts and Credit.
Tel. 011 621 0200 or 011 621 0300

DURBAN P.O.Box 12004 Jacobs 4026.
174 Teakwood Rd.
Jacobs 4052.
Tel. 031 460 9712

POLOKWANE P.O.Box 1719 Polokwane 0700.
87 Nelson Mandela Drive.
Superbia 0699.
Tel. 0152 92 1166 / 7 / 8 / 9.

PORT ELIZABETH P.O.Box 2971 North End 6056.
3 Sidon Str.North End
Port Elizabeth.6001.
Tel. 041 401 6400

PRETORIA. P.O.Box 19768 Pretoria West 0117.
Block A1 Old Mutual Industrial Park.
Cnr. D.F.Malan Drive & Moot Str. Hermanstad. 0082.
Tel. 012 377 8300

**OTHER AREAS ARE SERVICED BY OVER 200 AUTHORISED SERVICE AGENTS.
PLEASE CONSULT THE NEAREST REGIONAL DEFY SERVICE CENTRE FOR DETAILS**

Warranty

This certificate is issued by DEFY APPLIANCES LIMITED manufacturers of Defy and Ocean products, hereinafter the Company, to the original purchaser only, of the appliance described on the certificate and shall constitute the only warranty given in respect of this appliance.

The Company warrants to the original purchaser that for a period of TWO YEARS from date of purchase the appliance is free from defect under normal domestic use, both in workmanship and material, subject to the following conditions.

1. Repair or replacement of any part of this appliance, found by the Company to be defective, shall be at the election of the Company. The Company reserves the right to effect such service through any of its Service Divisions or Authorised Service Dealers. The cost of such service shall be borne by the Company in full, provided that the appliance is located no further than 50km from a Company Service Centre or an Authorised Service Dealer. Where the appliance is located beyond the 50km radius, the purchaser shall be liable for the standard travelling charges, as determined by the Company.

CARRY IN SERVICE Microwave ovens, Compact cookers and small appliances are repaired in our service centres and are not collected from the customers home. Faulty units should be delivered to the purchasing dealer or to the nearest Company Service Centre for warranty repairs.

2. Vitreous enamelware, fuses and lamps are specifically excluded from these warranties. It is an express condition of these warranties that the purchaser takes due care and attention in the use and maintenance of the appliance. Abuse, misuse in conflict with operating instructions, connection to incorrect voltages and subjection to commercial use shall release the Company from its obligations.

3. This warranty shall become void and cease to operate if the appliance is dismantled by, or any repairs to the appliance are effected by any persons not duly authorised by the Company, or if substitute parts not approved by the Company are used in the appliance, or if the serial number of the appliance is removed.

4. The Company shall not be responsible for damages resulting from fire, flood, civil disturbances or any Act of God. The Company shall not, in terms of these warranties be responsible nor held liable for any consequential loss or damage of any kind caused by or due to the failure or malfunction of the appliance.

5. The Company shall not be responsible for transportation or other costs other than those incurred within the provisions of Point 1 of this Certificate.

6. These warranties shall not apply to the appliance if it is purchased or used beyond the borders of the Republic of South Africa, Namibia, Botswana, Swaziland and Lesotho.

7. Where service is requested under warranty and no fault or defect can be found by the Company, all costs incurred will be for the purchaser's account.

8. This Certificate as well as your invoice will serve as proof of purchase. For the purpose of warranty, it will be essential to produce this Certificate and invoice. Failure to do so, will render the purchaser liable for service costs.



KEEP THIS CERTIFICATE AND SALES INVOICE AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.



You can rely on Defy

The Manufacturer strives for continuous improvements. For this reason, the text and illustrations in this book are subject to change without notice.

Part Number 062 959

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>