

Triple Burner

deni[®]

Model #16300

IMPORTANT!

Please keep these instructions and your original box packaging.

www.deni.com



***INSTRUCTIONS
FOR PROPER USE AND CARE***

Triple Burner


IMPORTANT SAFEGUARDS

When using this electrical appliance, safety precautions should always be observed, including the following:

- Read all of the instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against risk of electrical shock do not put burner in water, other liquid, or where water may flood the area.
- Place the burner securely in the center of the counter or work space on a flat surface.
- Close adult supervision must be provided when this appliance is used by or near children. This appliance is not recommended for children.
- Unplug from outlet when not in use, before cleaning, and before attempting to move it. Allow to cool before cleaning.
- Do not operate with a damaged cord, plug, after the appliance malfunctions, or if it is dropped or damaged in any manner. Return the burner to Keystone Manufacturing Co., Inc., for examination, repair or electrical or mechanical adjustment.
- Using attachments not recommended or sold by Keystone Manufacturing Co., Inc, may cause hazards.
- Do not use outdoors, household use only.
- Do not place food directly on the cooking surface.
- Do not clean with metal scrubbing pads. Pieces can break off the pad and short electrical parts, creating a possibility of an electrical shock.
- Do not let cord hang over edge of table or counter. Do not let cord come in contact with hot surfaces, including the stove.
- Do not put the power cord under a carpet or blanket. Keep the cord away from walkways.
- Do not place near hot gas, electric burners, in an oven, or in a dishwasher.
- Never leave burner unattended while it is operating.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not operate the Triple Burner near flammable objects or place beneath a paper towel holder. A fire may occur if the burner is covered or touching flammable materials, including curtains, draperies, or walls when in operation.
- Do not use an extension cord with this burner. However, if one is used, it must have a rating equal to or exceeding the rating of this appliance.
- The burner should always be in the OFF position before inserting or removing the plug from a wall outlet.
- Do not pull on the power cord to disconnect, pull on the head of the plug.
- This burner should not be used for other than the intended use.
- The Triple Burner has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way, as a safety feature. Reverse the plug if the plug does not fit fully in the outlet. Contact a qualified electrician if it still does not fit. Do not attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

FEATURES

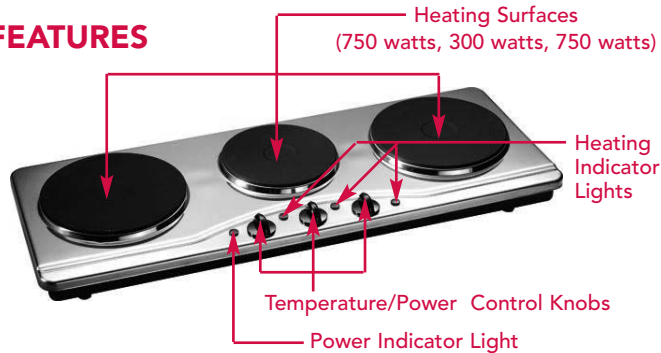

BEFORE FIRST USE

1. Clean the burner with a soft damp cloth. Place the burner on a flat, level surface near an electrical outlet.
2. Be sure the unit is in the OFF position before plugging in.
3. Always use flat bottom cookware that makes close contact with the heating element. Ideally, the cookware should be 7" - 8" in diameter. Keep the surface of the heating element clean and dry.

HOW TO OPERATE

1. Put water and/or food in the cookware. Do not fill more than 80% of the cookware, as it will overflow. Cover and place on the burner.
2. Plug the unit in. The power indicator light will illuminate. Turn the dial for the desired burner from the MIN to

MAX position, to set the temperature. (The outer burners are 750 watts and the middle burner is 300 watts) The specific burner indicator light will illuminate to show that the unit is heating up. (MIN is low heat, MAX is high heat)

CAUTION: The metal surfaces will become hot. Do not touch while in use.

Note: When using the burner for the first time, there may be a smell of smoke coming from the surface of the heating elements. This is normal, due to the invisible protective coating during production.

3. When you are finished using the burner, turn the dials to the OFF position and unplug the power cord. Allow the unit to cool before moving or cleaning.

MAINTENANCE AND CARE

1. Be sure the unit is unplugged from the wall and is cool before cleaning.
2. Do not immerse the unit in water to clean.
3. Use a damp soapy cloth or sponge to clean the unit. Do not use harsh abrasives or metal scrubbing pads to clean the unit.
4. Store the burner in a clean dry place.

HINTS AND TIPS

- Do not use unstable pans. Be sure to use flat bottom pans to insure full contact with the heating surface for maximum heat efficiency.

CUSTOMER SERVICE

If you have any questions or problems regarding the operation of your Deni Triple Burner, call our customer service department toll free:

Monday through Friday
8:30 a.m. to 5:00 p.m.
(Eastern Standard Time)
1-800-DENI-822
or email us at
custserv@deni.com

Visit our website at
www.deni.com

Deni by Keystone Manufacturing Company, Inc.®

ONE-YEAR LIMITED WARRANTY

Your Deni Triple Burner is warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc., 33 Norris Street, Buffalo, NY 14207. If purchased in Canada, please send to: Keystone Manufacturing Company, Inc., 151 Cushman Road, St. Catharines, Ontario L2M 6T4. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state or province to province.

©2008 Keystone Manufacturing Company, Inc.
All Rights Reserved

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>