


ASSEMBLY • ASSEMBLAGE

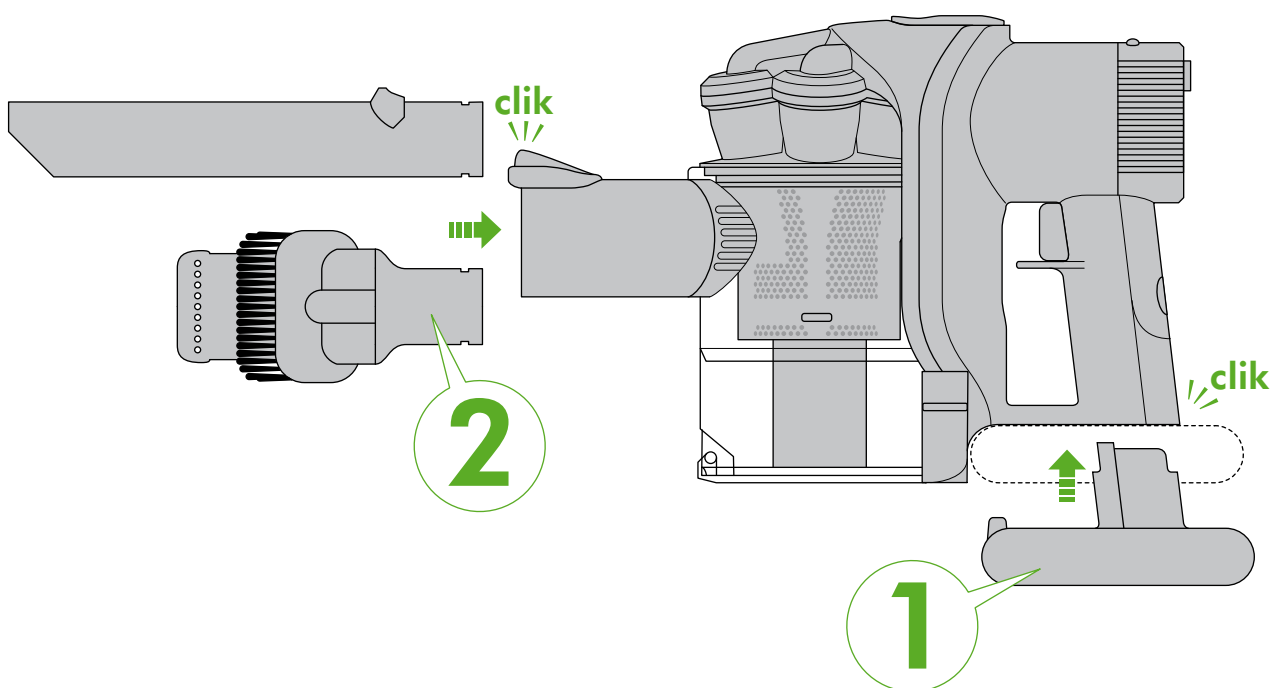

1
month
mois

WASH FILTER
Wash filter with cold water at least every month.

LAVER LE FILTRE
Laver le filtre à l'eau froide une fois par mois minimum.

REGISTER TODAY

Register your free 2 year warranty today

ENREGISTREMENT

Enregistrez votre garantie de 2 ans dès aujourd'hui



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

When using an electrical appliance, basic precautions should always be followed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

1. Do not charge the Dyson handheld vacuum outdoors, in a bathroom or within 10 feet of a pool.
2. Do not use outdoors, or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this Operating Manual. Use only Dyson recommended attachments.
5. Do not use with damaged cord or charger. If the Dyson handheld vacuum is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, contact the Dyson Helpline.
6. Do not unplug the charger by pulling on the cord. To unplug, grasp the plug, not the cord.
7. Do not handle charger, including the charger plug and the charger terminals with wet hands.
8. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
9. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
10. Use extra care when cleaning on stairs.
11. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. Do not use without the clear bin and the filter in place.
14. Use only the charger supplied with the product to recharge.
15. Unplug the charger from the outlet before maintenance.
16. Do not use with an extension cable.
17. This Dyson handheld vacuum is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Dyson handheld vacuum by a person responsible for their safety.
18. Do not incinerate the Dyson handheld vacuum even if it is severely damaged. The batteries may explode in a fire.

SAVE THESE INSTRUCTIONS

THIS HANDHELD VACUUM IS INTENDED FOR DOMESTIC HOUSEHOLD AND CAR USE ONLY.

POLARIZATION INSTRUCTIONS

To reduce the risk of electric shock, this Dyson handheld vacuum has a polarized charger (one blade is wider than the other). This charger will fit in a polarized outlet only one way. If the charger does not fit fully in the outlet, reverse the charger. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the charger in any way.



Do not use near open flame.



Do not store near heat source.



Do not pick up water or liquids.



Do not pick up burning objects.



Ne pas utiliser près d'une flamme.



Ne pas ranger près d'une source de chaleur.



Ne pas aspirer d'eau ou tout autre liquide.



Ne pas aspirer d'objets en combustion.

PRÉCAUTIONS DE SÉCURITÉ IMPORTANTES

LIRE ATTENTIVEMENT TOUTES LES INSTRUCTIONS AVANT D'UTILISER CET APPAREIL

Lors de l'utilisation d'un appareil électrique, il convient de respecter certaines précautions, notamment les suivantes :

AVERTISSEMENT

AFIN DE RÉDUIRE LES RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE OU DE BLESSURE :

1. Ne pas recharger l'aspirateur portatif Dyson à l'extérieur, dans une salle de bains ou à moins de 3 m (10 pi) d'une piscine.
2. Ne pas utiliser à l'extérieur ou sur des surfaces.
3. Cet aspirateur n'est pas un jouet. Faire très attention lorsqu'on l'utilise près d'enfants ou si ceux-ci s'en servent.
4. Utiliser l'aspirateur uniquement comme indiqué dans ce guide d'utilisation. N'utiliser qu'avec les accessoires recommandés par Dyson.
5. Ne pas utiliser si le cordon ou la prise sont endommagés. Si l'aspirateur portatif Dyson ne fonctionne pas correctement, s'il est tombé ou endommagé, s'il a été laissé dehors ou immergé dans l'eau, contacter la ligne d'assistance Dyson.
6. Ne pas débrancher le chargeur en tirant sur le cordon d'alimentation. Pour débrancher, saisir la prise, pas le cordon.
7. Ne pas manipuler le chargeur, y compris la prise et les bornes de chargeur de ce dernier, avec les mains mouillées.
8. Ne pas mettre d'objets dans les ouvertures de l'aspirateur. Ne pas utiliser l'aspirateur en cas d'obstruction d'une ouverture. Vérifier que rien ne réduit le flux d'air : poussières, peluches, cheveux ou autres.
9. Éloigner les cheveux, les vêtements amples, les doigts et toutes les parties du corps des ouvertures et des pièces mobiles de l'aspirateur.
10. Redoubler de prudence dans les escaliers.
11. Ne pas utiliser pour aspirer des liquides inflammables ou combustibles comme l'essence, ou dans des endroits où un liquide de ce type pourrait être présent.
12. N'aspirer aucun objet en combustion ou dégageant de la fumée, comme des cigarettes, des allumettes ou des cendres incandescentes.
13. Ne pas utiliser sans que le collecteur transparent et le filtre ne soient bien en place.
14. Utiliser uniquement le chargeur fourni avec le produit pour recharger l'aspirateur.
15. Débrancher le chargeur de l'alimentation avant de procéder à l'entretien.
16. Ne pas utiliser avec une rallonge électrique.
17. Cet aspirateur portatif Dyson n'est pas conçu pour une utilisation par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites, ou qui manquent d'expérience ou de connaissances, à moins qu'elles ne soient sous la supervision d'une personne responsable de leur sécurité ou aient reçu de cette dernière des instructions précises concernant son utilisation.
18. Ne pas incinérer l'aspirateur portatif Dyson même s'il est très endommagé. Les batteries pourraient exploser.


CONSERVER CES CONSIGNES

CET ASPIRATEUR PORTATIF EST UNIQUEMENT CONÇU POUR UN USAGE DOMESTIQUE INTÉRIEUR ET POUR LA VOITURE.


INSTRUCTIONS DE POLARISATION

Pour réduire le risque de choc électrique, l'aspirateur est doté d'une fiche polarisée (une lame est plus large que l'autre). Cette fiche ne peut s'insérer dans un chargeur polarisée que d'une façon. Si la fiche ne s'insère pas complètement dans le chargeur, retournez la fiche. Si elle ne s'insère toujours pas, contactez un électricien agréé pour qu'il installe un chargeur adaptée. Ne modifier la fiche en aucune façon.

Looking for blockages
• Vérifier l'absence d'obstructions

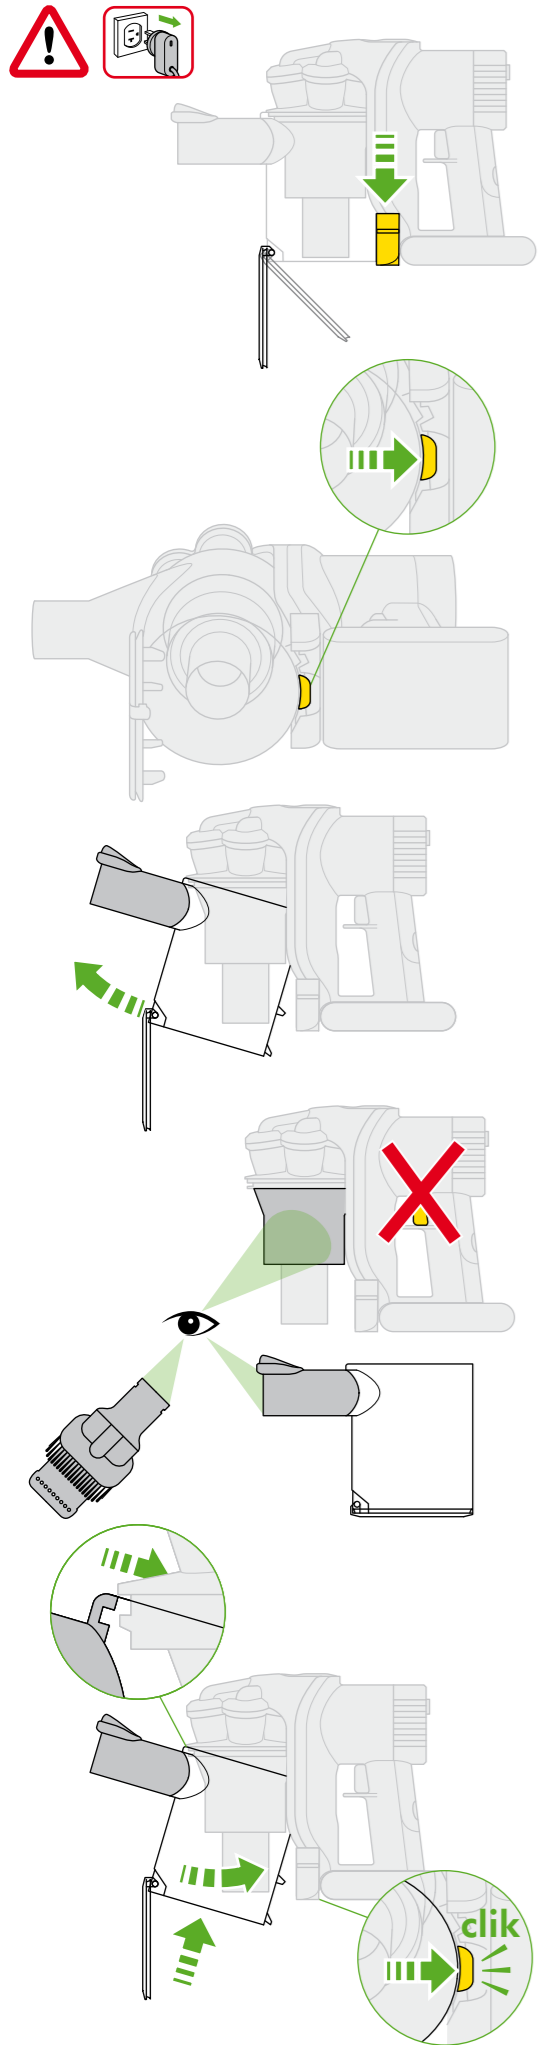


Power • Puissance

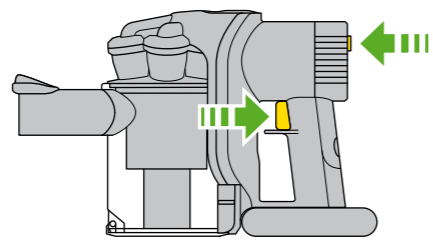



65 AW

HIGH POWER
FORTE
PUISSANCE
= 06:00 mins

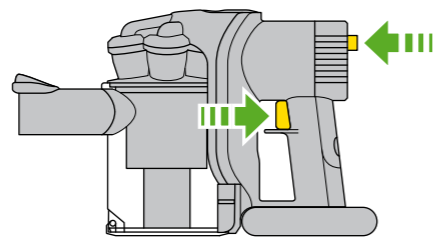


65 AW

REGULAR POWER
PUISSANCE
NORMALE
= 10:00 mins

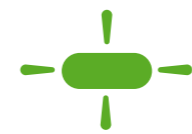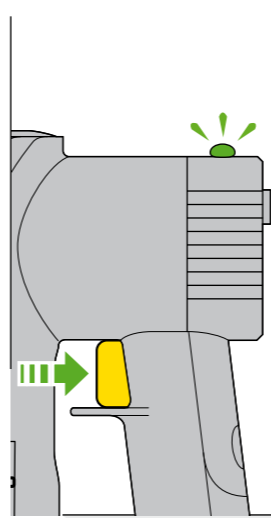


00:00 min

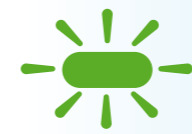





Do not use under
37.4°F (3°C).
Ne pas utiliser à une
température inférieure à
3° C (37,4° F).





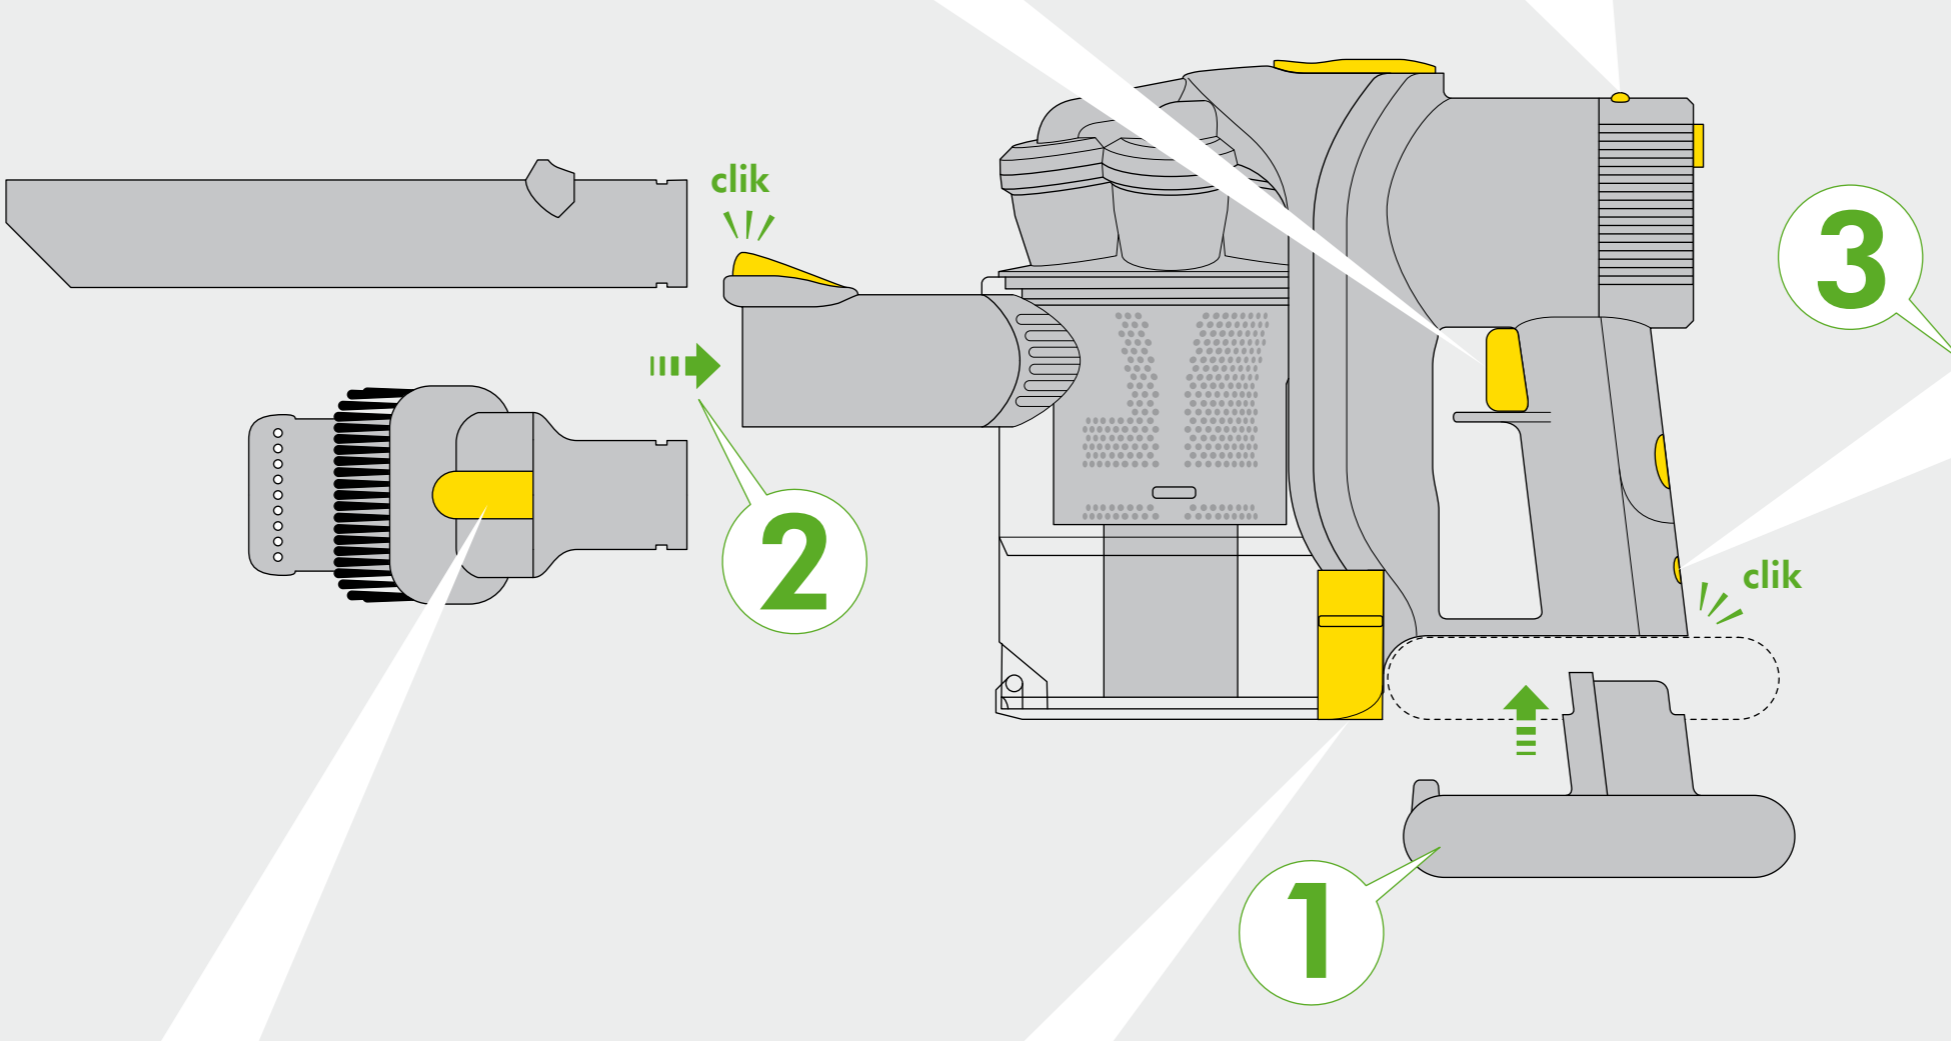

Filter missing, see page 8.
Absence de filtre, voir la page 10.

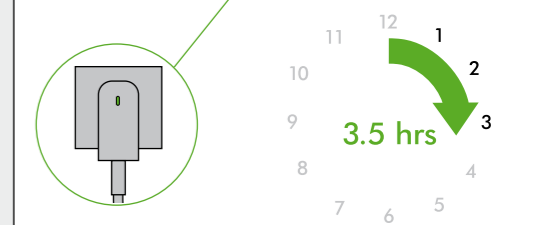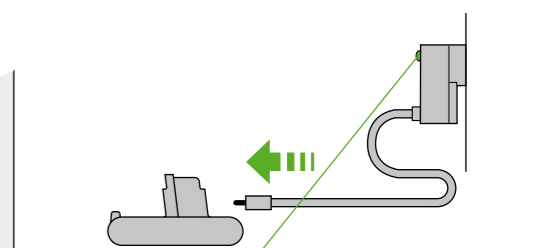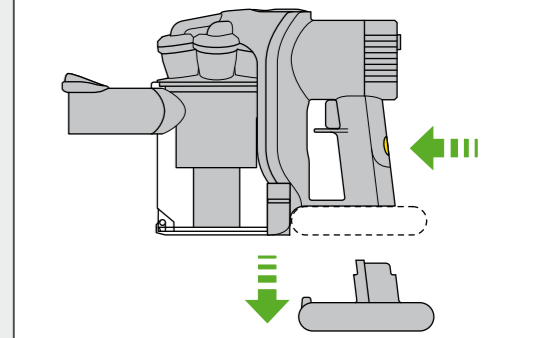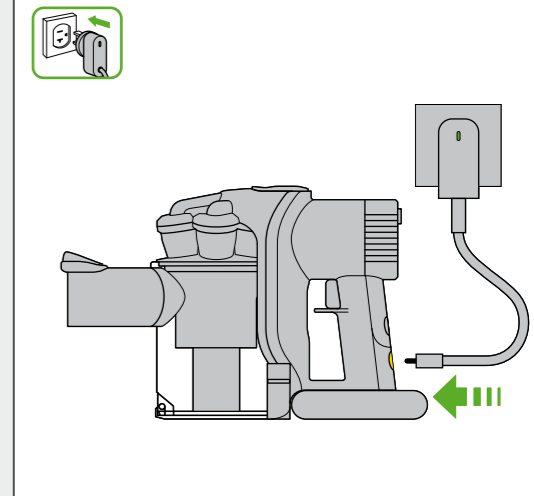


Charging • Rechargement




-  Charging
Charge en cours
-  Fully charged
Charge terminée
-  Not charging, battery
Pas de charge, batterie
-  Not charging, low temp
Pas de charge, temp. faible

Combination accessory tool • Embout combiné

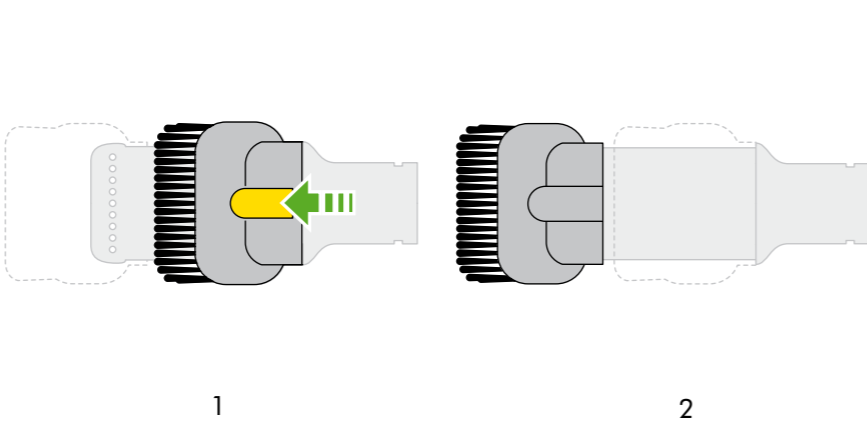


Emptying the clear bin • Vidage du collecteur transparent

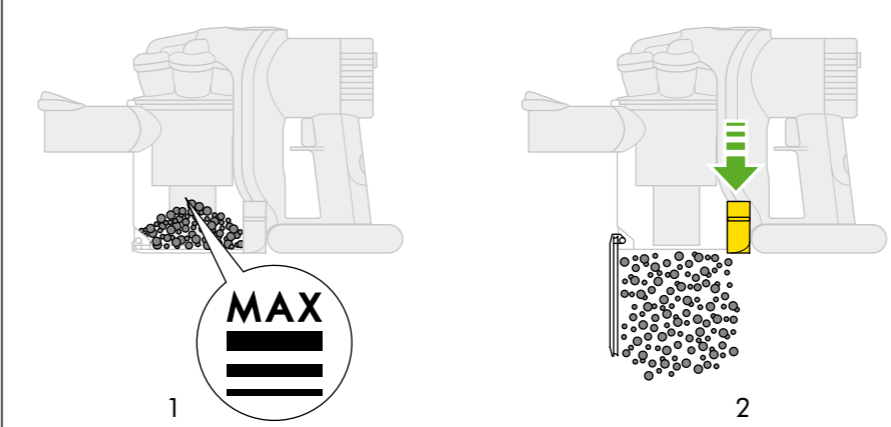


IMPORTANT!

WASH FILTER LAVER LE FILTRE

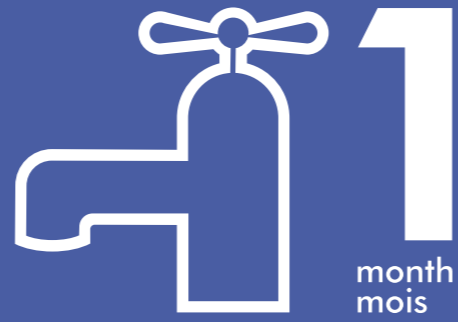

Wash filter with cold water at least every month.
Laver le filtre à l'eau froide une fois par mois minimum.

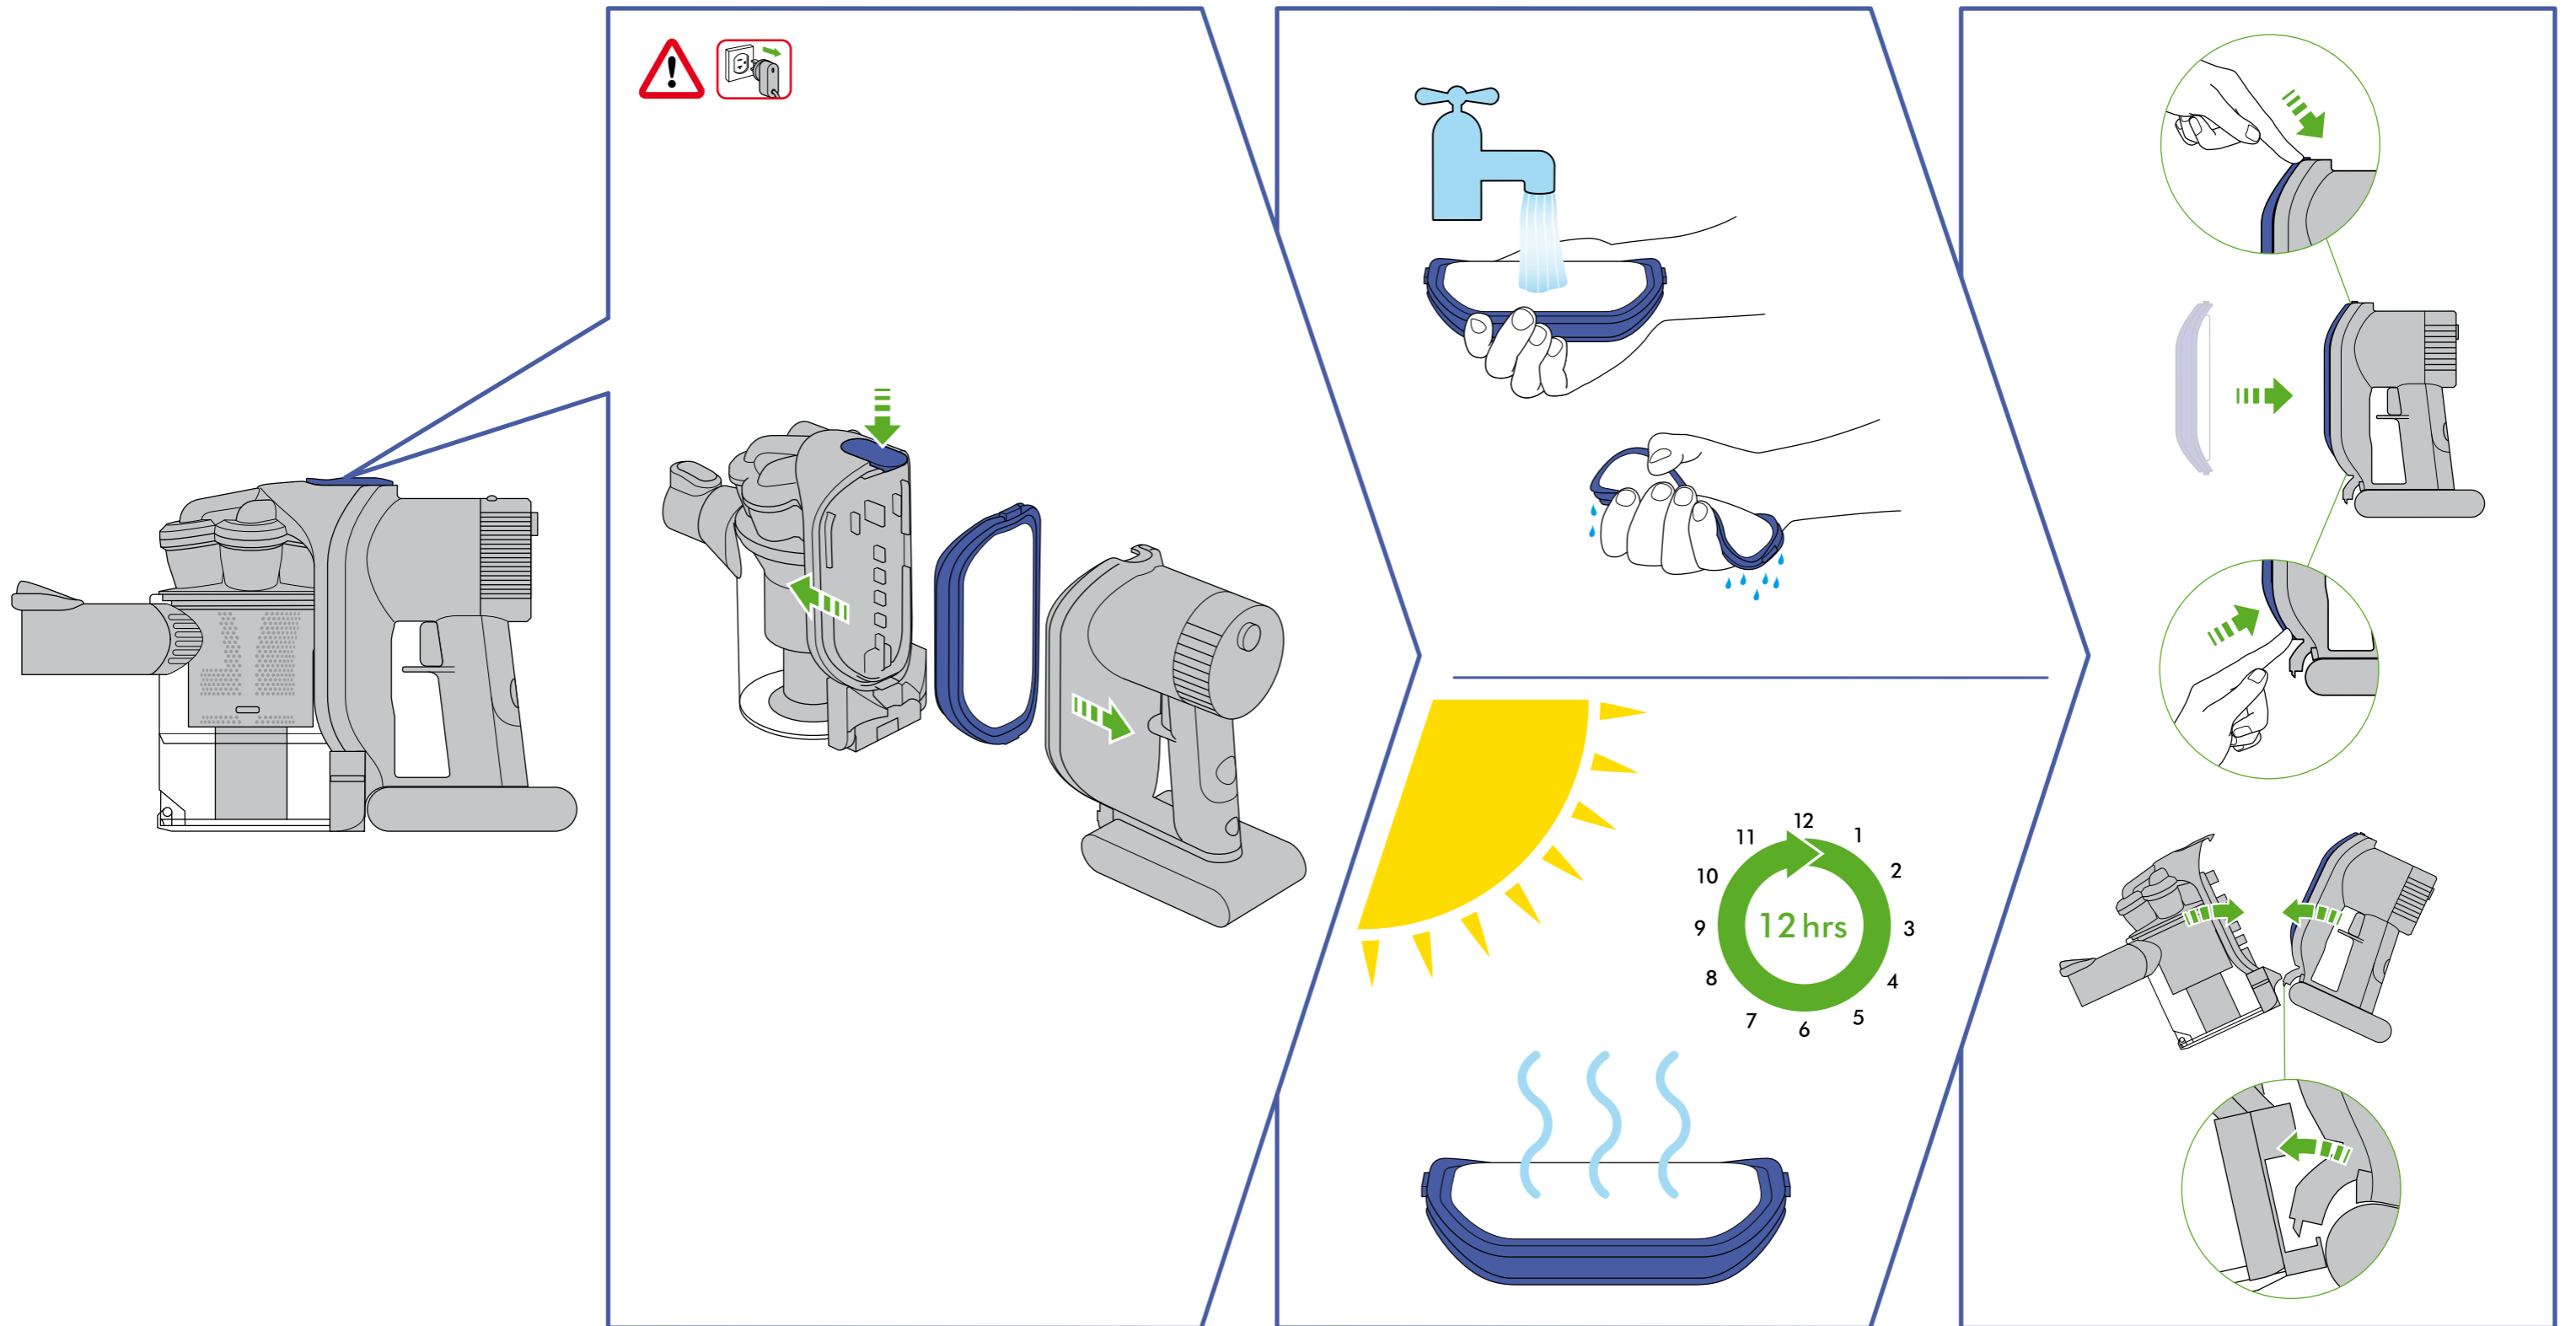

USING YOUR DYSON HANDHELD VACUUM


⚠ CAUTION:

- Take caution not to engage battery release button during normal operation.
- Do not operate the Dyson handheld vacuum while checking for blockages.

PLEASE NOTE:

- Do not carry out any maintenance or repair work other than that shown in this Operating Manual or advised by the Dyson Helpline.
- This Dyson handheld vacuum is designed for domestic indoor and car use only. Do not use it whilst the car is in motion or while driving.
- Do not press down on the nozzle with excessive force when using the Dyson handheld vacuum as this may cause damage.
- If the motor overheats, the Dyson handheld vacuum will cut out automatically. Leave it to cool for at least an hour and check for blockages before restarting.
- Fine dirt such as flour or plaster dust should only be vacuumed in very small amounts.
- Consult your flooring manufacturer's recommended instructions before vacuuming and caring for your flooring, rugs, and carpet.

TROUBLESHOOTING – DYSON HANDHELD VACUUM

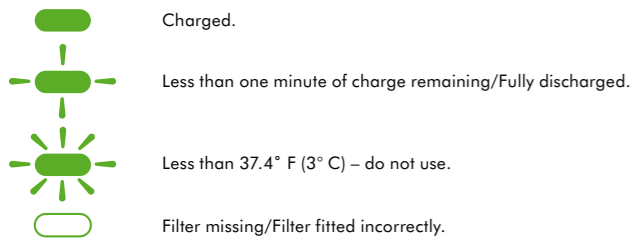

EMPTYING THE CLEAR BIN

⚠ CAUTION:

- Switch off Dyson handheld vacuum and disconnect from charger before emptying the clear bin.

PLEASE NOTE :

- Empty as soon as the dirt reaches the level of the MAX mark – do not overflow. To release the dirt, push the button at the side of the clear bin as shown, see page 5.
- Do not use the Dyson handheld vacuum without the clear bin in place.

CLEANING THE CLEAR BIN

⚠ CAUTION:

- Ensure the clear bin is completely dry before replacing.

PLEASE NOTE :

- To remove the clear bin, push the release button on the underside of the Dyson handheld vacuum as shown.
- Use only cold water to clean the clear bin. Do not use detergents, polishes or air fresheners.
- Do not put the clear bin in a dishwasher.

WASHING YOUR FILTER

⚠ CAUTION:

- Switch 'OFF' and disconnect from charger before removing the filter.
- Ensure filter is completely dry before refitting to Dyson handheld vacuum.

PLEASE NOTE :

- This Dyson handheld vacuum has one filter, located as shown, see pages 6 and 7. It is important to check your filter regularly and wash at least every month according to instructions, to maintain performance. Please leave to dry completely for 12 hours.
- The filter may require more frequent washing if vacuuming fine dust.
- Do not use detergents to clean the filter.
- Do not put the filter in the dishwasher, washing machine, tumble dryer, oven, microwave or near an open flame.

LOOKING FOR BLOCKAGES

⚠ CAUTION:

- Switch off the Dyson handheld vacuum and disconnect from charger before looking for blockages.
- Beware of sharp objects when clearing blockages.
- Refit all parts of the Dyson handheld vacuum securely before using.


PLEASE NOTE :

- Clearing blockages is not covered by your Dyson handheld vacuum's limited warranty. If any part of your Dyson handheld vacuum becomes blocked, it may overheat and then automatically shut off.
- Unplug the Dyson handheld vacuum and leave to cool down. Clear blockage before restarting.

CHARGING AND STORING YOUR DYSON HANDHELD VACUUM

Your Dyson handheld vacuum will turn off if the battery temperature is below 37.4° F (3° C). This is designed to protect the motor and battery of your product. Do not charge the Dyson handheld vacuum and then move it to an area with a temperature below 37.4° F (3° C) for storage purposes.

TROUBLESHOOTING – CHARGING AND BATTERY

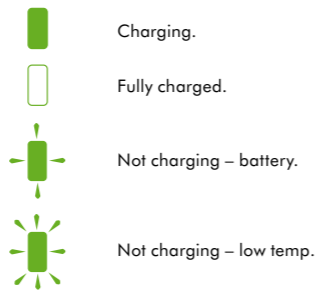

BATTERY SAFETY INSTRUCTIONS

Use only Dyson batteries and charging unit for this Dyson handheld vacuum. The battery is a sealed unit and under normal circumstances poses no safety concerns. In the unlikely event that liquid leaks from the battery do not touch the liquid and observe the following precautions:

Skin contact – can cause irritation. Wash with soap and water.

Inhalation – can cause respiratory irritation. Provide fresh air and seek medical advice.

Eye contact – can cause irritation. Immediately flush eyes thoroughly with water for at least 15 minutes. Seek medical attention.

Disposal – wear gloves to handle the battery and dispose of immediately following local ordinances or regulations.

⚠ CAUTION:

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, short contacts, heat above 140° F (60°C), or incinerate. Replace battery with a Dyson battery only, use of any other battery may present a risk of fire or explosion. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

- The battery must be removed from the Dyson handheld vacuum before it is scrapped.
- The battery is to be disposed of safely.
- The Dyson handheld vacuum must be disconnected from the supply mains when removing the battery.
- Battery can be charged on or off the handheld vacuum. Take caution when removing the battery.

DYSON CUSTOMER CARE

THANK YOU FOR CHOOSING TO BUY A DYSON HANDHELD VACUUM.

If you have a question about your Dyson handheld vacuum, please call the Dyson Helpline: 1-877-397-6622 with your serial number and details of where/when you bought the handheld vacuum, or contact us via the Dyson website. The serial number can be found on the main body of the handheld vacuum behind the filter. Most questions can be solved over the phone or by email with one of our Dyson Helpline staff. If your handheld vacuum needs service, call the Dyson Helpline so we can discuss the available options. If your handheld vacuum is under warranty, and the repair is covered, it will be repaired at no cost.

DYSON HELPLINE

Dyson Helpline: 1-877-397-6622 toll free, 6 days a week.

PLEASE REGISTER AS A DYSON OWNER

Thank you for choosing to buy a Dyson handheld vacuum. To help us ensure you receive prompt and efficient service, please register as a Dyson owner. There are three ways to do this:

- online at www.dyson.com
- by calling the Dyson Helpline: 1-877-397-6622 toll free
- by completing and returning the attached Warranty Form to us by mail. This will confirm ownership of your Dyson handheld vacuum in the event of an insurance loss, and enable us to contact you if necessary.

LIMITED 2 YEAR WARRANTY

TERMS AND CONDITIONS OF THE DYSON 2 YEAR LIMITED WARRANTY.

WHAT IS COVERED

Your Dyson handheld vacuum is warranted against original defects in material and workmanship for a period of two years from the date of purchase, when used for private household purposes in accordance with the Operating Manual. This warranty provides, at no extra cost to you, all labour and parts to place your handheld vacuum in proper operating condition during the warranty period. This warranty is subject to the following terms:

WHAT IS NOT COVERED

Dyson Canada Limited shall not be liable for costs incurred as a result of:

- Handheld vacuums purchased from an unauthorized dealer.
- Clearing blockages from your handheld vacuum.
- Carpet damage due to use not in accordance with flooring manufacturer's instructions or failure to turn brush bar off when necessary.
- Use of parts not in accordance with the Operating Manual.
- Careless operation or handling, misuse and/or lack of maintenance or use not in accordance with the Operating Manual.
- External sources such as weather.
- Repairs or alterations carried out by unauthorized parties or agents.
- Use of the handheld vacuum other than for normal domestic purposes within the country of purchase, e.g. for commercial or rental purposes.
- Use of parts and accessories other than those produced or recommended by Dyson Canada Limited.
- Normal wear and tear, including normal wearing parts such as clear bin, filter, brush bar, power cord, and reduction in battery discharge time due to battery age or use (or where external damage or abuse is diagnosed).
- Use of parts and accessories other than those produced or recommended by Dyson Canada Limited.

WARRANTY SERVICE

- Please fill out and return the Warranty Form, or register online at: www.dyson.com
- Before service can take place, the terms of the warranty require that you contact the Dyson Helpline with your model name/number, serial number, date and place of purchase. Please keep your purchase receipt in a safe place to ensure you have this information. The serial number is found on the vacuum's rating plate, which is on the main body of the handheld vacuum behind the filter.
- All work will be carried out by Dyson Canada Limited or their authorized agents.
- Any replaced defective parts will become property of Dyson Canada Limited.
- Service under this warranty will not extend the period of this warranty.
- If your handheld vacuum is not functioning properly, please call the Dyson Helpline on 1-877-397-6622. Most issues can be rectified over the telephone by our trained Dyson Helpline staff. If this is not possible, Dyson Canada Limited will arrange for your handheld vacuum to be repaired and returned in full working order at no extra cost to you.
- Any replaced defective parts will not extend the period of this warranty.

WARRANTY LIMITATIONS AND EXCLUSIONS

- Any representations, warranties or conditions relating to your handheld vacuum, express or implied, statutory or otherwise, including but not limited to warranty of merchantability or warranty of fitness for a particular purpose, are limited to the duration of this warranty. This limitation is not allowed by some States or provinces and so this limitation may not apply to you.
- Your remedy for breach of this warranty is limited to the warranty service described above. Dyson Canada Limited will not be liable for any consequential damages or incidental damages you may incur in connection with your purchase and use of your handheld vacuum. This limitation is not allowed by some States or provinces and so this limitation may not apply to you.
- This warranty gives you specific legal rights. You may also have other rights which vary by State or Province.
- This warranty is not transferable.
- This warranty is valid only in Canada.

SUMMARY OF COVER


- The warranty becomes effective at the date of purchase (or the date of delivery if this is later).
- You must provide proof of delivery/purchase before any work can be carried out on your handheld vacuum. Without this proof, any work carried out will be chargeable. Please keep your receipt or delivery note.
- All work will be carried out by Dyson Canada Limited or its authorized agents.
- Any parts which are replaced will become the property of Dyson Canada Limited.
- The repair or replacement of your handheld vacuum under warranty will not extend the period of warranty.
- The warranty provides benefits which are additional to and do not affect your statutory rights as a consumer.

IMPORTANT DATA PROTECTION INFORMATION

Your details will be held by Dyson Canada Limited or others on behalf of Dyson Canada Limited so that we can assist you more quickly in our Dyson Helpline. From time to time, Dyson Canada Limited may send you special offers and news of our latest innovations. For more information about our data collection practices, please refer to the Dyson Canada Limited privacy policy at www.dyson.com

IMPORTANT!

WASH FILTER LAVER LE FILTRE

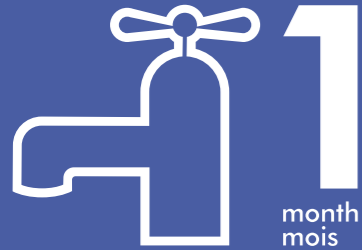

Wash filter with cold water at least every month.
Laver le filtre à l'eau froide une fois par mois minimum.



Dyson Customer Care
1-877-397-6622
Toll free, 6 days a week

Assistance à la clientèle Dyson
1-877-397-6622
Sans frais, 6 jours par semaine

dyson

QUESTIONNAIRE

Please take a few moments to answer our questions.
They will help us develop new products for the future.

Veillez prendre quelques instants pour répondre à nos questions.
Vos réponses nous aideront à mettre au point de nouveaux produits.

1. Where did you first hear of Dyson vacuum cleaners?

- TV / Radio
- Friends / Family
- Website
- In-store
- Newspaper / Magazine
- Other

1. Où avez-vous entendu parler des aspirateurs Dyson pour la première fois?

- Télévision / Radio
- Ami(e)s / Famille
- Site web
- En magasin
- Autre journal / Magazine
- Autre

2. Why did you decide to buy a Dyson vacuum cleaner?
Check all that apply.

- Compact storage
- Cleaning performance
- Advanced technology
- Product features
- Style / Design
- Special offer / Price
- Warranty
- Other

2. Pourquoi avoir décidé d'acheter un aspirateur Dyson?
Cochez toutes les réponses qui s'appliquent.

- Rangement compact
- Rendement du nettoyage
- Technologie avancée
- Caractéristiques du produit
- Style / Design
- Offre / Prix spécial
- Garantie
- Autre

3. What brand was your last vacuum cleaner?

- Dyson
- Dirt Devil
- Eureka
- Hoover
- Miele
- Shark
- Bissell
- Electrolux
- Euro-pro
- Kenmore
- Panasonic
- Other

3. De quelle marque était votre aspirateur précédent?

- Dyson
- Dirt Devil
- Eureka
- Hoover
- Miele
- Shark
- Bissell
- Electrolux
- Euro-pro
- Kenmore
- Panasonic
- Autre

4. Do you have any pets? Check all that apply.

- None
- Dog
- Cat
- Other

4. Vous avez des animaux domestiques?
Cochez tout ce qui s'applique.

- Aucun
- Chien
- Chat
- Autre

5. To which age group do you belong?

- 16-24
- 25-34
- 35-44
- 45-54
- 55-64
- 65+

5. À quel groupe d'âge appartenez-vous?

- 16-24
- 25-34
- 35-44
- 45-54
- 55-64
- 65+

6. What type of home do you live in?

- Single family home
- Town home
- Condominium
- Apartment
- Other

6. Dans quel type d'habitation résidez-vous?

- Maison unifamiliale
- Maison en rangée
- Copropriété
- Appartement
- Autre

7. Which range best describes your annual household income?

- \$15,000 – \$25,999
- \$26,000 – \$35,999
- \$36,000 – \$45,999
- \$46,000 – \$59,000
- \$60,000 – \$79,000
- \$80,000 – \$99,999
- \$100,000 – \$149,999
- \$150,000 +

7. Dans quelle tranche se situe votre revenu familial?

- 15000 – 25999\$
- 26000 – 35999\$
- 36000 – 45999\$
- 46000 – 59000\$
- 60000 – 79000\$
- 80000 – 99999\$
- 100000 – 149999\$
- 150000\$ et plus

Date of purchase Date d'achat	<input type="text"/>	/	<input type="text"/>	/	<input type="text"/>
Place of purchase Lieu d'achat	<input type="text"/>				
Serial number Numéro de série	<input type="text"/>				

Title Titre	<input type="text"/>														
Surname Nom	<input type="text"/>														
First name Prénom	<input type="text"/>														
Address Adresse	<input type="text"/>														
													Zip Code Code postal	<input type="text"/>	
e-mail Courriel	<input type="text"/>														
Telephone Téléphone	<input type="text"/>														

From time to time, we'd like to tell you about new products and promotions. If you'd prefer us NOT to keep in touch, please tick this box.

De temps à autre, nous voudrions vous informer au sujet de nos promotions et nouveaux produits. Si vous préférez que l'on ne communique pas avec vous, veuillez cocher cette case.

3 EASY WAYS TO REGISTER | 3 FAÇONS DE S'ENREGISTRER FACILEMENT

ONLINE
Convenient and instant.
www.dyson.com

EN LIGNE
Pratique et instantané.
www.dyson.com

PHONE
Just call our Helpline on
1-877-397-6622. It's open from 8am – 7pm Monday to Friday and 9am – 5pm Saturday EST.

PAR TÉLÉPHONE
Il vous suffit d'appeler notre service d'assistance téléphonique au
1-877-397-6622. Le service est disponible de 8 h à 19 h, du lundi au vendredi et de 9 h à 17 h le samedi (HNE).

MAIL
Complete and return the form in the envelope supplied.

PAR COURRIER
Remplir le formulaire fourni et le retourner dans l'enveloppe jointe à cet effet.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>