

Warnings and Precautions



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: To prevent fire or shock hazards, do not expose this unit to rain or moisture.

WARNING: Danger of explosion if the unit's batteries are incorrectly installed. Replace only with the same or equivalent battery.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Powering the Unit

The unit is powered by loading two AAA batteries (not included) into the battery compartment.

Please note, when powered on, the unit can last approximately 6 hours off of two AAA batteries.

In the Box

- PF118
- USB Cable
- File Conversion / Compression Software CD

Features

Digital Photo Frame displays photos and pictures

- JPEG/BMP/GIF Picture File Format
- Delete Function

1.5" Color Display

- 128 x 128 Pixel, 65K Color

Supports USB Sync

- Supports Multiple Picture Download at one time from PC through Conversion Program

Digital Clock and Calendar

Auto Power Off Interval Selection (None, 3, 5, 10, 15, 30, 45, 60 Minutes)

- Auto On/Off Times

Installed Flash Memory

- Can Store up to 180 pictures

DC-Powered:

- Uses 2 x "AAA" Batteries, (not included)

Parts Information

Address: 2116 Carr Street, St. Louis MO, 63106
Phone: 1-314-621-2881
Fax: 1-314-588-1805
Email: partsinfo@dpi-global.com

Service Information

Address: 2116 Carr Street, St. Louis MO, 63106
Phone: 1-314-621-2881
Fax: 1-314-588-1805
Email: prodinfo@gpx.com
Website: www.gpx.com
Version: v. 073108

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.gpx.com.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.gpx.com.

Automatic Power Off

The Auto Power Off feature can be set from the unit's menu.

- Step 1:** With the unit powered on, press the **Menu Button**.
- Step 2:** Highlight "Auto Power Off" using the **Directional Buttons**, and press the **Menu Button** to select the highlighted option.
- Step 3:** Use the **Directional Buttons** to highlight one of the following options:
- 3, 5, 10, 15, 30, 45, or 60 minutes, or Off.
- *The default setting for the Auto Power Off feature is 30 minutes.*
- Step 4:** The unit will power off after the selected amount of time has expired.

Automatic On/Off

- Step 1:** With the unit powered on, press the **Menu Button**.
- Step 2:** Press the **Directional Buttons** to highlight "Auto On/Off", and press the **Menu Button**.
- Step 3:** Press the **Directional Buttons** to highlight "Auto On" or "Auto Off".
- Auto On - Select to enable the automatic on/off feature and set the time.
- Auto Off - Select to disable the automatic on/off feature.
- Step 4:** Press the **Menu Button**.
- Step 5:** After selecting "Auto On", use the **Directional Buttons** to set the "On" hour.
- Step 6:** Press the **Menu Button**.
- Step 7:** Use the **Directional Buttons** to set the "On" minute.
- Step 8:** Press the **Menu Button**.
- Step 9:** Use the **Directional Buttons** to set the "Off" hour.
- Step 10:** Press the **Menu Button**.
- Step 11:** Use the **Directional Buttons** to set the "Off" minute.
- Step 12:** Press the **Menu Button**.

Loading Photos onto the Unit

Step 1: With the unit powered off, connect the unit to a computer using the included USB cable.

Step 2: Use the **Directional Buttons** to select “USB Download”.

USB Play will allow you to browse and play photo content while the unit is powered by the USB connection.

USB Download will allow you to download photos directly onto the unit.

Step 3: Press the **Menu Button**.

Step 4: A window will pop up on the connected PC computer asking “What do you want Windows to do?”.

Step 5: Double Click “Run the Program”.

Step 6: In this program, photos can be added or deleted to or from the unit.

Step 7: Click on the “Select Files” button on the top left to find a photo to load.

Step 8: After the desired image is selected, highlight it in the “File List” in the program, and crop it to size using the selection tool in the “Image Editor”.

Step 9: After the red box is placed, click the blue “Add” arrow, to add the photo to the unit.

Adjusting the Display Mode

Step 1: With the unit powered on, press the **Menu Button**.

Step 2: Highlight “Display Mode” using the **Directional Buttons**, and press the **Menu Button** to select the highlighted option.

Step 3: Select one of the following options using the **Directional Buttons**:

Auto Slide - A slideshow of photos will automatically play when the unit is powered on.

Manual Slide - The **Directional Buttons** must be pressed in order to cycle through loaded photos.

Step 4: Press the **Menu Button** to select “Auto Slide” or “Manual Slide”.

Control Definitions

1. Mini USB Connection

Use the Mini USB Connection to connect the unit to a computer.

2. Menu Button

Press the Menu Button to access the unit’s menu.

3. Power Switch

Adjust the Power Switch to turn the unit off or on.

4. Hook Connection

Use the Hook Connection to connect an ornament hook to the unit.

5. Battery Compartment (Requires 2 AAA Batteries, not included)

6. Directional Buttons

Use the Directional Buttons to navigate through a slideshow of photos, or through the unit’s menu.

7. LCD Display

The LCD Display displays photos, the time and date, and menu information.

Setting the Date and Time

Step 1: With the unit powered on, press the **Menu Button**.

Step 2: Press the **Directional Buttons** to adjust the year, and press the **Menu Button** to set the year.

Step 3: Press the **Directional Buttons** to adjust the month, and press the **Menu Button** to set the month.

Step 4: Press the **Directional Buttons** to adjust the day, and press the **Menu Button** to set the day.

Step 5: Press the **Directional Buttons** to adjust the hour, and press the **Menu Button** to set the hour.

Step 6: Press the **Directional Buttons** to adjust the minute, and press the **Menu Button** to set the minute.

Step 7: Press the **Directional Buttons** to adjust the second, and press the **Menu Button** to set the second.

Step 8: The time and date are now set.

- To view the time and date, select the “Clock Disp” option in the menu.

Deleting an Image

Step 1: With the unit powered on, press the **Directional Buttons** to select a photo you wish to delete.

Step 2: Press the **Menu Button**.

Step 3: Highlight “Delete” using the **Directional Buttons**, and press the **Menu Button** to select the highlighted option.

Step 4: The current photo will be deleted from the unit’s memory.

Adjusting the Brightness


Step 1: With the unit powered on, press the **Menu Button**.

Step 2: Use the **Directional Buttons** to select the “Brightness” feature, and press the **Menu Button**.

Step 3: Press the **Directional Buttons** to adjust the brightness of the unit.

Step 4: When the desired level of brightness is reached, press the **Menu Button**.

Locations of Controls

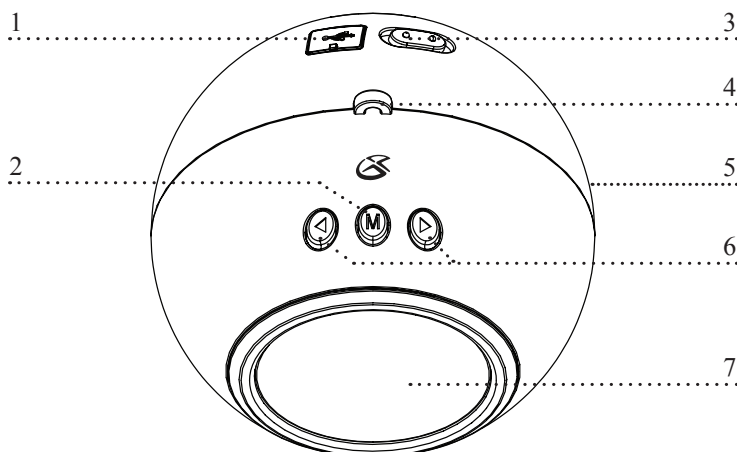

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>