



USER'S GUIDE

V:1343-0726-11



PF701

7" Digital Photo Frame

For the most up-to-date version of this User's Guide, go to www.gpx.com

Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.

- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING:** Shock hazard - Do Not Open.
- **AVIS:** *RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
*No mezcle baterias viejas y nuevas.
No mezcle baterias alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).*



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read these Instructions.
 2. Keep these Instructions.
 3. Heed all Warnings.
 4. Follow all instructions.
 5. Do not use this apparatus near water.
 6. Clean only with a dry cloth.
 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 11. Only use attachments/accessories specified by the manufacturer.
-
12.  Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
-
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or back of the apparatus.
Attention marquage est situé à l'arrière ou à l'arrière de l'appareil
- The marking information is located at the rear or back of apparatus.
Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

7" Digital Photo Frame

Features

- 7" LCD display
- Auto slide show
- SD/MMC memory card slot
- USB port
- Digital clock
- Calendar
- DC power: requires an AC/DC power adapter (included)

Included

- AC/DC power adapter
- Removable stand

Table of Contents

7" Digital Photo Frame	4
Features	
Included	
Table of Contents	5
Introduction	6
Setup	7
Power	
Attaching the Stand	
Photos	8
Loading Photos	
Playing Loaded Photos	
Saving Photos to the Built-in Memory	
Clock and Calendar	9
Setting the Clock and Calendar	
Viewing the Clock and Calendar	
Settings	10
Company Information	12
International Support	
Contact Information	
Green Initiative	

Introduction

Play/Pause

 
Press to play or pause a photo slideshow or make selections in the menus .

Menu

Press to return to the previous menu or through the primary menus.

USB Port

SD/MMC Memory Card Slot

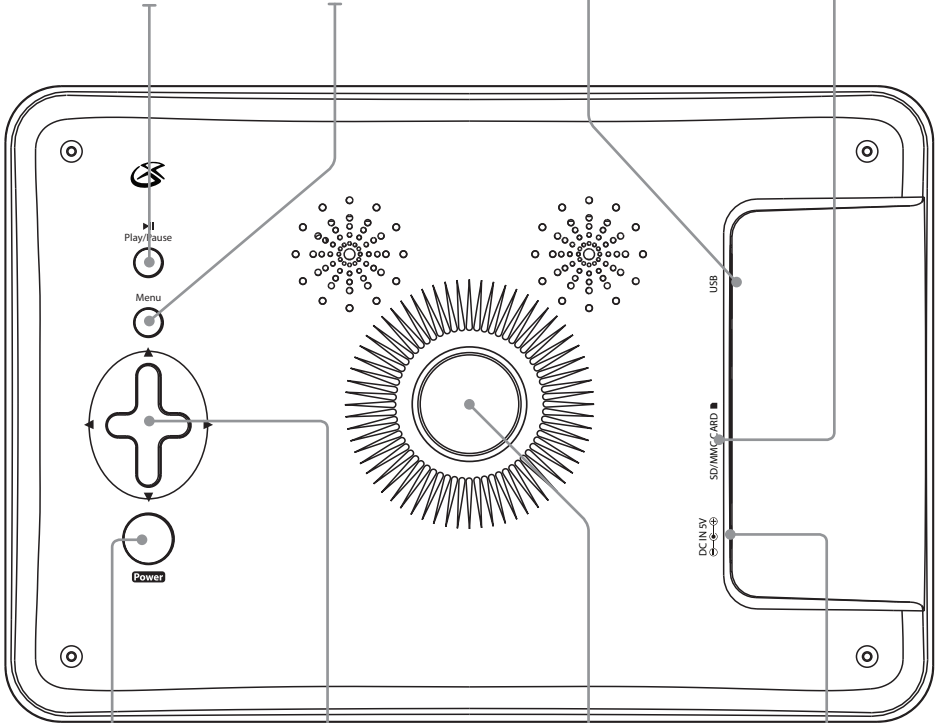

Power

Press and hold to turn the Digital Photo Frame off or on. Press to access an on-screen menu.

Arrows

Press to navigate the on-screen menus.

 
Stand Connection

DC Power Input

Setup



Power

DC power input: requires an AC/DC power adapter (included)

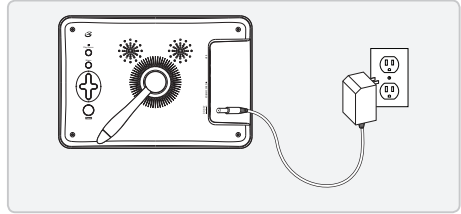

Attaching the Stand

  To attach the stand simply insert the ball of the stand into the connection on the back of the Digital Photo Frame.

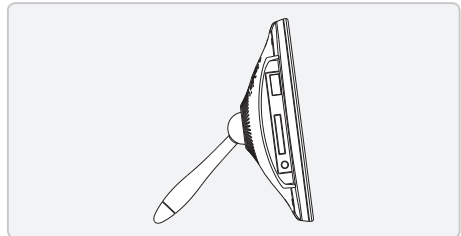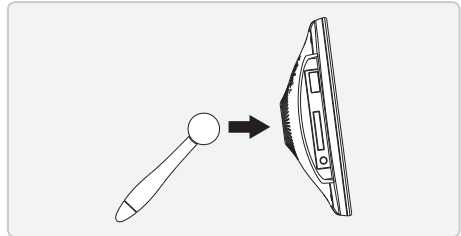


Photos

Loading Photos

1. Insert an SD/MMC memory card into the **SD/MMC Memory Card Slot** or a USB thumb drive into the **USB Port**.

 File requirement: JPEG


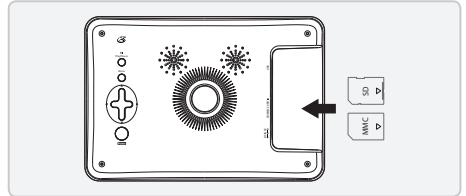


Playing Loaded Photos

1. Press the **Menu** button to access the main menu.
2. Use the **Arrow** buttons to highlight the "Files" icon. Press the **Play/Pause** button.
3. Use the **Arrow** buttons to highlight "Memory", "SD/MMC", or "USB".
4. Press the **Play/Pause** button to select the highlighted memory source.


JPEG photos from that memory source will begin to play as a slideshow automatically.

  5. Press the **Menu** button to back out of the slideshow and access a thumbnail view of the photos.

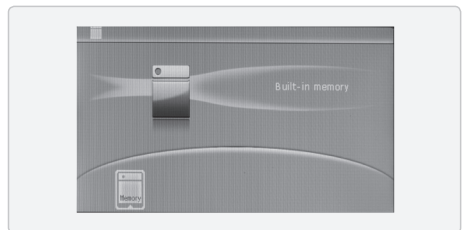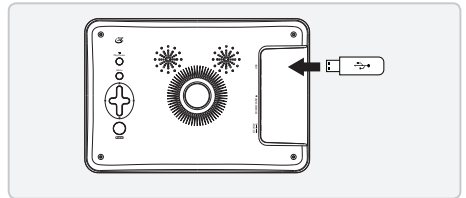

Saving Photos to the Built-in Memory


 
1. During a photo slideshow, press the **Play/Pause** button to pause the slideshow.
2. Press the **Power** button to open the on-screen menu.
3. Use the **Arrow** buttons to select "Save Picture", and press the **Play/Pause** button.

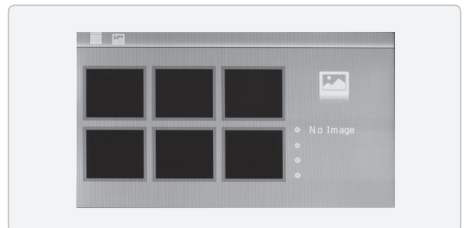

Clock and Calendar

Setting the Clock and Calendar

  1. Press the **Menu** button to access the main menu.
2. Use the **Arrow** buttons to highlight the "Settings" section and press the **Play/Pause** button.
3. Use the **Arrow** buttons to highlight "Set time/date".
4. Use the **Arrow** buttons to highlight "Year". Press the **Play/Pause** button.
5. Use the **Arrow** buttons to adjust the year, and press the **Play/Pause** button.
6. Repeat steps 4 and 5 to set the Month, Date, Hour, Minute, and Second.
7. Use the **Arrow** buttons to highlight "Save Time" and press the **Play/Pause** button to save the set time.

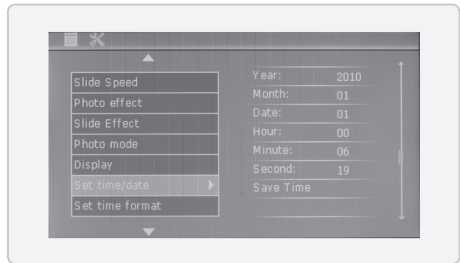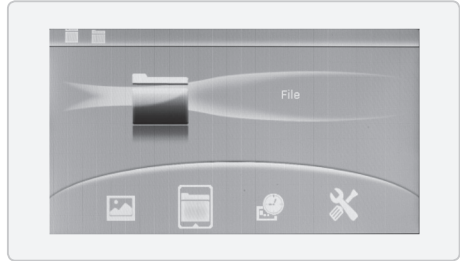

Viewing the Clock and Calendar

1. Press the **Menu** button to access the main menu.
2. Use the **Arrow** buttons to highlight the "Calendar" section and press the **Play/Pause** button.

Settings

Language

- English
- French
- Spanish

Slide Mode

- Single Window
- Four Windows

Slide Speed

- 3 seconds - 5 minutes

Photo Effect

- Color
- Mono
- Sepia

Slide Effect

- Random
- Split Horizontal In
- Split Horizontal Out
- Jalousie
- Split Vertical In
- Split Vertical Out
- Radiation
- Surround
- Fade
- Right Refresh
- Next Refresh
- On Pan
- Roll From Down to Up
- Roll From Up to Down
- Brick

Photo Mode

- Auto Fit
- Optimal
- Full

Display

- Contrast
- Brightness
- Saturation
- Tint

Set time/date

- Year, Month, Date, Hour, Minute, Second

Format Built-in Memory

Reset Setting

Exit



Company Information

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

Contact Information

Phone: 1-888-999-4215

Email: prodinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>