

Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Features

- 8GB installed flash memory
- Digital audio: MP3, WMA, WAV
- Digital video: AVI
- Digital photos: JPEG, BMP, GIF
- DRM free
- 2" TFT LCD display
- Built-in microphone
- Includes: mini-USB to USB cable, one set of stereo earbuds

Includes

- Mini-USB to USB cable
- One set of stereo earbuds

System Requirements

DC battery power: built-in rechargeable lithium polymer battery

To charge the built-in rechargeable battery use the included USB cable to connect the digital media player to a computer that's attached to an AC power source and powered on.

 
Power

Loading music onto the digital media player requires a computer with a USB port and one of the following operating systems.

Windows XP, Windows Vista, Windows 7
Mac OS 10.4, 10.5, or 10.6

Introduction

Stereo Headphone Jack




Mini-USB Port

Menu
Press and hold to return to the main menu. Press to make selections in the menus or to access a sub-menu in Music, Videos, and Photo mode.

Skip/Search
Press or press and hold to skip or search through tracks.

Play/Pause
Press to play or pause music and videos.

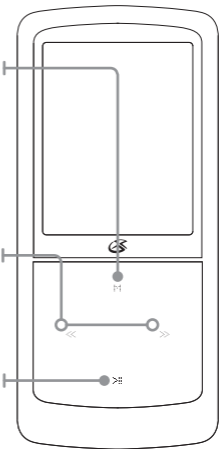


Volume
Press to adjust
the volume.

ON/OFF
Slide to power the
player off and on.

Hold
Press and hold to
lock or unlock the
players buttons.

Microphone

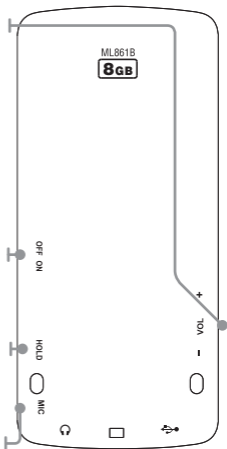

Loading Files

1. Connect the digital media player to a computer using the **MINI-USB** connection and a USB cable (included).
2. Once connected, the unit will show up on the connected computer as if it were a connected USB thumb drive, external hard drive, or memory card.
3. Drag and drop the desired files into the unit's drive location on the connected computer.
4. After the files are loaded onto the unit, right-click on the drive and eject it from the computer, then disconnect the USB cable.

File Compatibility:

Digital audio: MP3, **WMA**, **WAV**

Digital video: **AVM**

Digital photos: **JPEG**, **BMP**, **GIF**

Video Conversion Software

1. Connect the media player to a computer using the included USB cable.
2. Once connected, the video conversion software will open automatically.
3. Use the conversion software to select a video on your computer and convert it to the AVM format so it will be playable on the media player.
4. After converting, follow the instructions for Loading Files to load the newly created AVM file to the media player.

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

Contact

Phone: 1-888-999-4215

Email: prodinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

Copyright © 2011 Digital Products International (DPI, Inc.)

All other trademarks appearing herein are the property of their respective owners.

Specifications are subject to change without notice.

Music

1. Follow the instructions for Loading Files.
2. From the main menu, use the **Skip/Search** buttons to highlight the Music icon. Press the **Menu** button.
3. With the music paused, press the **Menu** button to access the sub-menu.
4. Use the **Skip/Search** buttons to highlight File Select. Press the **Menu** button.
5. Use the **Skip/Search** buttons to highlight the desired song. Press the **Menu** button to begin playing the selected song.

*While music is playing, press the **Menu** button to access the EQ/Play menu.*

Movies

1. Follow the instructions for Loading Files.
2. From the main menu, use the **Skip/Search** buttons to highlight the Movie icon. Press the **Menu** button.
3. With the movie stopped, press the **Menu** button to access the sub-menu.
4. Use the **Skip/Search** buttons to highlight File Select. Press the **Menu** button.
5. Use the **Skip/Search** buttons to highlight the desired movie. Press the **Menu** button to begin playing the selected movie.

Photo

1. Follow the instructions for Loading Files.
2. From the main menu, use the **Skip/Search** buttons to highlight the View Photo icon. Press the **Menu** button.
3. Use the **Skip/Search** buttons to highlight File Select. Press the **Menu** button.
4. Use the **Skip/Search** buttons to highlight the desired photo. Press the **Menu** button to begin playing the selected photo.

Record Audio

1. From the main menu, use the **Skip/Search** buttons to highlight the Recording icon. Press the **Menu** button.
2. Press the **Play/Pause** button to start and stop recording.
3. Press and hold the **Menu** button to save your recording and return to the main menu.
4. Recordings can be accessed and played through the Voice icon in the main menu.

Voice

1. Follow the instructions for Recording Audio.
2. From the main menu, use the **Skip/Search** buttons to highlight the Voice icon. Press the **Menu** button.
3. While paused, press the **Menu** button to access the sub-menu.
4. Use the **Skip/Search** buttons to highlight File Select. Press the **Menu** button.
5. Use the **Skip/Search** buttons to highlight the desired recording. Press the **Menu** button to begin playing the selected recording.

*While audio is playing, press the **Menu** button to access the **EQ/Play** menu.*

System Settings

LCD set

Language

Memory info

Default

Exit



USER'S GUIDE
V:1356-0523-11



ML861

Digital Media Player

For the most up-to-date version of this
User's Guide, go to **www.gpx.com**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>