

 


Cordless Household Scrubber

OWNER'S MANUAL

Model SB77H

3.6 V DC

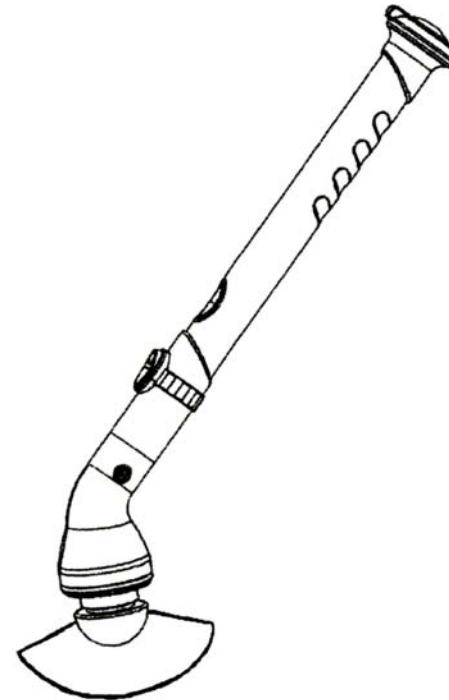

EURO-PRO Operating LLC

U.S.: 94 Main Mill Street, Door 16
Plattsburgh, NY 12901

Canada: 4400 Bois-Franc
St-Laurent, QC H4S 1A7

Tel. :1 (800) 798-7398

Model
SB77H



ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to:

US.: **EURO-PRO Operating LLC**, 94 Main Mill Street, Door 16, Plattsburgh, NY 12901
CANADA: **EURO-PRO Operating LLC**, 4400 Bois Franc, St Laurent Qc H4S 1A7

If the appliance is found to be defective in material or workmanship, **EURO-PRO Operating LLC** will repair or replace it free of charge. Proof of purchase, date and \$ 12.95 to cover the cost of return shipping and handling must be included. *

Non-durable parts including, without limitation, those which normally require replacement such as brushes are specifically excluded from warranty.

The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO Operating LLC**.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event is EURO-PRO Operating LLC** liable for incidental or consequential damages of any nature whatsoever. Some states/provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

***Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



OWNERSHIP REGISTRATION CARD

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

RETURN TO **EURO-PRO Operating LLC**, 94 Main Mill Street, Door 16, Plattsburgh, NY 12901

Model SB77H

Appliance model

Date purchased

Name of store

Owner's name

Address

City

Province

Postal code

OPERATING INSTRUCTIONS

5. Attach the desired brush (large or narrow brush) to the end of the power head by pushing it on.
6. To remove the accessories, turn the unit off and then pull them off the power head.
7. To remove the power head from the power wand, press the release button and pull apart.

Note: Always let the scrubber and brushes dry completely before storing in a confined area.

To Extend Your Battery Life

- **Only recharge when the battery is almost fully discharged.**
- **Completely discharge and recharge the battery at least once a month.**
- **Do not store the cordless scrubber with the charging adaptor attached and plugged in.**
- **We do not recommend that the appliance be left plugged into the charging adaptor for more than 24 hours.**

Battery Disposal

The Ni-Cd batteries in your cordless scrubber are not replaceable. When the Ni-Cd batteries are no longer recharging, the power wand must be disposed of properly. Call your nearest recycling center for information on the recycling and disposal of Ni-Cd batteries. Please consult your Yellow Pages or local recycling center for more information. Never attempt to throw the unit into a fire or incinerate it.

To Order Replacement Accessories

Please contact customer service at 1 (800) 798-7398 for replacement or additional brushes or for a new power wand.

Wall Mounting Bracket

1. Make sure that the intended wall area for the wall mounting bracket to be drilled is free from any hidden electrical wires, water pipes and gas lines.
2. Select an appropriate place close to a wall power outlet (120V., 60 Hz).
3. **Do not** mount near direct sunlight, near a heat source or outdoors.

4. Select an appropriate drill type for the material to be drilled.
5. Carefully measure and mark the location of all bracket holes and then drill holes and screw the wall mounting bracket onto the wall. (Fig. 6)
6. Insert the hanging hook into the wall mounting bracket. (Fig. 7)
7. Insert the cordless scrubber into the hanging hook for charging. (Fig. 8) **Do not leave the cordless scrubber for more than 24 hours when it is charging.**
8. You can hang the cordless scrubber from any rod to store as long as it will not be immersed in water or any other liquid. (Fig. 9)

 


Fig. 6

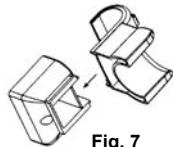 


Fig. 7

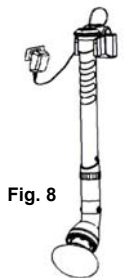 


Fig. 8

To Charge

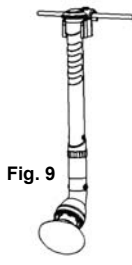 


Fig. 9

To Store

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following

READ ALL INSTRUCTIONS BEFORE USING YOUR CORDLESS HOUSEHOLD SCRUBBER.

 
WARNING: To reduce the risk of fire, electrical shock, or injury:

1. Read and follow all label, operational and marking instructions.
2. **Do not** charge this appliance outdoors.
3. **Do not** use outdoors or on wet surfaces.
4. **Do not** allow to be used as a toy. Close attention is necessary when used by or near children.
5. Use only as described in this manual. Use only manufacturer's recommended attachments.
6. **Do not** use with damaged cord or plug. **Do not** use this appliance if it has been dropped, damaged, left outdoors, or dropped in water. Return it to **EURO-PRO Operating LLC** for examination, repair or adjustment.
7. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
8. **Do not** attempt to change accessories while unit is running.
9. Store the cordless household scrubber indoors. Store after use to prevent accidents.
10. **Do not** store the appliance near hot ovens or heating appliances.
11. **Never** carry the charger by the cord or yank to disconnect from the electrical outlet. Always hold the charger and pull to disconnect.
12. Keep charger cord away from heated surfaces.
13. Turn the appliance to the "Off" position before recharging.
14. **Do not** use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard (120V., 60Hz) electrical outlet. Using improper voltage may result in damage to the motor and possible injury to the user.
15. This product includes rechargeable nickel cadmium batteries. Batteries must be recycled or disposed of properly. **Do not incinerate batteries or expose to high temperatures**, as they may explode.
16. **Do not** handle charger or appliance with wet hands.
17. Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin - wash immediately with soap and water or neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
18. **Do not** use for any purpose other than described in this user's guide.
19. **Do not** attempt to use the charger with any other product or attempt to charge this product with another charger. **Use only charger model MCDC080020UA2 supplied with this appliance.**
20. **This appliance is not submersible. Do Not** immerse in water or any other liquids.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

GETTING TO KNOW YOUR CORDLESS HOUSEHOLD SCRUBBER

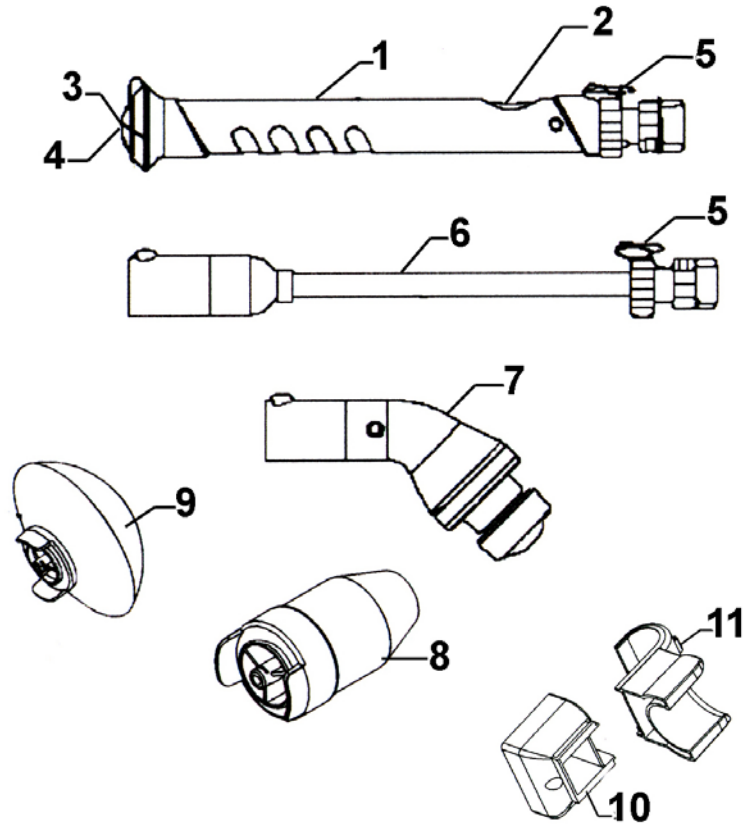

- | | |
|-----------------------------|----------------------------------|
| 1. Power Wand | 7. Power Head |
| 2. On/Off Button | 8. Narrow Brush |
| 3. Charging Port | 9. Large Brush |
| 4. Charging Indicator Light | 10. Wall Mount (screws included) |
| 5. Extension Wand | 11. Hanging Hook |
| 6. Extension Wands (x2) | 12. Charging Adapter (not shown) |

Illustrations may differ from actual product.

NOTE: The Cordless Household Scrubber is shipped with the battery uncharged. Charging of the unit for 20 hours prior to first use is required.

Technical Specifications

Voltage: 3.6 V DC
Power: 20 Watts

 
OPERATING INSTRUCTIONS

Using Your Cordless Household Scrubber

Your cordless scrubber has not yet been charged. Before first use, the power wand must be charged for a period of 20 hours.

Warning: This appliance is not submersible. **Do not** immerse in water or any other liquids.

1. Make sure that the "On/Off" button on the power wand is in the "Off" position.
2. Insert the charging jack into the charging port. (Fig. 1)

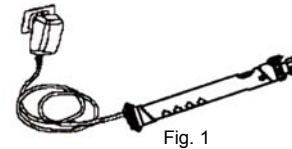

3. The red charging light will light up while the unit is charging.
4. Let the power wand charge for 20 hours.

Note: Your scrubber will work approximately up to one (1) hour on a single charge

Attaching the Accessories to the Power Head

Your cordless scrubber comes with a large brush, a narrow brush and two extension wands.

Large Brush

Can be used to clean:

Household: tiles, tubs, shower doors, walls, fiberglass, hard plastic surfaces, countertops, backsplashes, patio furniture, walls and windows.

Automotive: tires, hubcaps, lined truck beds, vinyl doors.



Narrow Brush

Can be used to clean:

Household: bathroom fixtures, drains, narrow spaces such as between appliances or hard to reach corners.



Extension Wand

Use one or both of the extension wands to reach high places.

 


Assembling Your Cordless Household Scrubber

Your cordless scrubber can be used with or without the extension wands.


To use without the extension wand:

1. Make sure that the On/Off button is in the "Off" position.
2. Insert the power head onto the power wand making sure that it locks in place. (Fig. 2)




3. Attach the desired brush (large or narrow brush) to the end of the power head by pushing it on. (Fig. 3)

 Please note that the power head has a D-shaped shaft and the brushes have a D-shaped hole that must be properly aligned for attachment. Do not force the brushes onto the power head as they may be damaged.




 4. To remove the accessories, turn the unit off and then pull them off the power head.
5. To remove the power head from the power wand, press the release button and pull apart. (Fig. 4)

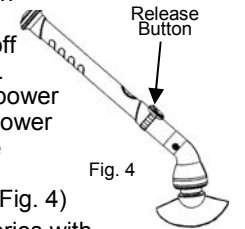

To use the accessories with one or both extension wands:

 1. Make sure that the On/Off button is in the "Off" position.
2. Insert one of the extension wands onto the power wand. (Fig. 5) Make sure that the two pieces lock in place.



3. If you want to add the other extension wand, just attach it to the end of the first one. Again make sure that the two extension wands are locked together.
4. Insert the power head onto the extension wand making sure that it locks in place.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>