

EXCALIBUR



**CASINO 6 IN 1 WITH
CALCULATOR (368E)**

USER MANUAL

CASINO 6 IN 1 WITH CALCULATOR

- 1) Press "on" button to start the unit.
O
- 2) Press "MRC" button to turn the sound on or off.
Sound
- 3) Press "CE" Button to Desired Game: Slot Machine
Game
Blackjack, Baccarat, Roulette, Poker or Calculator
- 4) Press "Deal" Button to start the game.
Start
- 5) The starting score is 2000 points which is used as "bets"
- 6) Press "+" Button and then select the betting amount by pressing
1,2,39 which represents 10,20,30....90.

SLOT MACHINE

Press "Deal" button to start the spin.
Start

Scoring: betting amount x ratio

			Ratio
Bar	Bar	Bar	300
Bar	Bar	Bar	
Bar	Bar	Bar	
Bar	Bar	Bar	80
Bar	Bar	Bar	10
Any	Any	Any	3
Bar	Bar	Bar	

BLACK JACK

- Press "Deal" Button to give out the cards.
- Press "Stand" Button to show the banker no additional card is taken

Scoring - 2 x betting amount if you get blackjack
1 x betting amount if player wins

BACCARAT

- Press "T/P/D" to bet player and dealer tier, player win or dealer win
- Press "DEAL" button to play the game

Start

- Player & Dealer each get two playing cards at the beginning, any one side with higher count of the two cards will win the game. Aces = 1, Face cards=0 if the sum of the two cards is:
 - a) 0,1,2,3,4,5 (For player & dealer) Deal the cards to player and dealer.
 - b) 6,7 (For either side): No third card to this side
 - c) 8,9 (For either side): No third card to both sides

Scoring: To bet player wins - 1 x betting amount
To bet player wins - 1 x betting amount
To bet Player and dealer tie - 8 x betting amount

ROULETTE

- Select the numbers from 1 to 8.
- Press "Deal" Button to spin the wheel
Start
- Scoring : 8 x the betting amount.

POKER

- Press "Hold 1...Hold 5" Button to hold or change the cards.
- Press "Deal" Button to give out the cards

Scoring: Betting amount x Dividend

		Dividend
a.	Pair	1
b.	Two Pair	2
c.	Three of a Kind	3
d.	Straight	4
e.	Flush	5
f.	Full House	25
g.	Four of A Kind	100
h.	Straight Flush	500
i.	Royal Flush	1000

Batteries: 1.6 V x 2 (AA) Batteries - Not Included
Game reset: When the game doesn't work properly.

Hold & press "On" / Button to reset the game C

BATTERYWARNING

- 1) Do not use rechargeable batteries
- 2) Batteries are to be inserted with correct polarity
- 3) Only batteries of the same or equivalent type as recommended are to be used, different types or new and used batteries are not to be mixed
- 4) Exhausted batteries are to be removed from the unit
- 5) Do not short circuit the supply terminals
- 6) Non-rechargeable batteries are not to be recharged.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>