

User's Guide for
Wind Blaster

EXCALIBUR

ELECTRONICS, INC.



Model No. FN10-BB

Congratulations on your purchase of the Wind Blaster from Excalibur Electronics, Inc. You and your family will enjoy this battery-powered fan during the next blackout or hurricane.

Your Wind Blaster is easy to use, but be sure to use it safely. Before starting, please read this manual thoroughly, especially noting safety and care. Keep this manual for reference.

This package includes one Wind Blaster and its user's guide.



The legendary King Arthur brandished a magic sword, Excalibur, from which we take our company name. With this unique weapon in his hand, he could not be vanquished.

Although Excalibur Electronics can't claim the magical secrets of Merlin, King Arthur's court wizard, sometimes our patented technology may make it seem as if we could.

We make you think.

TABLE OF CONTENTS

 
Installing Batteries	page 3
Layout of the Wind Blaster	page 4
Functions of Switch.	page 5
How to Use	page 5
Special Care & Handling.	page 6
Battery Information.	page 6
Limited 90-Day Warranty.	page 7

Installing Batteries

Your Wind Blaster requires eight D-cell batteries, not included.


To install batteries, turn the unit over so the back section is facing you (Figure 1). slide the two tabs to the open position . These tabs are located on the bottom of the battery compart-

ment lid. Pull off the battery compartment lid (Figure 2). Install eight D-cell batteries, making sure to match the polarity (+ and -) with the diagram inside the battery compartment. Push the battery compartment lid back by sliding it in and pushing the two tabs into a lock position.

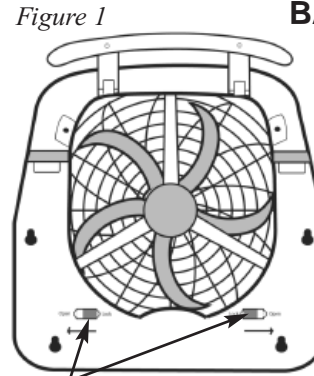

TABS- OPEN/LOCK

 BACK OF UNIT

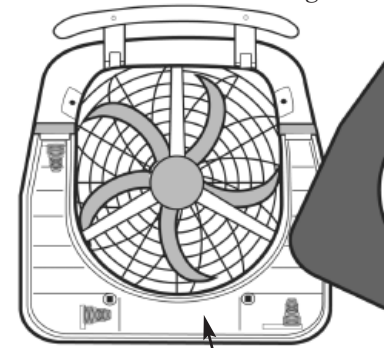

BATTERY COMPARTMENT

Layout of the Wind Blaster



LOW/OFF/HIGH

Functions of Switch

LOW/OFF/HIGH: Switch right to turn the Wind Blaster on to the highest setting; switch center to turn the Wind Blaster off; switch left to turn the Wind Blaster to the lowest setting.

How to Use

Insert eight D-cell batteries, as described in the “Installing Batteries” section on page 3.

The right position is the highest setting, the left position is the medium setting and the center position is off.

Special Care and Handling

- Choking hazard! This product contains small parts not suitable for children.
- Store your Wind Blaster indoors when not in use. Remove the batteries prior to storage because they can leak and cause internal damage.
- Do not insert anything into the blades of the fan.
- Keep out of reach of children.
- Avoid rough handling such as bumping or dropping.

Battery Information

- Your Wind Blaster uses eight D-cell batteries, not included.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the unit.

Excalibur Electronics reserves the right to make technical changes without notice in the interest of progress.

LIMITED 90-DAY WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of

 
incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave
Miami, Florida 33186 U.S.A.
Phone: 305.477.8080
Fax: 305.477.9516

www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

PLEASE DO NOT SEND
YOUR UNIT WITHOUT
RECEIVING
AN ESTIMATE
FOR SERVICING.
WE CANNOT
STORE YOUR UNIT!

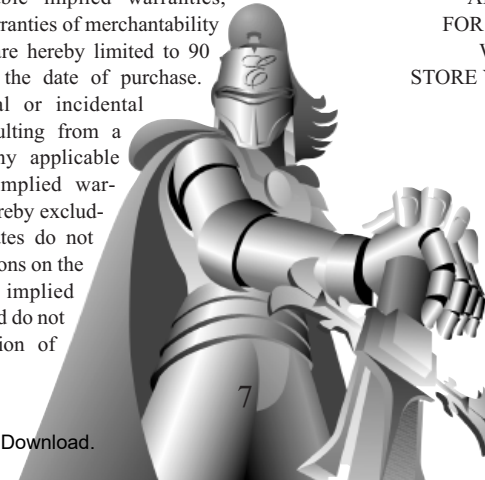

EXCALIBUR ELECTRONICS

EXCALIBUR ELECTRONICS, INC.
13755 SW 119TH AVENUE
MIAMI, FLORIDA 33186 U.S.A.

WE MAKE YOU THINK

PHONE: 305.477.8080

FAX: 305.477.9516



EXCALIBUR ELECTRONICS

*Play games
live at:*

www.ExcaliburElectronics.com

FN10-BB (MA) Wind Blaster 050806 V3

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>