

aerotech™
ADVANCED COOKING SYSTEM

OS302, OS302M, OD302, OD302M


Multifunction oven
User guide US CA

Contents

Introduction	3
Safety & warnings	4
Location of features	6
Setting the clock	7
Oven displays	8
Oven modes	9
Shelf positions	12
Accessories	13
Using the oven controls	14
Oven operation	17
User select options	22
Cooking mode options	26
Cooking charts	27
Cleaning	34
Self Clean mode	36
Trouble shooting	39
Maintenance	41
Limited warranty	42

Introduction

This User Guide explains how to operate and maintain your new appliance properly and safely. Please read the whole guide carefully before starting to use your oven.

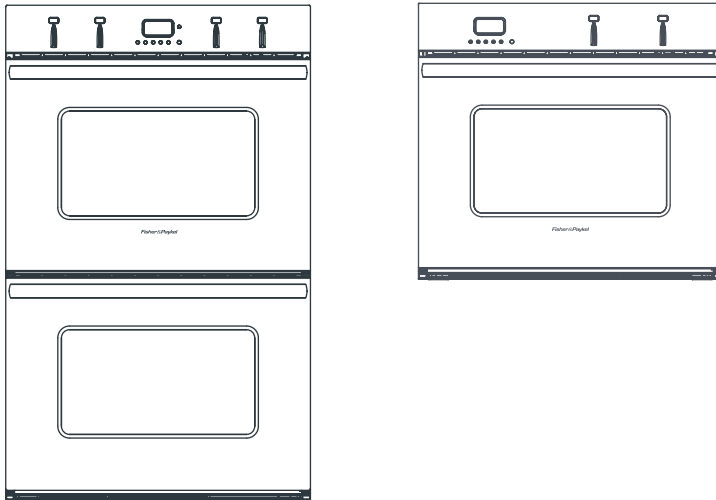

Fisher & Paykel AeroTech™ oven
Double model OD302, OD302M
and Single model OS302, OS302M

Important!

It is important that the User Guide should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, always ensure that the User Guide is left with the appliance.

Safety and warnings



This symbol alerts you to hazards such as fire, electrical shock, or other potential injuries. It also warns you of things that may cause damage to your oven.

! WARNING!



Hot Surface Hazard

Accessible parts will become hot when in use.

Children should be kept away and care should be taken.

Failure to do so could result in burns and scalds.

! WARNING!

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the oven, follow the 'General safety precautions' listed below:

General safety precautions

- **Read all the instructions before using the oven.** Use the oven only for its intended purpose as described in these instructions.
- **Install your oven in accordance with the provided installation instructions.** Be sure your appliance is properly installed and grounded by a qualified technician.
- **Do not use your oven for warming or heating the room.** Persons could be burned or injured or a fire could start.
- **Children should not be left alone or unattended** in the area where the oven is in use. They should never be allowed to sit or stand on any part of the appliance.
- **Use only dry oven mitts or potholders.** Moist or damp potholders on hot surfaces could result in burns from steam. Do not let potholders touch hot or heating elements. Do not use a towel or a bulky cloth for a potholder. It could catch fire.
- **Do not store flammable materials on or near the oven.** They could create an explosion and/or fire hazard.
- **Do not use water on grease fires.** Smother the fire/flames or use a multipurpose dry chemical or foam-type extinguisher.
- **Do not repair or replace any part of the oven** unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- **Do not store things children might want above the oven.** Children could be burned or injured while climbing on it.
- **Do not operate the oven if it is damaged or not working properly.**


- **Do not install or use a damaged appliance.** If you receive a damaged product, contact your dealer or installer immediately.
- **Children or persons with a disability** that may limit their ability to use the appliance should have a competent person instruct them in its use. This person should be satisfied that they can then use the appliance without danger to themselves or their surroundings.

When using the oven

- **Do not touch heating elements or interior surfaces of the oven.** Heating elements may be hot even though they are dark in color.
- **Always position oven shelves in the desired location while oven is cool.** If a shelf must be removed while the oven is hot do not let the oven gloves contact hot heating elements in the oven or the base of the oven.
- **Wear Proper Apparel.** Do not wear loose fitting or hanging garments when using the oven. They could ignite or melt if they touch an element or hot surface or you could be burned.
- **Do not heat unopened food containers.** They can build up pressure that may cause the container to burst and result in injury.
- **Always keep oven vent ducts unobstructed.**
- **Use care when opening the oven door.** Let hot air or steam escape before removing or replacing food.
- **Do not clean the door or cavity seals (gaskets) or use any oven cleaning products on the seals.** They are essential for a good seal and efficient operation of the oven.

Location of features

The diagram below shows you what features your oven has and where they are located (Double oven model shown).

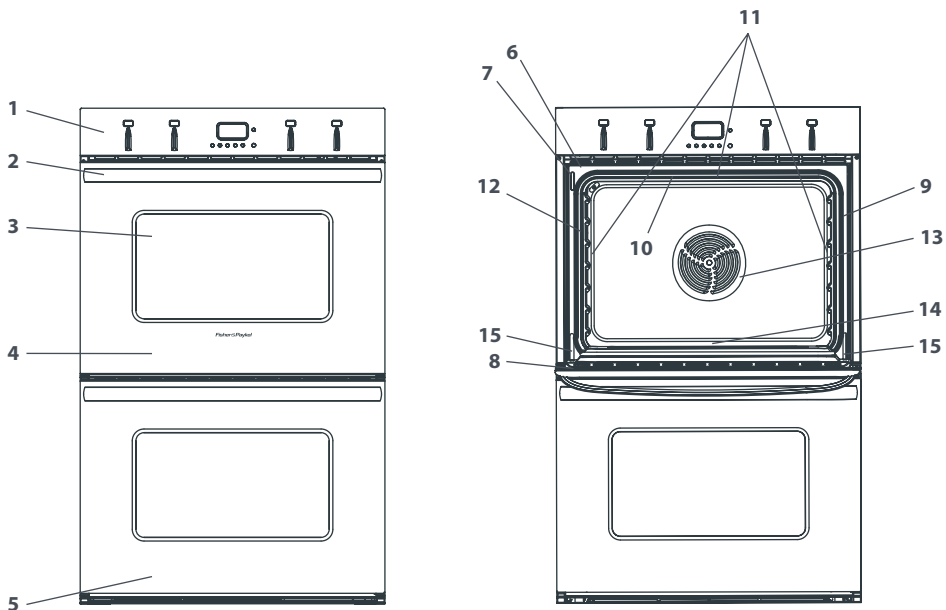

- 1 Control Panel
- 2 Door Handle
- 3 Oven Window
- 4 Upper Oven
- 5 Lower Oven (double models only)

- 6 Model & Serial Number
- 7 Self Clean Latch
- 8 Door Seal
- 9 Cavity Seal
- 10 Broil Element
- 11 Oven Lights
- 12 Cooking Probe Socket
- 13 Aero™ Fan & Concealed Element
- 14 Lower Concealed Element
- 15 Door Hinge

Setting the clock

As your oven is connected to a power supply for the first time, a tone will sound and the clock display will light up. The clock display will show '0:00' and the colon (:) will flash. Next, set the clock.


Clock must be set before oven can be operated

To set the clock

The oven clock has a default 24 hour display. '0:00' will be shown when the oven has been turned on at the wall and the colon will flash. Next, set the clock.

- 1 While the colon is flashing, rotate the setting selector until the correct time of day is showing.
- 2 Press the **clock** button to adopt the time you have set or wait eight seconds and the setting will be automatically adopted.

Refer to the User Select Options for instructions on how to change the clock to display 12 hour time.

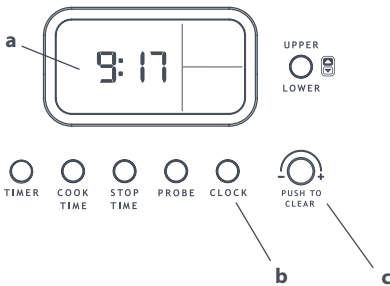

- a** Clock Display
- b** Clock button
- Allows you to set the clock.
- c** Setting selector/Push to Clear
- Turn this knob to set the: clock/ timer/ probe temperature/ cook time/ stop time. Press this knob to clear the display.

Oven displays


 
Oven mode dial & display

Turn clockwise to select your desired oven mode. When the mode is set, the lights and cooling fan will come on.



Temperature dial & display

Turn clockwise to select the oven temperature you want to cook at. The default setting for the temperature display is degrees Fahrenheit. Refer to the User Select Options for instructions on how to change the temperature display settings.

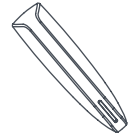

Note: For double oven models, controls on the left are for the upper cavity and controls on the right are for the lower cavity.

Preheating your oven

- Preheat your oven when using the following modes: TrueAero, AeroBake, Bake, AeroPastry and Pastry Bake.
- Position shelves in the oven before preheating.
- When your oven is preheating, your selected cooking temperature is displayed alternately with the actual oven temperature. When the oven has reached the selected temperature an audible beep will sound and the temperature display will change from orange to green (Brushed stainless steel models) or red to blue (Iridium stainless steel models).
- Preheating your oven is not required when using Roast and AeroBroil.
- The AeroTech™ oven is equipped with a fast preheat function. In TrueAero, AeroBake, Bake, AeroPastry and Pastry Bake modes it will heat to 345°F (175°C) from cold in under 10 minutes and to 425°F (220°C) in under 15 minutes.

To reactivate the fast preheat function

Turn the oven mode and temperature dials to 'OFF' then wait for the temperature and mode lights to turn off before selecting your new oven mode and temperature settings.

Oven modes

Your Fisher & Paykel AeroTech™ oven has nine cooking modes plus Warm and Self Clean. These modes use different combinations of elements and the convection fan to give you maximum flexibility when cooking.



TrueAero: convection fan plus fan element

TrueAero is a very flexible method of cooking. A concealed heating element surrounding the fan in the rear of the oven heats air, which is then blown into the cavity. The consistent temperature creates an ideal oven environment giving baking which is well risen and evenly coloured. Cookies are crisp on the outside and chewy in the middle, meat and poultry is deliciously browned and sizzling while remaining juicy and tender. Casseroles are cooked to perfection and reheating is quick and efficient. TrueAero is the mode to choose for multi-shelf cooking and complete oven meals.



AeroBake: convection fan plus upper and lower elements

The oven fan circulates hot air from the top outer and lower concealed elements and distributes it around the oven cavity. Food cooked using the AeroBake mode tends to brown more quickly than foods cooked on conventional modes like Bake. AeroBake is great for crisping pastry in lemon meringue pie and vegetable phyllo parcels. AeroBake at a low temperature - 125°F (50°C) - is ideal for drying fruit, vegetables and herbs.



Bake: upper and lower elements

Heat comes from the top outer and lower concealed elements. Bake is the conventional cooking mode, suitable for single shelf cooking. It is ideal for foods that require long cooking periods or cooking at low temperatures, like meringues and rich fruitcakes.



AeroPastry: convection fan plus lower element

Heat from the lower concealed element is circulated throughout the oven cavity by the oven fan. Excellent for sweet and savory pastry foods, for moist breads and brownies and cookies that you want extra chewy.



Pastry Bake: lower element

Uses the heat from the lower element only, this is a traditional cooking mode which is suitable for recipes that were developed in older ovens. For best results, cook on only one shelf at a time. Perfect for foods that require delicate cooking and have a pastry base, like custard tarts, quiches and cheesecake or anything that does not require direct heat and browning on the top surface.



Warm

Warm is a constant low heat of 165°F (75°C). It is excellent for keeping cooked food hot and warming plates and serving dishes. To reheat food from cold; use TrueAero and change to Warm when the food is hot, as this mode will not bring cold food up to a temperature high enough to kill any harmful bacteria.



Roast

Roast is a two step program that has been developed to help you cook delicious roasts effortlessly. Place the meat in the cold oven and the first stage will sear the meat at a high temperature for 20 minutes to crisp and brown the exterior. The oven then automatically drops to a lower, selected temperature for the remainder of the cooking time, giving you a moist and juicy roast. Roast can be used with or without the cooking probe and is also great for cooking vegetables.



Broil: upper inner element

Broil delivers intense heat from the inner region of the top element. Great when you need to quickly Broil smaller dishes, for example Crème Brulee, or one to two portions of your usual favorites, like crispy chicken breasts or a steak. Broil takes a minute or so to warm up and is carried out with the door closed. Power levels are expressed as a percentage from LO (50% power) to HI (100% power).



Maxi Broil: upper inner and outer elements

Maxi Broil delivers intense heat from the entire top element. It is the most suitable mode for 'finishing off' many meals, for example browning the top of potato gratin and frittata as well as cooking smaller cuts of meat. Use Maxi Broil to toast bread or as well as Broiling your favorite chicken, fish and steak. Maxi Broil takes a minute or so to warm up and is carried out with the door closed. Power levels are expressed as a percentage from LO (50% power) to HI (100% power).



AeroBroil: fan plus upper inner and outer elements

AeroBroil produces food with a finish that is similar to a rotisserie. Meat, poultry and vegetables cook beautifully; food is crisp and brown on the outside while the inside remains moist and tender. Try using this mode with foods you might usually fry, like meatballs. Great for chops, cutlets and beef burgers as well as vegetables.



Self Clean

This oven features a pyrolytic self-cleaning cycle that takes care of the mess and grime that is traditionally associated with oven cleaning. During self clean cycles the oven reaches higher temperatures than it does for cooking and this burns off and breaks down soil and grease deposits. A smoke eliminator and active venting system eradicates odor. The ash residue that remains can simply be removed from the cool oven with a damp cloth or sponge.

All about the cooling fan

A cooling fan will come on automatically when most oven modes are used and blow air out below the oven door. The cooling fan may continue to run after the oven is switched off to keep the door and control panel cool.

Shelf positions


Optilevel™


The Optilevel™ shelving system allows you to choose the optimum cooking level within the oven. Placing the shelves on or between the shelf support runners provides 13 cooking positions to choose from.

Organize the shelves prior to heating the oven. Generally the shelf positions located in the top of the oven are suitable for Broiling. Shelves in the middle and lower region of the oven are suitable for baking, roasting and casseroles. For more specific information on which shelf position to use, refer to the Cooking Charts.


Your oven shelves come with built in stop locks for your safety, this means when inserted properly they will not tilt when pulled towards you.

To insert shelves

Position the shelves so that the single  in the center is facing towards you, as shown, and slide the shelf right to the back of the oven. Shelves will feel very stable when inserted correctly.

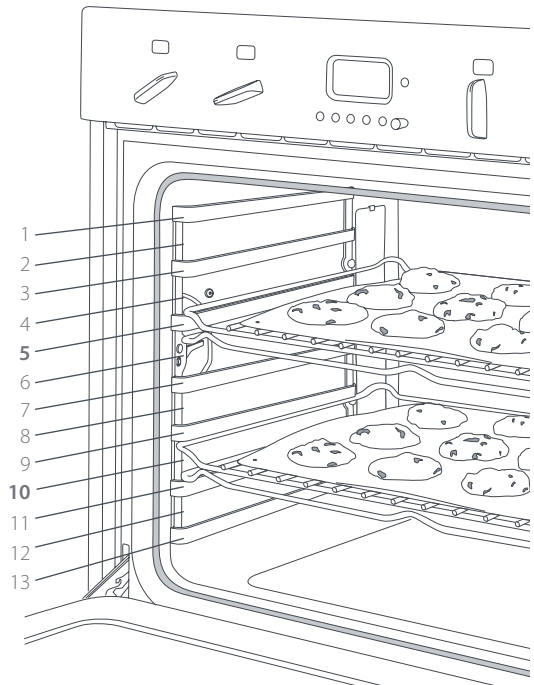

shelf positions with shelves at positions 5 and 10

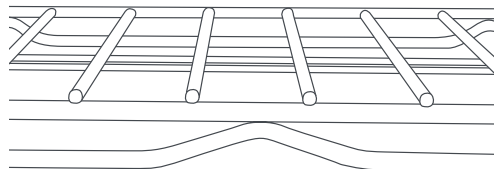

rack detail showing the single  facing toward you

Accessories

Broiling system

The Broiling system is designed to prevent hot fat and juices in the broil pan splattering throughout the oven. It is intended to be used as one complete unit, however pieces can be interchanged.

Glass tray (OS302M, OD302M Iridium models only)

- This is made of extremely tough glass and is perfect oven to tableware.
- The glass tray is great for all broiling and baking modes.
- Wash in hot soapy water or the dishwasher. Soaking with a little dishwasher detergent will help to remove stubborn stains.

Cookie sheets

- The cookie sheets have a non-stick finish and need only a light coating of cooking spray or greasing before use.
- Their dark color absorbs heat and you may find that your favorite recipes cook more quickly than on old shiny trays. Alternatively you can reduce the oven temperature by approximately 60-70°F (15-20°C).
- Allow your baking to cool for a few minutes after it comes out of the oven before removing it from the tray using a wooden or teflon spatula.
- Always remove food before it is completely cold. In most cases wiping with a paper towel is all that is needed to clean the trays.


Pizza stone and paddle (OS302M, OD302M Iridium models only)

- Your pizza stone will allow you to cook a pizza like one cooked in an authentic pizza oven.
- Using the pizza stone is a great way to cook bought, ready made pizzas as well as home made ones.
- If cooking frozen pizza, allow to defrost completely before placing on the hot pizza stone.

Using the oven controls

In double ovens select the cavity which oven you want by using the appropriate oven mode and temperature dials. Pushing the oven cavity selector button lets you toggle between the cavities, for example if you are setting Automatic / Delayed start programs.


- a Upper oven cavity display
- b Lower oven cavity display
- c Oven cavity selector button - Press this button to toggle between upper and lower cavity settings
- d Setting Selector dial (rotate)/ Clear button (press)

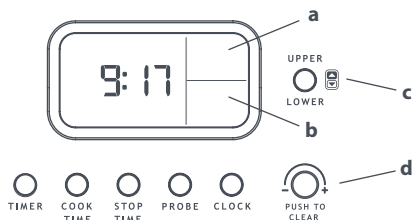


All about the timer

The timer can be used at any time, even when the oven is not in use.

To set the timer

- 1 Press the **TIMER** button. The **TIMER** symbol and the colon will flash in the clock display.
- 2 Rotate the Setting Selector  dial until you have the time you need. Press the **TIMER** button or wait eight seconds for the setting to be adopted and the timer will begin to count down.



To cancel the timer

- 1 Press the **TIMER** button then the **PUSH TO CLEAR** button.
- 2 When the set time finishes the **TIMER** symbol and  will flash and the oven will beep. Press the **TIMER** or **PUSH TO CLEAR** button to stop the beeping and clear the timer. **The timer does not turn the oven off.**


Automatic/delayed time cooking

Automatic and delayed time cooking will turn the oven on and off at times you have set.

To set automatic/delayed time cooking

- 1 Check that the clock shows the correct time.
- 2 Select the oven mode and temperature.
- 3 Choose the upper or lower cavity (for double ovens only) using the oven cavity selector button.
- 4 Decide how long the food will take to cook, allowing time for preheating if necessary.
- 5 Press the **COOK TIME** button and rotate the Setting Selector  dial to select this time. You do not need to set a start time.
- 6 Press the **STOP TIME** button and rotate the Setting Selector  dial to select the time you want the oven to turn off. The Stop Time must be set before the cook time settings are automatically adopted i.e. within 8 seconds of setting the cook time, otherwise the cook time will start and you will have to cancel the settings (see below) and start over.
- 7 If there is time to wait before cooking starts, **DELAY** and **AUTO** symbols will show in the display along with the current time. The oven mode and temperature displays will dim.
- 8 The oven mode and temperature dials will still function as in manual operation; you can alter these prior to or during cooking, or you can manually turn the oven off before the set cook time has elapsed.
- 9 During cooking, the **AUTO** symbol and the remaining cook time will be shown in the clock display.
- 10 When the cook time is finished the oven will beep and turn off. The temperature and oven mode displays will dim and the **COOK TIME** and **AUTO** symbols will flash in the clock display.
- 11 Turn the oven mode and temperature dials to 'OFF'. After eight seconds the oven will return to manual operation.

To set automatic 'stop' cooking

- 1 The oven can be set to stop automatically at any time during normal use or at the time you turn it on. Remember to check that the clock shows the correct time and select the upper or lower cavity in a double oven.
- 2 Select the oven mode and temperature.
- 3 Press the **STOP TIME** button and rotate the Setting Selector  dial to select the time you want the oven to turn off.
- 4 **AUTO** will show in the clock display and the remaining cook time will count down.
- 5 When the cook time is finished the oven will 'beep' and turn off. The oven mode and temperature displays will dim.
- 6 Turn the oven mode and temperature dials to 'OFF'. After eight seconds the oven will return to manual operation.

To cancel automatic/delayed time

Turn the oven mode and temperature dials to 'OFF'. After eight seconds the clock display will revert to the time of day and the oven will return to manual operation.

WARNING!

Food safety is an important consideration when using delayed cooking modes.

To avoid potential spoiling of food and sickness, take the following steps:


- Avoid using foods that will spoil while waiting for the cooking cycle to begin. Typical foods to avoid include those containing eggs and dairy products, cream soups, cooked and uncooked meats, poultry and fish.
- If cooking will not begin immediately, place only very cold or frozen food in the oven. Most unfrozen foods should never stand in the oven for more than two hours before cooking begins.
- Do not allow foods to remain in the oven for more than one hour after completion of the cooking cycle.

Oven operation

Cooking probe

Use your cooking probe to accurately judge when your meat is perfectly cooked. The probe can be used on TrueAero, AeroBake, Roast, AeroBroil and Bake modes.

Using the cooking probe


- 1 Select the oven mode and temperature and preheat the oven if appropriate - Roast does not require preheating.
- 2 Insert as much of the metal cooking probe as possible horizontally into the thickest part of the fully defrosted meat. The thicker the meat, the longer it will take to cook, so it is important that the probe is measuring the temperature of the meat at its thickest point. Make sure the probe does not touch bone, fat or gristle, as this will give you a false reading.
- 3 Place the meat on the Broiling system.
- 4 When the oven has preheated (if required) to the set temperature place the Broiling system in the oven and insert the plug end of the cooking probe into the probe socket, using an oven mitt if the oven is hot. The probe socket is on the left hand side of the oven, halfway down between shelf positions three and five. Make sure the probe is pushed into the socket, then close the oven door.
- 5 Select the upper or lower cavity for double oven models using the oven cavity selector button.
- 6 Press the **PROBE** button on the control panel. The pre-set temperature of 150°F (65°C) and 'Probe' will light up in the display. If you want to select a different internal food temperature from the preset temperature, rotate the Setting Selector  dial while the **PROBE** symbol is flashing. For cooking probe guidelines, see the Cooking Charts.

To cancel the cooking probe

To cancel the probe setting before the set temperature has been reached press the **PROBE** button then the **PUSH TO CLEAR** button.

Tips for using the cooking probe

- The display will show the actual internal temperature. To look at the set internal temperature press the **PROBE** button. The oven will beep and automatically turn off when the set internal temperature has been reached. The temperature and oven mode displays will remain on and the oven light will go out.

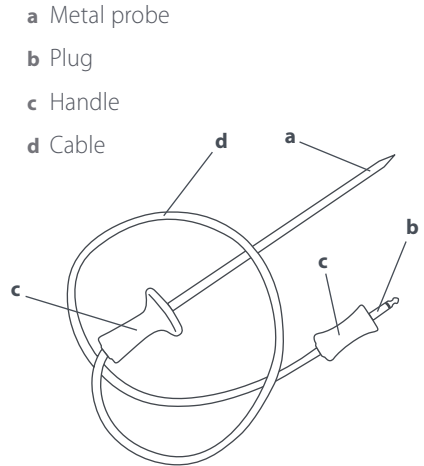

- Return the oven to manual mode by pressing the **PUSH TO CLEAR** button. Turn the oven mode and temperature dials to 'OFF'.
- The cooking probe can be used with automatic cooking functions. If the probe reaches the set temperature before the stop time is reached the probe will turn the oven off.
- The internal temperature of the meat will continue to rise by 5-15°F (2-8°C) after you have removed it from the oven so allow for this in your calculations.

Important points to note:

- Use only the cooking probe that was supplied with your AeroTech™ oven.
- Hold the cooking probe at the 'handles' when inserting and removing it from food and the cooking probe socket.
- Remember to remove the cooking probe from the oven before you start a clean cycle.
- Do not store the probe in the oven.
- Only use the probe with foods that are fully defrosted.

Roasting



Roast is a two step program. It has an initial 20 minute searing stage to brown the roast and caramelize the meat juices, then a reduction to your set temperature for the remainder of the cooking period, producing a tender and juicy roast that is full of flavor. Little browning takes place after the initial 20 minute searing.

Using the Roast mode

- 1 Place the meat on the Broiling system on a shelf so that the top of the roast is in center of the oven or lower.
- 2 Select Roast using the oven mode dial. Select the temperature. When using the Roast mode, there is no need to preheat the oven. Use automatic/delayed start cooking if you want your oven to automatically turn on/off. For suggested roasting times and temperatures see the Cooking Charts.

Tips for a successful roast

- The initial searing is too hot for 'roasting bags'. Use TrueAero, AeroBake or Bake if you are using roasting or oven bags and follow the manufacturer's guidelines.
- Tender cuts should be cooked at a high temperature quickly, while tougher cuts require a lower temperature for a longer time.
- For perfect results use the meat probe to take out the guess work.
- Placing the meat on the wire Broiling rack allows hot air to circulate around it and gives more even browning.

- Thick pieces of meat take longer to cook than thin pieces of the same weight. Meat cooks by absorbing heat from the outer surface to the middle. The thicker the meat the longer it will take to cook.
- Roasts containing bones cook more quickly than boneless or rolled roasts due to the bone conducting heat throughout the meat. Stuffed roasts will take longer to cook.
- Selecting the cooking time for your roast depends on your personal preference. Meat taken straight from the refrigerator will take longer to cook.
- Poultry should always be well cooked with the juices running clear.
- Roasting is a method of cooking meat that uses dry heat. Don't add water to your roast as this has a steaming effect.
- Vegetables are excellent cooked on Roast. Clean and cut them into large chunks, coat lightly with oil, season and place in a single layer on the greased glass tray. Select Roast using the oven mode dial and 340°F (175°C). Place in the oven on a shelf in position eight. Cook for 35 – 45 minutes, depending on size and type of vegetable, until golden brown and tender. Vegetables can be placed on the Broiling system, around meat if they are going to take approximately the same length of time to cook. Longer than about two hours will over cook the vegetables so put them in the oven part way through cooking a large piece of meat. The vegetables will brown more slowly if they have missed the initial searing stage of the Roast mode so allow plenty of time to cook them thoroughly, up to two hours at 320-340°F (150-175°C).

Broiling




Your AeroTech™ oven gives you a choice of Broil , MaxiBroil  and AeroBroil . For many meats broiling is considered to be a healthier alternative to frying. Broiling is a relatively quick method of cooking foods producing superior flavor and is also a great way to cook vegetables. Carry out all broiling with the oven door completely closed.

When using AeroBroil the upper elements are on and the hot air is circulated around the oven by the oven fan. AeroBroil is suitable for foods that you might normally pan fry, barbecue or rotisserie, for larger cuts of meat and whole chickens.

Using the Broil modes

- 1 Place food on top of the broiling rack, grid and pan.
- 2 Select the shelf position you want to Broil at - see the Cooking Charts for suggested shelf positions, times and temperatures.


⚠ WARNING!	
	<p>Hot Surface Hazard</p> <p>Hot steam may be produced when using Broil, Maxi Broil or AeroBroil modes.</p> <p>Take care when opening the oven door and always use oven mitts or pot holders to handle hot cooking utensils.</p> <p>Failure to do so could result in burns or scalds.</p>

Tips for successful broiling

- For best results allow the broiler to warm up for a minute or two before putting food in the oven.
- Use the timer to time the broiling process if desired.
- All Broiling is carried out with the oven door closed.
- We recommend using the Broiling system provided with your AeroTech™ oven. This has been specifically designed to reduce splatter and smoke. Use only alternative glass or ceramic dishes and pans that can withstand the high temperature of the Broil.
- Basting lean meat, fish or chicken with a marinade or juices while Broiling will add flavor and moisture.
- If turning meat halfway through the cooking time, use tongs or a spatula. Avoid piercing meat with a knife or fork as this will allow juices to escape making the meat less moist.
- To make cleaning your broiling dishes easier, spray the rack, grid and inside of the pan with a light coating of non-stick cooking spray before use. Soak them in warm water and detergent before washing them in a dishwasher or by hand.
- Position the oven shelves before you turn the oven on.

Baking 

Tips for successful baking

- When baking, make sure the cake tins do not touch each other or the sides of the oven. Stagger tins across shelves if necessary and use TrueAero  for multi shelf cooking. Do not open the oven door until at least $\frac{3}{4}$ through the suggested cooking time.
- Baking pans that are made of dark, dull metals are recommended in appliances with a concealed lower element like the AeroTech™ oven. They absorb heat and often cook and brown food faster than reflective, shiny aluminum pans and sheets.

Important!

Do not place aluminum foil, dishes with reflective qualities or any object on the oven floor as this will cause a heat build up which will result in irreversible damage to the porcelain enamel.

Multi shelf cooking

Multi shelf cooking is very successful using the TrueAero mode. The AeroTech™ advanced cooking system allows you to bake several different foods simultaneously on different levels giving you increased flexibility - as well as saving time. TrueAero is well suited to batch baking of cookies, scones, and muffins as well as complete oven meals. See the Cooking Charts for suggested times, temperatures and shelf positions for multi-shelf cooking.

Dehydrating/defrosting

Tips for dehydrating

- To obtain a high quality dried product, select only unblemished, mature fruit.
- Wash fruit thoroughly and pat dry, peel if desired. Unpeeled fruit will take longer to dry. Remove stones, stems or pips if necessary. Place fruit on a baking tray on a shelf in the oven.
- To dehydrate foods, we recommend using TrueAero or AeroBake at 125°F (50°C).

Tips for defrosting

- To defrost foods select the TrueAero mode and 125°F (50°C).
- Select the shelf position(s) and place food that is to be defrosted in an oven safe dish in the center of the oven shelf.
- Time taken to defrost will depend on the size and weight of the item being defrosted - it pays to check it regularly.

Tips for proving bread

Your AeroTech™ oven provides an ideal sealed environment to proof bread.

- Preheat the oven on Bake at 80°F (30°C). When you are ready to proof the dough, turn the temperature and mode to off and place the dough in a covered bowl on a shelf in the warm oven. It will be the perfect temperature to proof dough and the AeroTech® oven is so well insulated that it will stay warm for several hours.

User select options

All about user select mode

User Select mode allows you to configure some of the settings displayed on your AeroTech™ oven control panel.

How to enter user select mode

- 1 Be sure that the oven mode and temperature dials are off and that no automatic/delayed start programs are operating and that the clock is displaying the correct time of day.
- 2 Press the **TIMER** then the **CLOCK** button and hold down together until the oven 'beeps' (about two seconds). The left hand oven mode display will show **USER SELECT**.



Oven mode display


Sabbath Mode

This mode is designed for religious faiths that observe a 'no work' requirement on the Sabbath.

When your oven is in Sabbath Mode

- Clock, temperature and oven mode displays will be disabled.
- No tones will sound.
- No error messages or temperature changes will be displayed, however temperature can be adjusted.
- The cavity lights are on if the door is open when Sabbath Mode is set. The cavity lights are off if the door is closed when Sabbath Mode is set.

How to set Sabbath Mode

- 1 Enter the User Select mode and turn the oven mode dial clockwise until the display shows **SAB MODE**.
- 2 Select the length of time you wish to stay in Sabbath Mode by rotating the Setting Selector  dial. The maximum is 99 hours in one hour steps and is shown in the clock display. Select a temperature. Bake is the only oven mode available in Sabbath Mode.
- 3 To start Sabbath Mode, press the **PUSH TO CLEAR** button. The oven mode display will show **SAB MODE** with no backlight. The temperature display will show **- - -**; temperatures can be adjusted but the display will not change.



Oven mode display

Tips for using Sabbath Mode

- In double oven models, different temperatures can be selected for upper and lower ovens by using their temperature dials. The oven mode dial for the lower oven must be turned to a function to activate the lower oven.
- The oven can be turned off at any time during Sabbath Mode by turning the oven mode and temperature dials to 'OFF', but the oven will not revert to regular operation until the set time has elapsed.
- When the set time has elapsed the oven will revert to regular operation.
- You can exit Sabbath Mode at any time by pressing the **PUSH TO CLEAR** button and holding it down for five seconds.

How to change the temperature scale

- 1 Enter the User Select mode and turn the oven mode dial clockwise until **TEMP SCALE** appears in the display.
- 2 Press **PUSH TO CLEAR** to select either 'C' or 'F' in the clock display. Selecting 'C' will convert the numbers shown in the temperature display to degrees Celsius while selecting 'F' will show the oven temperatures in degrees Fahrenheit.
- 3 Press the **LOCK** button to activate.



Oven mode display

Short Alert

By default, Short Alert is off and the audible beep will sound continuously at the end of automatic cooking functions until cancelled by pressing the **PUSH TO CLEAR** button.

When Short Alert is on

- An audible beep will sound five times at the end of automatic cooking functions and when the timer finishes. After five beeps, the alert will stop, then repeat every five minutes until cancelled by pressing the **PUSH TO CLEAR** button.
- The clock display will flash continuously until cancelled.

How to activate Short Alert

- 1 Enter the User Select mode and turn the oven mode dial clockwise until **SHORT ALERT** appears in the display.
- 2 Press **PUSH TO CLEAR** to select either 'ON' or 'OFF' in the clock display.
- 3 Press the **LOCK** button to activate.



Oven mode display


How to change from 24 hour to 12 hour time display

- 1 Enter the User Select mode and turn the oven mode dial clockwise until **TIME MODE** appears in the display.
- 2 Press **PUSH TO CLEAR** to select either '24H' or '12H' in the clock display.
- 3 Press the **CLock** button to activate.



Oven mode display

How to hide the time in the clock display

- 1 Enter the User Select mode and turn the oven mode dial clockwise until **SHOW CLOCK** appears in the display.
- 2 Press  to select either 'ON' or 'OFF' in the clock display.
- 3 Selecting 'ON' will show the time and 'OFF' will hide the time in the clock display. All other functions, such as Timer, will continue to be shown as normal in the clock display when the time is hidden.
- 4 Press the **CLock** button to activate.



Oven mode display

How to change the language

- 1 Enter the User Select mode and turn the oven mode dial clockwise until **LANG USA** appears in the display.
- 2 Press **PUSH TO CLEAR** to toggle through the different languages: 'LANG US' for American English, 'LANG UK ENG' for UK English, 'LANGUE FRANCE' for Canadian French or 'LANG ESPANO' for South American Spanish.
- 3 Press the **CLock** button to activate.



Oven mode display

How to reset the oven

This will reset the Temperature Scale, Short Alert, Time Mode and Show Clock to their default settings. Sabbath Mode settings will remain unaffected.

- 1 Enter the User Select mode and turn the oven mode dial clockwise until **RESET** appears in the display.
- 2 Press **PUSH TO CLEAR** to select 'OFF' in the clock display, resetting the oven to default settings.
- 3 Press the **CLock** button to exit User Select Mode.



Oven mode display

Control panel lock

Locking the controls disables all the buttons and dials which can be useful when cleaning oven surfaces or preventing accidental bumps and unauthorized use. The control panel can only be locked when the oven is off.

To lock the control panel

Press the  button and hold down for five seconds. Repeat to unlock.

Cooking mode options

This chart will help you to match your cooking requirements to the most appropriate cooking mode. Note: ● Recommended method ○ Alternative method.

	TrueAero	AeroBake	Bake	AeroPastry	Pastry Bake	Roast	Broil	Maxi Broil	AeroBroil
Baked Products									
Cookies - single tray	○	●	○	○	○				
Cookies - multi tray	●								
Chewy Choc. Chip Cookies	●	○	○	○	○				
Slices/Squares	○	○	○	●	○				
Chocolate Cake	○	○	●						
Fruit Cake	○	○	●						
Sponge	○	○	●						
Muffins - single tray	○	●	○						
Muffins - multi tray	●								
Meringue	●	○	○						
Bread/Rolls	●	○	○	○					
Pastry									
Apple Pie	○	●	○						
Quiche	○	○	○	●	○				
Custard Tart	○	○	○	○	●				
Phyllo/Flakey/Puff/Choux	○	●	○	○	○				
Meat, Fish and Poultry									
Roast Beef/Pork/Lamb	○	○	○			●			○
Roast Chicken - whole	○	●	○			○			●
Roast Chicken - pieces	○	●	○				○	○	○
Roast Turkey	●		○						
Steak/Chops/Cutlets		○					○	●	○
Fish	○	○	○				○	○	●
Family Favorites									
Pizza	○	○	○	●	○				
Casserole	●	○	○		○				
Lasagne	○	●	○						○
Meatloaf	○	○	●						
Complete oven meals	●								
Vegetables - roasted	○	○	○			●			○
Vegetables - baked	○	○	●						
Vegetables - broiled							○	●	○

Cooking charts



TrueAero

Time (min)

Temp °F

Temp °C

Shelf (single;
multi)

Baked products

Cookies	13-18	350-360	175-180	8; 5&10
Chewy Chocolate Chip Cookies	15-20	340-360	170-180	8; 5&10
Vanilla Cake	30-40	340-350	170-175	12
Squares/Slices	25-30	340-360	170-180	8
Shortbread	22-30	300-310	150-155	8
Cake - Butter/Choc	45-55	340-350	170-175	12
Cake - Fruit Rich	4-5hrs	280-300	140-150	13
Cake - Fruit Light	85-95	310-330	155-165	13
Muffins	10-15	390-410	200-210	8; 5&10
Meringues	50-60	250-270	120-130	11
Scones	12-15	400-425	200-220	8; 5&10
Bread/Rolls	25-35	380-400	195-210	8
Pizza	10-15	440-450	225-230	10
Apple pie	35-45	350-360	175-180	10

Pastry

Phyllo	15-25	375-390	190-200	8
Flaky/Puff	25-35	375-390	190-200	10
Quiche	20-30	350-375	175-190	10
Meat Pie	40-50	350-375	180-190	10
Lemon Meringue Pie	20-30	370-375	185-190	10
Choux Pastry	35-40	390-400	200-210	10
Custard Tart - Pastry	14-16	375-390	190-200	11
Custard Tart - Filling	7	350-360	175-180	11
Custard Tart - Filling Cont.	20-30	310-330	155-165	11

Family Favorites

Lasagne	30-40	350-375	175-190	10
Meatloaf	80-90	350-375	175-190	8
Chicken Pieces	50-60	350-375	175-190	10
Casserole	55-70	340-375	170-190	10

Vegetables

Baked	30-50	350-375	175-190	10
Roasted	30-45	375-390	190-200	9

**Baked products**

Cookies	8-12	340-350	170-175	9
Chewy Chocolate Chip Cookies	12-18	320-330	160-165	8
Vanilla Cake	30-35	340-350	170-175	11
Squares/Slices	20-25	350-360	175-180	10
Shortbread	25-35	280-300	140-150	11
Cake - Butter/Choc	50-60	320-350	160-175	11
Cake - Fruit Rich	2-6hrs	260-300	125-150	13
Cake - Fruit Light	2-2½hrs	270-300	130-150	13
Sponge	20-25	320-350	160-175	8
Muffins	10-15	390-425	200-220	7
Meringues	60-70	200-225	100-110	11
Scones	10-12	390-425	200-220	8
Bread/Rolls	15-30	390-425	200-220	8
Pizza	12-16	380-400	195-200	12
Apple pie	25-30	375-400	190-200	11

Pastry

Phyllo	15-25	375-390	190-200	9
Flaky/Puff	20-30	370-390	185-200	9
Quiche	20-25	350-390	175-200	11
Meat Pie	30-40	375-380	190-195	11
Lemon Meringue Pie	30-40	350-360	175-180	10
Choux Pastry	30-35	390-400	200-210	11
Custard Tart - Pastry	12-15	375-390	190-200	8
Custard Tart - Filling	7-9	350-360	175-180	8
Custard Tart - Filling Cont.	20-25	280-300	140-150	8

Family Favorites

Lasagne	40-50	350-360	175-180	8
Meatloaf	55-65	350-360	175-180	8
Chicken Pieces	30-40	350-375	175-190	10
Casserole	50-60	350-375	175-190	11

Vegetables

Baked	30-50	350-375	175-190	10
Roasted	30-45	375-390	190-200	9



Bake

Time (min)

Temp °F

Temp °C

Shelf

Baked products

Cookies	8-12	350-370	175-185	9
Chewy Chocolate Chip Cookies	12-18	330-350	165-175	9
Vanilla Cake	30-35	330-350	165-175	9
Squares/Slices	20-30	350-375	175-190	8
Shortbread	25-35	300-320	150-160	11
Cake - Butter/Choc	50-60	320-360	160-180	11
Cake - Fruit Rich	4-6hrs	275-300	135-150	13
Cake - Fruit Light	2-2½hrs	300-320	150-160	13
Sponge	20-40	340-375	170-190	9
Muffins	10-15	390-440	200-225	8
Meringues	60-70	250-270	120-130	11
Scones	10-12	410-425	210-220	7
Bread/Rolls	15-30	390-425	200-220	8
Pizza	12-18	390-410	200-210	12
Apple pie	25-35	390-410	200-210	11

Pastry

Phyllo	20-30	375-390	190-200	8
Flaky/Puff	20-30	400-410	200-210	8
Quiche	20-30	350-390	175-200	10
Meat Pie	30-40	350-390	175-200	10
Lemon Meringue Pie	35-40	350-375	175-200	10
Choux Pastry	35-45	390-410	175-190	8
Custard Tart - Pastry	12-15	375-390	200-210	8
Custard Tart - Filling	7-9	350-360	175-180	8
Custard Tart - Filling Cont.	20-25	280-300	140-150	8

Family Favorites

Lasagne	40-50	350-375	175-190	9
Meatloaf	55-65	350-360	175-180	9
Chicken Pieces	30-40	350-375	175-190	9
Casserole	70-90	350-360	175-180	10

Vegetables

Baked	40-50	350-375	175-190	8
Roasted	35-50	375-390	190-200	8



AeroPastry

Time (min)

Temp °F

Temp °C

Shelf

Baked products

Cookies	8-10	340-350	170-175	9
Oat Cookies	12-15	320-330	160-165	9
Squares/Slices	15-20	320-350	160-175	11
Shortbread	20-25	270-280	130-140	9
Pizza	15-20	440-475	225-250	10

Pastry

Quiche	20-30	390-425	200-220	8
Meat Pie	30-40	360-375	180-190	8
Lemon Meringue Pie	15-20	340-360	170-180	8



Pastry Bake

Time (min)

Temp °F

Temp °C

Shelf

Baked products

Sugar Cookies	9-11	340-350	170-175	9
Oat Cookies	10-15	320-330	160-165	9
Squares/Slices	15-20	320-350	160-175	11
Shortbread	20-25	280-300	140-150	9

Pastry

Quiche	20-30	390-425	200-220	8
Meat Pie	30-40	360-375	180-190	8
Lemon Meringue Pie	15-20	340-360	170-180	8



Maxi Broil & Broil

Time (min)

Broil setting

Shelf

Beef

Steaks - Rare	8-10	Hi	3
Steaks - Medium	10-15	Hi	4
Minced - Burgers	12-15	Hi	4
Minced - Meatballs	12-15	Hi	4

Lamb

Chops - Medium	15-20	Hi	3
Chops - Well done	20-25	Hi	3

Pork

Chops - Well done	15-20	Hi	3
Ham steak	15-20	Hi	4
Bacon	4-7	Hi	3

Chicken

Boneless pieces	15-30	Hi	6
-----------------	-------	----	---

Sausages

Sausages	10-15	Hi	4
----------	-------	----	---

Fish

Filletts	8-12	Hi	4
Whole	15-20	Hi	4



AeroBroil

	Time (min)	Temp °F	Temp °C	Shelf
Beef				
Ground - Burgers	15-20	425-440	220-225	4
Ground - Meatballs	10-15	375-410	190-210	4
Lamb				
Chops - Medium	15-20	400-440	200-225	4
Chops - Well done	20-25	400-440	200-225	4
Rack - Medium	20-30	400-410	200-210	5
Pork				
Chops - Well done	20-25	375-410	190-210	4
Ham steak	15-20	425-400	220-225	4
Bacon	10-15	425-440	220-225	3
Chicken				
Whole	30-35 per 1lb/450g	340-360	170-180	9
Boneless pieces	30-50	350-375	175-190	7
Sausages				
Sausages	10-15	375-400	190-200	4
Fish				
Filletts	8-12	400-425	200-220	4
Whole	15-20	400-425	200-220	4





Roast & Cooking probe

We recommend you use the Cooking Probe to accurately judge when meat is cooked to your preference. 'Time per pound (450g)' is a rough guide and should only be used to estimate when the meat will be ready. Cooking with Roast, TrueAero, AeroBake, and AeroBroil will take less time than with Bake.

	Time (min per lb/450g)	Oven Temp °F	Oven Temp °C	Probe Temp °F	Probe Temp °C	Shelf	Best Mode
Beef							
Boneless roast - Rare	18-32	320-340	160-170	130-140	54-60	10	Roast
Boneless roast - Medium	25-40	320-340	160-170	150-160	65-70	10	Roast
Boneless roast - Well done	30-55	320-340	160-170	165-175	74-79	10	Roast
Prime or Standing Rib roast - Rare	15-30	320-340	160-170	130-140	54-60	10	Roast
Prime or Standing Rib roast - Medium	20-35	320-340	160-170	150-160	65-70	10	Roast
Prime or Standing Rib roast - Well done	25-40	320-340	160-170	165-175	74-79	10	Roast
Leg of Lamb							
With bone - Medium	18-28	320-340	160-170	150-160	65-70	10	Roast
With bone - Well done	20-33	320-340	160-170	165-175	74-79	10	Roast
Boneless - Medium	20-35	320-340	160-170	150-160	65-70	10	Roast
Boneless - Well done	25-45	320-340	160-170	170-175	77-79	10	Roast
Veal							
Medium	20-43	320-340	160-170	150-160	65-70	10	Roast
Well done	25-45	320-340	160-170	170-175	77-79	10	Roast
Chicken							
Whole	15-20	350-375	175-190	180	82	11	TrueAero
Turkey							
With stuffing - Well done	17-22	330-350	165-175	180	82	13	TrueAero
Well done	15-20	300-330	150-165	180	82	13	TrueAero
Pork							
Boneless roast - Medium	25-40	340-350	170-175	145-155	63-68	10	AeroBake
Boneless roast - Well done	30-45	340-350	170-175	165-175	74-79	10	AeroBake
Venison*							
Rare	7½ per inch of thickness	440	225	120-130	49-54	8	AeroBake
Medium rare	9 per inch of thickness	440	225	130-140	54-60	8	AeroBake

*Brown prior to roasting on an oiled skillet or frying pan on high heat. The internal temperature of venison rises more on standing due to the high cooking temperature, therefore the suggested probe settings are lower than other rare or medium rare meats.

Cleaning

⚠ WARNING!	
	Hot Surface and Electrical Shock Hazard Make sure all oven controls are turned off and the oven is cool before cleaning.
	Failure to do so could result in electrical shock or burns.

Important!

Do not use harsh/abrasive cleaning agents, waxes, pumice cleaners, polishes or commercial oven cleaners to clean your oven.

Important!

If you choose to use a commercial stainless steel cleaner, please read the label to make sure it does not contain chlorine compounds as these are corrosive and may damage the appearance of your oven. Clean the stainless steel surfaces with the grain, in a horizontal motion.

Cleaning the control panel

It may be useful to lock the oven controls prior to cleaning – see Control Panel Lock in User Select Options for details.

Brushed Stainless Steel

- Brushed Stainless Steel can be cleaned with a commercial stainless steel cleaner, see 'Important' above, or wiped with a clean damp cloth and dried with a lint free cloth.
- Regular use of a stainless steel cleaner will reduce fingerprints and other marks.
- Do not use abrasive cleaners on stainless steel, as they will permanently damage the surface.

Iridium Stainless Steel (Matt Stainless Steel)

- This easy clean surface requires only a mild dishwash detergent and warm water.
- Rinse and then dry with a lint free cloth.
- Do not use abrasive cleaners on Iridium Stainless Steel as they will permanently damage the surface.

Cleaning the glass door

- Clean the exterior glass surface with a mild solution of detergent and warm water.
- Use a glass cleaner to remove any smears or fingerprints.
- Dry the glass using a soft lint free cloth.
- The interior oven door glass will be cleaned during a self clean cycle.

Cleaning the porcelain enamelled surfaces

The oven interior and inner door liners are porcelain enamelled and are cleaned during the self clean cycle.

Important!

DO NOT USE ANY OVEN CLEANERS, OVEN CLEANING PRODUCTS OR ABRASIVES ON THE Porcelain enamel. Do not clean the door or cavity seals (gaskets) or use any oven cleaning products on the seals. They are essential for a good seal and the efficient operation of the oven and care should be taken not to rub, damage or move the seals.

Cleaning the Broiling system and oven shelves and shelf supports


- The Broiling system, oven shelves and self supports can be cleaned using a solution of detergent and hot water. They are also dishwasher safe.
- If particularly soiled, soak in a solution of hot soapy water and biological clothes washing powder to make cleaning easier.

To remove the shelf supports

- 1 Lift the lever to unlock the shelf support.
- 2 Lift the shelf support up and away from the side wall of the cavity to clear the locating pin.
- 3 The shelf support can now be pulled toward you and out of the oven.

To replace the shelf supports

- 1 Align the two notches on the rear edge of the shelf support with the two pins to the rear of the oven cavity.
- 2 Replace the front of the shelf support against the wall of the oven cavity. Be sure the locating pin slots into place.
- 3 Lock the shelf support into position by shifting the lever into the horizontal position where it will 'click' into place.

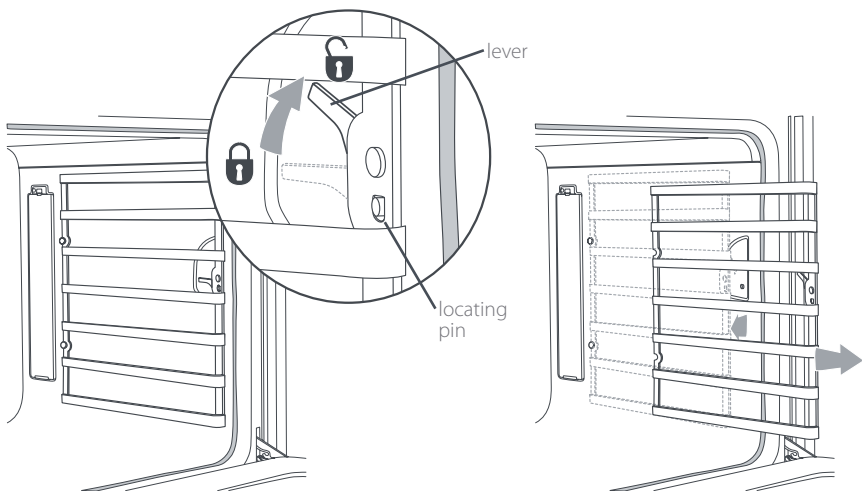



Self Clean mode



All about the Self Clean mode

- This oven features a pyrolytic self clean cycle.
- During a self clean cycle the oven reaches higher temperatures than it does for cooking and this burns off and breaks down soil and grease deposits.
- A smoke eliminator and active venting system removes and breaks down the smoke, fumes and odors.
- The ash residue that remains is easily removed from the cool oven with a small brush and a damp cloth or sponge.
- A self clean cycle normally takes about three hours.
- Only one cavity in a double oven can be self cleaned at a time.
- When one cavity is in a self clean cycle, the other cavity cannot be used for cooking.



IMPORTANT SAFETY INSTRUCTIONS

- Wipe up any large food spills or grease deposits before starting a self clean cycle.
- Do not use oven cleaners. No commercial oven cleaner, oven liner or protective coating of any kind should be used in or around any part of the oven.
- Remove oven shelves and shelf supports (see 'Cleaning') before starting a self clean cycle. If left in the oven during a self clean cycle, they will permanently discolor.
- Do not use your oven to clean miscellaneous parts.
- Do not clean the door or cavity seal, or use any oven cleaning products on the door seal. It is essential to the efficient operation of the oven and care should be taken not to rub, damage or move the seal.


Using the Self Clean mode

- 1 Remove oven shelves, shelf supports (see 'Cleaning') and all other cookware/utensils from the oven before using the Self Clean mode.
- 2 Select the Self Clean mode by turning the oven mode dial.
- 3 Select the maximum temperature using the temperature dial,  will appear in the display and this will change to  when the cycle begins. The **DOOR LOCK** and **CLEAN** symbols will show in the clock display and the time remaining will count down.

For your safety the door lock will automatically activate once the Self Clean mode and temperature has been selected.

- 4 At the end of a self clean cycle, the door will unlock and the **DOOR LOCK** symbol will disappear. The **CLEAN** symbol and  will flash in the clock display and  in the mode display until the oven is returned to manual operation - To do this turn the oven mode and temperature dials to 'OFF'.
- 5 At the completion of the self clean cycle, you will notice grey ash deposited inside the oven. The amount of ash in the oven is dependent on the amount of soil present in the oven before it was cleaned. When the oven is completely cooled, the ash is easily removed with a small brush or dry cloth, then wipe out the oven with a clean damp cloth and dry with a clean lint-free cloth.
- 6 Replace the shelf supports (see 'Cleaning') and oven shelves.

To cancel the Self Clean mode before it has finished





Turn the oven mode and temperature dials to 'OFF'.  will appear in the oven mode display and the door will remain locked until the oven has cooled to a safe temperature.

Do not turn the power to the appliance off as the fans are necessary to cool the oven.

If the oven is cool or below the safe temperature it will return to normal operation and the clock display will show the time of day.



Short Self Clean cycle

A shorter self clean cycle can be selected if the oven is only lightly soiled:

- 1 Select the Self Clean mode by turning the oven mode dial.
- 2 Select the maximum temperature using the temperature dial.
- 3 While  is shown in the display, press the  button. The **COOK TIME** and **AUTO** symbols and the colon will flash.
- 4 Rotate the Setting Selector  dial to reduce the time; this can be anywhere between two and three hours.
- 5 Press the  button again or wait eight seconds to adopt the setting and start the self clean cycle. The clock display will show the time remaining.

Self Clean - delayed start

Your AeroTech™ oven can be set to start a self clean cycle at your convenience:

- 1 Check the clock shows the correct time of day.
- 2 Select the Self Clean mode by turning the oven mode dial.
- 3 Select the maximum temperature using the temperature dial.
- 4 While  is shown in the display, press the **COOK TIME** button. The **COOK TIME** and **AUTO** symbols and the colon will flash.
- 5 Set the time you want the oven to finish the self clean cycle by rotating the Setting Selector  dial. If there is time to wait before the self clean cycle starts, **AUTO** and **CLEAN** symbols will appear in the clock display.
- 6 When the self clean cycle starts, **DOOR LOCK** and **CLEAN** symbols will appear in the display and the time remaining will count down.

Trouble shooting

Problem	Possible Cause	What to do
Oven does not work	Power supply is not connected.	Have service company/electrician check power connections, wiring and fuses.
	Clock is not set due to power cut or failure.	Clock must be set before the oven can be used. The oven will go into 'Set Up' mode when the electricity is restored after a power cut. The oven mode and temperature displays will show 'OFF'. Both displays will be unlit and unresponsive. The colon (:) in the clock display will flash. See page 7 to reset the clock.
	Oven door is open.	Elements disabled by door switch when door is open. Make sure door is properly closed.
Baked foods too brown on top or bottom	Oven not preheated.	Preheat until the temperature display changes from red to green (or orange to white on Iridium Stainless Steel models).
	Baking pans/tins too large or too small for the recipe.	Use correct sized pans/tins.
	Baking pans/tins not evenly sized or spaced on shelves.	Stagger baking pans on the oven shelves so that there is at least 1 1/8" (3 cm) between them and the oven walls.
	Baked products not evenly sized or spaced on baking trays.	Make baked products the same size and shape, spread evenly over the baking tray.
	Shelf position too high for specific mode.	Try a lower shelf position.
	Opening the oven door frequently during baking.	Do not open the door until at least 3/4 of the cooking time has passed.
	Baking temperature too high or too low.	Adjust temperature.

Problem	Possible Cause	What to do
Oven door wont open	Oven is still in self-clean mode.	Your oven door will unlock when it has cooled to a safe temperature.
Oven light does not work	Light bulb has blown.	Replace light bulb. Refer to Maintenance for details.
Oven not heating	Oven door is not properly closed or opened too frequently during operation.	Oven elements and fans turn off while the door is open so be sure the oven door is properly closed. Note: Broil modes are designed to operate with the door closed.
Baked foods are pale and under-cooked	Shiny baking trays, tins, or pans being used from a previous oven with an unconcealed bottom element.	Shiny baking trays, tins, and pans reflect the heat back towards the bottom of the oven resulting in poor cooking performance. Food tends to take longer to cook and does not brown well. The accessories supplied with the oven work efficiently by absorbing heat and may reduce cooking times.

Fault codes


If a fault occurs, the oven will 'beep' every second and a fault code will appear in the clock display as a letter 'F' with a number after it. Depending on the nature of the fault, it may be possible to clear the display by pressing the **PUSH TO CLEAR** button. If the fault code and continuous 'beep' cannot be cleared this way, note down the fault code and switch the oven off at the main power supply. In either event, please call your Fisher & Paykel Authorized Service Center and advise them of the fault code. This information will help them to resolve the problem. If you have any questions about operating the product, please contact our Fisher & Paykel Customer Care Center.

Maintenance

How to change the oven light bulbs

The oven is illuminated by three 12 volt/20 watt halogen bulbs. These have a very long life, but if you should need to replace one, follow these steps:

- 1 Turn the oven off and allow it to cool.
- 2 Take out the shelves and use a small flat head screwdriver to twist and lift the retainer clip at the top of the glass light cover. The clip pivots counter-clockwise (see the diagrams below).
- 3 Carefully lift the glass cover out of the lower support and pull out the faulty bulb.
- 4 Holding the replacement bulb in a soft cloth or tissue (touching the bulb will reduce its life span), insert the new bulb. The two pins are vertically orientated.
- 5 Reposition the glass cover and twist the top clip back in place. The procedure is the same for the light in the roof of the oven cavity.

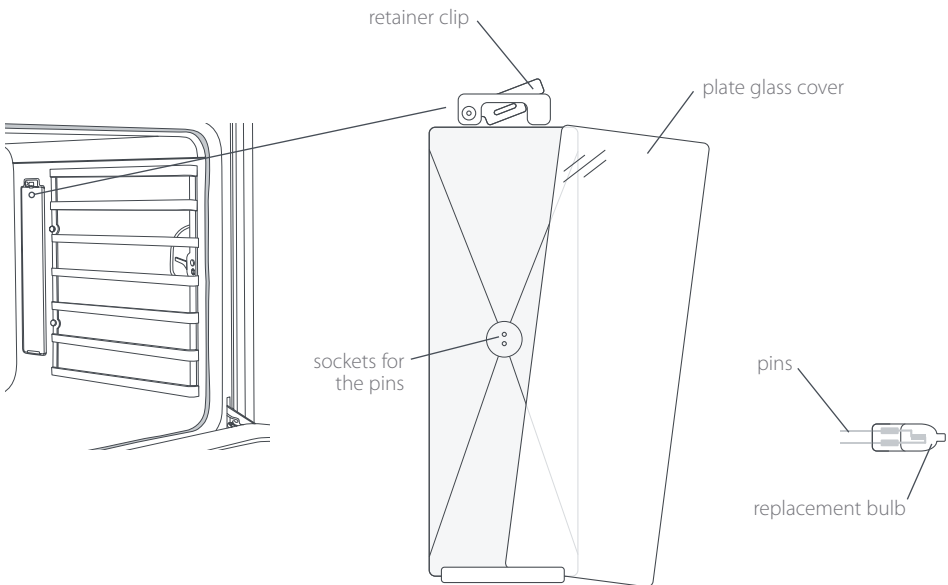

Limited warranty

When you purchase any new Fisher & Paykel whiteware Product for personal or consumer use you automatically receive a two year Limited Warranty covering parts and labor for servicing within the 48 mainland United States, Hawaii, Washington D.C and Canada. In Alaska the Limited Warranty is the same except that you must pay to ship the Product to the service shop or the service technician's travel to your home. Products for use in Canada must be purchased through the Canadian distribution channel to ensure regulatory compliance.

If the Product is installed in a motor vehicle, boat or similar mobile facility, you receive the same two year Limited Warranty, but you must bring the vehicle, boat or mobile facility containing the Product to the service shop at your expense or pay the service technician's travel to the location of the Product.

Fisher & Paykel undertakes to:

Repair without cost to the owner either for material or labor any part of the Product, the serial number of which appears on the Product, which is found to be defective. In Alaska, you must pay to ship the Product to the service shop or for the service technician's travel to your home. If the Product is installed in a motor vehicle, boat or similar mobile facility, you must bring it to the service shop at your expense or pay for the service technician's travel to the location of the Product. If we are unable to repair a defective part of the Product after a reasonable number of attempts, at our option we may replace the part or the Product, or we may provide you a full refund of the purchase price of the Product (not including installation or other charges).

This warranty extends to the original purchaser and any succeeding owner of the Product for products purchased for ordinary single-family home use.

All service under this Limited Warranty shall be provided by Fisher & Paykel or its Authorized Service Agent during normal business hours.

How long does this Limited Warranty last?

Our liability under this Limited Warranty expires TWO YEARS from the date of purchase of the Product by the first consumer.

Our liability under any implied warranties, including the implied warranty of merchantability (an unwritten warranty that the Product is fit for ordinary use) also expires ONE YEAR (or such longer period as required by applicable law) from the date of purchase of the Product by the first consumer. Some states do not allow limitations on how long an implied warranty lasts, so this limit on implied warranties may not apply to you.

This warranty does not cover:

- A** Service calls that are not related to any defect in the Product. The cost of a service call will be charged if the problem is not found to be a defect of the Product. For example:
 1. Correct faulty installation of the Product.
 2. Instruct you how to use the Product.
 3. Replace house fuses, reset circuit breakers, correct house wiring or plumbing, or replace light bulbs.
 4. Correct fault(s) caused by the user.
 5. Change the set-up of the Product.
 6. Unauthorized modifications of the Product.
 7. Noise or vibration that is considered normal, for example, drain/fan sounds, regeneration noises or user warning beeps.
 8. Correcting damage caused by pests, for example, rats, cockroaches etc.
- B** Defects caused by factors other than:
 1. Normal domestic use or
 2. Use in accordance with the Product's User Guide.
- C** Defects to the Product caused by accident, neglect, misuse, fire, flood or Act of God.
- D** The cost of repairs carried out by non-authorized repairers or the cost of correcting such unauthorized repairs.
- E** Travel Fees and associated charges incurred when the product is installed in a location with limited or restricted access. (i.e. airplane flights, ferry charges, isolated geographic areas).
- F** Normal recommended maintenance as set forth in the Product's User Guide.

If you have an installation problem contact your dealer or installer. You are responsible for providing adequate electrical, exhausting and other connection facilities.

We are not responsible for consequential or incidental damages (the cost of repairing or replacing other property damaged if the Product is defective or any of your expenses caused if the Product is defective). Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How to get service

Please read your User Guide. If you then have any questions about operating the Product, need the name of your local Fisher & Paykel Authorized Service Agent, or believe the Product is defective and wish service under this Limited Warranty, please contact your dealer or call us at:

TOLL FREE **1-888-9-FNP-USA (1-888-9-367-872)** Canada also
or contact us through our web site: www.usa.fisherpaykel.com

You may be required to provide reasonable proof of the date of purchase of the Product before the Product will be serviced under this Limited Warranty.

Commercial use

If you are using the Product in a commercial setting (any use other than a single family dwelling), we agree to repair or replace, without cost to you for parts only, any defective parts, the serial number of which appears on the Product. Our liability for these repairs expires ONE YEAR from the date of original purchase.

At our option we may replace the part or the Product, or we may provide you a full refund of the purchase price of the Product (not including installation or other charges). All service under this Limited Warranty shall be provided by Fisher & Paykel or its Authorized Service Agent during normal business hours.

No other warranties

This Limited Warranty is the complete and exclusive agreement between you and Fisher & Paykel regarding any defect in the Product. None of our employees (or our Authorized Service Agents) are authorized to make any addition or modification to this Limited Warranty. Warrantor: Fisher & Paykel Appliances, Inc.

If you need further help concerning this Limited Warranty, please call us at the above number, or write to:

Fisher & Paykel Appliances, Inc.
27 Hubble, Irvine, CA 92618

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Copyright Reserved © Fisher & Paykel 2004.

The product specifications in this booklet apply to the specific products and models described at the date of issue. Under our policy of continuous product improvement, these specifications may change at any time. You should therefore check with your Dealer to ensure this booklet correctly describes the product currently available.

www.fisherpaykel.com

US CA

Product User Guide

Published: 06/2004

Translated: 06/2004

Part No. 599194 B

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>