

Fisher-Price®

L0538

www.fisher-price.com/uk



WARNING

**IMPORTANT! KEEP INSTRUCTIONS
FOR FUTURE REFERENCE.**



WARNING

To prevent serious injury or death:

- **Fall Hazard** - It is dangerous to use this reclined cradle on an elevated surface, since child's movement may cause bouncer to slide or tip over. Use only on a floor.
- **Suffocation Hazard** - Never use on a soft surface (bed, sofa, cushion), since seat can tip over and cause suffocation in soft surfaces.
- Always use the restraint system.
- Never leave the child unattended.
- Never use as a car seat.
- Never use the toy bar as a handle.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/20 lbs).



CAUTION

This package contains small parts in its unassembled state. Adult assembly is required.

Consumer Information

- Please read these instructions before assembly and use of this product.
- Adult assembly is required. Tool needed for assembly: Phillips screwdriver (not included).
- Requires one "D" (LR20) **alkaline** battery (not included) for soothing unit operation. Includes two LR44 button batteries for flower toy operation.
- Includes a non-replaceable button cell battery for toy operation.
- Product features and decorations may vary from photo.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303; www.service.mattel.com/uk.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND


16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Parts

IMPORTANT! Please remove all parts from the package and identify them before assembly.
Some parts may be packed in the pad.

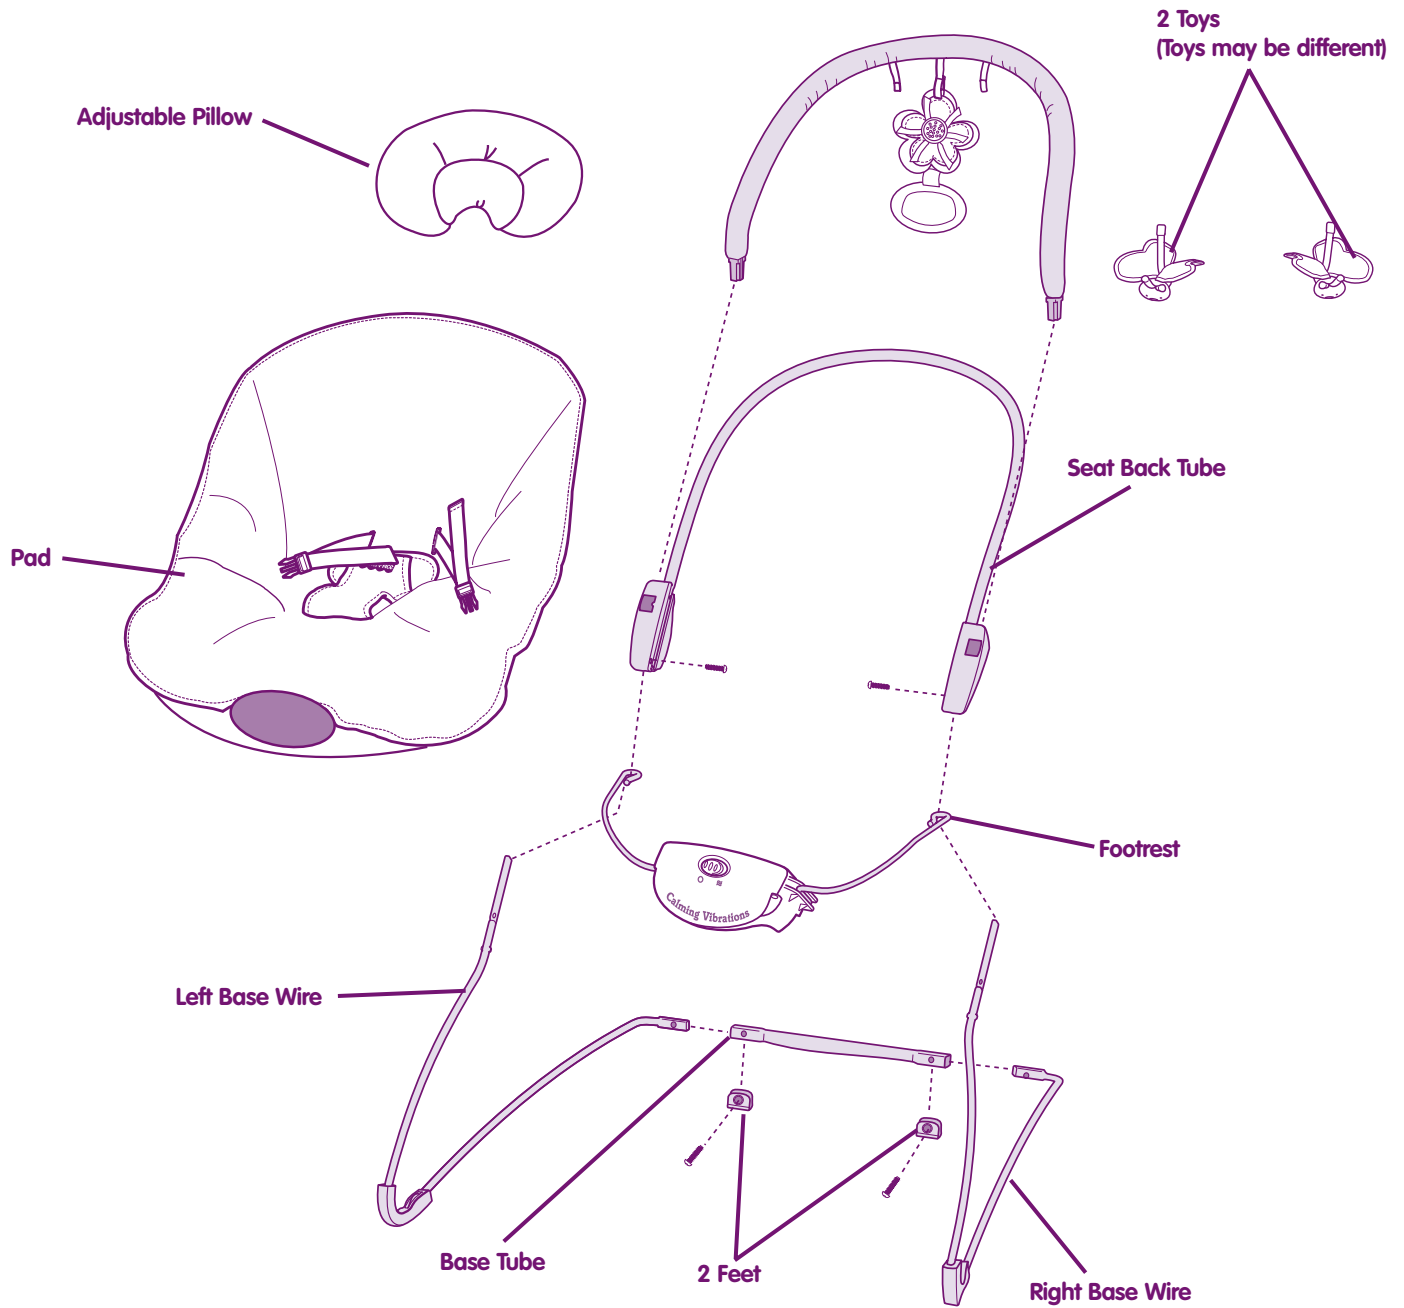

#8 x 1,9 cm (3/4") Screw – 2




M5 x 20 mm Screw – 2

Shown Actual Size


NOTE: Tighten and loosen all screws with a Phillips screwdriver.
Do not over-tighten the screws.

Assembly


IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Mattel for replacement parts and instructions if needed. Never substitute parts.

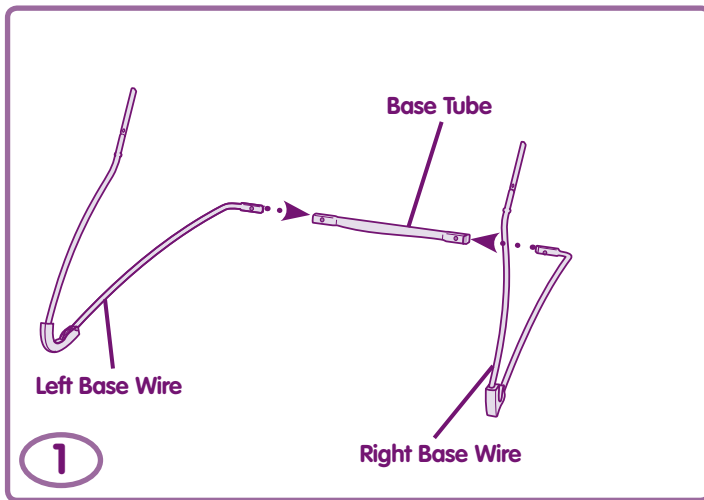


- Place the base tube on a flat surface.
- Position the left and right base wires as shown.
- Fit the left base wire and right base wire into the base tube.

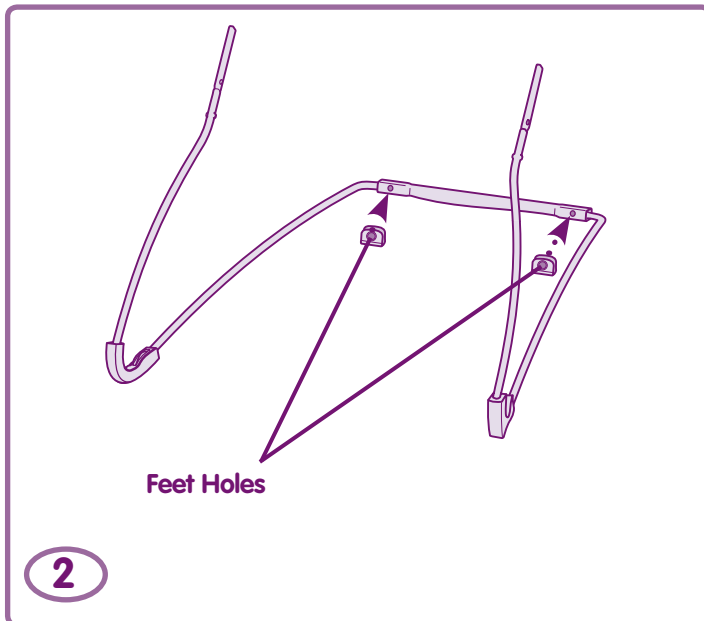

- Position the feet so the holes are toward you and the **non-skid surface is down**.
- Fit the feet on the base tube, as shown.

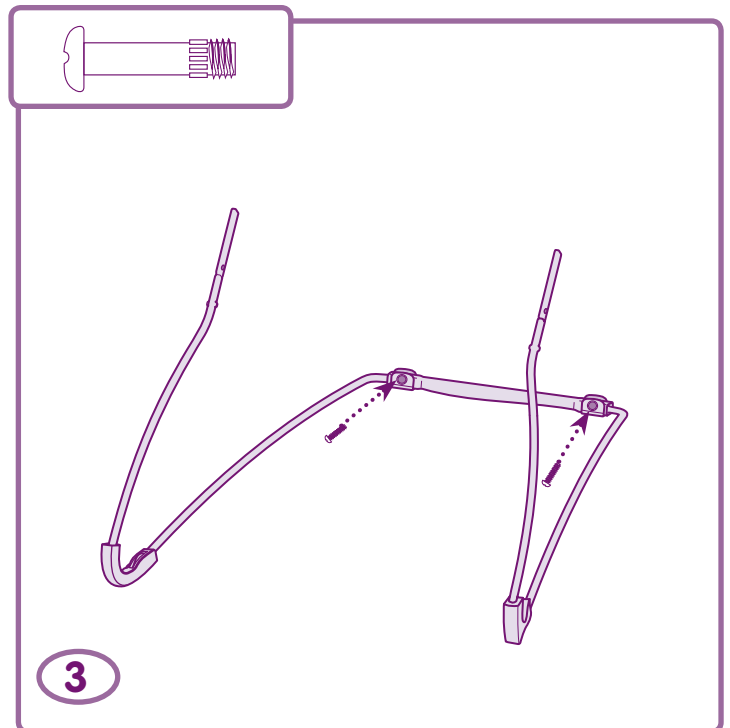


- Insert an M5 x 20 mm screw through each foot and tighten.

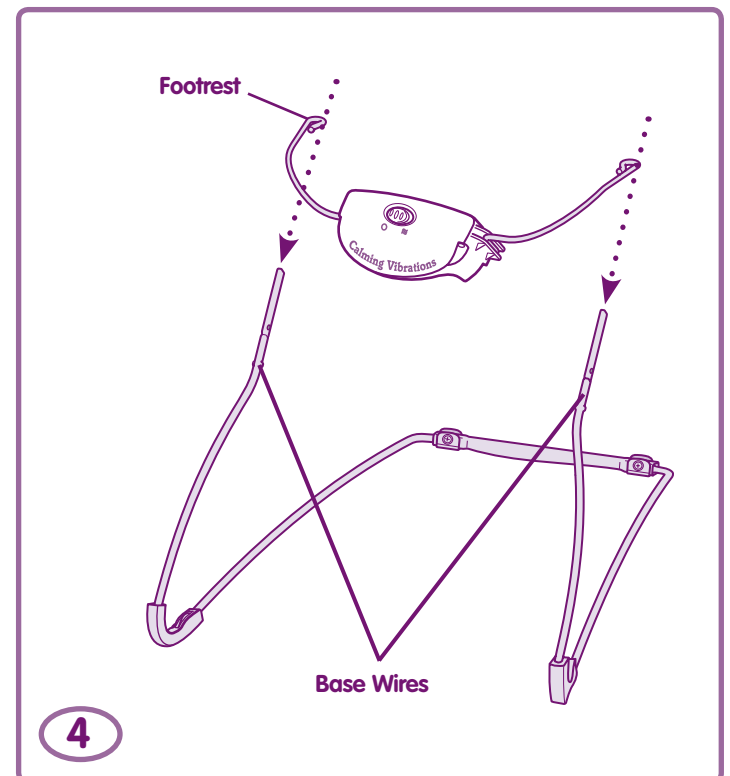


- Position the footrest so that the soothing unit is upright.
- Fit the footrest onto the ends of the base wires.



Assembly

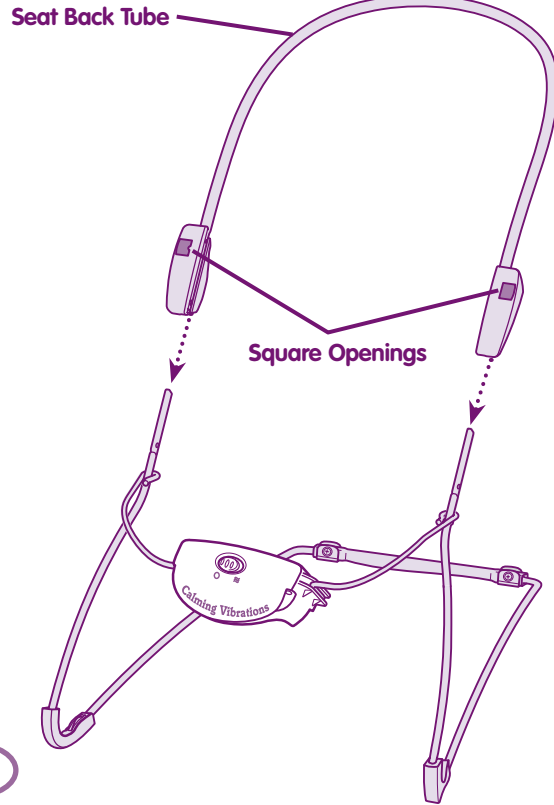


- Position the seat back tube so that the square openings are upright.
- Fit the seat back tube onto the ends of the base wire.
- Push the seat back tube to be sure it is completely on the base wires.

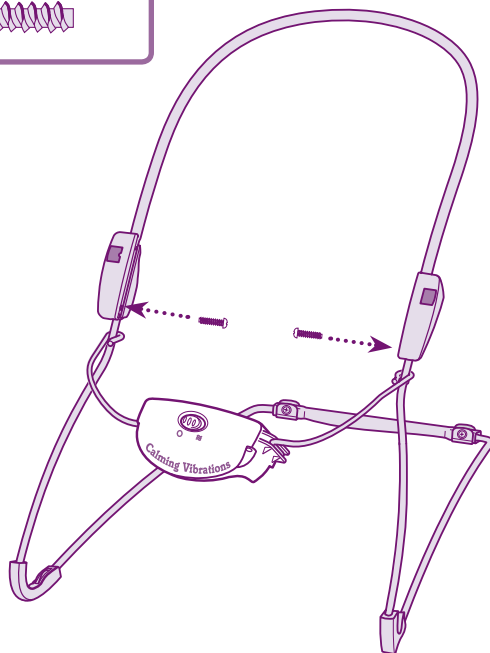

- Insert a #8 x 1,9 cm (3/4") screw into the inside hole of each handle and tighten.
- Pull up on the seat back tube to be sure it is secured to the left and right base wires.

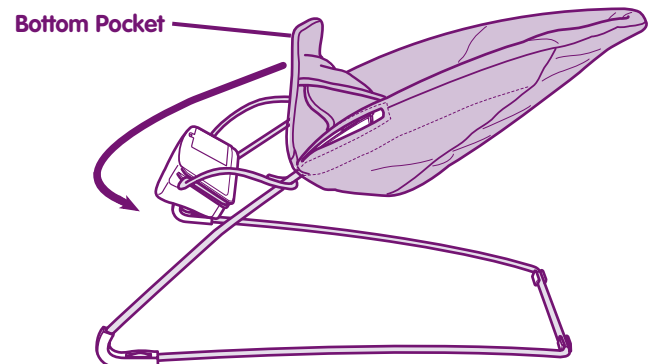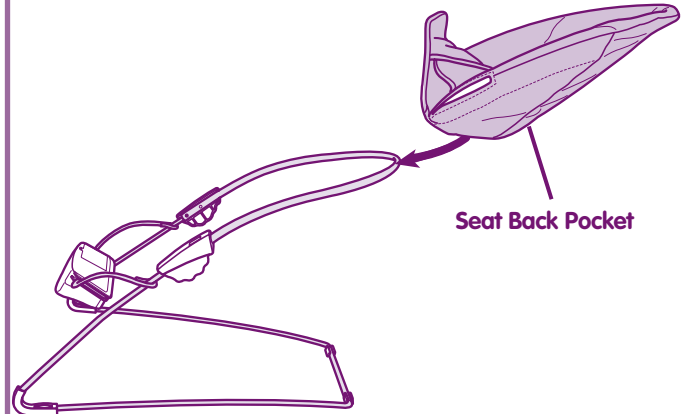


- Fit the pad seat back pocket over the seat back tube.
- Pull and fit the pad seat bottom pocket around the soothing unit and footrest.

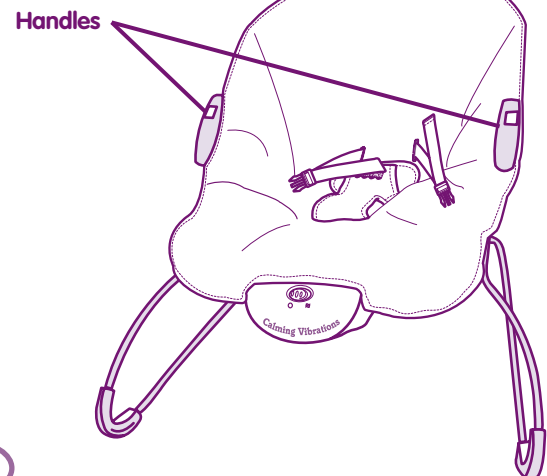

- Fit the handles through the side openings in the pad.


Assembly

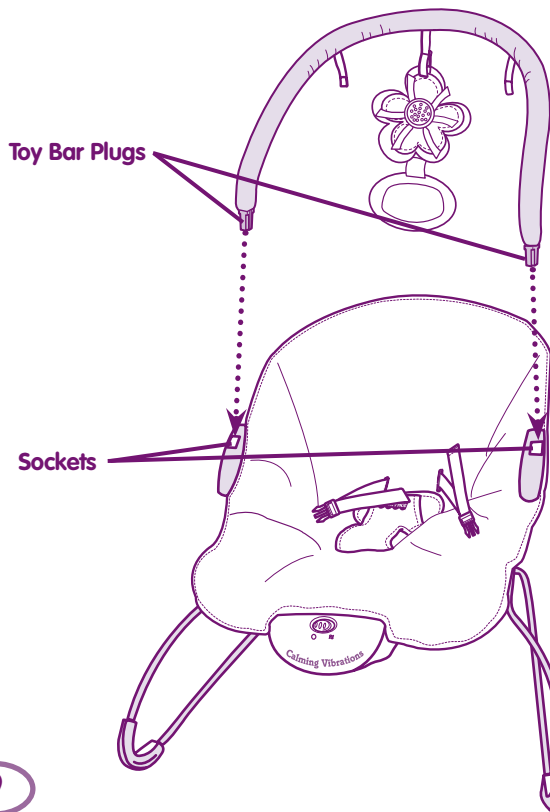

• Insert and “snap” the toy bar plugs into each handle socket.

Hint: The toy bar is removable. Press the ends of the latches and lift the toy bar.

Toy Bar Straps

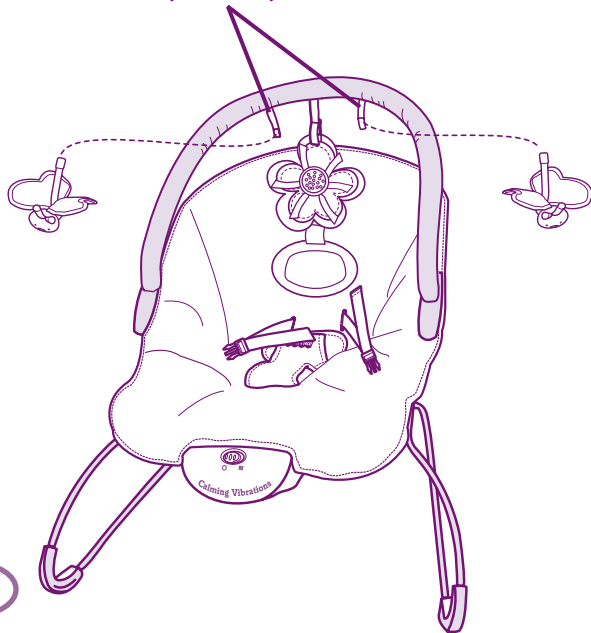


• Fasten the toy straps to the toy bar straps.


Assembly is now complete.

Battery Installation


Hint: We recommend using an **alkaline** battery for longer battery life.

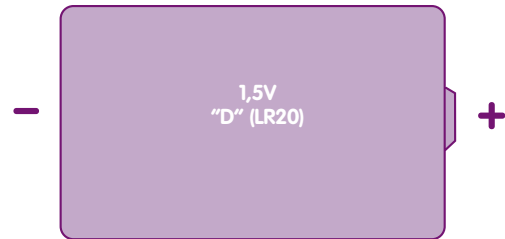

• Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

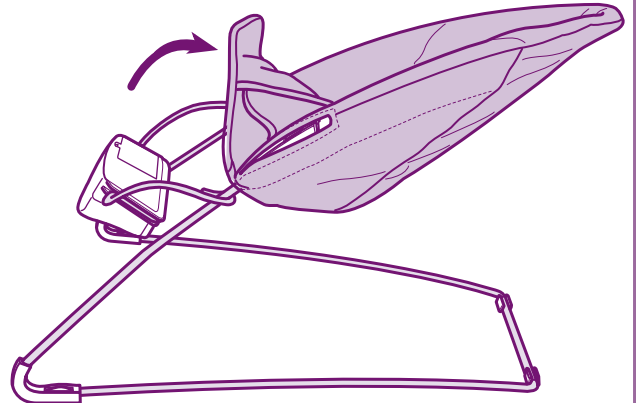

• Remove the pad bottom pocket from the footrest.

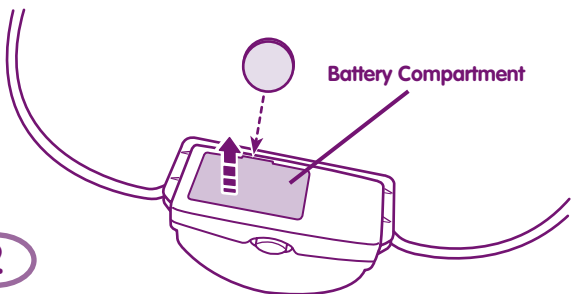

- Insert a coin into the battery compartment door and pry the battery compartment door off.
- Insert one “D” (LR20) **alkaline** battery into the battery compartment.
- Replace the battery compartment door.
- Pull and fit the pad seat bottom pocket around the soothing unit and footrest.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

Setup and Use




WARNING

To prevent serious injury or death:


- **Fall Hazard** - It is dangerous to use this reclined cradle on an elevated surface, since child's movement may cause bouncer to slide or tip over. Use only on a floor.
- **Suffocation Hazard** - Never use on a soft surface (bed, sofa, cushion), since seat can tip over and cause suffocation in soft surfaces.
- Always use the restraint system.
- Never leave the child unattended.
- Never use as a car seat.
- Never use the toy bar as a handle.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/20 lbs).

Setup and Use

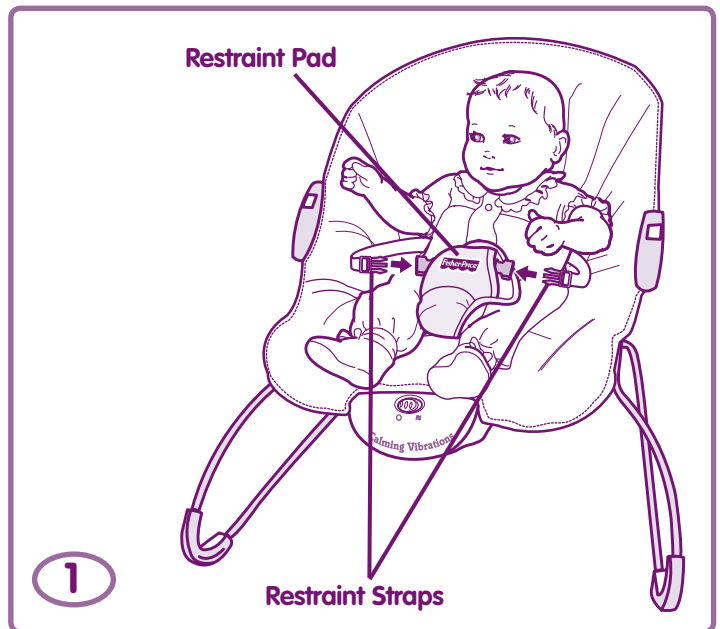

Securing your Infant

- Place your child in the seat. Position the restraint pad between your child's legs.
- Fasten the restraint straps to the restraint pad. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

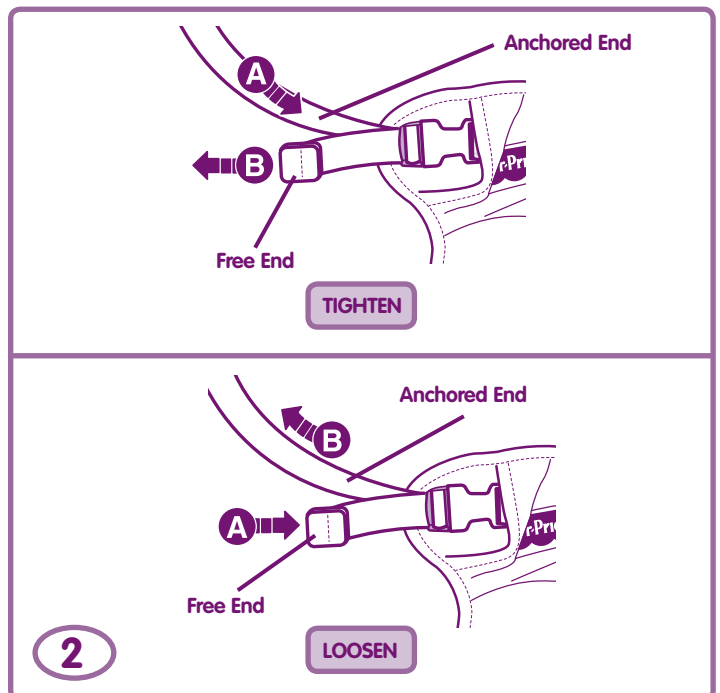


To tighten the restraint straps:

- Feed the anchored end of the restraint strap up through the buckle to form a loop **A**. Pull the free end of the restraint strap **B**.

To loosen the restraint straps:


- Feed the free end of the restraint strap up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the restraint strap to shorten the free end of the restraint strap **B**.

Adjustable Pillow

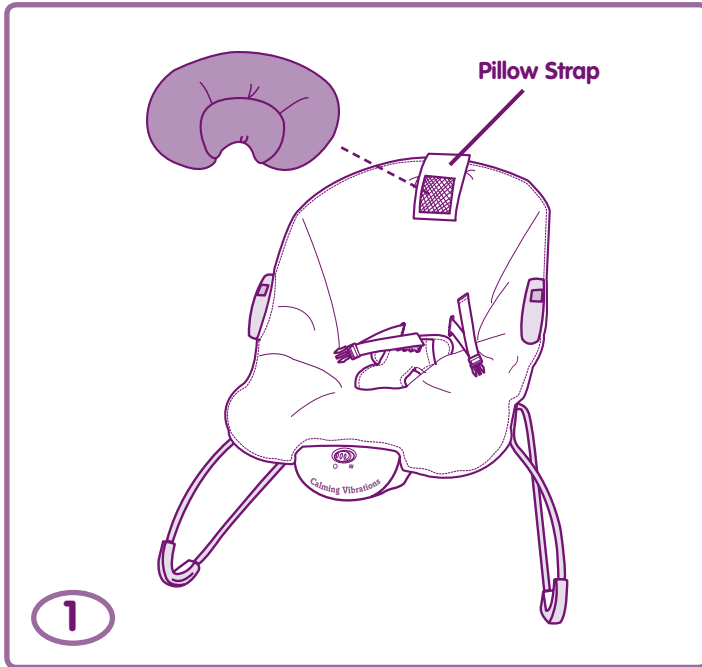


- Place the pillow on the strap and press into place.

Hint: You can move the pillow up or down for baby's comfort.

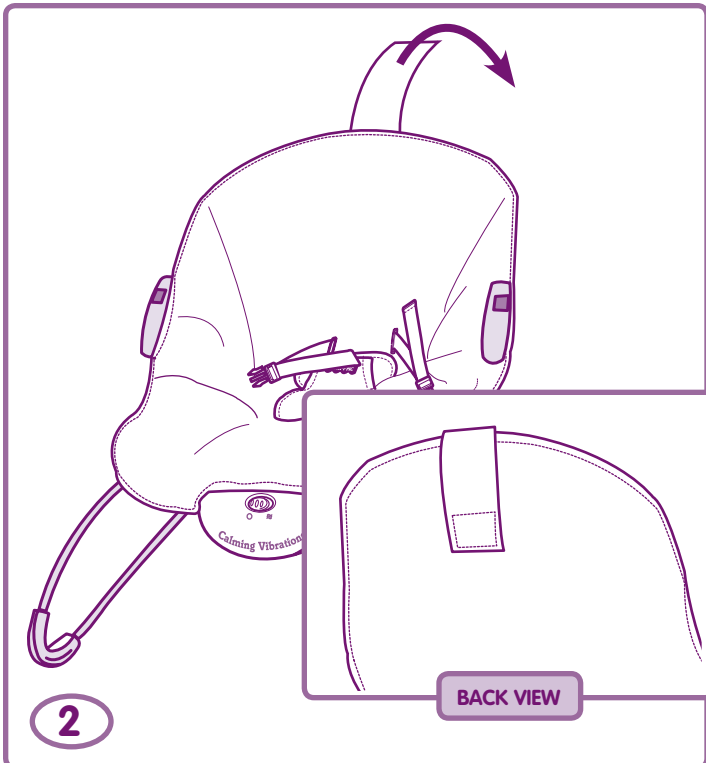

- If you'd like to use the bouncer without the pillow, simply pull to remove. Fasten the strap to the back of the bouncer.

Soothing Unit and Toybar

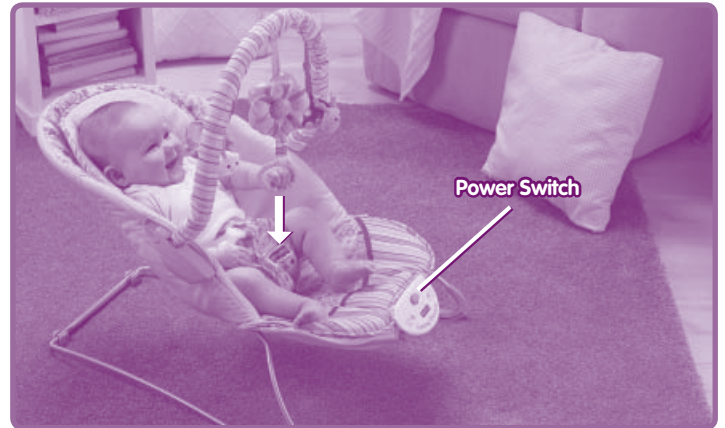

- Make sure your child is properly secured in the seat.

Soothing Unit

- Slide the power switch to:  Vibrations or  Off.


IMPORTANT! Low battery power causes this product to operate erratically: no vibrations and the product may not turn off. Remove and discard the battery and replace with a new "D" (LR20) alkaline battery.

Toy Bar

- Pull the ring on the centre toy for a delightful tune!

Care

- The pad and adjustable pillow are machine washable. Before washing, fasten the strap to the back of the pad. Wash them separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- **To remove the pad:** First remove the bottom pocket of the pad. Then, remove the upper pad flap. **To replace the pad,** refer to Assembly steps 7 and 8.
- The frame, toy bar and toys may be wiped clean using a mild cleaning solution and damp cloth. Do not immerse the toy bar. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue.

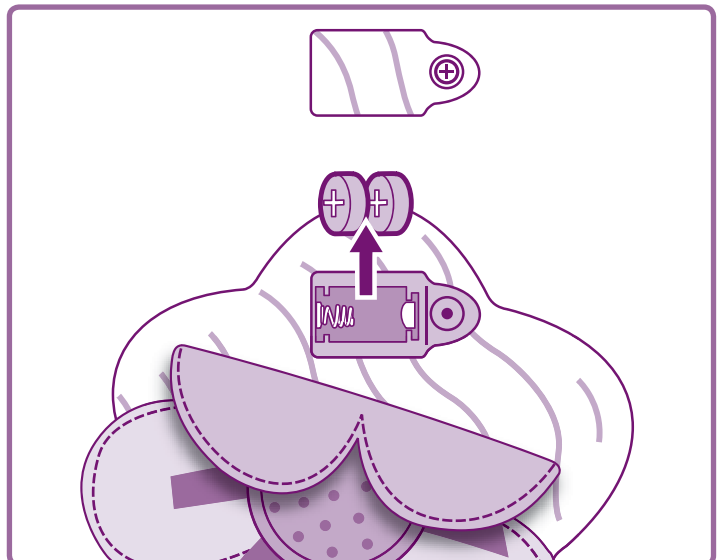

- Before disposing of the flower toy, please remove the batteries.
- Loosen the screw in the battery compartment door. Remove and dispose the batteries safely.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>