


Infant-to-Toddler Rocker



Infant Seat

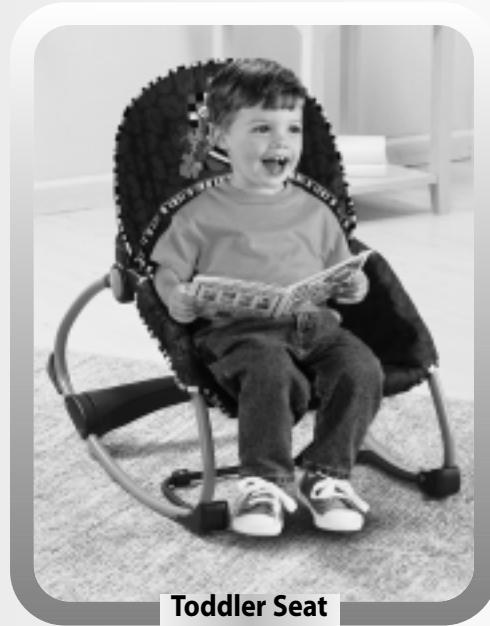

Toddler Seat

Model Number: 79026

Please keep this instruction sheet, as it contains important information.

Use the upright position only when your child has developed enough upper body control to sit without leaning forward.

Always use the restraint until your child is able to climb in and out of the chair unassisted.

Designed for use with children from birth to 40 lbs (18 kg).

Adult assembly is required. Tool needed for assembly: Phillips Screwdriver (not included).

Requires one "D" (LR20) **alkaline** battery (not included) for vibrations unit operation.

Fisher-Price®

www.fisher-price.com

Warning

WARNING

To prevent serious injury and/or falls:

- Never use on any elevated surface.
- Always use the restraint until the child is able to climb in and out of the chair unassisted.
- Never leave child unattended.
- Use the upright position only when child has developed enough upper body control to sit without leaning forward.

Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than return this product to the store. Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:
Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries, outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.


Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Parts

IMPORTANT! Please remove all parts from the package and identify them before assembly. The kickstand is packaged within the pad at the factory. Before beginning assembly, please remove kickstand from the pad.

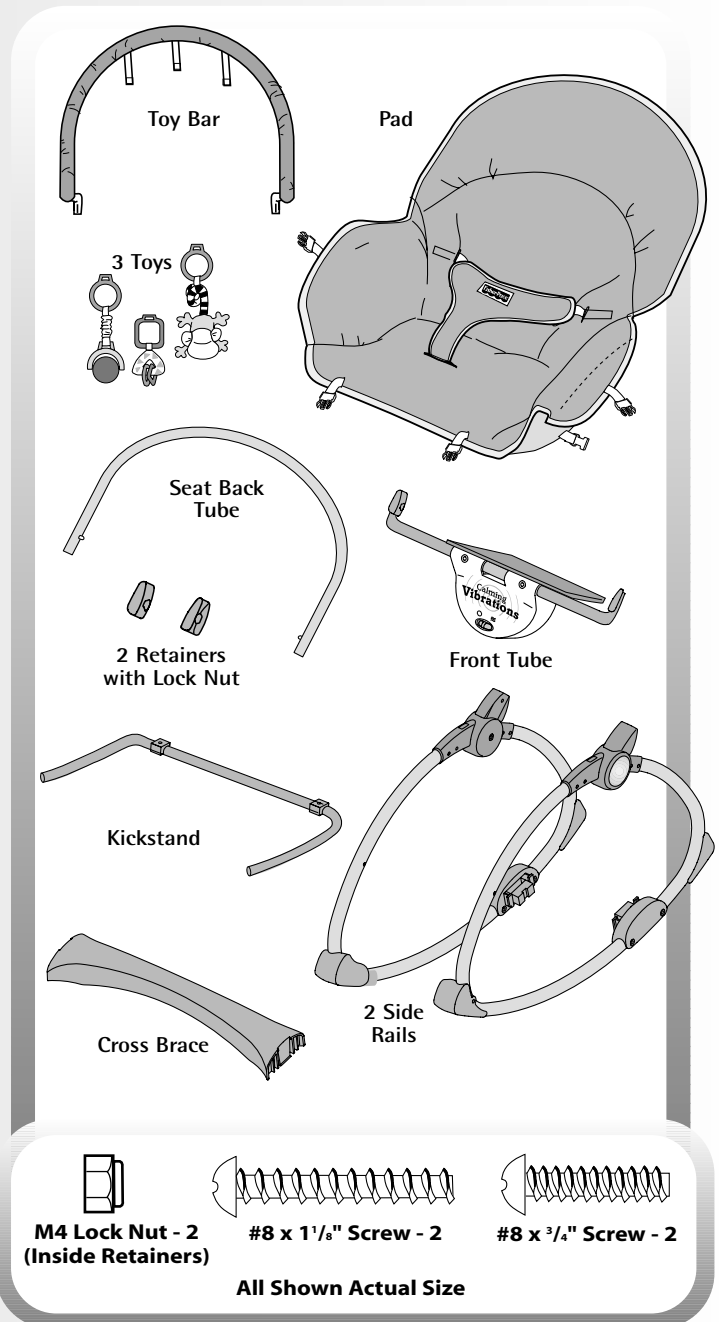


Assembly

IMPORTANT! Before assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

⚠ CAUTION


This package contains small parts in its unassembled state. Adult assembly is required.

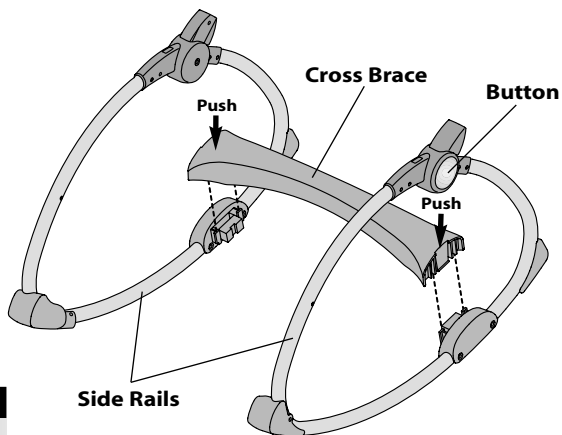


- 1
- Position each side rail so that the button faces **outward**.
 - Fit the cross brace between the side rails, as shown.
 - Push the cross brace down to **"snap"** it into place. This may require a lot of force.



#8 x 3/4" Screw
Shown Actual Size

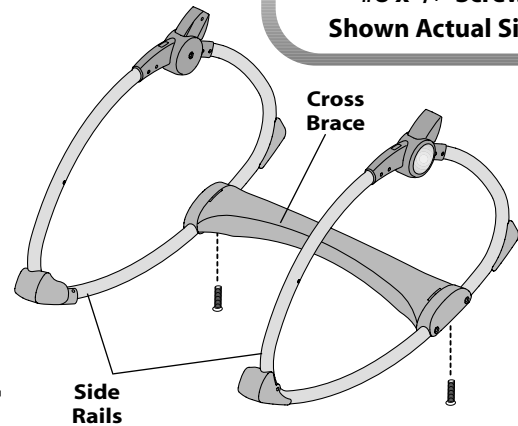


- 2
- Insert a screw through the hole in the bottom of each side rail and into the cross brace. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

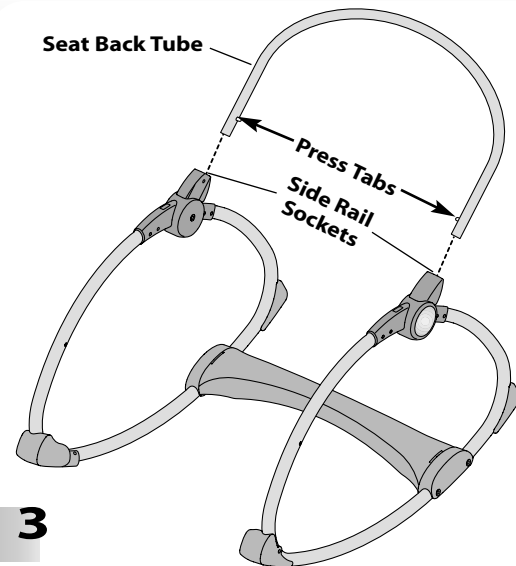


- 3
- Insert the seat back tube into the socket in each side rail.
 - While pressing the tabs on the ends of the seat back tube, continue to insert the seat back tube into the sockets in each side rail, until the tabs **"snap"** into place. **Make sure you hear a "snap" on each side.**
 - Pull the seat back tube up to be sure it is secure in the side rail sockets.

Assembly

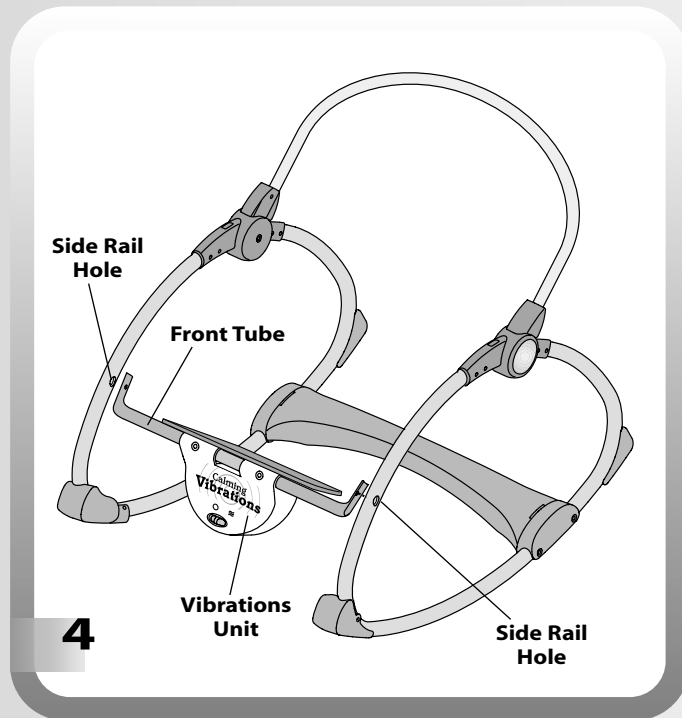


- Locate the hole in each side rail.
- With the vibrations unit facing forward, fit the front tube to the side rails, as shown. Hold the front tube in place and proceed to step 5.

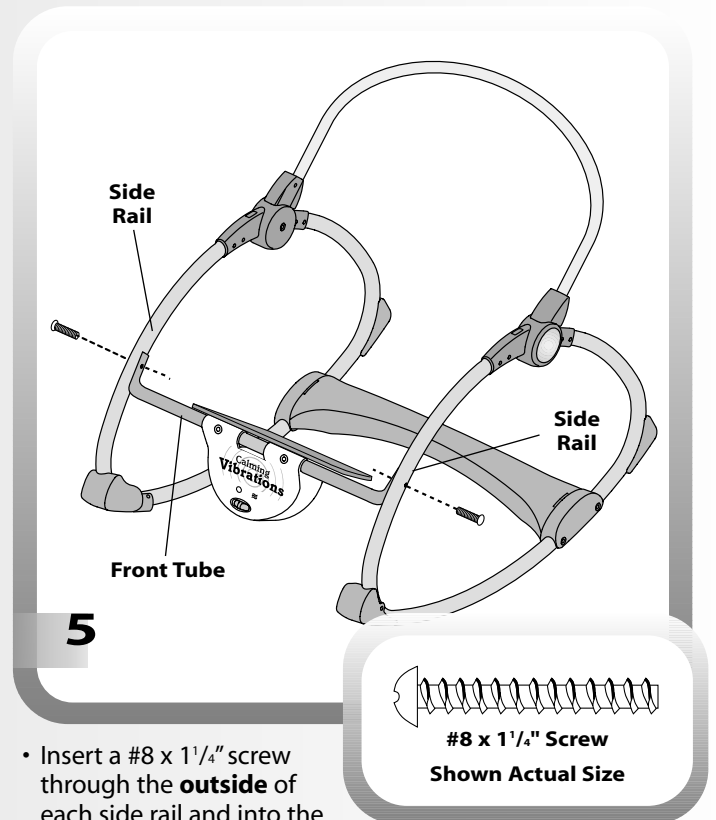

- Insert a #8 x 1/4" screw through the **outside** of each side rail and into the ends of the front tube.

IMPORTANT! Please follow the next assembly (step 6) carefully to completely secure the front tube to the side rails.


Assembly

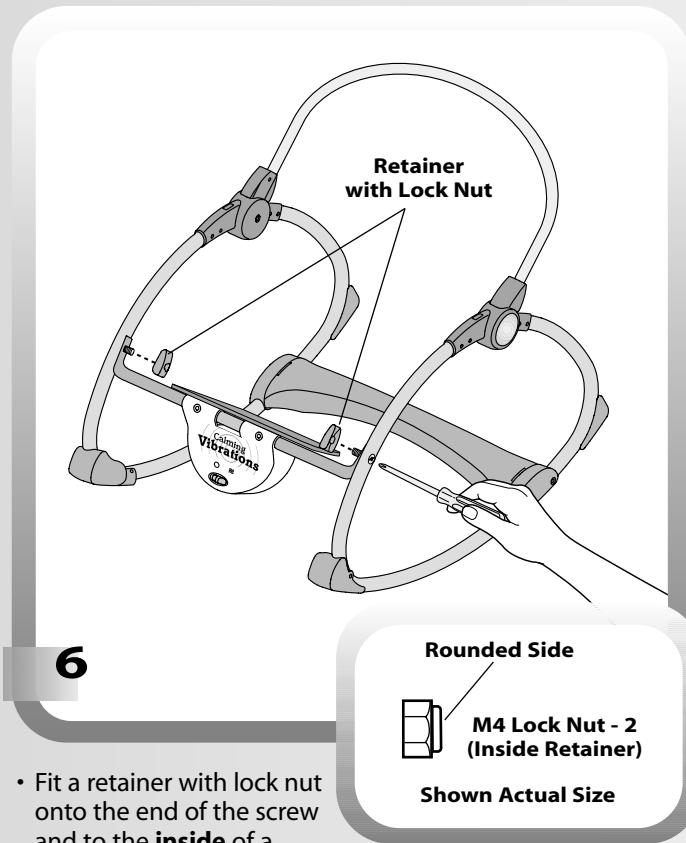

- Fit a retainer with lock nut onto the end of the screw and to the **inside** of a side rail.


Hint: A lock nut has been factory assembled to the retainer. During shipment, the lock nut may have fallen out of the retainer. If it has, please fit it into the hexagonal hole in the retainer so that the rounded side of the lock nut faces out.

- Tighten the screw with a Phillips screwdriver. Do not over-tighten.
- Repeat this procedure to fasten the screw in the other end of the front tube and side rail, using the remaining retainer with lock nut.

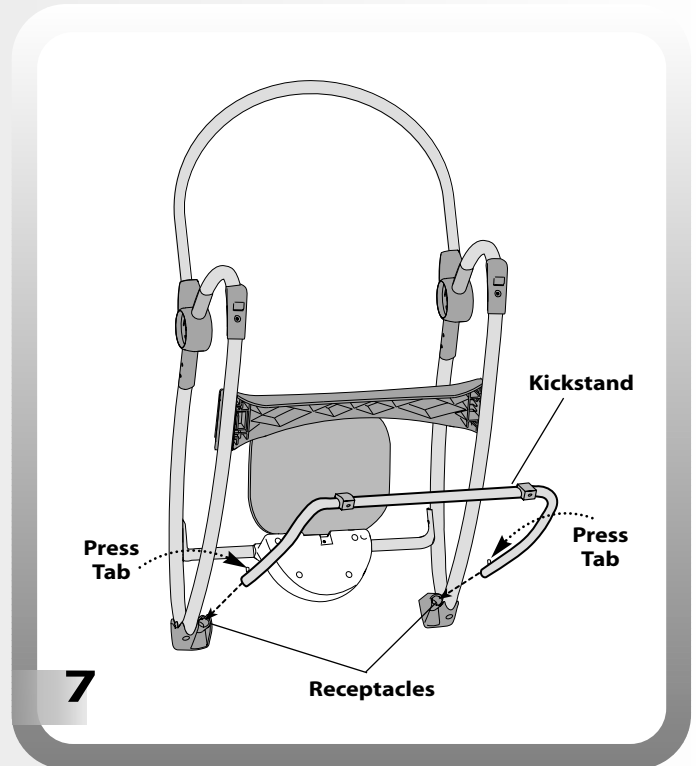



- Position the assembly face down, as shown.
- While pressing the tab on each end of the kickstand, insert the kickstand into the receptacle in each side rail, as shown.
- Push the kickstand into the receptacles until the tabs "**snap**" into place. **Make sure you hear a "snap" on each side.**
- Pull the kickstand to be sure it is secure in the receptacles.

Assembly

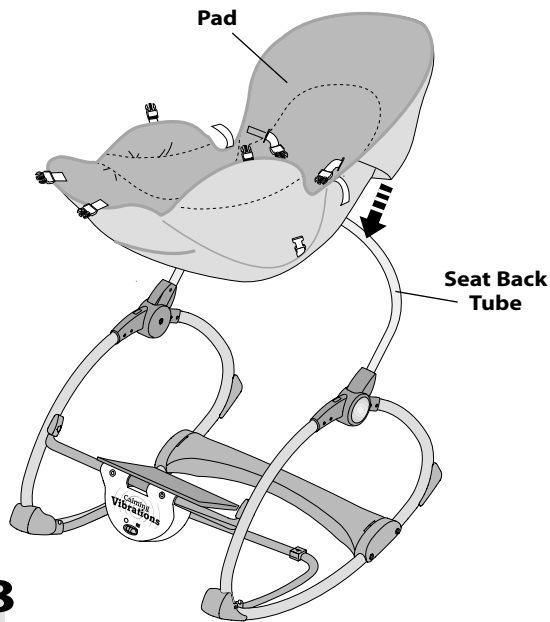


8

- Turn the assembly upright.
- Fit the upper pocket on the pad onto the seat back tube.
- Fasten the pad buckles around each side rail.

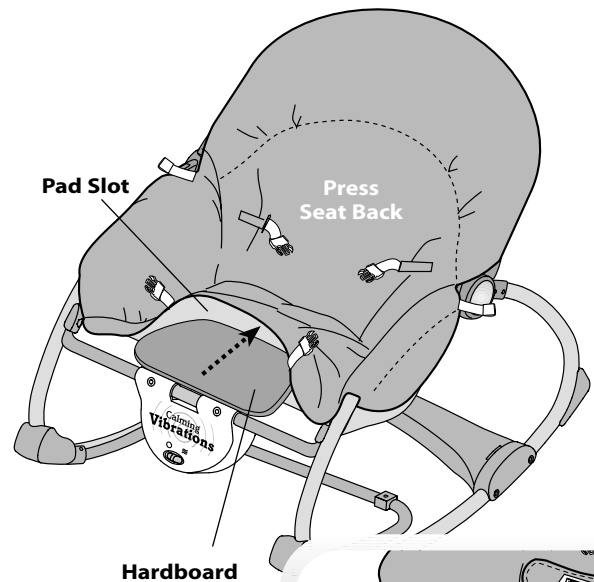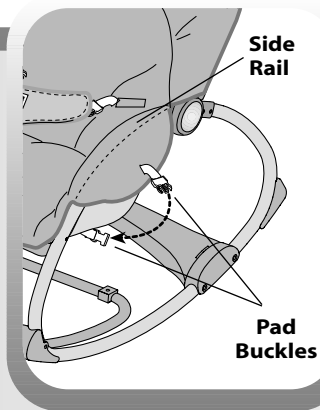


9

- Turn the hardboard over and insert it into the slot in the front edge of the pad.
- Fasten the pad buckles on the front edge of the pad and underneath the seat. Make sure you hear a "snap" on both sides.
- Press the fasteners together in the seat back portion of the pad.

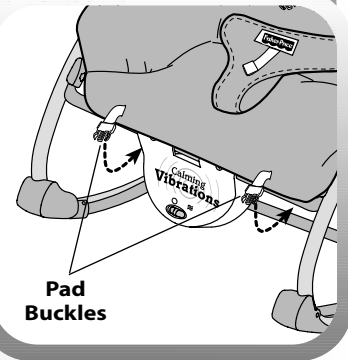

Assembly is now complete.

Battery Installation

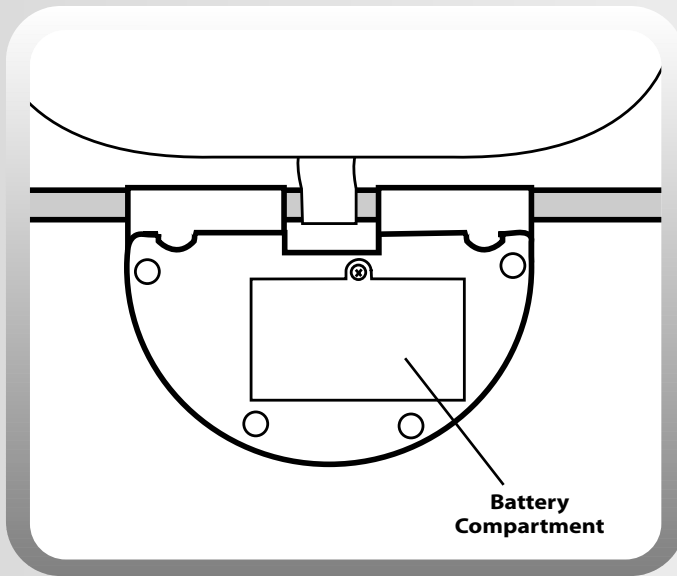


- Locate the battery compartment on the bottom of the vibrations unit.
- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Lift to remove the battery compartment door.
- Insert one "D" (LR20) **alkaline** battery as indicated inside the battery compartment.

Hint: We recommend using an **alkaline** battery for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

Battery Tips

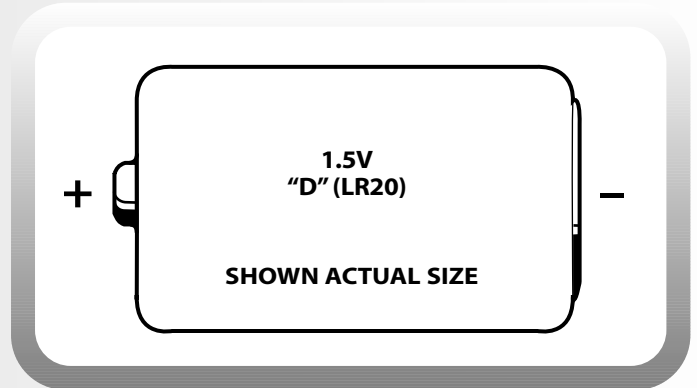

- Remove the battery during long periods of non-use. Always remove an exhausted battery from the product. Battery leakage and corrosion can damage this product. Dispose of the battery safely.
- Do not dispose of the battery in a fire. The battery may explode or leak.
- Do not dispose of the musical toy in a fire. The battery(ies) inside the toy may explode or leak.
- Never short circuit the battery terminals.
- A non-rechargeable battery should not be recharged.
- Only a battery of the same or equivalent type as recommended in the "Battery Installation" instructions is to be used.
- If a removable rechargeable battery is used, it is only to be charged under adult supervision.
- A rechargeable battery is to be removed from the product before it is charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.


Set-Up & Use

IMPORTANT! Before each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.


WARNING

To prevent serious injury and/or falls:
Use the upright position only when child has developed enough upper body control to sit without leaning forward.

Seat Position

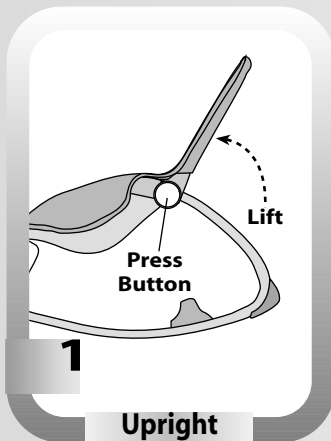

Upright

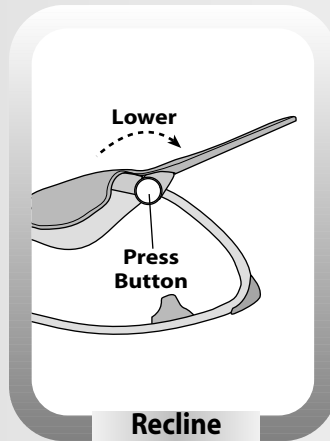

Recline

Select a seat position for your child's comfort:
Upright or Recline.

Upright

While pressing the button on each side rail, lift the seat back.

Recline


While pressing the button on each side rail, lower the seat back.

Securing your Infant

WARNING


To prevent serious injury and/or falls:

- Always use the restraint until child is able to climb in and out of the chair unassisted.
- Never use on any elevated surface.
- Never leave child unattended.

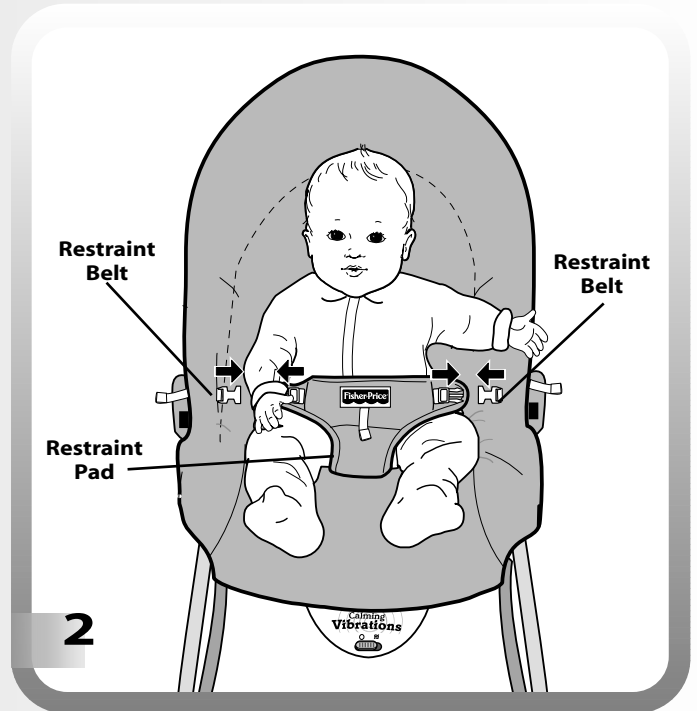

- Place your child in the seat. Position the restraint pad between your child's legs.
- Fasten the restraint belts to each side of the restraint pad. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

Securing your Infant

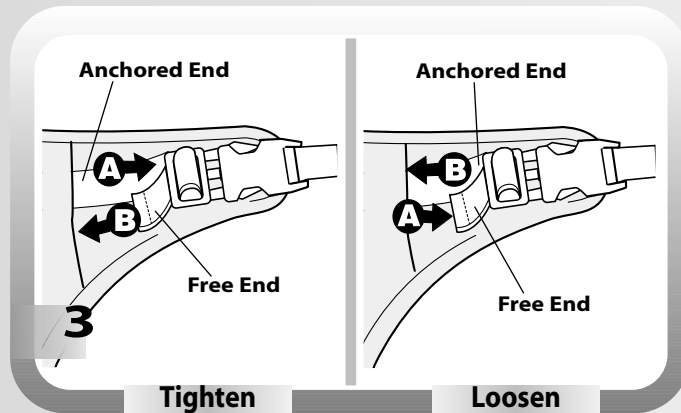


To tighten the belts:

- Feed the anchored end of the restraint belt up through the buckle to form a loop **A**.
- Pull the free end of the restraint belt **B**.
- Repeat this procedure to tighten the other restraint belt.

To loosen the belts:

- Feed the free end of the restraint belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the restraint belt to shorten the free end of the restraint belt **B**.
- Repeat this procedure to loosen the other restraint belt.


Toys

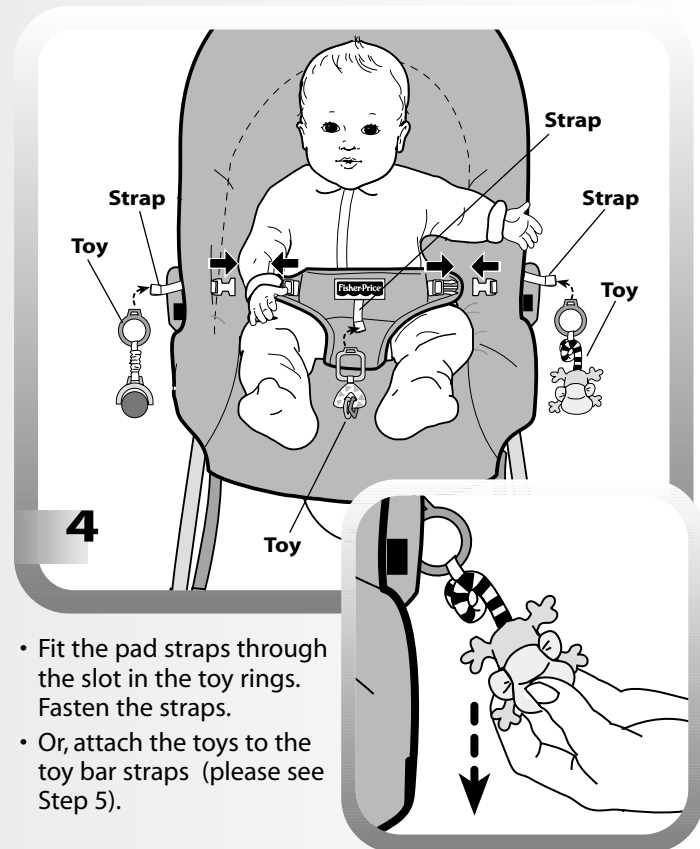


- Fit the pad straps through the slot in the toy rings. Fasten the straps.
- Or, attach the toys to the toy bar straps (please see Step 5).

Hint: Pull the monkey's head for a short tune.

Toy Bar

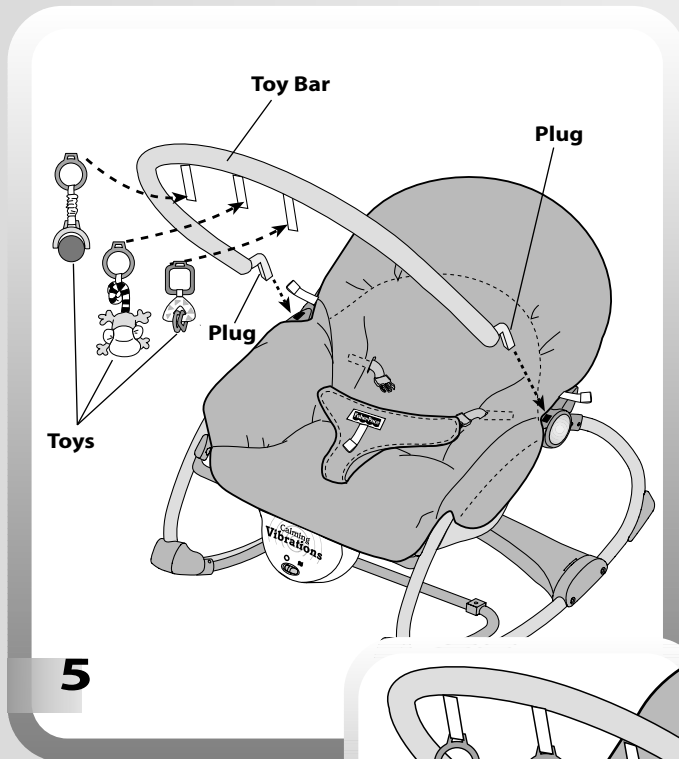


- Fit the plugs on each end of the toy bar into the sockets in each side rail.
- Fit the toy bar straps through the slot in the toy rings. Fasten the straps.
- Or, attach the toys to the pad straps (see Step 4).

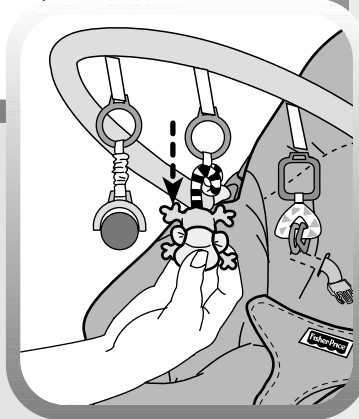


Hint: Pull the monkey's head for a short tune.

Calming Vibrations

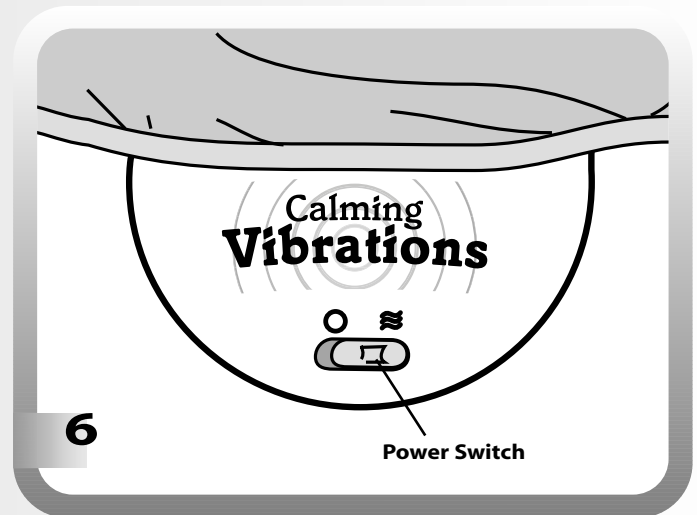


- Make sure your child is properly secured in the seat.
- Slide the power switch to the \approx on position for calming vibrations.
- Slide the power switch to the O off position to turn vibrations off.

Kickstand

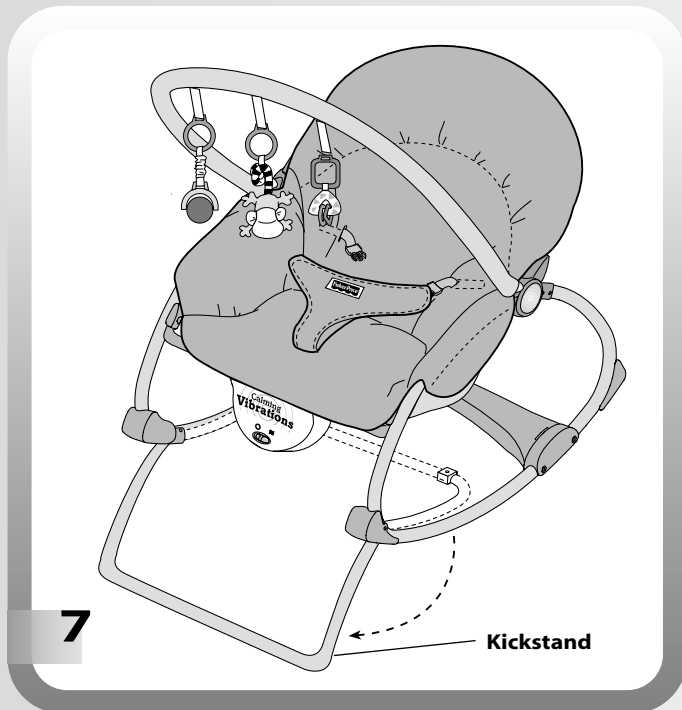


- Rotate the kickstand out.
- Push down on the seat bottom to be sure the kickstand is in position.

Storing the Restraint System for Toddler Use

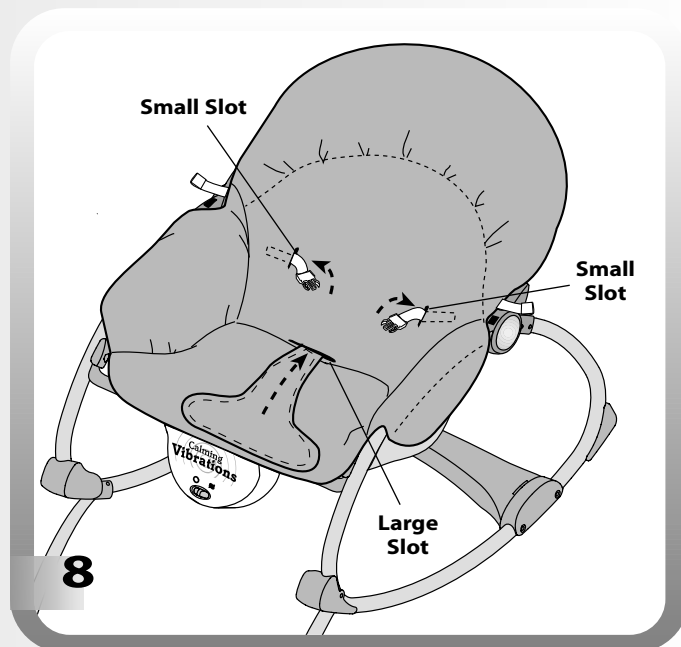

- Insert the restraint belts back through the small slots in the pad.
- Insert the restraint pad down through the large slot in the pad.

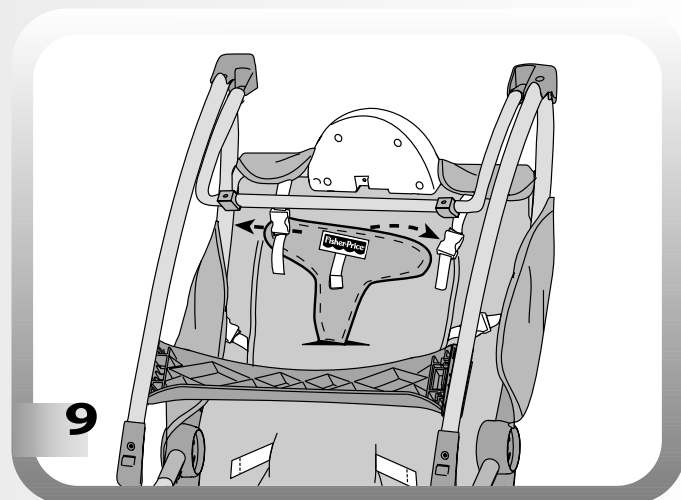

- Turn the rocker face down.
- Tuck the ends of the restraint pad underneath the buckles, as shown.

Care

- The pad is machine washable. Wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- The frame, toy bar and toys may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue.

To remove the pad:

- Unfasten the buckles around each side rail.
- Turn the seat face down on a flat surface. Unfasten the buckles on the pad.
- Turn the seat upright. Remove the hardboard from the slot in the front edge of the pad.
- Pull the front and back of the seat back area of the pad apart.
- Lift the pad off the seat.

To replace the pad, refer to Assembly steps 8 and 9.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>