

Fisher-Price®

**71970
Instructions**



Baby's Gym



Toddler's First Piano

www.fisher-price.com

Sparkling Symphony™ Gym

Download from www.Somanuals.com. All Manuals Search And Download.

WARNING


To prevent entanglement injury,
NEVER place gym or suspend
links in crib or playpen.

NEVER add strings, ties or other
products to the gym.

- Please keep this instruction sheet for future reference, as it contains important information
- Adult assembly is required.
- Requires three "C" batteries for operation (included).
- Tool required for battery installation: Phillips screwdriver (not included).



Battery Replacement

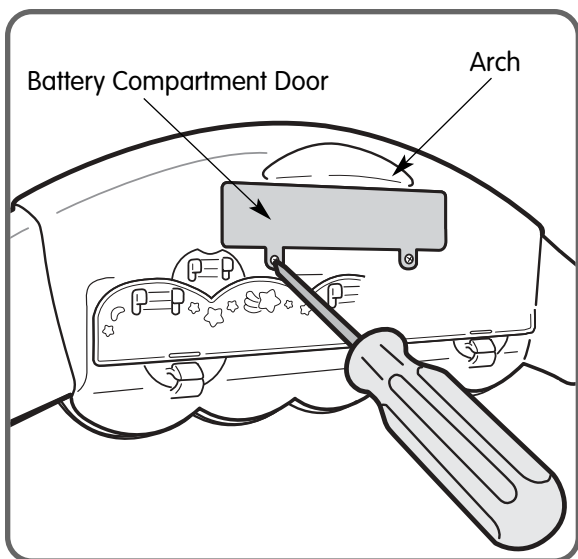

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.


- Locate the battery compartment on the arch.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert three, new "C" (LR14) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!



Battery Safety Information

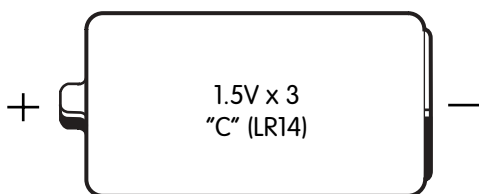


SHOWN ACTUAL SIZE

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.




Baby Gym

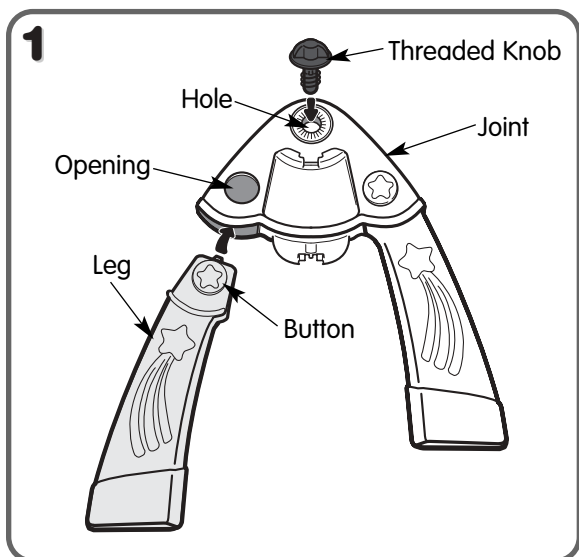


One-time Assembly

- Position one of the joints front side up.
- Position a threaded knob with the peg side down.
- Insert and snap the threaded knob into the upper hole in the joint.
- Insert a right and left leg (marked R or L on each leg) into the slots on the joint. Make sure the buttons on the legs fit into the circular openings in the joints.
- Repeat this procedure to attach the other threaded knob and two legs to the remaining joint.

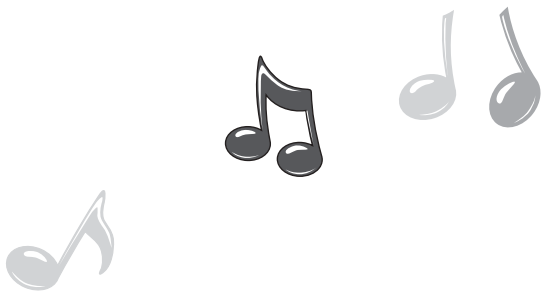


Baby Gym

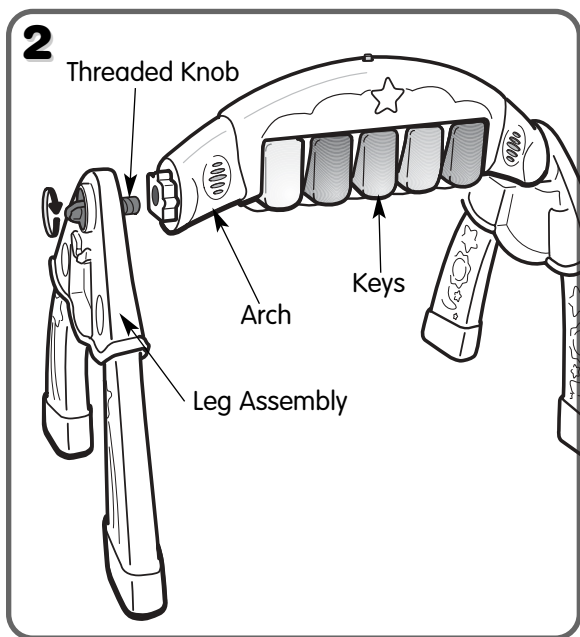

- Position the arch so that the keys are facing you.
- Fit one end of the arch to the threaded knob on a leg assembly.
- Turn the threaded knob clockwise to attach the leg assembly to the arch. **Make sure the knob is fully tightened.**
- Repeat this procedure to attach the other leg assembly to the arch.



Baby Gym

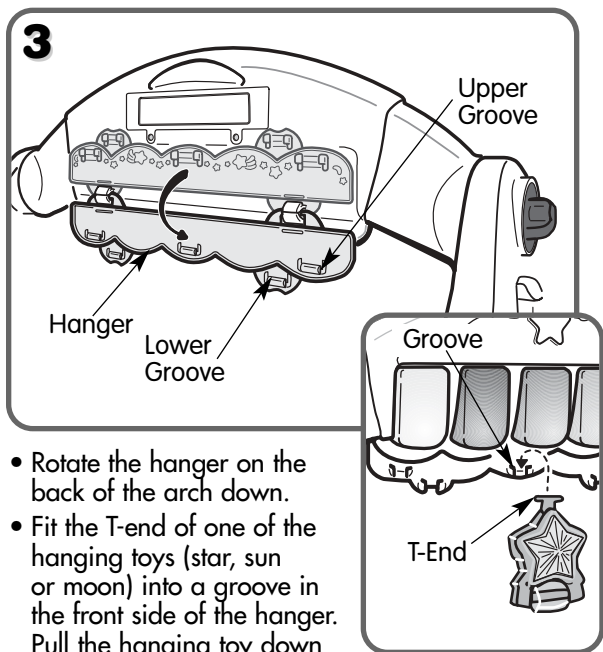


- Rotate the hanger on the back of the arch down.
- Fit the T-end of one of the hanging toys (star, sun or moon) into a groove in the front side of the hanger. Pull the hanging toy down to "snap" it into place.

Hint: The hanging toys can be attached to the hanger at two different levels! Select the appropriate groove so that your baby can reach and activate sounds and lights!

- Repeat this procedure to attach the other two hanging toys to the hanger.



Baby Gym

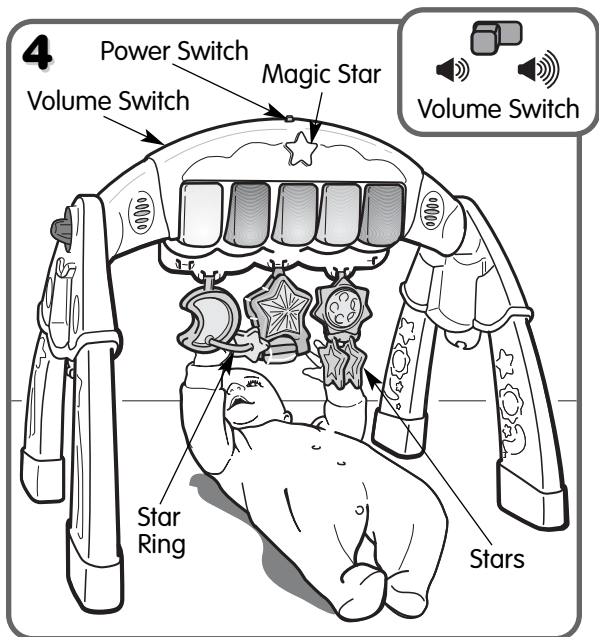


- Attach the stars to the bottom of the sun.
- Attach the star ring to the bottom of the moon.
- Slide the power switch to ●●. Baby will enjoy approximately 10 minutes of music and dancing lights when one of the toys is tapped.
- Adjust the volume to a comfortable listening level. Slide the switch to 🗣️ for low volume and 🗣️🗣️ for high volume.
- Slide the power switch to ●. Baby enjoys one song and twinkling lights when any one of the toys is tapped.
- Press the magic star to hear a *magical sound!*
- Slide the power switch to ○ to turn off sound and lights.

Note: To re-assemble this toy for use as a piano, simply turn the knobs on the leg assemblies counter-clockwise and remove the arch. Follow the instructions beginning on page 9, step 2.




Toddler Piano

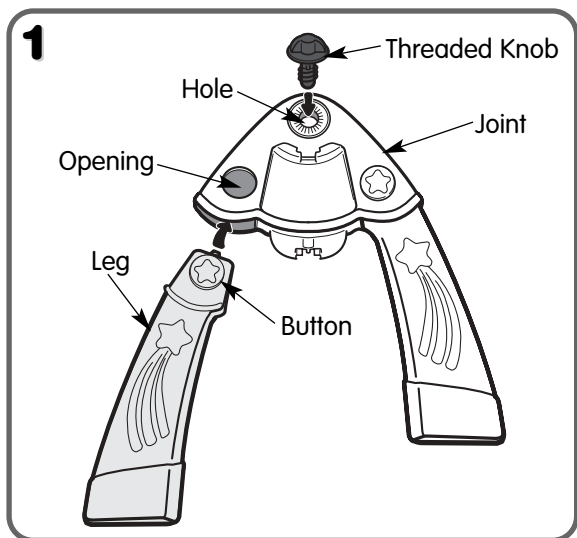


One-time Assembly

- Position one of the joints front side up.
- Position a threaded knob with the peg side down.
- Insert and snap the threaded knob into the upper hole in the joint.
- Insert a right and left leg (marked R or L on each leg) into the slots on the joint. Make sure the buttons on the legs fit into the circular openings in the joints.
- Repeat this procedure to attach the other threaded knob and two legs to the remaining joint.

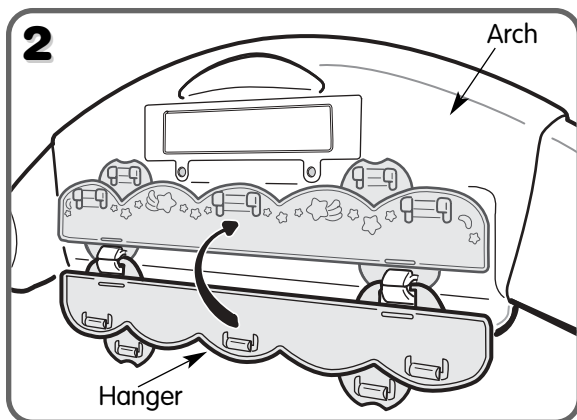

- Remove the hanging toys from the hanger.
- Rotate the hanger up and "snap" it to the arch.


Toddler Piano

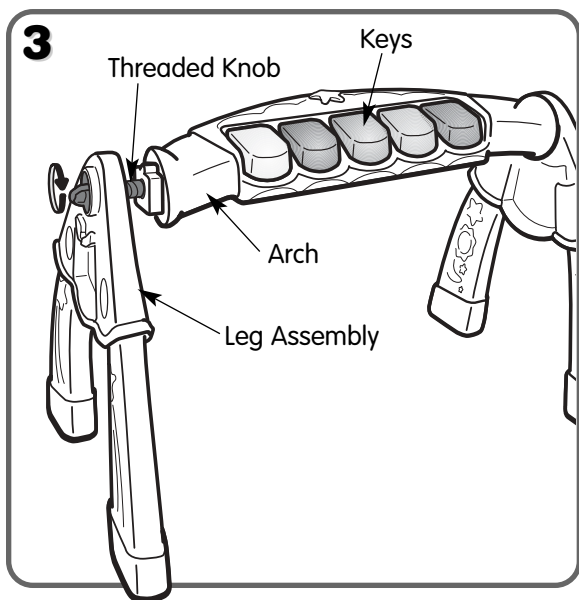


- Position the arch so that the keys are upright.
- Fit one end of the arch to the threaded knob on a leg assembly.
- Turn the threaded knob clockwise to attach the leg assembly to the arch. **Make sure the knob is fully tightened.**
- Repeat this procedure to attach the other leg assembly to the arch.



Toddler Piano

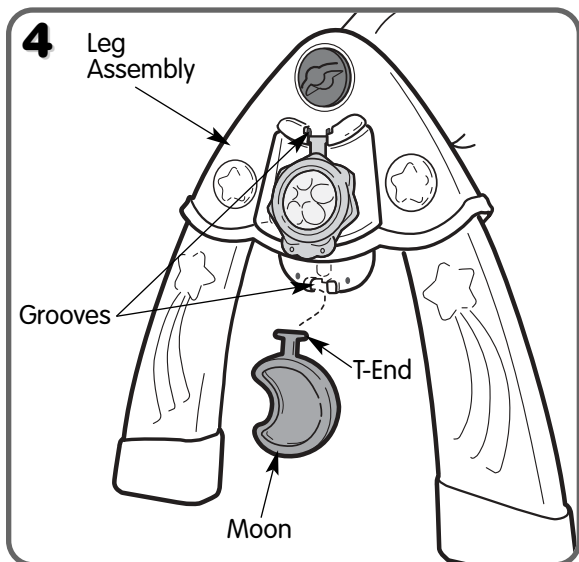


- Fit the T-end of a hanging toy into either groove in either leg assembly.
- Pull the hanging toy down to "snap" it into place.

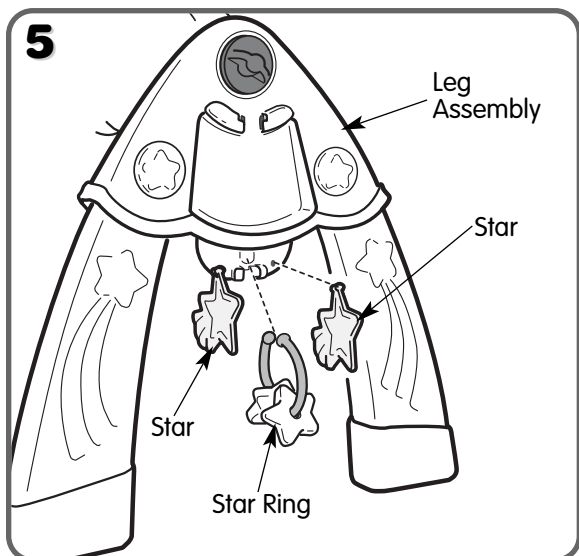

- Attach the stars to the leg assembly as shown.
- Attach the star ring to either leg assembly.

Toddler Piano

6

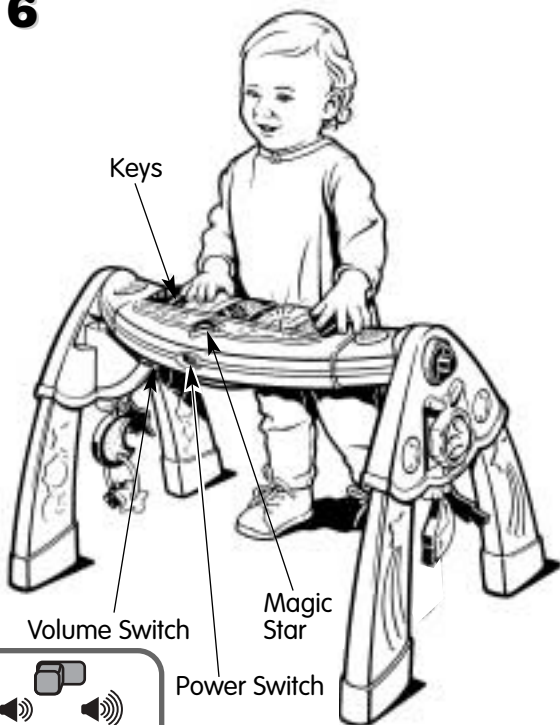

- Slide the power switch to ●●. Press any of the keys to hear a part of a song and see a twinkling light. After the music stops, press another key to hear the next part of the song and see more lights.
- Adjust the volume to a comfortable listening level. Slide the switch to 🗣️ for low volume and 🗣️🗣️ for high volume.
- Slide the power switch to ●. Press any key to hear a musical note and see a twinkling light.
- Press the magic star to hear a *magical sound!*
- Slide the power switch to ○ to turn off sound and lights.

Note: To re-assemble this toy for use as a gym, simply turn the knobs on the leg assemblies counter-clockwise and remove the arch. Follow the instructions beginning on page 6, step 2.



Care

- Wipe all parts of this toy with a clean cloth dampened with a mild soap and water solution. Never immerse this toy.
- Keep this toy away from direct sunlight and other sources of heat.
- This toy has no consumer serviceable parts. Do not take this toy apart.



Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS (5437)**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For countries outside the United States:

CANADA: Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.





Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>