

Fisher-Price®

# Classical Chorus™ Mobile

*with remote control*



**Product Number: 74120**

Please keep this instruction sheet for future reference,  
as it contains important information.


Adult assembly is required.

Requires four "C" (LR14) **alkaline** batteries for the mobile and two "AA" (LR6)  
**alkaline** batteries for the remote control. (Batteries not included)

Tool required for battery installation:  
Phillips screwdriver (not included).

Discover what's possible™...[www.fisher-price.com](http://www.fisher-price.com)

# Parts




## IMPORTANT!

### CAUTION


- Possible entanglement injury, keep out of baby's reach.
- Remove mobile from crib or playpen when baby begins to push up on hands and knees.

- A crib mobile is intended for visual stimulation and not to be grasped by a child.
- Always attach by provided fastener (clamp) tightly to a crib or playpen according to the instructions. Check frequently.
- Do not add additional strings or straps to attach to a crib or playpen.

# Mobile Features




# Remote Control Features



- 1 Button** - Press to restart or pause the mobile once the mobile has been turned on.
- 2 LED Signal Indicator** - Lights when the button is pressed to let you know the remote control has transmitted a signal to the mobile.
- 3 Transmitter Window** - Remote control transmits a signal to the receiver dome on the mobile.
- 4 Handle** - Flips up so you can hang the remote control on a doorknob. It snaps around the bottom of the remote control when not in use.

# Battery Installation




## Mobile

- Locate the battery compartment door on the mobile's lower arm.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert four "C" (LR14) **alkaline** batteries, as indicated inside the battery compartment.

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

**IMPORTANT!** Under normal use conditions, the batteries in the mobile will require replacement more often than the batteries in the remote control. When sounds or light become faint, it's time for an adult to replace the batteries in the mobile lower arm.



## Remote Control


- Locate the battery compartment door on the back of the remote control.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

**IMPORTANT!** If the mobile does not respond to the remote control, it does not mean that the battery power in the remote control is low. Replace the batteries in the remote control if the LED signal indicator on the remote control is dim when the button is pressed. If the LED signal indicator does not light after installing new batteries in the remote control, check the orientation of the batteries in the battery compartment to make sure they are properly installed.

# Battery Tips




- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

# Assembly

1

Upper Arm Post


Lower Arm Hole



- Fit the post on the upper arm into the hole in the lower arm as shown.

2


Star Retainer




#6 x 1/2" Screw  
Shown Actual Size

- Insert the star retainer into the hole in the lower arm on the side opposite the battery compartment as shown.
- Insert the #6 x 1/2" screw into the hole on the other side of the lower arm as shown. Tighten the screw with a Phillips screwdriver. Do not over-tighten.

# Assembly



- Note the spiral has a wide clamp on one end and a narrow clamp on the other end.
- **“Snap”** the wide clamp of the spiral onto the post above the star on the upper arm as shown.
- **“Snap”** the narrow clamp of the spiral onto the post below the star on the upper arm as shown.








- Fit the mobile against the crib top rail so that the threaded peg extends out of the crib.
- Fit the clamp onto the threaded peg and turn the clamp clockwise to secure the mobile to the crib. Do not over-tighten the clamp.




# Use

## Power/Volume Switch




- Locate the power/volume switch on mobile.
- The switch has three positions: off ; on with low volume  and on with high volume .
- Slide the power/volume switch to the off position  when not in use.

## Light Select Button




- Locate the light select button on the mobile.
- Press the button to choose four different light modes:
  - 1 Twinkling lights around baby's room
  - 2 Glowing star light gently fading in and out
  - 3 Both lights
  - 4 No lights (music only)
- Each time you press the light select button the mobile will switch to the next of the four modes until it returns back again to the first.

## Song Select Button



- Locate the song select button on the mobile.
- Press the button to choose from seven different tunes or no music (lights only).
- Each time you press the song select button the mobile will switch to the next of the selections until it returns back again to the first.


## Start Button



- Locate the start button on the mobile.
- Press the start button to activate the mobile.
- The mobile will play for about six minutes.
- To restart or pause the mobile, press the button on the remote control or the start button on the mobile.

### Notes:

- The remote control will activate the mobile from one foot to as far as 20 feet away.
- After approximately two hours without activation, the receiver shuts down. Press the start button on the mobile to restart the mobile and reactivate the remote.




Remote Control

# Use

## IMPORTANT!

- In the unlikely event that use of the remote interferes with normal use of other remote controlled equipment, such as televisions and stereos, or use of other electric or battery powered appliances interfere with operation of the mobile, do not use both appliances at the same time.
- For best performance between the mobile and the remote, avoid using the remote in areas of bright light.

In bright natural or artificial light, you may notice loss of range. Move the mobile or otherwise reduce the amount of light to improve performance.



- When using the remote, make sure that the arrow on the mobile's dome is pointing towards the transmitter window on the remote. **For best results, the path between the transmitter window on the remote and the dome on the mobile are in a direct line and free of obstacles. Rotate the mobile dome so that the arrow points to the area from which you're most likely to use the remote.** For example, if you'll most often be using the remote from the doorway of the nursery, make sure that the arrow on the mobile dome is pointing towards the doorway and that the path between the mobile dome and the doorway is free from obstructions.

# Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

# Consumer Information

## Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

For other countries, outside the United States:

**Canada:** call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>