



# Gym



**Product Number: B0846**

Please keep this instruction sheet for future reference, as it contains important information.


Requires three "C" batteries (included).

Adult assembly is required.

Tool required for battery replacement: Phillips screwdriver (not included).


**Fisher-Price**

Discover what's possible™...[www.fisher-price.com](http://www.fisher-price.com)

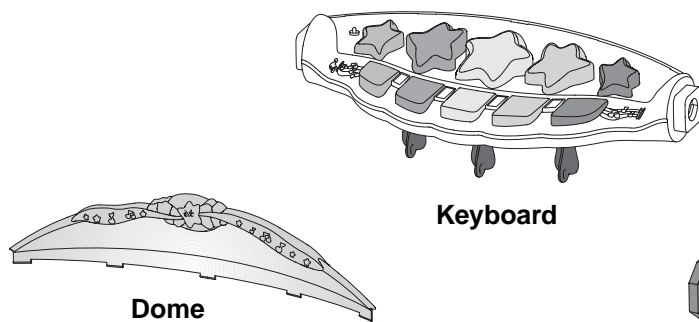


Keyboard


Dome

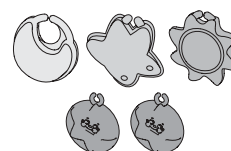

5 Toys

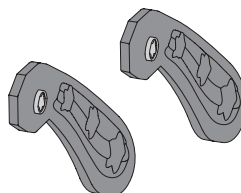

2 Supports

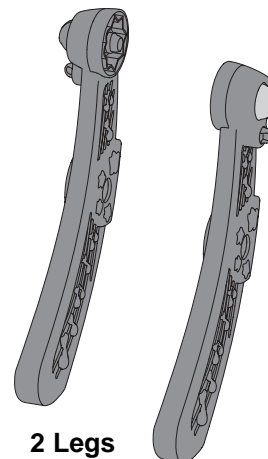

2 Legs

### ⚠ WARNING

To prevent possible entanglement injury, NEVER place gym or suspend links in a crib or playpen. NEVER add strings, ties or other products to this gym.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:

**Canada:** call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd.,

Mississauga, Ontario L5R 3W2. **Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,

Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.


Fisher-Price, Inc. is a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

2002 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- Do not drop this toy on a hard surface.

## One-Time Assembly

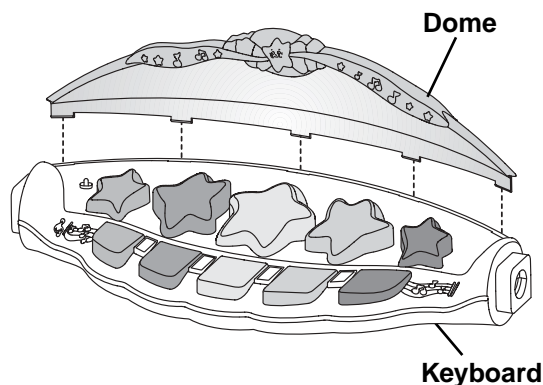


Dome

Keyboard


- Fit the tabs into the slots in the keyboard, as shown.
  - Press to “**snap**” the dome onto the keyboard.
- Hint:** This may require a lot of force.
- Pull up on the dome to be sure it is secure.

## Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "C" (LR14) batteries.

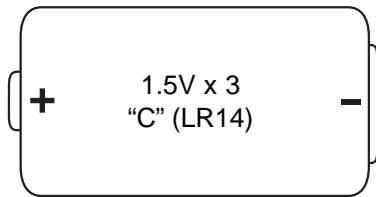

Shown Actual Size

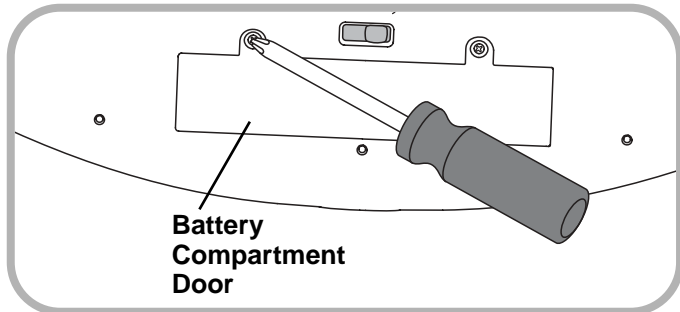

- Locate the battery compartment door on the bottom of the keyboard.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "C" (LR14) **alkaline** batteries, as indicated inside the battery compartment.

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop, it's time for an adult to replace the batteries!

## Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.


## FCC Note (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.


# Stage 1 - Lay & Play Gym

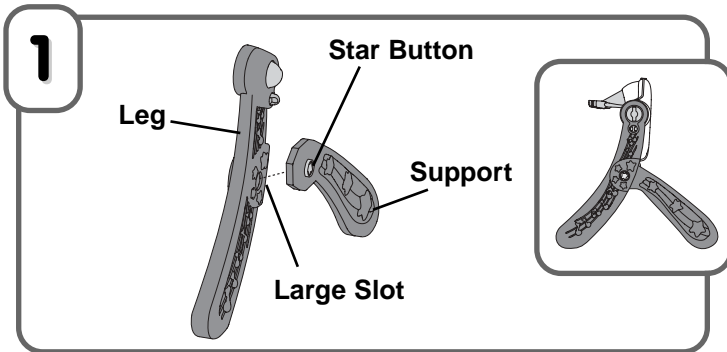


- While pressing the star buttons on a support, fit the end of the support into the large slot in one of the legs, as shown. Push the support until it “snaps” into place.
- Repeat this procedure to attach the other support to the remaining leg.

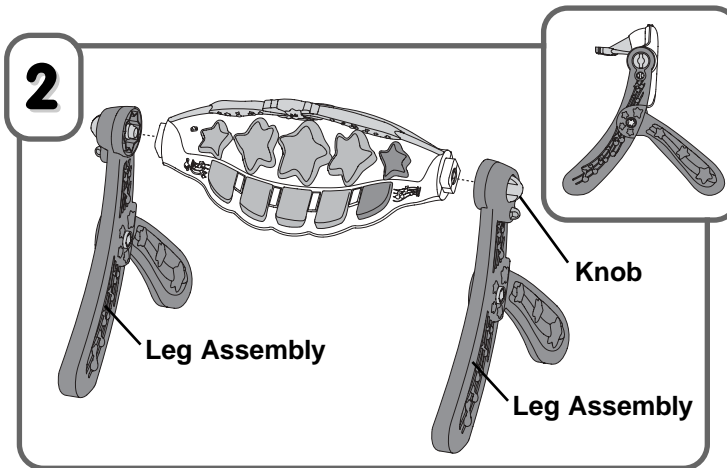



- Position the keyboard so it faces you.
- Fit a leg assembly to the side of the keyboard, as shown.
- Turn the knob clockwise to secure the leg assembly to the keyboard. Make sure the knob is fully tightened.
- Repeat this procedure to attach the other leg assembly to the keyboard.

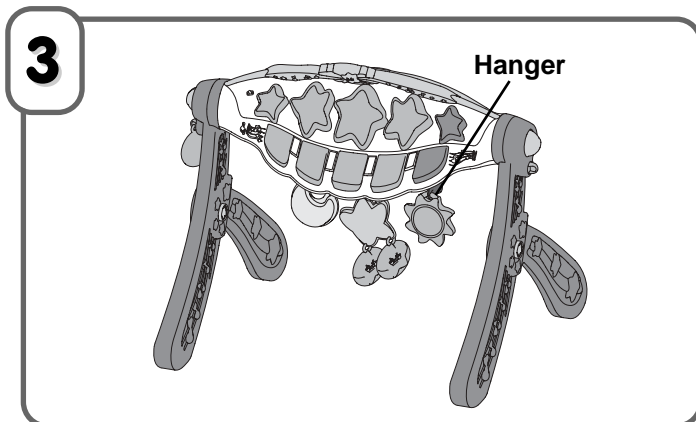

- Grasp each hanger under the keyboard and pull it down so it swings freely.
- Attach the toys to the hangers as shown.

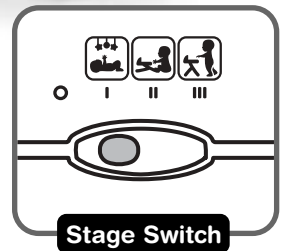

- Slide the stage switch to for use with babies lying down.
- Hint: If your child is not actively playing with this toy, it turns off automatically (sleep mode).*
- Be sure to slide the stage switch to the off position when not in use.

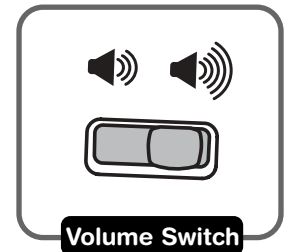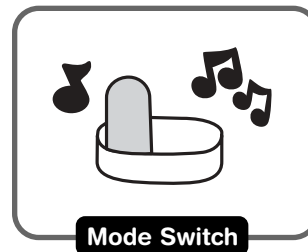

- Slide the mode switch to for shorter play. When baby bats the toys, a single song plays with “singing” light-up stars.
- Slide the mode switch to for longer play. When baby bats the toys, the music plays for about 10 minutes with “singing” light-up stars.
- Locate the volume switch on the bottom of the keyboard. Adjust volume to high ; or low , for your child’s comfort.


## Stage 2 - Sit & Play

### 1 To change from Stage 1 to Stage 2

- Turn the threaded knobs counter-clockwise and detach the leg assemblies from the keyboard.
- Press the star buttons and remove the two supports from the legs. Now proceed to step 2.


If you have not used this toy before and are assembling it for first time use in Stage 2, start with Step 2.

### 2

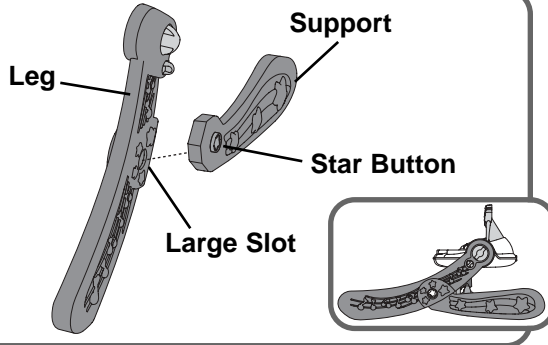


- While pressing the star buttons on a support, fit the end of the support into the large slot in one of the legs, as shown. The support should “snap” in place.
- Repeat this procedure to attach the other support to the remaining leg.

### 3

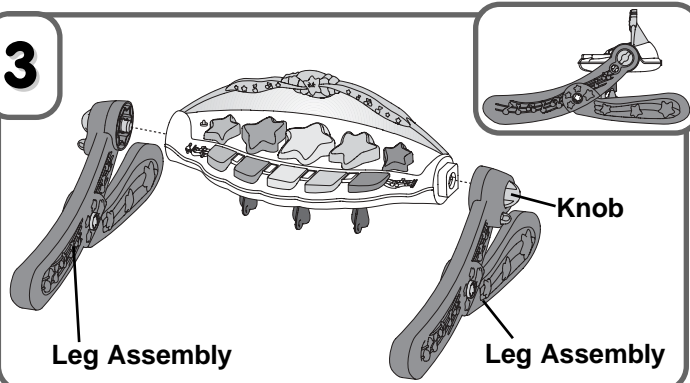


- Position the keyboard so it faces up.
- Fit a leg assembly to the side of the keyboard, as shown.
- Turn the knob clockwise to secure the leg assembly to the keyboard. Make sure the knob is fully tightened.
- Repeat this procedure to attach the other leg assembly to the keyboard.

### 4

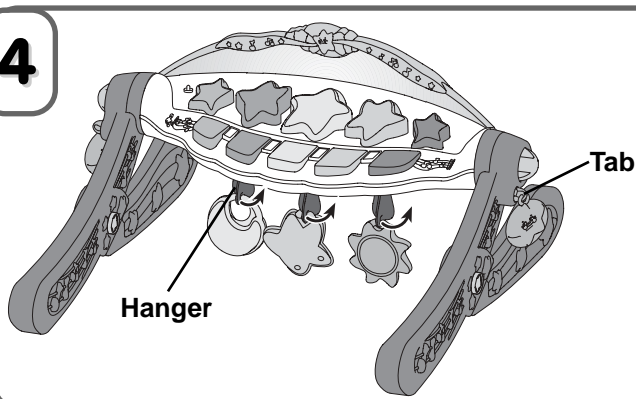

- Rotate the hangers up and “snap” them into place.
- Attach the toys to the hangers and tabs as shown.



### 5

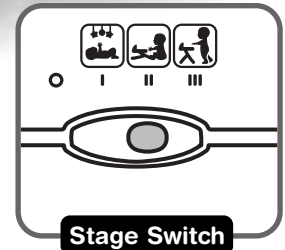

- Slide the stage switch to for use with babies sitting up.

**Hint:** If your child is not actively playing with this toy, it turns off automatically (sleep mode).

- Be sure to slide the stage switch to the off position when not in use.

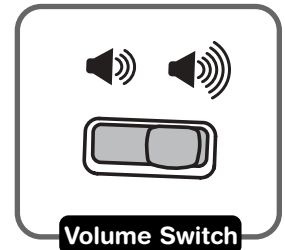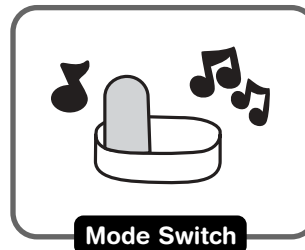

- Slide the mode switch to . When baby presses a key, part of a song plays with twinkling lights. With each press of a key, the song continues building, a little at a time.
- Slide the mode switch to . When baby presses a key, musical scales or chords play as twinkling lights follow along.
- Locate the volume switch on the bottom of the keyboard. Adjust volume to high ; or low , for your child's comfort.



# Stage 3 - Stand & Play Piano


1

## To change from Stage 2 to Stage 3

- Turn the threaded knobs counter-clockwise and detach the leg assemblies from the keyboard.
- Press the star buttons and remove the two supports from the legs. Now proceed to step 2.


If you have not used this toy before and are assembling it for first time use in Stage 3, start with Step 2.

2

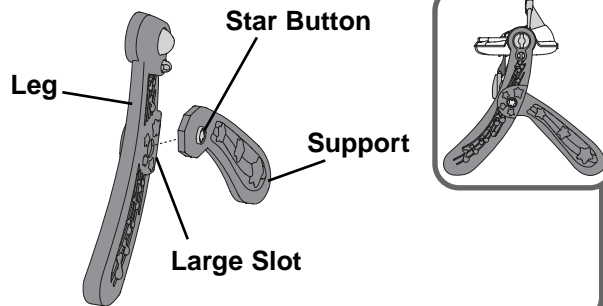


- While pressing the star buttons on a support, fit the end of the support into the large slot in one of the legs, as shown. Push the support until it “snaps” into place.
- Repeat this procedure to attach the other support to the remaining leg.

3

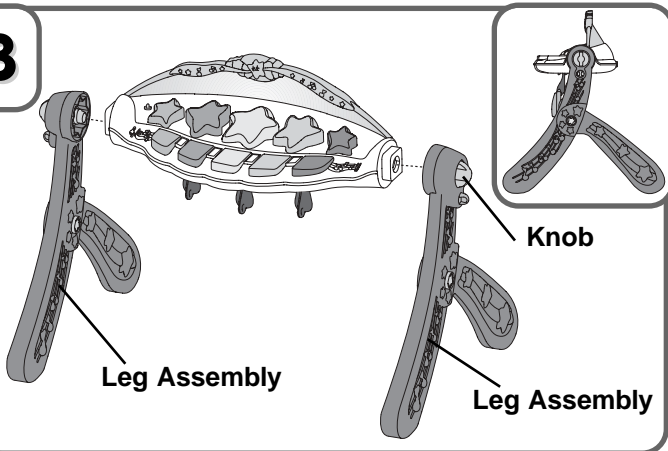


- Position the keyboard so it faces up.
- Fit a leg assembly to the side of the keyboard, as shown.
- Turn the knob clockwise to secure the leg assembly to the keyboard. Make sure the knob is fully tightened.
- Repeat this procedure to attach the other leg assembly to the keyboard.

4


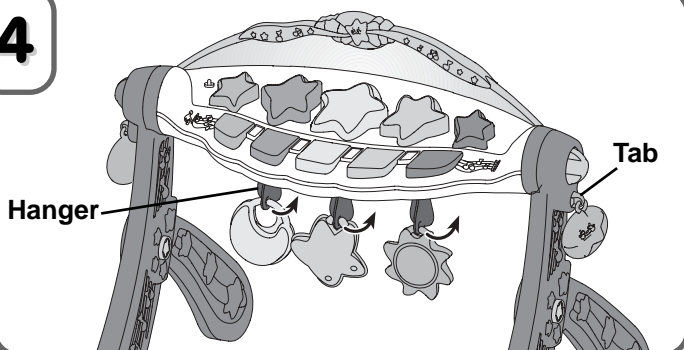


- Rotate the hangers up and “snap” them into place.
- Attach the toys to the hangers and tabs as shown.

6

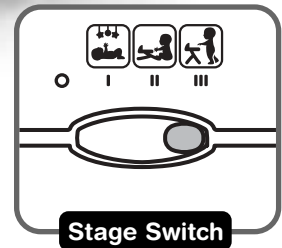

- Slide the stage switch to for use with standing toddlers. **Hint:** If your child is not actively playing with this toy, it turns off automatically (sleep mode).
- Be sure to slide the stage switch to the off position when not in use.

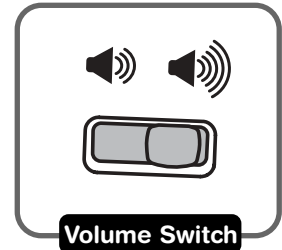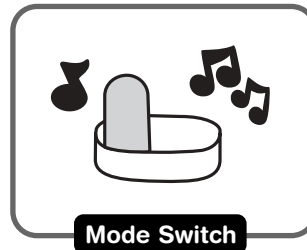

- Slide the mode switch to . Press the keys to play note by note like a real piano, as stars light up.
- Slide the mode switch to . Press the keys to hear notes that sound like they're sung by a children's chorus.
- Locate the volume switch on the bottom of the keyboard. Adjust volume to high ; or low , for your child's comfort.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>