

**Fisher-Price®**

**C0535  
Instructions**

# Musical Play Garden™



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three “AA” batteries for operation (included).

 
Adult assembly is required.

Tool required for battery replacement: Phillips screwdriver (not included).


**Link-a-doo**

**[www.fisher-price.com](http://www.fisher-price.com)**


# Parts

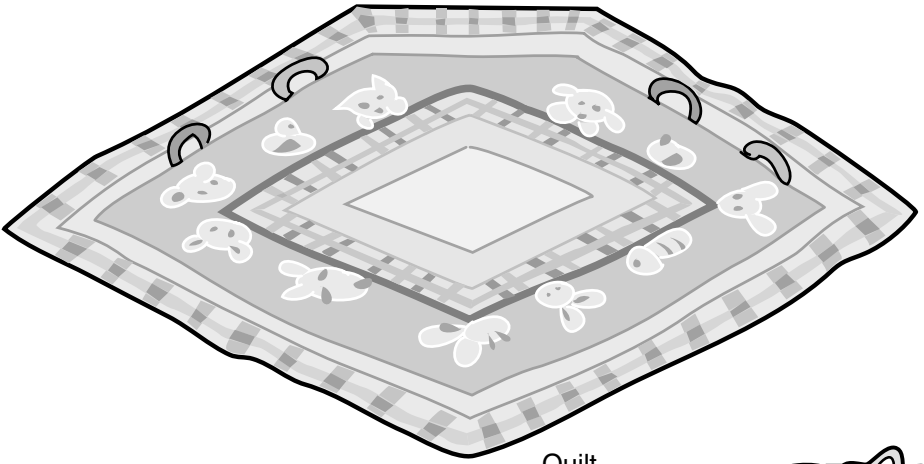


Quilt

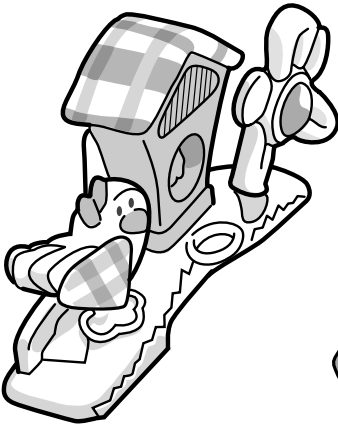 


Birdhouse  
Assembly

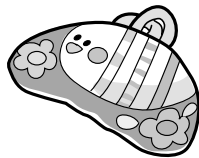 

Support  
Pillow

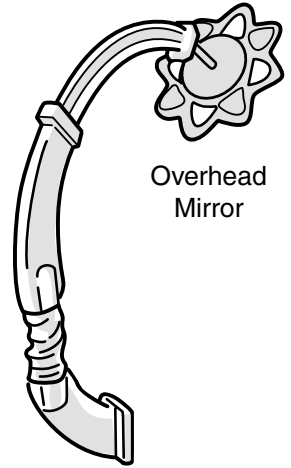 

Overhead  
Mirror

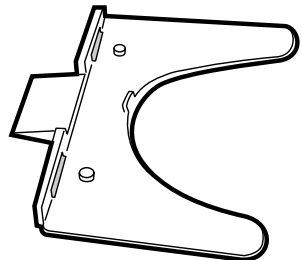 


Base

**Parts Not Shown:**  
4 Soft Toy Links

# Battery Replacement

 
*For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.*

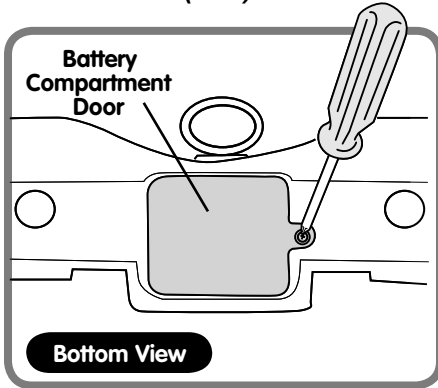

- Locate the battery compartment door on the bottom of the bird-house assembly.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the exhausted batteries and throw them away.
- Insert three "AA" (LR6) **alkaline** batteries.

**Hint:** We recommend using **alkaline** batteries for longer life.

 - Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!

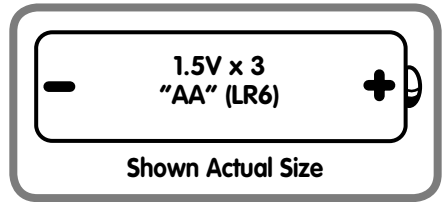

## Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Consumer Information

## Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, visit us on line at [www.service.mattel.com](http://www.service.mattel.com).

Write to us at:

Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052.

## FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### For countries outside the United States:

#### CANADA

Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

#### GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

#### AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

#### NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

 
#### ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.  
©2005 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.


# Assembly

1

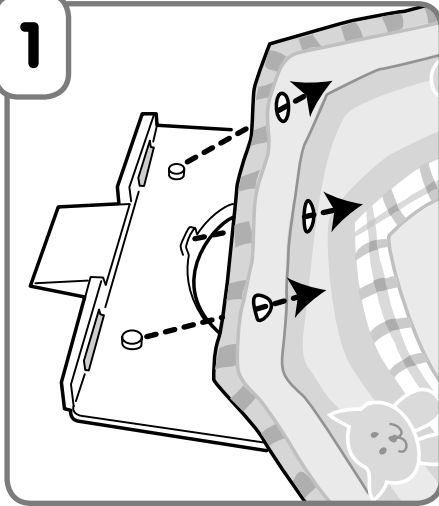


- Place the base on a smooth flat surface.
- Position the quilt above the base with the loops facing up.
- Fit the three holes in the quilt over the two buttons and tab on the base.

 2

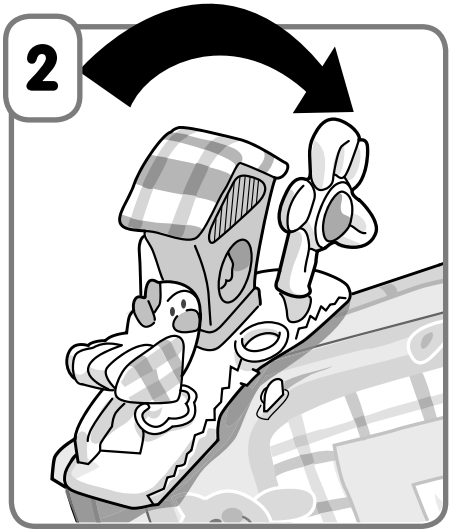


- Fit the two tabs on the back of the birdhouse assembly into the slots in the base. Press down on the front of the birdhouse to "snap" it into the base.

  3

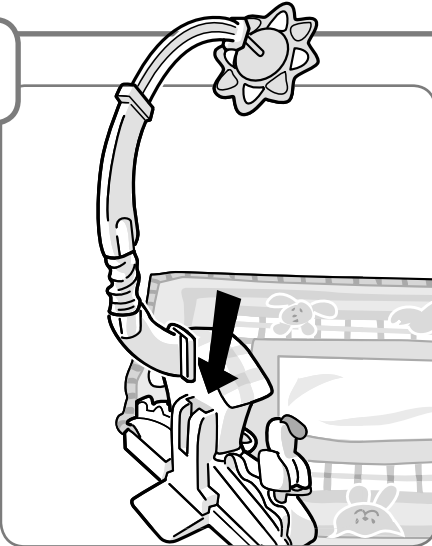


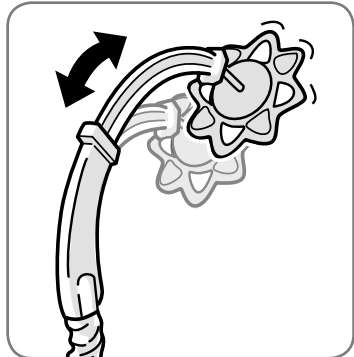


- Slide the overhead mirror into the groove in the back of the birdhouse as shown.



 - Slide the mirror in and out to adjust for sitting or lying babies.
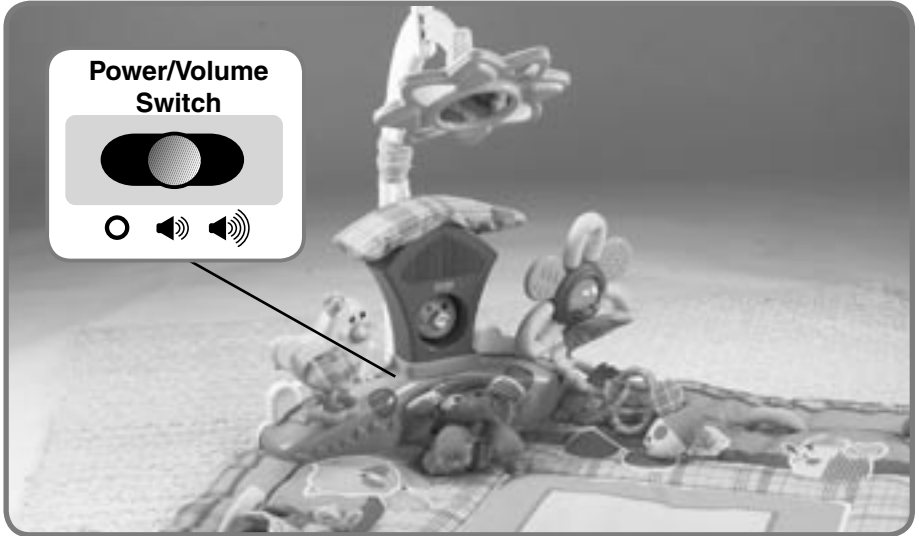
# Fun Sounds, Lights and Links!

 

- Attach the soft toys and links to the loops on the quilt, the pillow and the birdhouse.
- The support pillow can be used to help hold up babies lying on their tummies.
- Locate the power/volume switch on birdhouse.
- Slide the switch to the desired position: off ; on with low volume  or on with high volume .
- Tap the loop on the front of the birdhouse for fun tunes and lights.
- When your child is finished playing with this toy, slide the power/volume switch to the off position.

**Hint:** If your child is not actively playing with this toy, it turns off automatically (sleep mode).

## Care

### Soft Toy Links

- Slide to remove the toys from the links.
- Place the toys in a pillowcase and wash them in cold water on a gentle cycle. Do not use bleach. Line dry the soft toys.
- Slide the soft toys back onto the links.

### Quilt and Support Pillow

- Remove the birdhouse, base, links and overhead mirror.
- Wash the quilt and support pillow in cold water on a gentle cycle. Do not use bleach. Line dry the quilt and support pillow.

### Birdhouse and Overhead Mirror

- Wipe the surface with a clean cloth dampened with a mild soap and water solution.
- Do not immerse birdhouse or overhead mirror.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>