

Christmas Train Set



Please keep this instruction sheet for future reference,
as it contains important information.


Requires three "AA" (LR6) **alkaline** batteries (not included).

Adult assembly is required.

Tool required for battery installation:
Phillips screwdriver (not included).




Parts

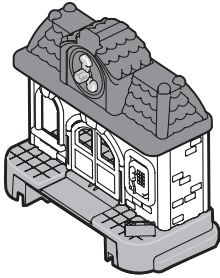


Train Station




Train Engine

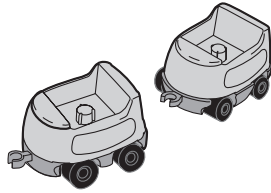


2 Train Cars

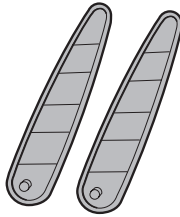


2 Toll Gates

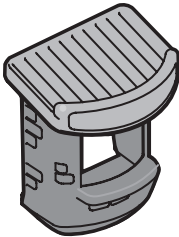


Toll Booth

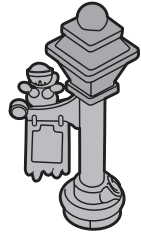


Street Lamp

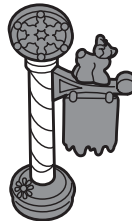

North Pole

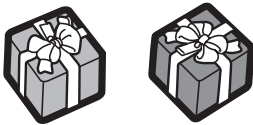


2 Presents

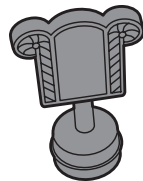


Sign


Parts

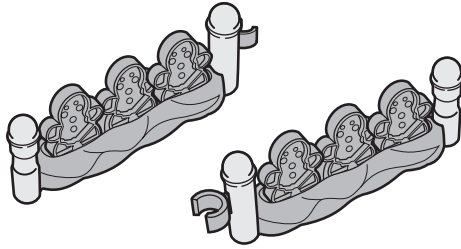

2 Fences

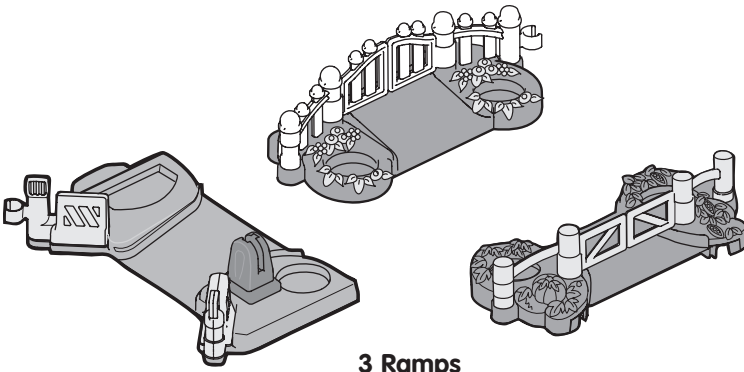

3 Ramps

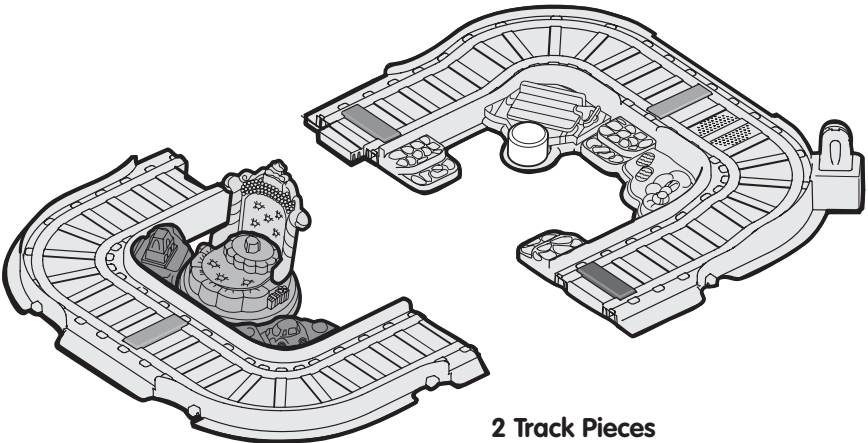


2 Track Pieces

Parts Not Shown:
4 Figures
3 Letters to Santa

Assembly

1

Santa's Chair

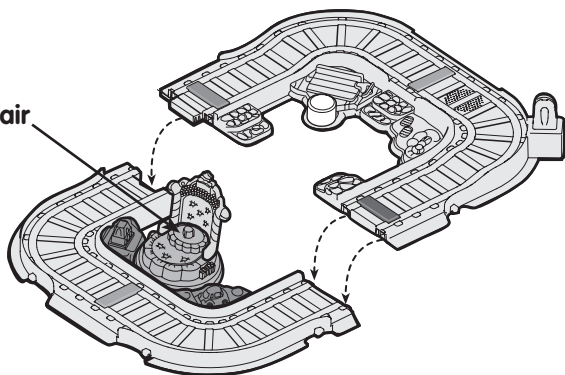


- Place the track piece with Santa's chair on a hard, flat surface.
- **"Snap"** the other track piece onto the track with Santa's chair, as shown.

2

Train Station



Santa's Chair

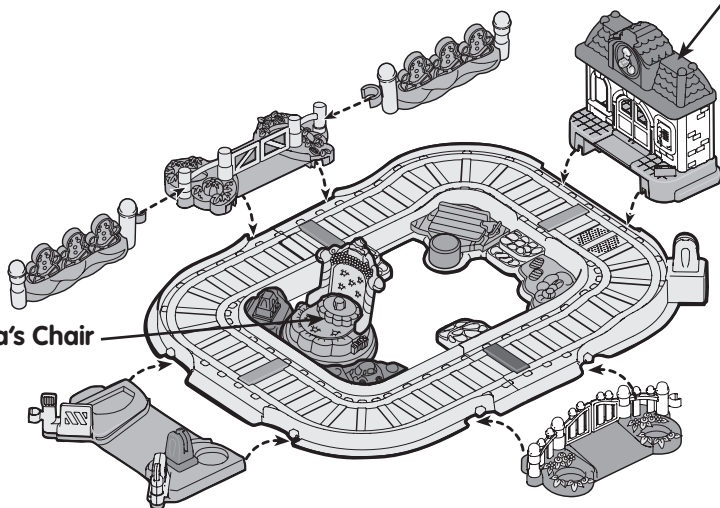

- **"Snap"** the train station to the track opposite Santa's chair.
- **"Snap"** the three ramps around the track, as shown.
- **"Snap"** the fences to one of the ramps.


Assembly

3

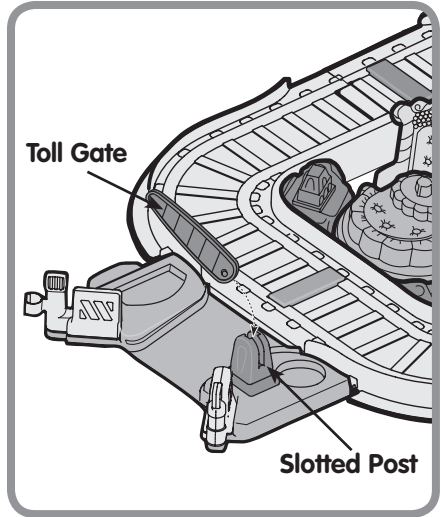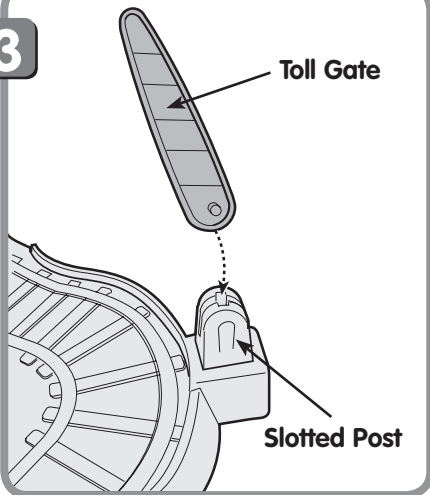


- Locate the slotted post on the track near the train station.
- Press the tabs on the end of a toll gate into the slot until it **"snaps"** in place.
- Repeat the procedure to attach the other toll gate to the slotted post on the ramp at the opposite end of the track.

4

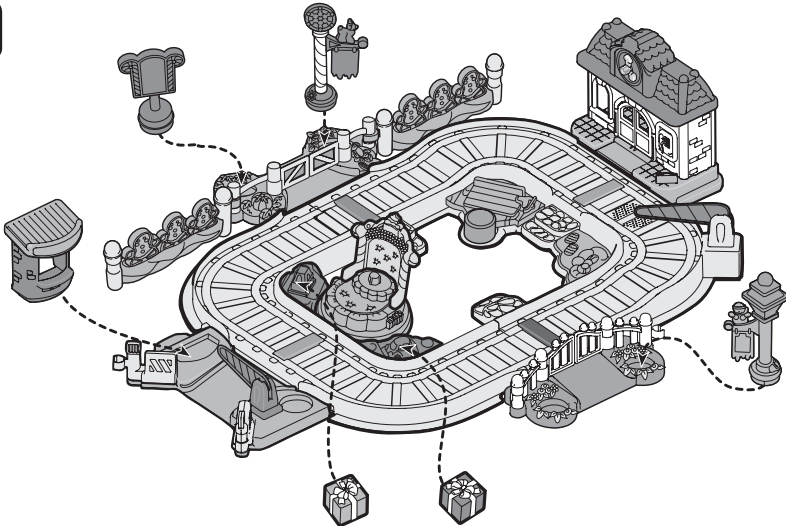


- Place the accessories around the track, as shown.

Battery Installation

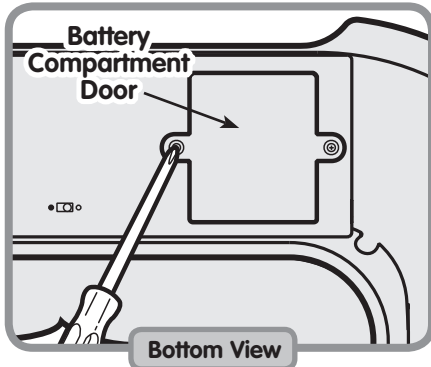

- Locate the battery compartment door on the bottom of the the track.
 - Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
 - Insert three "AA" (LR6) **alkaline** batteries.
- Hint:** We recommend using **alkaline** batteries for longer life.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
 - When sounds or motions become faint or stop, it's time for an adult to change the batteries!


Battery Safety Information

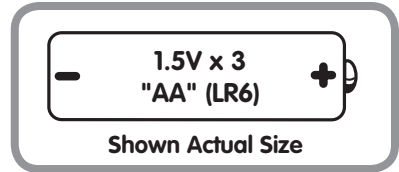

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Fun Sounds Around the Track!

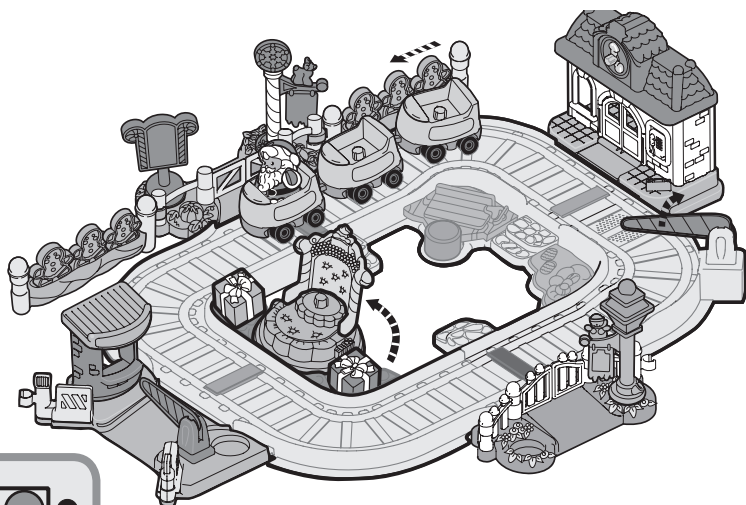

Power Switch

- Locate the power switch on the bottom of the track.
- Slide the switch to the ● position to turn the toy on.
- Push the train along the track to hear fun sounds as it travels around the town.
- Spin the Santa's chair to hear a Christmas song.
- Slide the switch to off ○ position when you are finished playing with the toy.

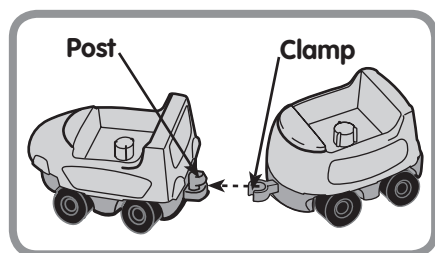

- Push the clamp on one train car onto the post of another train car to connect them.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Visit us on line at www.service.fisher-price.com.

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN: [Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB](http://MattelUKLtd.VanwallBusinessPark.MaidenheadSL64UB). Helpline: 01628 500303; www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>