

**Fisher-Price®**

**J6982**



[www.fisher-price.co.uk](http://www.fisher-price.co.uk)

## Consumer Information

### WARNING

To prevent serious injury or death from falls and being strangled in the restraint system:

- **Fall Hazard** - It is dangerous to use this product on an elevated surface, since child's movement may cause the product to slide or tip over. Use only on a floor.
- **Suffocation Hazard** - Never use on a soft surface (bed, sofa, cushion) since the product can tip over and cause suffocation in soft surfaces.
- Always use the restraint system.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/20 lbs).
- Never leave child unattended.
- Never use the toy bar as a handle.

### CAUTION

This package contains small parts in its unassembled state. Adult assembly is required.

**IMPORTANT!** Please keep these instructions for future reference, as they contain important information.

- Please read these instructions before assembly and use of this product.
- Use from birth until child becomes active and can climb out of the seat.
- Maximum weight: 9 kg.
- Adult assembly is required.
- Tool needed for assembly: Phillips screwdriver (not included).
- Requires four "D" (LR20) **alkaline** batteries (not included) for operation.

**Great Britain:** Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.  
Helpline: 01628 500303; [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre,  
Harbour City, Tsimshatsui, HK, China.

**Malaysia:** Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P)  
Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country  
Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.


©2006 Mattel, Inc. All Rights Reserved.  
® and ™ designate U.S. trademarks of Mattel, Inc.  
Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.

## Parts


**IMPORTANT!** Please remove all parts from the package and identify them before assembly. Some parts may be packed in the pad.




Headrest Pad

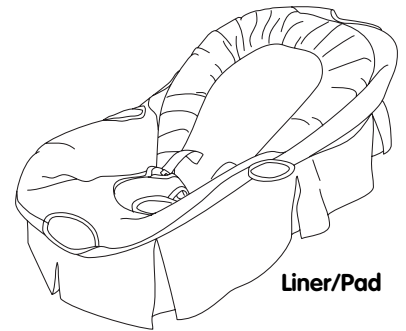


Liner/Pad

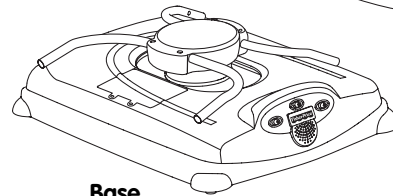


Base

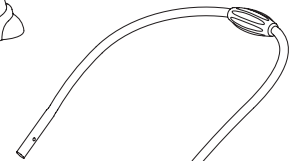


Seatback Tube

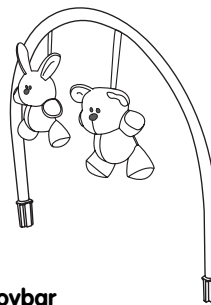

Toybar  
(Toys may be different)

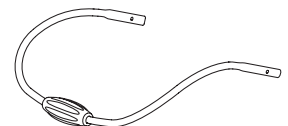

Footrest Tube

 

2 Hubs

Tighten and loosen all screws with a Phillips screwdriver.  
Do not over-tighten the screws.





#8 x 3,2 cm Screw - 2


Fastener Shown Actual Size

## Battery Installation

**Hint:** We recommend using **alkaline** batteries for longer battery life.

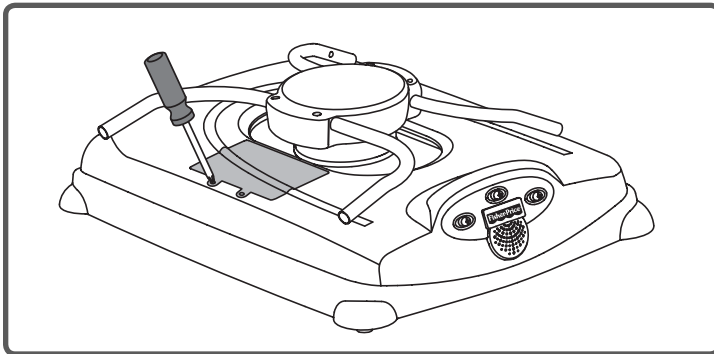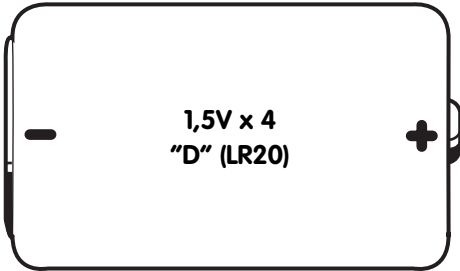

- Loosen the screws in the battery compartment door and remove the battery compartment door.
- Insert four "D" (LR20) **alkaline** batteries into the battery compartment.
- Replace the battery compartment door and tighten the screws.
- Low battery power may cause this product to operate erratically (no movement/no sounds) and the product may not turn off. If this should happen, remove and discard all batteries and replace with four, new "D" (LR20) **alkaline** batteries.

 Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

### Battery Safety Information


**In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.**

**To avoid battery leakage:**


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

## Assembly

**IMPORTANT!** Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **DO NOT** use if any parts are missing or broken. Contact Mattel for replacement parts and instructions if needed. Never substitute parts.

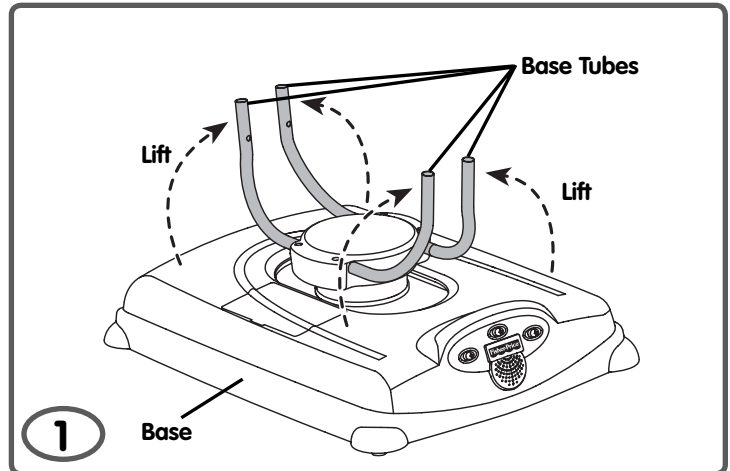

- Lift both base tubes.

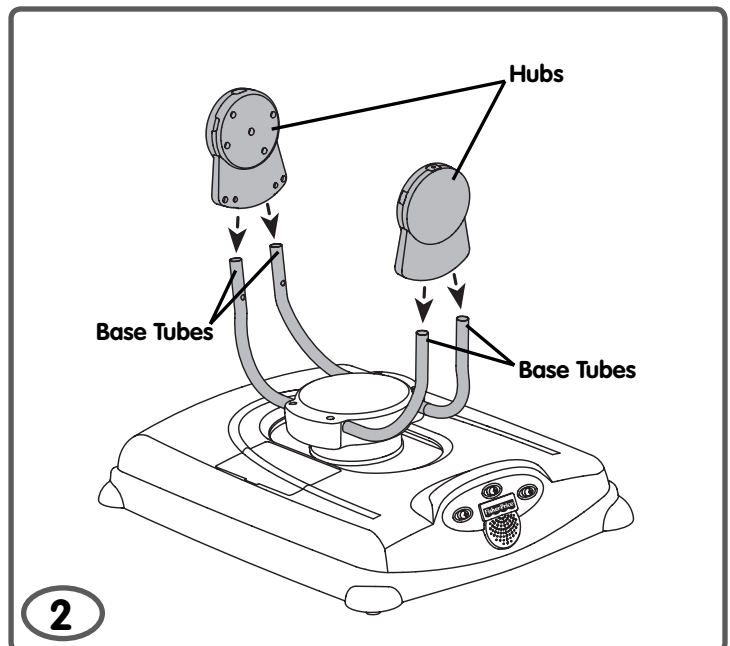


- Position the hubs with the smooth side out.
- Fit the hubs onto the base tubes.


**Hint:** The hubs are designed to fit the base tubes one way. If the hubs do not fit on the base tubes, check to be sure the smooth side is out.

- Push the hubs down until you hear a "click".
- Pull up on the hubs to be sure each is secure.


## Assembly

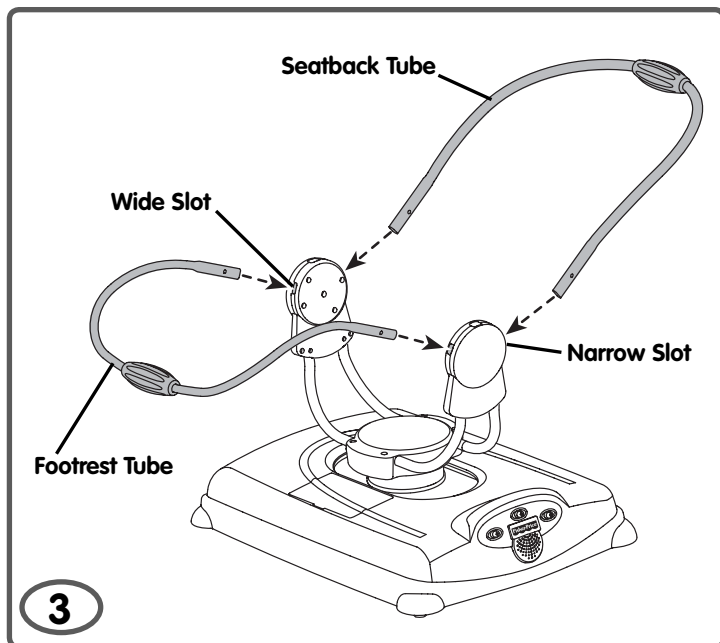

- Position the footrest tube so that it curves down.
- Fit the ends of the **footrest tube** into the **wide slots** in the hubs.
- Position the seat back tube so that it curves down.
- Fit the ends of the **seat back tube** into the **narrow slots** in the hubs.

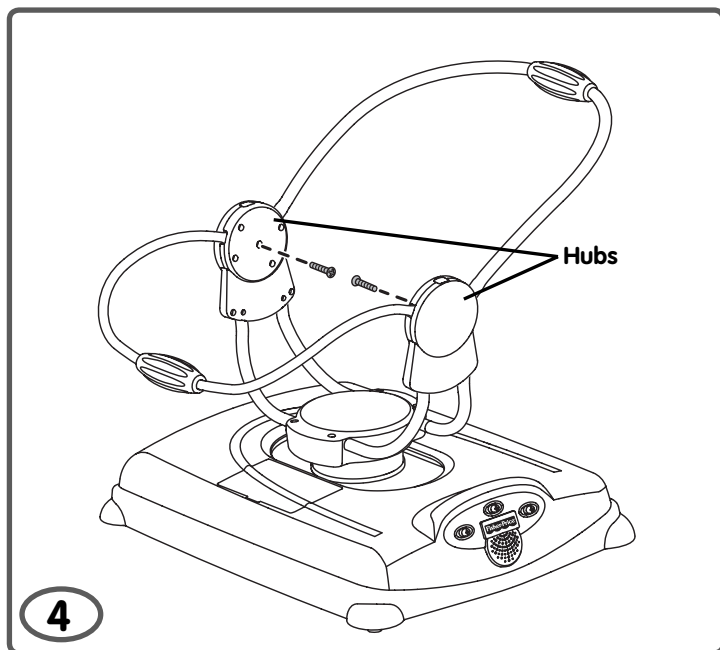

- Insert a #8 x 3,2 cm screw into each hub and tighten.

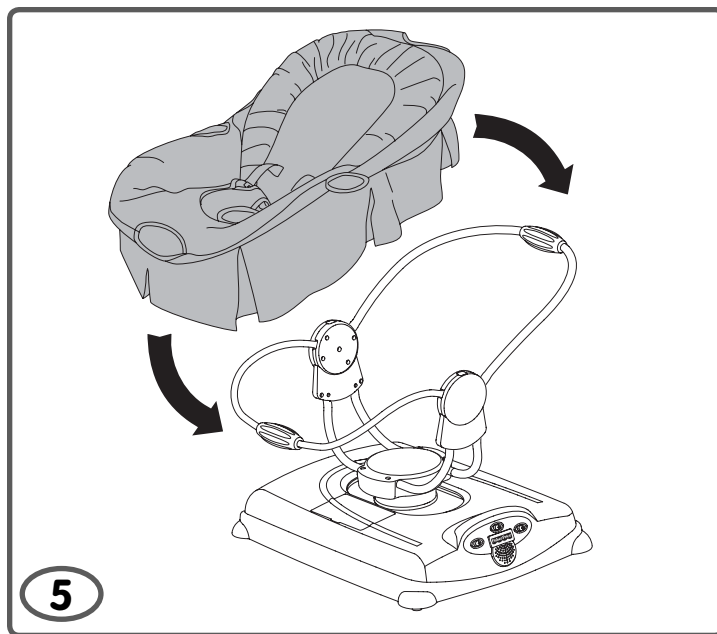


- Position the pad onto the frame assembly. The extra, padded portion should be toward the seat back tube.




- Fit the upper pocket on the pad around the seat back tube.


# Assembly

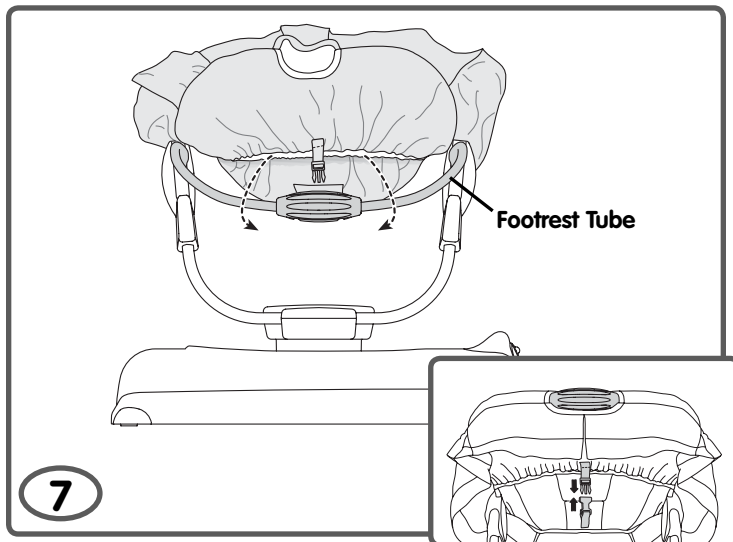


- 7
- Fit the lower pocket on the pad around the footrest tube. Fasten the straps underneath the footrest tube to secure the lower portion of the pad.

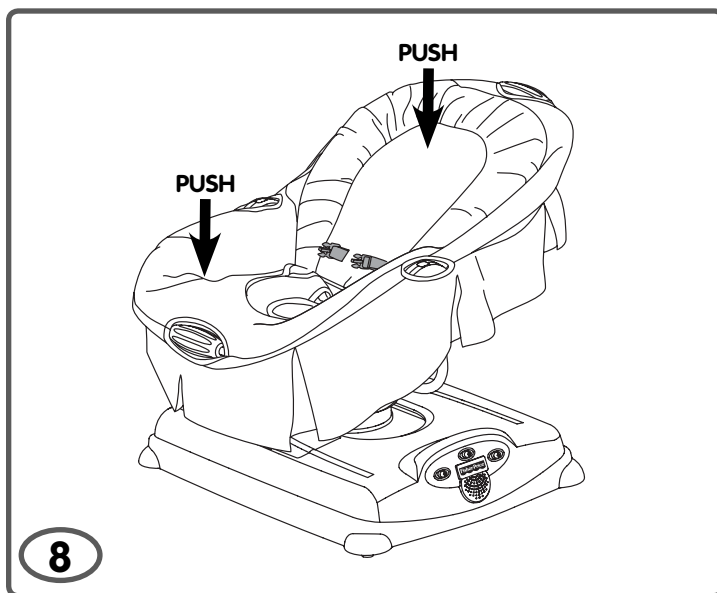

- 8
- Push down on the pad to be sure it is assembled properly. If the pad falls through the frame, you have not assembled it properly. Please re-read these instructions and re-assemble the pad.

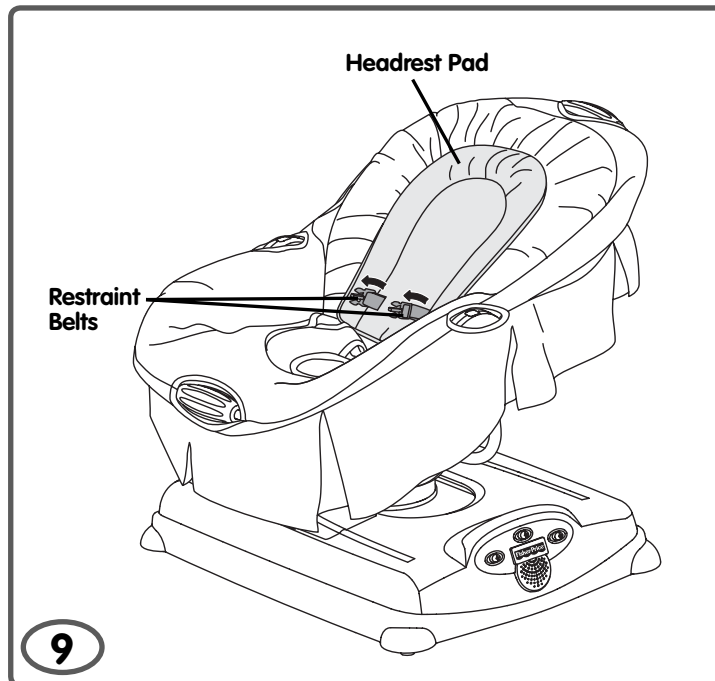

- 9
- Fit the restraint belts through the slots in the headrest pad.
  - Fit the headrest pad to the liner/pad.

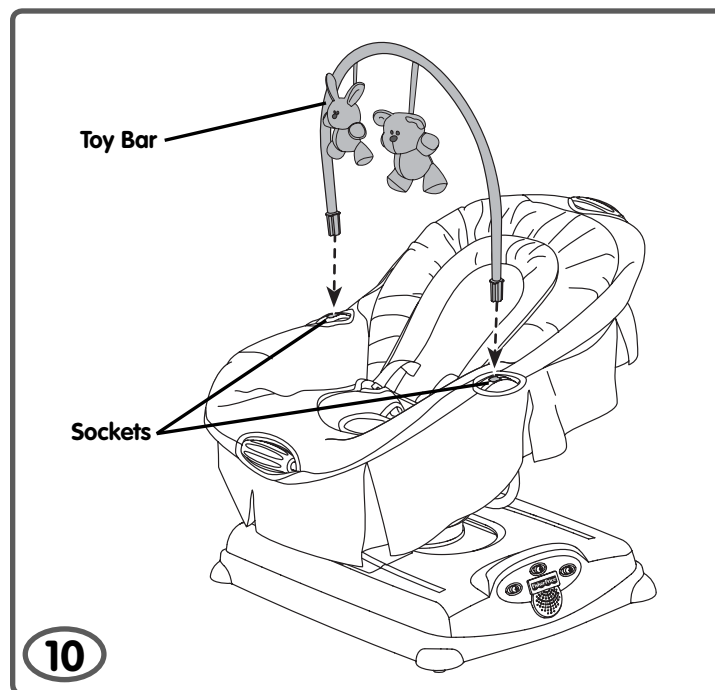

- 10
- Fit the toy bar plugs into the frame sockets..


## Set-up



### WARNING

To prevent serious injury or death from falls and being strangled in the restraint system:

- **Fall Hazard** - It is dangerous to use this product on an elevated surface, since child's movement may cause the product to slide or tip over. Use only on a floor.
- **Suffocation Hazard** - Never use on a soft surface (bed, sofa, cushion) since the product can tip over and cause suffocation in soft surfaces.
- Always use the restraint system.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/20 lbs).
- Never leave child unattended.
- Never use the toy bar as a handle.

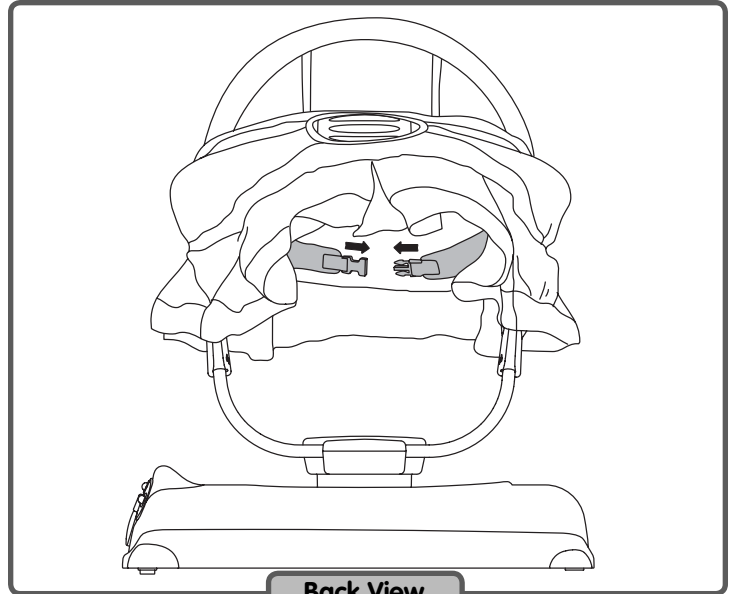

#### Seat Position

- Adjust the seat position for baby's comfort.
  - Lift the fabric skirt near the seat back of the frame.
- Upright:** Fasten the liner/pad buckles. Make sure you hear a "click".
- Recline:** Unfasten the liner/pad buckles.



#### Swinging Direction


- Adjust the seat to change gliding motion to: **Side-to-Side** or **Head-to-Toe**.
- Turn the seat for baby's comfort.



## Securing Baby



- Place your child in the product. Position the restraint pad between your child's legs.
- Fasten both restraint belts to the buckles on each side of the restraint pad. Make sure you hear a "click" on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

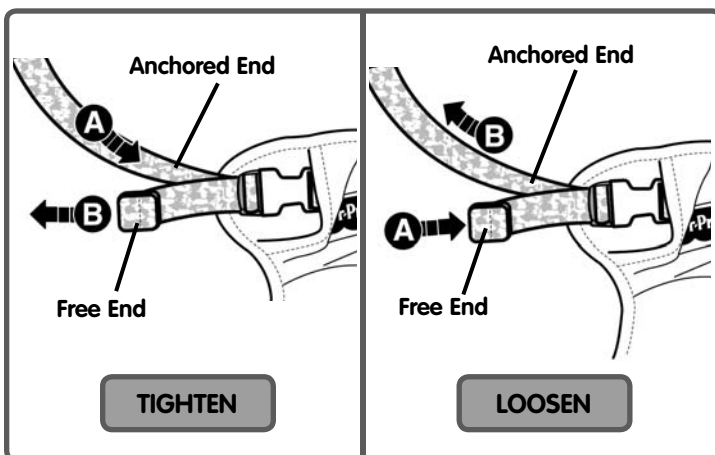


**To tighten the belts:** Feed the anchored end of the restraint up through the buckle to form a loop **A**. Pull the free end of the restraint **B**.

**To loosen the belts:** Feed the free end of the restraint up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the restraint to shorten the free end of the belt **B**.


**Please Note:** After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

## Starting Gliding Motion

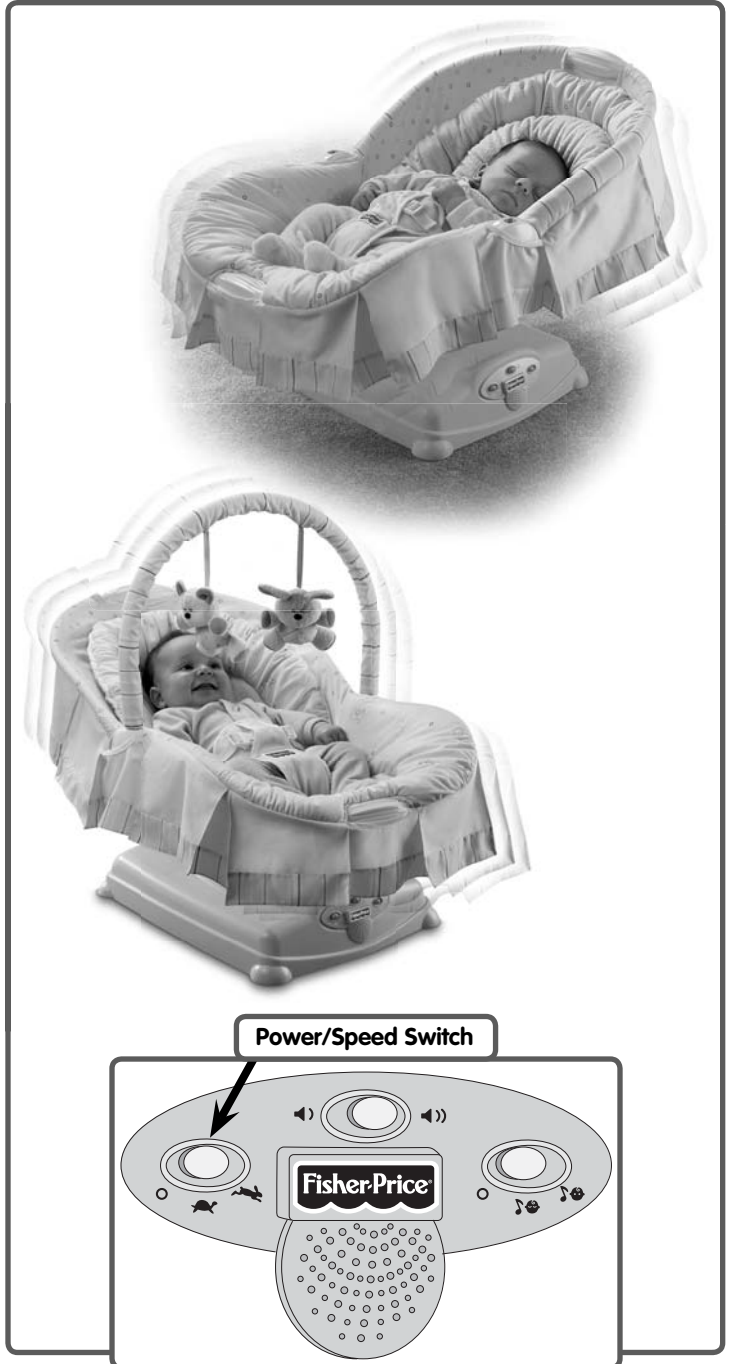

- Make sure your child is properly secured in the seat.
  - Slide the power/speed switch to **slow** or **fast** .
- Hint:** In most cases, the slow setting works best for a smaller child, while the fast setting works best for a larger child. If gliding stops while using the slow setting, try the fast setting. Give the seat a light push to start the gliding motion again.
- Be sure to turn this product off when not in use. Slide the power/speed switch to the off setting .
  - For best performance, make sure this product is used on a completely level surface.
- Note:** If gliding motion is slow in one direction (and you hear a winding or grinding noise), you may be using this product on an inclined surface. Use this product only on a completely level surface.

## Music

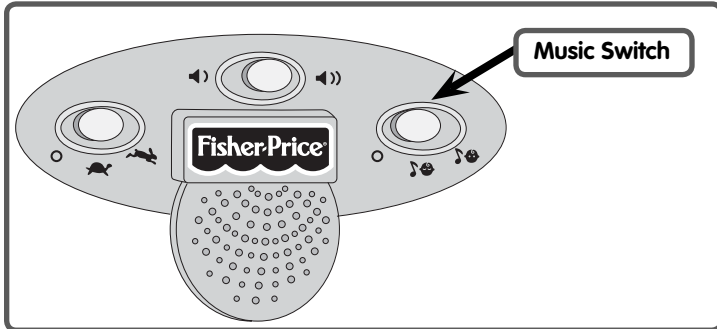

• Choose the style of music for baby. Slide the music switch to:

🎵👶 Soothing

🎵👶 Playful

⊖ Off

• Slide the volume switch to 🗣️) for low volume; 🗣️)) for high volume.

**Note:** Low battery power may cause this product to operate erratically (no movement/no sounds) and the product may not turn off. If this should happen, remove and discard all batteries and replace with four, new “D” (LR20) alkaline batteries.

## Room-to-Room Portability



- Make sure your child is properly secured in the glider.
- Grasp both handles, as shown, and lift.
- Carefully carry the glider to another room. Be sure to set the glider down only on the floor.

## Care

- The liner/pad and headrest pad are machine washable. Wash them separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- The frame and toy bar may be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse the frame.

### To remove the liner and headrest pad:

- Feed the restraint belts back through the slots in headrest pad. Pull to remove the headrest pad.
- Lift the fabric skirt near the footrest of the frame.
- Unfasten the liner/pad buckles. Pull to remove the liner/pad bottom pocket from the footrest tube; pull to remove the liner/pad upper pocket from the seatback tube.
- To replace the pad: refer to Assembly step 5 - 9.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>