



Please keep this instruction sheet for future reference,
as it contains important information.

Requires three "AA" (LR6) **alkaline** batteries (not included) for operation.
Adult assembly is required. Required tool: Phillips screwdriver (not included).


Wipe with a clean, damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.

Assembled Parts

 **CAUTION**

This product contains small parts in an unassembled state.
Adult assembly is required.

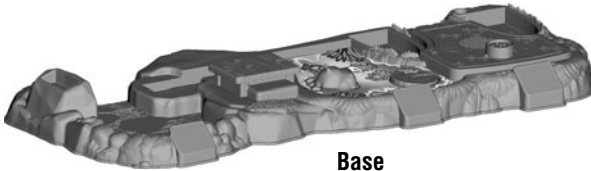

Base



Canopy Swing



 
Flag




Gate




Teeter-totter



Platform

 

Hut Roof

 

Handle



Peek-a-boo Door



Large Tree Canopy




Tree



Wall



Upper Ramp

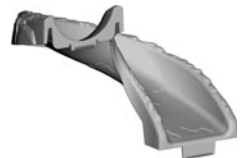

Lower Ramp

Part not shown: Label Sheet




#6 x $\frac{5}{8}$ " (1,6 cm) Screw – 3


Shown Actual Size

Tighten all screws with a Phillips screwdriver. Do not over-tighten.

Assembly

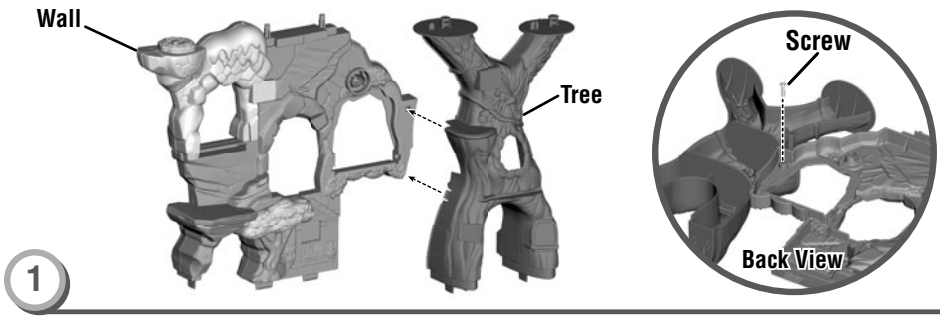


- Fit the tree onto the wall.
- Lay the assembly face down on a flat surface and insert a screw into the wall and tighten.

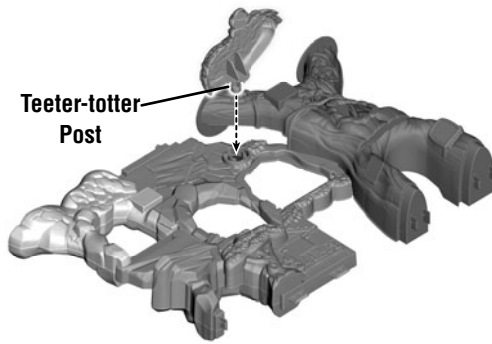


- Turn the assembly over.
 - Fit the post on the teeter-totter into the hole in the wall assembly.
- Hint:** You may need to turn the teeter-totter to fit it in place.
- Push to “**snap**” in place.

Assembly

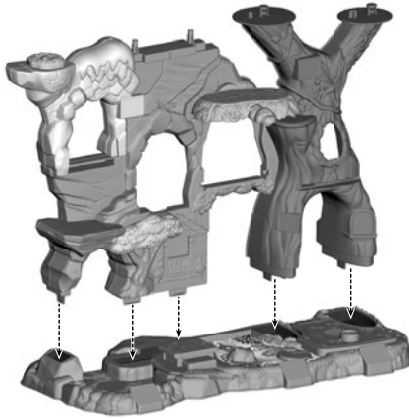


3

- Turn the assembly upright.
- Fit the tabs on to the bottom of the wall assembly into the slots in the base.
- Hint: If the tabs on the wall assembly do not seem to fit, turn it around and try again!*
- Push near each tab to **“snap”** in place.

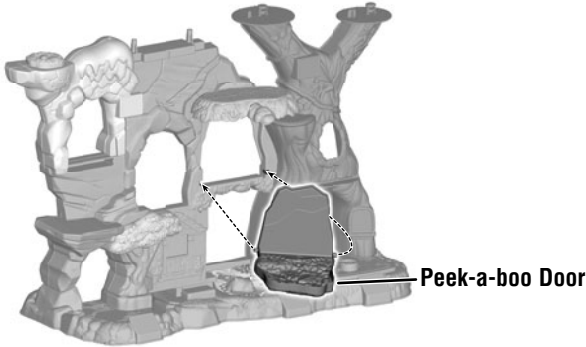

4


- At an angle, fit the peg on one side of the peek-a-boo door into the socket in the wall.
- Then, push to **“snap”** the other peg in place.

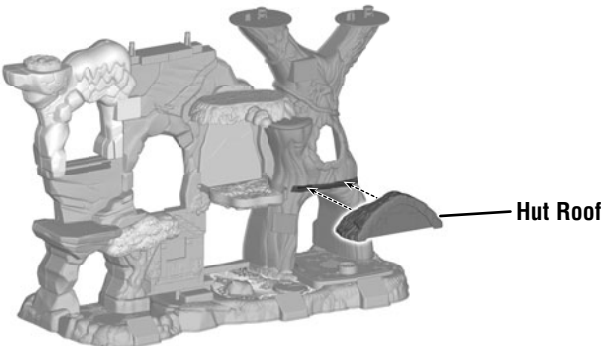

5


- Fit the tabs on the hut roof into the slots in the tree. Push to **“snap”** in place.

Assembly

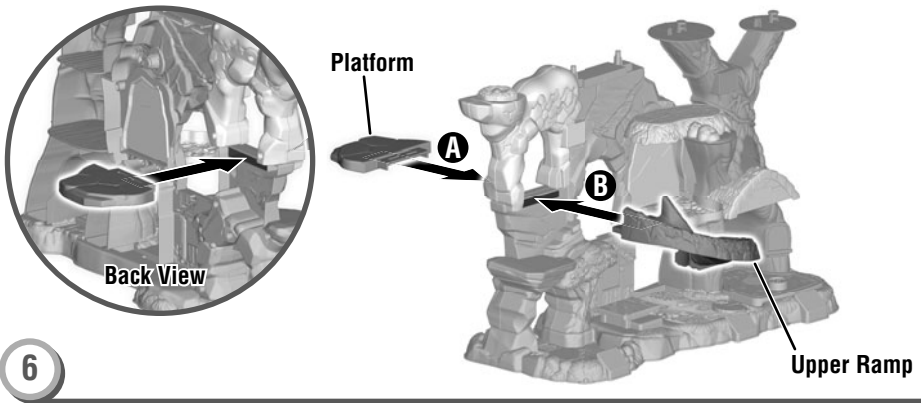

6

- First fit the tab on the platform into the slot in the backside of the wall **A**. Then, fit the upper ramp into the slot in the front of the wall **B**.
- Push to **"snap"** the platform and upper ramp into the wall.

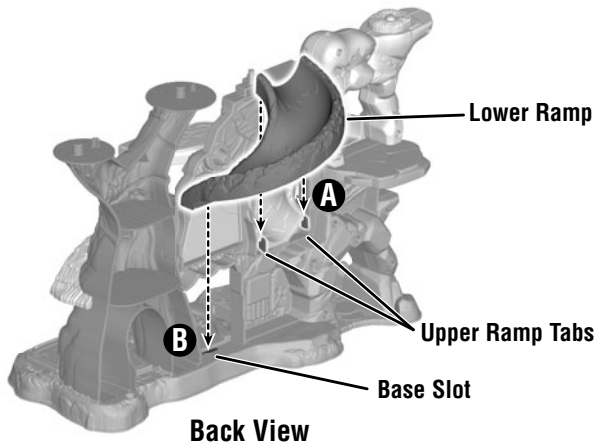


7

- From the back of the wall assembly, first fit the top of the lower ramp onto the tabs on the upper ramp **A**. Then, fit the tab on the bottom of the lower ramp into the slot in the base **B**.
- Push to **"snap"** in place.

Assembly

Canopy Swing

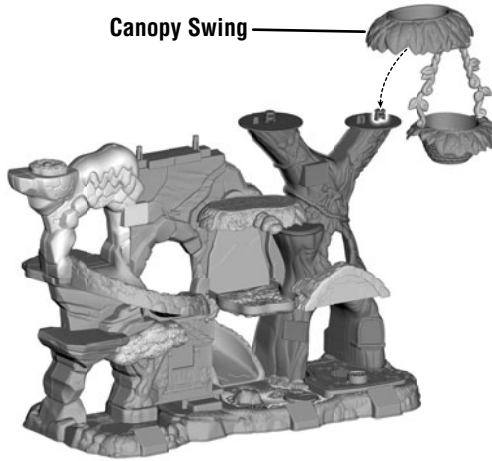

8

- Fit the canopy swing onto the outer tree branch, as shown. Push to **“snap”** in place.


Large Tree Canopy



9


- Fit the large tree canopy onto the remaining tree branch. Push to **“snap”** in place.

Assembly

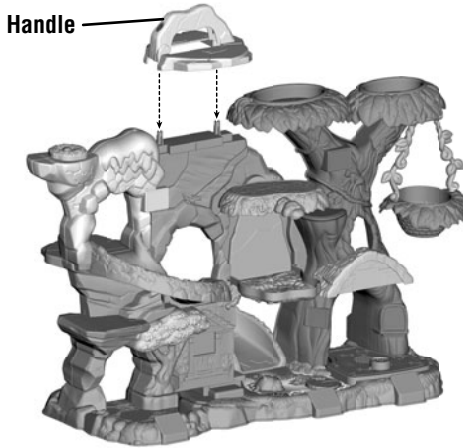

10


- Fit the handle onto the pegs on the wall assembly.
- Insert two screws into the handle and tighten.

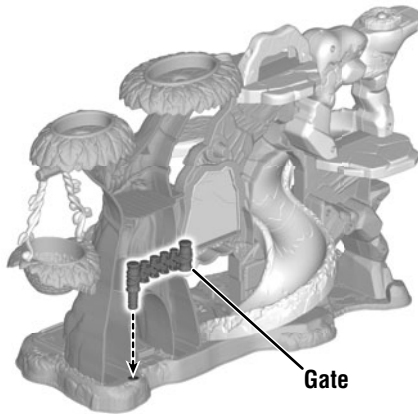

11

- Fit the gate into the socket in the base, as shown. Push to “snap” in place.

Assembly

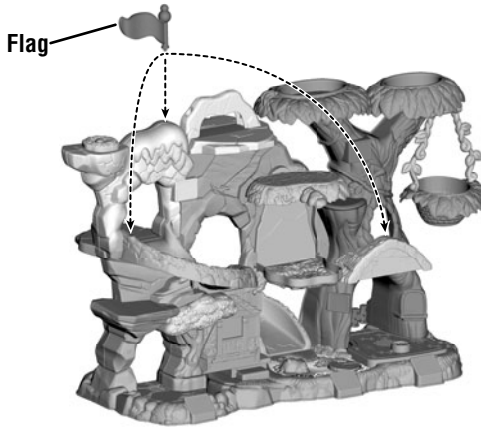


12


- Insert the flag into any of the sockets in the assembly.

Decoration

- Before applying the labels, wipe the surface with a clean, dry cloth to remove any dust or oils.
- Place the labels exactly as shown in the illustration and avoid repositioning the labels.
- After applying a label, rub it firmly with a clean dry cloth, starting at the center, to remove any air bubbles.

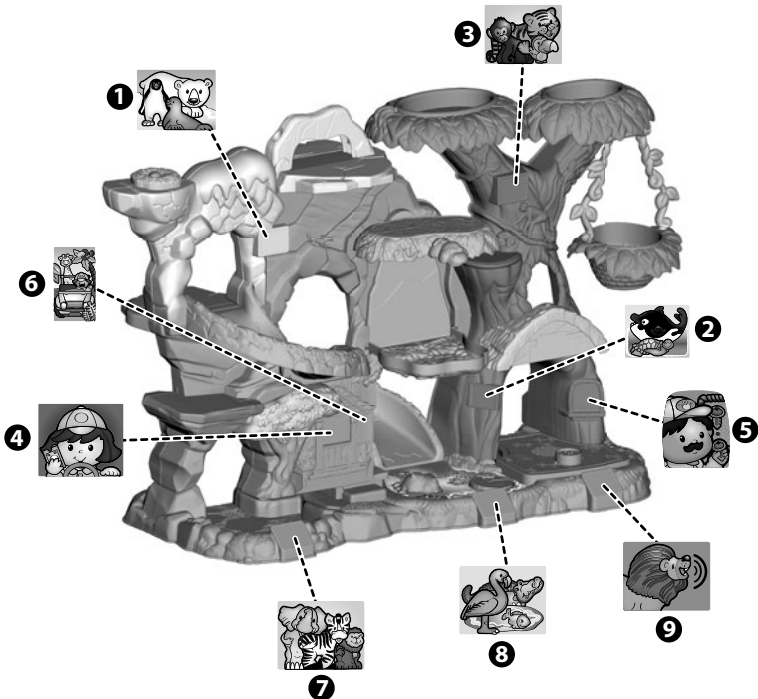

Battery Installation

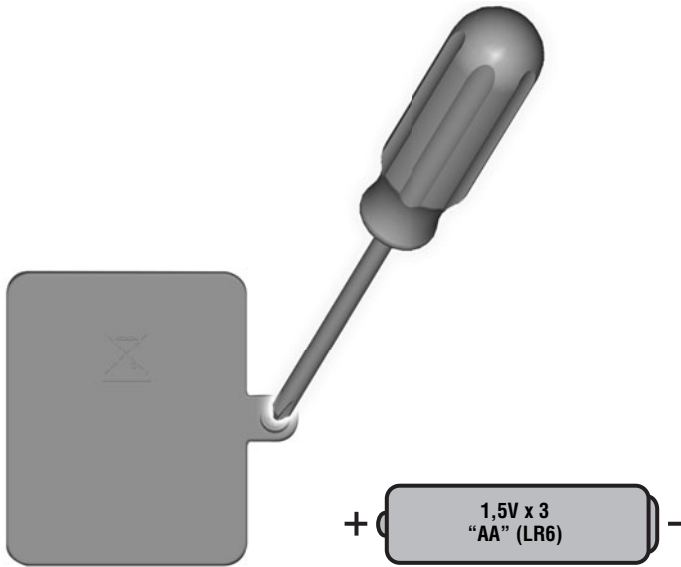

-
- Locate the battery compartment door on the bottom of the toy.
 - Loosen the screw in the battery compartment door and remove it.
 - Insert three, new "AA" (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.
- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).



Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.




NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Zoo Fun!

PRESS



Slide the power/volume switch on the bottom of the toy ON with low volume ; ON with high volume ; or OFF .



PRESS

PRESS

PRESS



- Press the lily pad or nest for sounds.



- Fit an animal figure onto the button on the base. Each animal makes different sounds!



- Press down on the ticket booth and the ticket taker will talk to you.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>