

Fisher-Price®

Loving
Family™

Talk 'n Travel Van

Model Number 74305



Figures not included

Please keep these instructions for future reference, as they contain important information.


Requires three "AA" batteries for operation (included).

Tool required for adult to replace the batteries:
Phillips screwdriver (not included).

Discover what's possible™...www.fisher-price.com

Battery Replacement

Note: For best performance, we recommend that you replace the batteries that came in this toy with three, new “AA” **alkaline** (LR6) batteries upon purchase. For longer battery life, use only alkaline batteries.

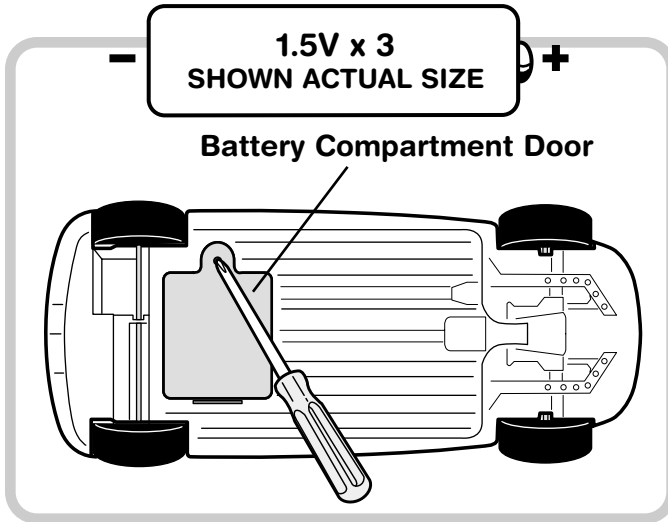


- Locate the battery compartment on the underside of the van.
- Loosen the screw in the battery compartment door and lift the door to open.
- Remove the exhausted batteries and dispose of them properly.
- Insert three, new “AA” (LR6) **alkaline** batteries as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw using a Phillips screwdriver. Do not over-tighten.

Battery Tips:

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of battery(ies) safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.

- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- If sounds from this toy become faint or stop working, it's time to replace the batteries!

Ready To Roll

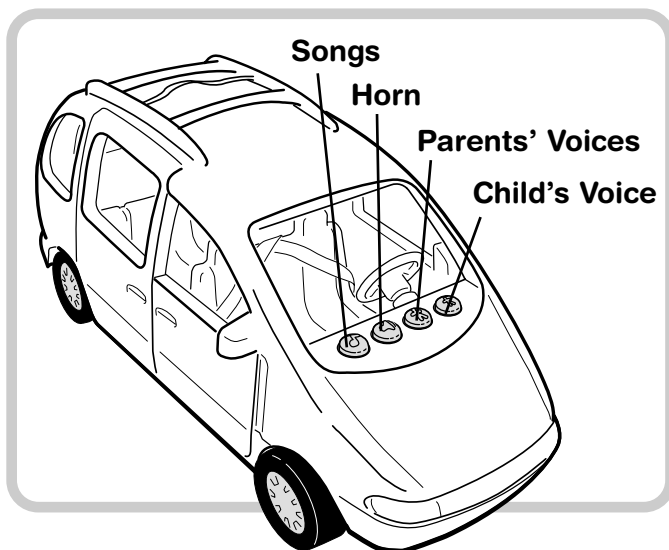

- Press these buttons for sound and music!

Helpful Hints:

- The stroller folds for storage on the roof rack or in the rear compartment.
- Adult figures fit in the front seats only. (Figures sold separately).

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at
1-800-432-KIDS,

8 AM - 6 PM EST Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:
Fisher-Price® Consumer Relations, 636 Girard Avenue,
East Aurora, New York 14052.

For other countries, outside the United States:

Canada: Call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone **01628 500303**.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>