

Fisher-Price®

J9632

Please keep this instruction sheet for future reference, as it contains important information.

 
Requires three "C" batteries (included).

Adult assembly is required.


Tool required for battery replacement: Phillips screwdriver (not included).



Assembly

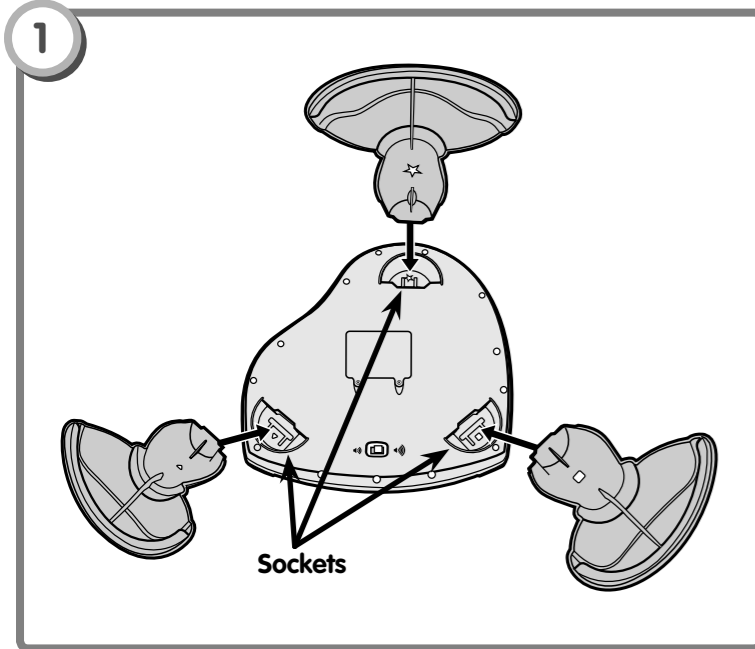

 - Carefully turn the piano face down. Fit and "snap" each leg into the sockets on the piano.
- Set the piano upright.

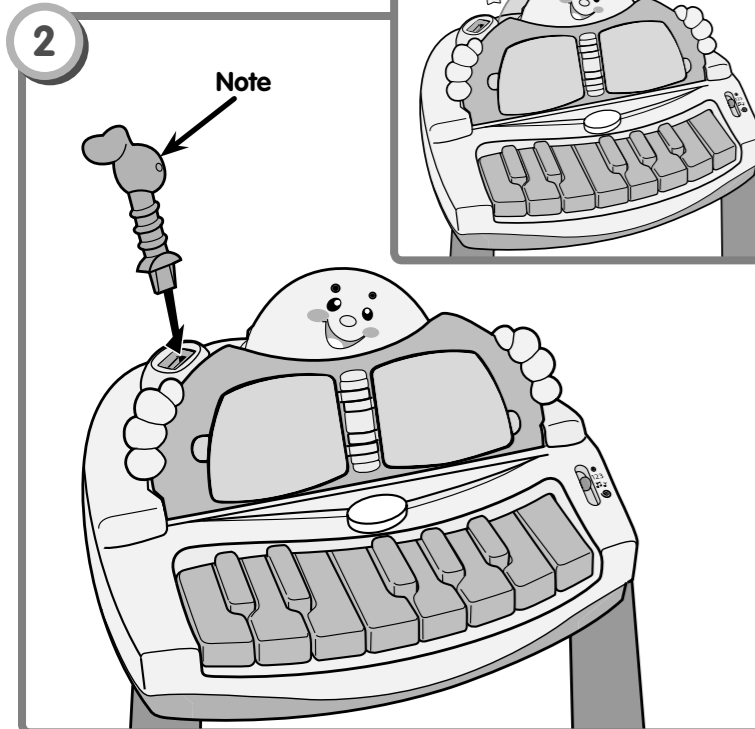

- Lift the songbook into place.
- Insert and "snap" the note into the slot in the top of the piano.

3 Ways to Play and Learn - 123 Learning Time, Musical Fun and Imagination!

123 Learning Time - Learn about slow and fast tempo.

 
Musical Fun - Listen to a slow tempo song or a fast one. Press the switch while the song plays and the tempo changes during the song!

Imagination - Dance to the beat of a fast or slow drum riff.

123 Learning Time - Learn about low and high pitch.

Musical Fun - Listen to a song in a high scale or a low scale. Slide it while the song plays and the pitch changes during the song!

Imagination - Enjoy fun sound effects.

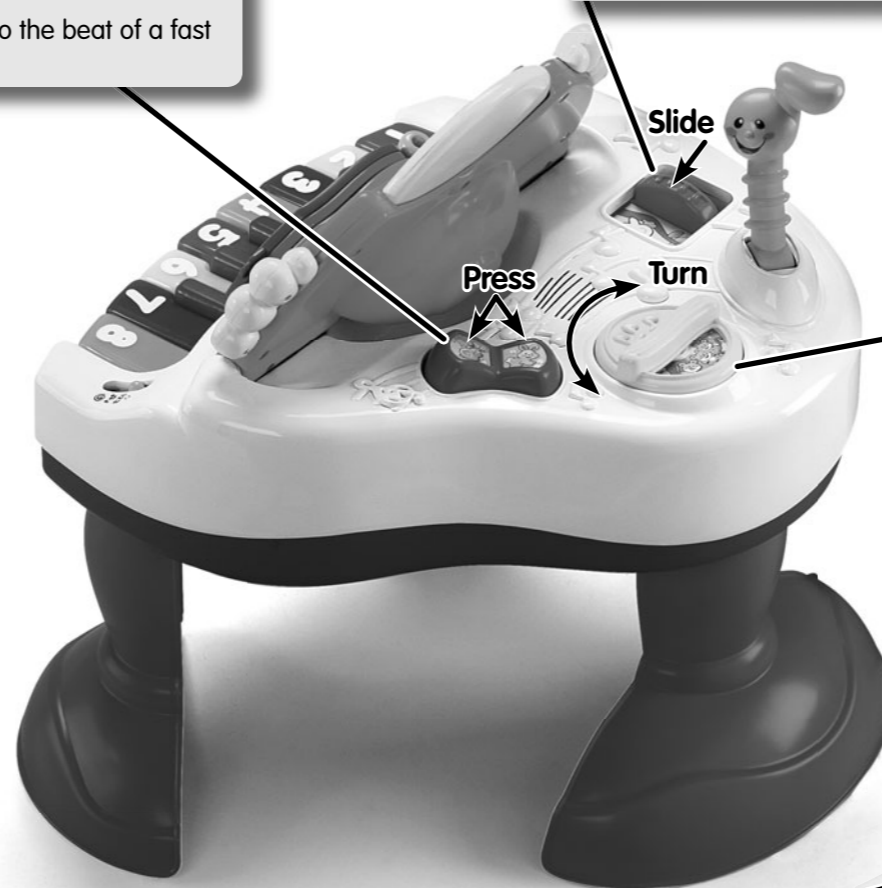

123 Learning Time - Listen to short musical ditties.

Musical Fun - Turn the dial to hear more short selections.

Imagination - Enjoy fun sound effects.

123 Learning Time - Listen to a learning song while each note in the song lights up each key.

Musical Fun - Turn the pages to hear more fun songs.

Imagination - Choose a song in the songbook. Press the numbered keys to play that song!

123 Learning Time - Press the keys to learn colours, the notes of the scale or for counting fun!

Musical Fun - Press the keys to "build a song." Each time you press a key, you hear part of a song. Press another key to hear the next part.

 
Imagination - Press the keys to hear individual notes. Create your own music or follow the numbered notes in the songbook to play a song.

• Adjust the volume switch (underneath) to high or low, for your child's comfort.

• Slide the mode switch to either 123 learning time, musical fun or imagination.

• When your child is finished playing with this toy, slide the mode switch to off.

Play a Song!

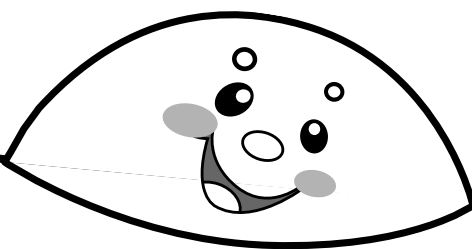


The Silly Little Spider

The musical notation consists of six staves, each starting with a treble clef and a 2/4 time signature. The notes are represented by eighth notes with stems, and each note is accompanied by a circled number indicating its finger assignment. The sequence of notes across the staves is as follows:

- Staff 1: 5, 1, 1, 1, 2, 3, 3, 3, 2, 1, 2
- Staff 2: 3, 1, 5, 3, 3, 3, 4, 5, 5
- Staff 3: 5, 4, 3, 4, 5, 3, 1, 1, 1
- Staff 4: 2, 3, 3, 3, 2, 1, 2, 3, 1, 5
- Staff 5: 1, 1, 1, 2, 3, 3, 3, 2, 1, 2
- Staff 6: 3, 1

 Battery Replacement

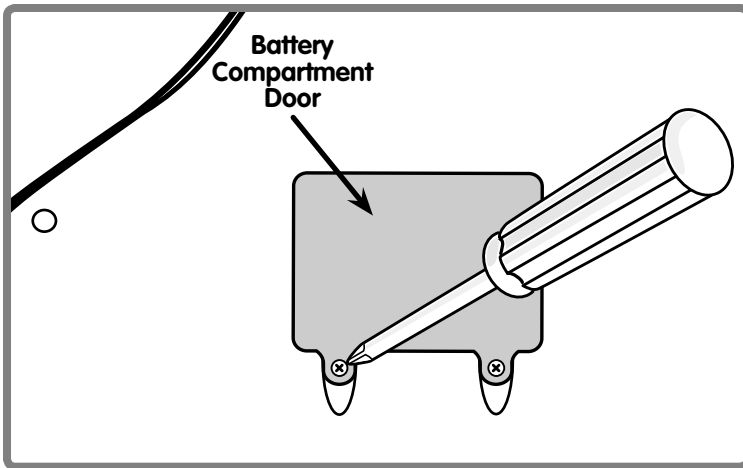

For best performance, we recommend replacing the batteries that came with this toy with three, new "C" (LR14) alkaline batteries.

- Locate the battery compartment on the underside of the piano.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the worn batteries and throw them away.
- Insert three "C" (LR14) **alkaline** batteries, as indicated inside the battery compartment.

 
Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically you may need to reset the electronics. Slide the power/mode switch off and then back on.
- When sounds, lights or motions from this toy become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

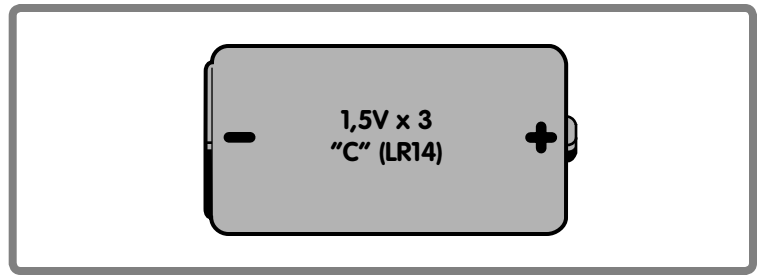

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Great Britain: Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>